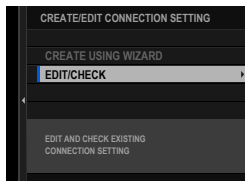## EDIT/CHECK

View or edit existing connection setting profiles.
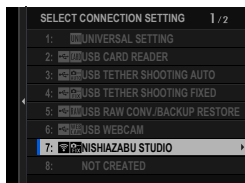
🔷 The instructions that follow are devoted chiefly to choosing communication settings for connection setting profiles used in tethered photography.

1. Select **CREATE/EDIT CONNECTION SETTING** > **EDIT/CHECK** in the network/USB setting menu.

   CREATE/EDIT CONNECTION SETTING

   CREATE USING WIZARD
   **EDIT/CHECK**

   EDIT AND CHECK EXISTING
   CONNECTION SETTING

2. Choose a connection setting profile.

   🔷 Options 1 to 6 (**1: UNIVERSAL SETTING** to **6: USB WEBCAM**) are not available.

   SELECT CONNECTION SETTING   1/2
   1:   UNIVERSAL SETTING
   2:   USB CARD READER
   3:   USB TETHER SHOOTING AUTO
   4:   USB TETHER SHOOTING FIXED
   5:   USB RAW CONV./BACKUP RESTORE
   6:   USB WEBCAM
   **7:   NISHIAZABU STUDIO**
   8:   NOT CREATED

3. Select **EDIT/CHECK**.
   • To copy an existing connection setting profile, select **COPY**. Choosing an existing profile as the destination overwrites the profile selected in Step 2.

   SELECT CON...
   1:   U
   2:   US
   3:   US      **EDIT / CHECK**
   4:   US      COPY
   5:   US      CONNECTION TEST
   6:   US      ERASE
   7:   NIS
   8:   NO

   • To test the connection, select **CONNECTION TEST**.
   • To delete the selected connection setting profile, select **ERASE**.