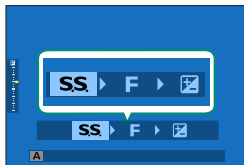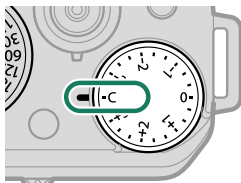## C (Custom)

When the exposure compensation dial is set to **C**, exposure compensation can be adjusted by first pressing the center of the front command dial to cycle to **EXPOSURE COMPENSATION** and then rotating the dial.

- • The front command dial can be used to set exposure compensation to values between −5 and +5 EV.
  - • Front command dial settings can be adjusted using **D BUTTON/ DIAL SETTING** > **COMMAND DIAL SETTING** (📖 67, 226).