4 Highlight **OK** and press **MENU/OK**. Current settings will be saved to the selected bank.
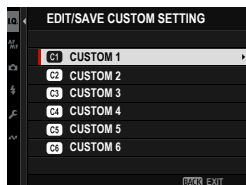
> SAVE CURRENT SETTINGS
> **CUSTOM 1**
> SAVE THE CHANGES OK?
> OK
> CANCEL
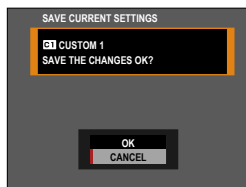
Editing Custom Settings

Edit existing custom settings banks.

1 Select **IMAGE QUALITY SETTING** > **EDIT/SAVE CUSTOM SETTING** in the shooting menu and press **MENU/OK**.

> To save settings for movie recording, navigate to **MOVIE SETTING** in the movie menus and select **EDIT/SAVE CUSTOM SETTING**.

2 Highlight the desired custom settings bank and press **MENU/OK**.

> EDIT/SAVE CUSTOM SETTING
> **C1 CUSTOM 1**
> **C2 CUSTOM 2**
> **C3 CUSTOM 3**
> **C4 CUSTOM 4**
> **C5 CUSTOM 5**
> **C6 CUSTOM 6**
> BACK EXIT

3 Highlight **EDIT/CHECK** and press **MENU/OK**.

> **C1 CUSTOM 1**
> SAVE CURRENT SETTINGS
> **EDIT/CHECK**
> SAVE THE CHANGES
> RESET THE CHANGES
> COPY
> RESET CUSTOM SETTING
> EDIT CUSTOM NAME
> BACK EXIT