Program Shift
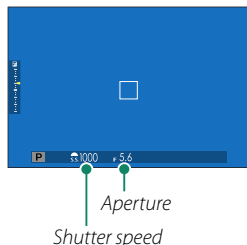
Rotate the front command dial to choose the desired combination of shutter speed and aperture (program shift).

Aperture

Shutter speed

Ⓞ Program shift is not available in any of the following circumstances:
- With flash units that support TTL auto
- When an auto option is selected for **IMAGE QUALITY SETTING** > **DYNAMIC RANGE**
- In movie mode

◆ • To cancel program shift, turn the camera off.
 • Front command dial settings can be adjusted using **BUTTON/ DIAL SETTING** > **COMMAND DIAL SETTING** (67, 226).