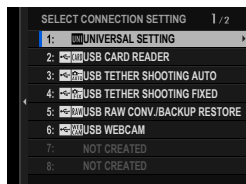## Connection Setting Profiles

Connection setting profiles contain information on both network settings and the type of connection used. You can connect to computers and smartphones by selecting the associated profile.

Selecting a Connection Setting Profile

To select a connection setting profile, press **MENU/OK** and choose **SELECT CONNECTION SETTING** in the ⚛ (network/USB setting) tab.

SELECT CONNECTION SETTING   1 / 2
1: UNIVERSAL SETTING
2: USB CARD READER
3: USB TETHER SHOOTING AUTO
4: USB TETHER SHOOTING FIXED
5: USB RAW CONV./BACKUP RESTORE
6: USB WEBCAM
7: NOT CREATED
8: NOT CREATED

> For tethered photography via wireless LAN, you will first need to create and save a new connection setting profile by following the instructions of a wizard displayed by selecting **CREATE/EDIT CONNECTION SETTING**.

Saving Connection Setting Profiles

To create a connection setting profile containing information on network/USB settings and the type of connection used, select **CREATE/EDIT CONNECTION SETTING** in the network/USB setting menu.

Choose **CREATE/EDIT CONNECTION SETTING** > **CREATE USING WIZARD**, select the desired network/USB settings, and save the resulting profile (🕮 313).

CREATE USING WIZARD
SMARTPHONE APP
USB CARD READER
WEBCAM
instax PRINTER PRINT
TETHER SHOOTING
CONNECT TO SMARTPHONE APP