
3 Place the fan on the camera, making sure the screws and connectors are correctly aligned.

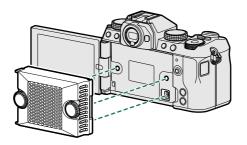

4 Tighten the screws.



The cooling fan may fall off if the screws are not sufficiently tightened.

Using the Fan

Fan speed can be adjusted using the SHOOTING SETTING > COOLING FAN SETTING and MOVIE SETTING > COOLING FAN SETTING options in the photo and movie menus, respectively. Select OFF to turn the fan off.

(1) At some speeds, the noise of the fan may be audible in movies recorded with the camera.