
Parts of the Camera

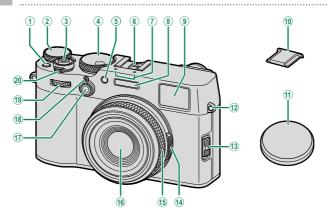

Fn1 button79	(11) Lens cap	
Exposure compensation dial8, 81	12 Strap eyelet	30
Shutter button46	(13) Focus mode selector	66
Shutter speed dial/	(14) Aperture ring	44, 56
Sensitivity dial7, 77, 149	15 Control ring	12, 80, 227
AF-assist illuminator127	Focus ring	12, 73, 227
Hot shoe261	17) Fn2 button	12, 250
Microphone51, 167	(18) Viewfinder selector	2
Flash99	(19) Front command dial	10, 224
Viewfinder window4, 6, 14, 19	20 ON/OFF switch	38
Hot shoe cover261		
	Exposure compensation dial. 8, 81 Shutter button. 46 Shutter speed dial/ 7, 77, 149 AF-assist illuminator. 127 Self-timer lamp. 139 Hot shoe. 261 Microphone. 51, 167 Flash. 99 Viewfinder window. 4, 6, 14, 19	Fn1 button .79 (1) Lens cap Exposure compensation dial 8,81 (1) Strap eyelet Shutter button 46 (1) Focus mode selector Shutter speed dial/ (1) Aperture ring Sensitivity dial 7,77,149 (1) Control ring AF-assist illuminator 127 Focus ring Self-timer lamp 139 (1) Eens Hot shoe 261 (1) Fn2 button Microphone 51,167 (1) Viewfinder selector Flash .99 (1) Front command dial Viewfinder window 4, 6, 14, 19 (2) ON/OFF switch