Cameras
Cameras
Overview
Models
Features
Installation
Hardware Information
Avoiding EMI and ESD Problems
Cleaning Instructions
dart M Interface Description
Maximum Allowed Lens Intrusion
Mounting Instructions
Providing Heat Dissipation
Safety Instructions (ace, ace 2, racer 2 S)
Safety Instructions (boost, racer 2 L)
Safety Instructions (dart)
Safety Instructions (pulse)
Stress Test Results
Image Acquisition
I/O Control
3D Cameras

Mounting Instructions

This topic provides instructions on how to mount Basler cameras in your system. For information about further installation steps, see the Camera Installation topic.

ace 2 and racer 2 S Cameras

When mounting ace 2 and racer 2 S cameras in your system, you must tighten the screws in a certain order. This ensures optimum alignment of the camera.

Tightening the M3 Screws

To tighten the M3 screws:

1. Tighten the screws for the mounting screw holes (a) in the figure below.
2. Tighten the screw for the mounting screw hole (b) in the figure below.

USB 3.0, CXP, and GMSL Cameras

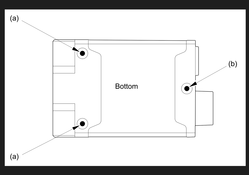

GigE Cameras

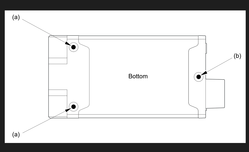

GigE Cameras (IP67 Only)

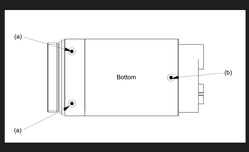

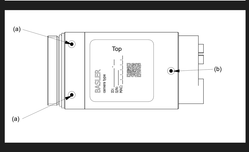

ace Classic/U/L USB 3.0 Cameras

When mounting ace USB 3.0 cameras in your system, you must tighten the screws in a certain order. This ensures optimum alignment of the camera.

Depending on whether you use M2 or M3 screws, the order for tightening the screws varies.

Info

- Basler ace L USB 3.0 cameras use M3 screws of different lengths. These cameras can't be mounted using M2 screws.
- The following illustrations show cameras with C-mounts. The mounting instructions apply, however, also to cameras with CS-mounts.

Using M2 Screws

To tighten the M2 screws:

1. Tighten the screws for the mounting screw holes (a) in the figure below.
2. Tighten the screws for the mounting screw holes (b) in the figure below.

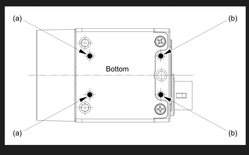

Using M3 Screws

To tighten the M3 screws:

1. Tighten the screws for the mounting screw holes (a) in the figure below.
2. Tighten the screw for the mounting screw hole (b) in the figure below.

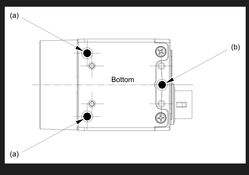

dart Cameras

dart Classic/E/R

When mounting the **bare board** variant of dart cameras in your system, make sure that the head diameter of the screws used for mounting doesn't exceed 4.6 mm.

Otherwise, mounting the camera may damage components on the board.

dart M Camera Modules

When mounting the dart M camera modules in your system, observe the following points to make sure that components won't be damaged:

- The head diameter of the screws used for mounting mustn't exceed 5 mm.
- Mount the screws within a torque range of 0.25–0.35 Nm (maximum torque: 0.35 Nm).
- Make sure that the tongues of the mount fit into the correct indentations of the camera module (see figure below). If necessary, turn the mount until the tongues match the camera module's indentations.

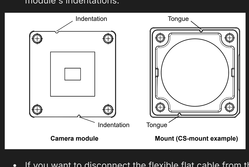

- If you want to disconnect the flexible flat cable from the FFC connector, make sure to unlock the FFC connector by flipping the locking bar up before removing the cable.

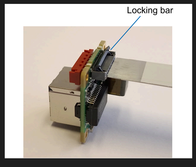

In this topic
ace 2 and racer 2 S Cameras
Tightening the M3 Screws
USB 3.0, CXP, and GMSL Cameras
GigE Cameras
GigE Cameras (IP67 Only)
ace Classic/U/L USB 3.0 Cameras
Using M2 Screws
Using M3 Screws
dart Cameras
dart Classic/E/R
dart M Camera Modules

Was this page helpful?

All material in this publication is subject to change without notice and is copyright Basler AG.

Version: 123 • Release date: 24 March 2026 • Document number: AW001406 • ICP license number: 沪ICP备17041046号-1