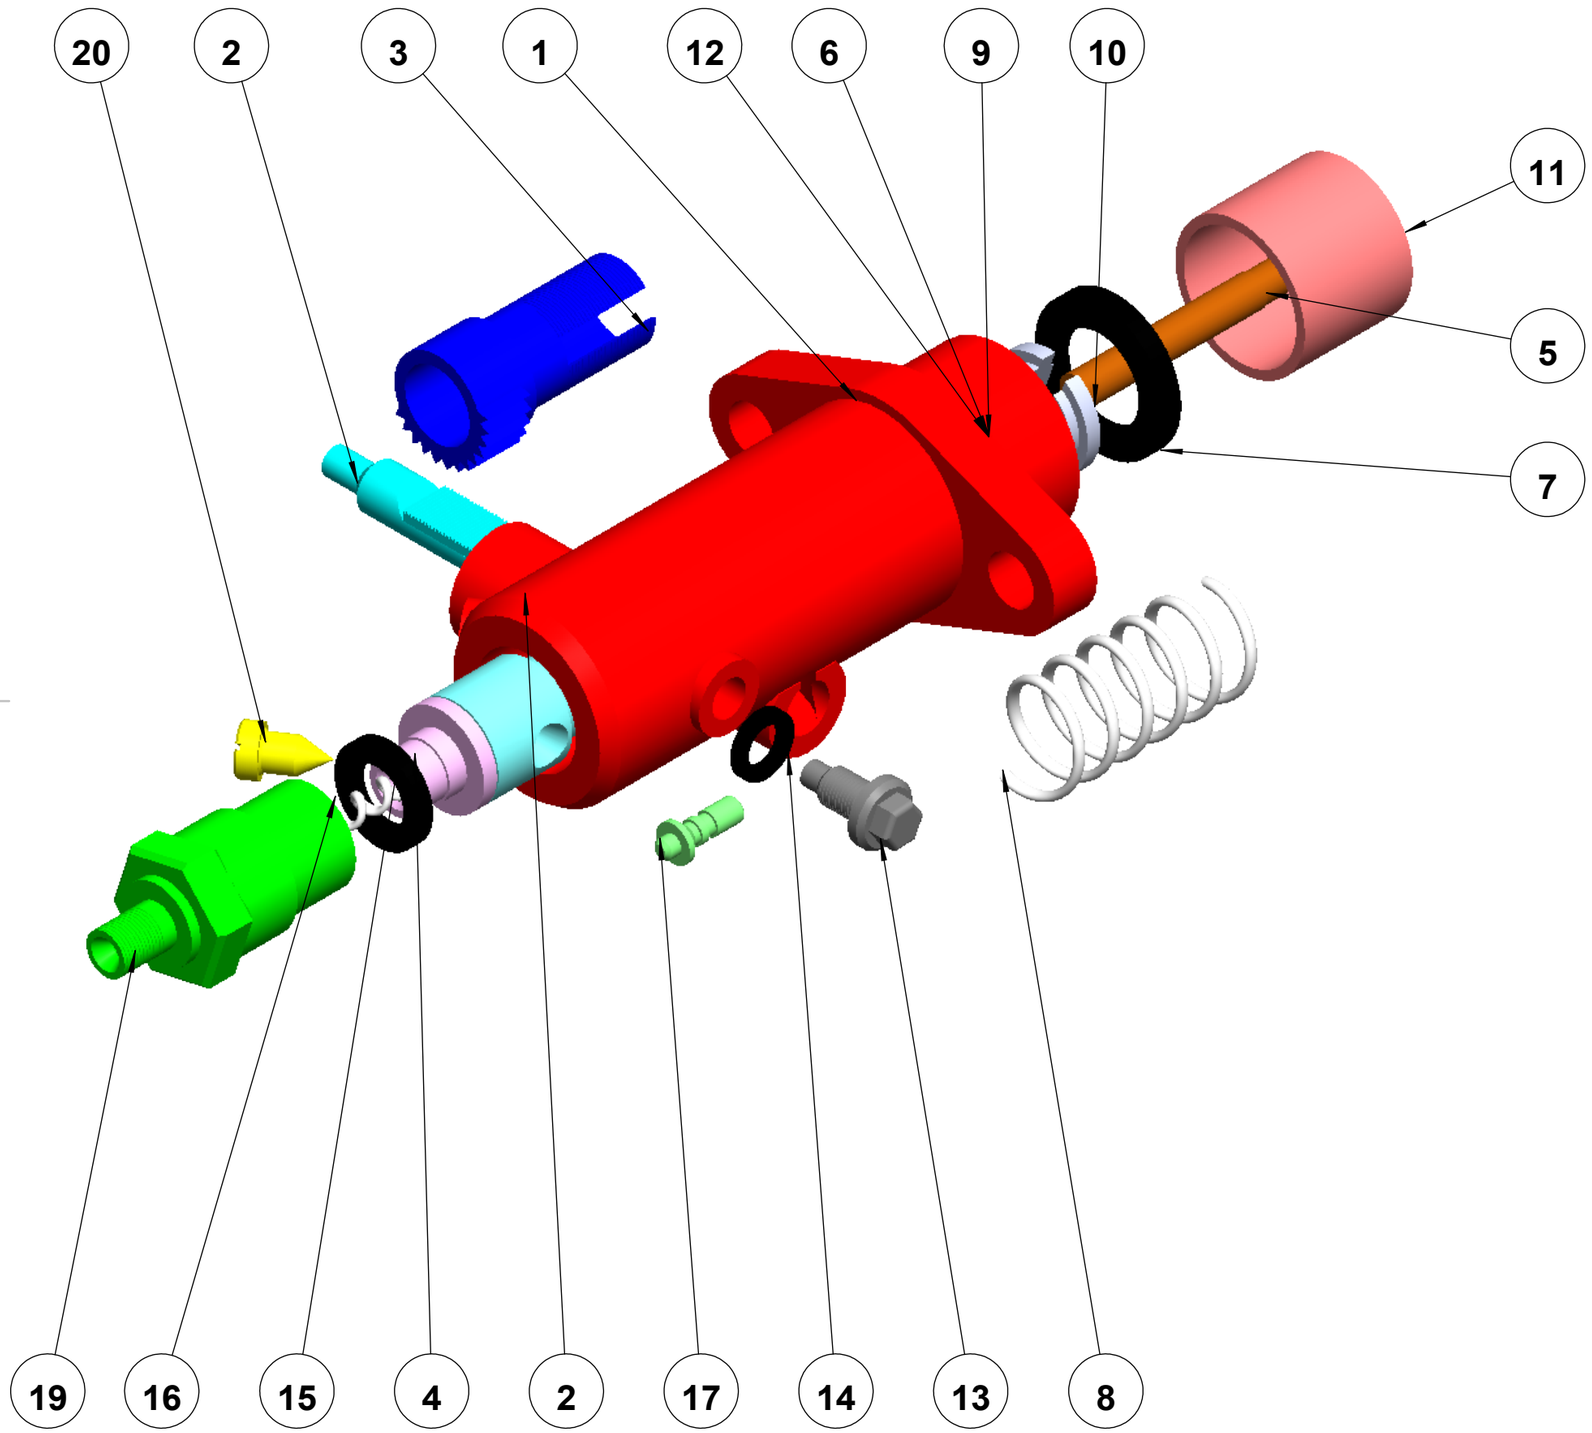

ITEM NO.	PART NUMBER	QTY.
1	HOUSING	1
2	RACK	1
3	CONTROL SLEEVE	1
4	BARREL	1
5	PLUNGER	1
6	PART1^FUEL PUMP ASSEMBLY-PHOTO LEFT	1
7	SPRING SEAT TOP	1
8	SPRING	1
9	PART2^FUEL PUMP ASSEMBLY-PHOTO LEFT	1
10	SPRING SEAT BOTTOM	1
11	GUIDE SLEEVE	1
12	PART3^FUEL PUMP ASSEMBLY-PHOTO LEFT	1
13	SCREW	1
14	WASHER 2	1
15	VALVE SEAT	1
16	WASHER 1	1
17	DELIVERY VALVE	1
18	SPRING 2	1
19	OIL OUTLET SCREW	1
20	AIR RELEASE VALVE	1

Fuel pump assembly-drawing