



**SUNFLASER**  
OPTOELECTRONIC SOLUTIONS

# SFL0308

Laser Rangefinder Module



## Product Manual

Version 202506V1

## Disclaimer

This product manual is intended to provide reference specifications and performance parameters of the product. If certain specifications are not included in this document, please contact SunFlaser Technology (Chengdu) Co., Ltd. directly for further confirmation. All contents of this manual and the specifications of the ranging module are subject to change without prior notice.

Without the prior written consent of SunFlaser Technology (Chengdu) Co., Ltd., this document may not be reproduced, stored in any retrieval system, transmitted, or used for any unauthorized purpose in any form or by any means. This document may not be disclosed or distributed to any third party without the explicit authorization of SunFlaser Technology (Chengdu) Co., Ltd.

Due to variations in actual product performance under different operating conditions, the specifications and parameters provided in this document are for reference purposes only and do not constitute any form of warranty. Any express or implied warranties, including but not limited to warranties of merchantability or fitness for a particular purpose, shall be subject to the actual performance of the specific product.

SunFlaser Technology (Chengdu) Co., Ltd. reserves the right to revise or update this document at any time without prior notice. This document may contain technical inaccuracies or typographical errors. Feedback and suggestions are welcome, and verified issues will be corrected in subsequent revisions of the manual.

At the time of publication, all descriptions, specifications, designs, and related procedures contained herein are considered valid. SunFlaser Technology (Chengdu) Co., Ltd. reserves the right to modify the above information at any time without prior notice. If you have any questions regarding the use of this manual, please contact us promptly.

## Safety Instructions

For the safe use of the ranging module, please carefully follow the safety instructions provided in this manual. Do not attempt to disassemble, modify, or repair any part of the ranging module. Do not tamper with or attempt to alter the performance of the ranging module.

## Intended Use

- Take precautions against electrostatic discharge (ESD). Do not touch any electronic components or parts of the ranging module without proper protective measures.
- Keep this manual readily accessible to all personnel operating the ranging module.
- Operate the ranging module only within the specified voltage and power range.
- Operate the ranging module in a clean, dry, and ESD-protected environment.
- Do not touch the optical glass lens with your fingers.
- Avoid exposing the ranging module to environments with drastic temperature fluctuations.

## Improper Use

- Using the ranging module with the host system before verifying that all functions are operating properly;
- Operating the ranging module without first reading and understanding this manual and all safety instructions;
- Disassembling, modifying, or altering the ranging module without authorization from SunFlaser Technology (Chengdu) Co., Ltd.;
- Sending operating commands other than those specified in this manual;
- Using or testing the ranging module in non-standard, abnormal, or unsuitable environments;

- › Operating the ranging module in a manner inconsistent with the instructions provided in this manual;
- › Continuing to operate the ranging module after improper handling or misuse;
- › Using a ranging module with obvious faults, defects, or damage;
- › Performing test operations within the blind zone of the ranging module.

### Improper use may result in the following risks:

- › Eye injury
- › Incorrect results
- › Measurement errors
- › Property damage
- › Equipment malfunction

### Operator Responsibilities

- › Be familiar with the basic knowledge required for the correct operation of the ranging module;
- › Understand and comply with the operation and maintenance requirements of the ranging module;
- › Prevent damage to the ranging module during storage and transportation;
- › Keep the ranging module clean and well maintained;
- › Ensure that the ranging module is stored and operated in a safe environment;
- › Do not expose the ranging module to strong mechanical shock or impact;
- › Do not expose the ranging module to environments with drastic temperature fluctuations.

### Avoid Measurement Errors

- › Pay attention to all factors that may affect the performance of the ranging module;

- After the Laser Rangefinder Module has been subjected to improper handling (such as vibration, impact, or dropping), or before performing critical measurement tasks, it is recommended to verify the performance specifications of the ranging module.

## Table of Contents

|                                                         |    |
|---------------------------------------------------------|----|
| 01 Product Overview .....                               | 6  |
| 02 Key Features .....                                   | 6  |
| 03 Key Specifications .....                             | 6  |
| 04 Interface Description .....                          | 8  |
| 05 Communication Protocol .....                         | 8  |
| 06 Operating Instructions .....                         | 9  |
| 07 Mechanical Dimensions and Mounting Hole Layout ..... | 11 |
| 08 Precautions for Use .....                            | 12 |
| 09 Optical Window Requirements .....                    | 12 |
| 10 Safety Precautions .....                             | 13 |
| 11 Maintenance Instructions .....                       | 14 |
| Packing List .....                                      | 14 |
| Module Cleaning .....                                   | 14 |
| Inspection and Maintenance .....                        | 14 |
| Troubleshooting .....                                   | 16 |
| Packaging and Transportation Requirements .....         | 19 |
| 12 Technical Support and Service .....                  | 20 |
| 13 Contact Information .....                            | 20 |
| Appendix 1 .....                                        | 21 |

# 01

## Product Overview

The SFL0308 is a miniature laser rangefinder module independently developed by SunFlaser Technology (Chengdu) Co., Ltd. based on a 1535 nm erbium glass laser. It adopts a single-pulse TOF (Time of Flight) ranging method.

The Laser Rangefinder Module consists of a laser emitter, transmitting optical system, receiving optical system, and control circuit board. It communicates with the Host Controller through a RS422 serial interface and provides Host Controller test software and communication protocols for convenient secondary development by users.

The module features compact size, light weight, stable performance, high shock resistance, and Class 1 eye safety. It can be widely applied in electro-optical equipment such as handheld devices, vehicle-mounted systems, and gimbal payloads.

# 02

## Key Features

- > Single ranging and continuous ranging
- > Multi-target ranging capability (up to 3 targets)
- > Range gating
- > Command self-test function

# 03

## Key Specifications

| No. | Parameter                 | Specification                                                                                                  |
|-----|---------------------------|----------------------------------------------------------------------------------------------------------------|
| 1   | Eye Safety                | Class 1                                                                                                        |
| 2   | Wavelength                | 1535 ± 5 nm                                                                                                    |
| 3   | Receiving Aperture        | 25 mm                                                                                                          |
| 4   | Beam Divergence           | ≤ 0.3 mrad                                                                                                     |
| 5   | Maximum Range             | ≥ 10 km (Large Target: ≥ 3 m × 3 m)                                                                            |
|     |                           | ≥ 8 km (Vehicle-Sized Target: 2.3 m × 2.3 m)                                                                   |
|     |                           | ≥ 5.5 km (Human Target: 1.7 m × 0.5 m)                                                                         |
| 6   | Minimum Range             | ≤ 30 m                                                                                                         |
| 7   | Ranging Accuracy          | ≤ ±1 m                                                                                                         |
| 8   | Ranging Frequency         | 1–10 Hz                                                                                                        |
| 9   | Range Resolution          | ≤ 0.1 m                                                                                                        |
| 10  | Measurement Success Rate  | ≥ 98%                                                                                                          |
| 11  | False Alarm Probability   | ≤ 1%                                                                                                           |
| 12  | Communication Interface   | RS422 Serial Interface                                                                                         |
| 13  | Supply Voltage            | DC 5–28 V                                                                                                      |
| 14  | Average Power Consumption | ≤ 1.3 W @ 5 V (1 Hz Operation)                                                                                 |
| 15  | Peak Power Consumption    | ≤ 4 W @ 5 V                                                                                                    |
| 16  | Standby Power Consumption | ≤ 0.2 W                                                                                                        |
| 17  | Dimensions                | ≤ 65 mm × 46 mm × 32 mm                                                                                        |
| 18  | Weight                    | ≤ 72 g                                                                                                         |
| 19  | Operating Temperature     | –40 °C to +60 °C                                                                                               |
| 20  | Storage Temperature       | –55 °C to +70 °C                                                                                               |
| 21  | Shock Resistance          | Tested in accordance with GJB150.18A-2009, Environmental Test Methods for Military Equipment — Shock Test.     |
| 22  | Vibration Resistance      | Tested in accordance with GJB150.16A-2009, Environmental Test Methods for Military Equipment — Vibration Test. |

**Note:**

The specified performance is based on line-of-sight conditions with visibility not less than 20 km, relative humidity ≤ 80%, and target reflectivity ≥ 0.3.



# 04

## Interface Description

Communication Interface: RS422 serial interface, baud rate: 115200 bps (default).

Electrical Interface: The connector model is A1002WR-S-10P. The interface definitions are shown in the table below:

| Pin No. | Definition | Wire Color | Remarks                                                                                          |
|---------|------------|------------|--------------------------------------------------------------------------------------------------|
| 1       | VIN+       | Red        | Power input +                                                                                    |
| 2       | VIN-       | Black      | Power input -                                                                                    |
| 3       | POWER_EN   | White      | Module power enable, TTL 3.3 V level.<br>Module ON: > 2.7 V or floating.<br>Module OFF: < 0.3 V. |
| 4       | RS422_TX+  | Yellow     | RS422 transmit +                                                                                 |
| 5       | RS422_TX-  | Orange     | RS422 transmit -                                                                                 |
| 6       | RS422_RX-  | Green      | RS422 receive -                                                                                  |
| 7       | RS422_RX+  | Blue       | RS422 receive +                                                                                  |
| 8       | CAN_H      | Purple     | CAN bus high                                                                                     |
| 9       | CAN_L      | Gray       | CAN bus low                                                                                      |
| 10      | GND        | Brown      | Communication ground                                                                             |

### Pin Assignment Note:

The connector pins are numbered sequentially from top to bottom, from Pin 1 to Pin 10.

# 05

## Communication Protocol


\* See Appendix 1.

# 06

## Operating Instructions

### Power-On Procedure

- Before powering on, connect the Laser Rangefinder Module, communication cable, DC power supply, and Host Controller according to the electrical interface requirements and as shown in the figure below.

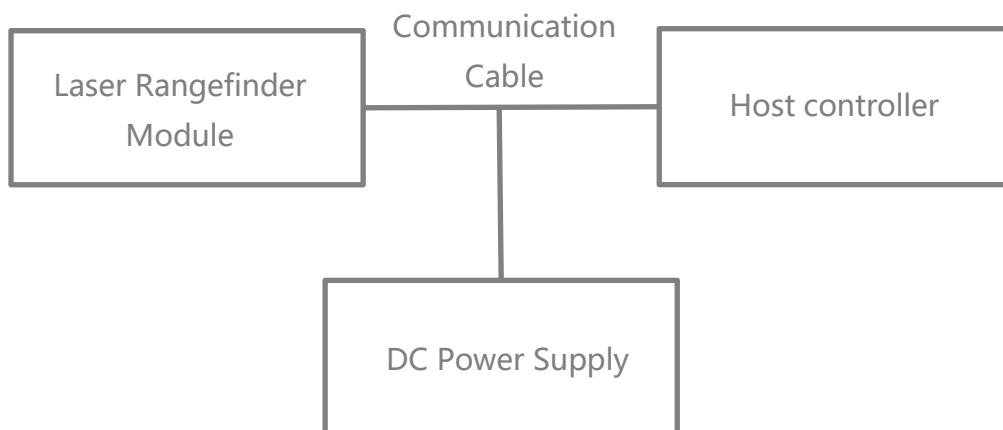

- The module powers on automatically after the power supply is connected.

### Power-Off Procedure





- Before powering off, ensure that all operating processes and tasks have been completed and that the program has been exited properly.
- After confirmation, disconnect the power supply to power off the module normally.

### Ranging Mode Operation

- Send the “Single Ranging” command to the Laser Rangefinder Module. The module performs a single ranging operation and returns the ranging status and distance value.
- Send the “Continuous Ranging” command to the Laser Rangefinder Module. The module performs continuous ranging and returns the ranging status and distance value continuously.
- Send the “Stop Ranging” command to terminate the ranging operation.

# 07

## Mechanical Dimensions and Mounting Hole Layout

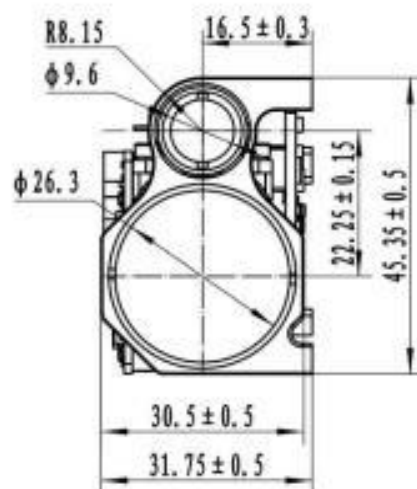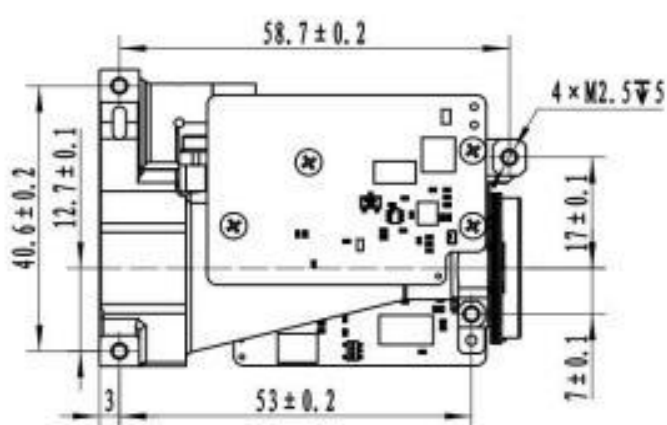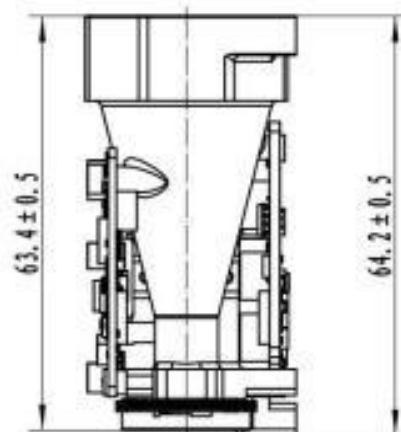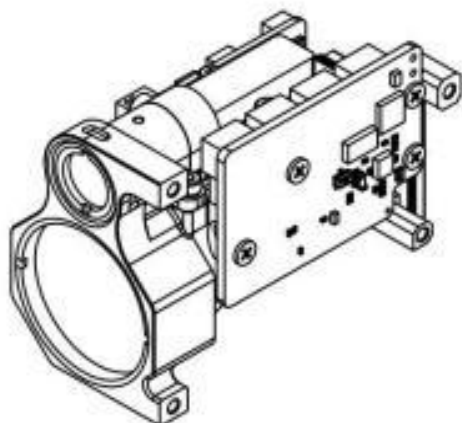

# 08

## Precautions for Use

- The laser emitted by this ranging module is a 1535 nm eye-safe laser. Although it is classified as eye-safe, direct exposure to the laser beam is not recommended;
- **When adjusting the parallelism of the three optical axes, be sure to block the receiving lens. Otherwise, excessive echo signals may permanently damage the detector;**
- This ranging module is not hermetically sealed. Ensure that the relative humidity of the operating environment remains below 80%, and keep the environment clean to prevent damage to the laser device;
- The ranging capability of the module is affected by atmospheric visibility and target characteristics. Fog, rain, and dusty conditions will reduce the ranging distance. Targets with high reflectivity, such as green foliage, white walls, and exposed limestone, can increase the ranging distance. In addition, increasing the inclination angle between the target and the laser beam will reduce the ranging distance;
- **Never direct the laser toward highly reflective targets such as glass or white walls within 30 meters, as excessively strong echo signals may damage the APD detector;**
- Do not connect or disconnect cables while the power is on;
- Ensure correct power supply polarity at all times. Incorrect polarity may result in permanent damage to the equipment.

# 09

## Optical Window Requirements

- The projected size of the effective optical window aperture shall be at least 1.5 mm larger than the outer diameter of the transmitting and receiving lenses of the ranging module;
- The effective aperture of the optical window shall be at least 2 mm larger than the outer diameter of the optical window;
- Since the optical window absorbs a certain amount of laser energy, it is recommended that the thickness of the optical window be controlled within 2–4 mm according to the mechanical dimensions;
- The air gap  $d$  between the optical window and the ranging module should be kept as small as possible. A spacing of  $\leq 4$  mm is recommended;
- For the 1535 nm Laser Rangefinder Module, it is recommended that the optical window be coated with an anti-reflection coating optimized for 1525–1545 nm, with a transmittance of  $\geq 99\%$ .

# 10

## Safety Precautions

- To ensure the safety of both operators and test subjects, the following safety measures have been incorporated into the design of the SFL0308 Laser Rangefinder Module;
- Safety design and analysis are conducted in accordance with GJB 900A-2012, General Requirements for Equipment Safety;
- Non-flammable materials are used, and all mechanical and electrical interfaces are securely connected;
- Appropriate design measures are implemented to prevent moisture accumulation that could result in short circuits;
- The module operates below the safety voltage limit for the human body.

## 11

## Maintenance Instructions

### Packing List

The standard items supplied with the product are listed in the table below. Optional accessories may not be included in this list and shall be subject to the actual product delivered.

| No. | Item                      | Quantity | Remarks |
|-----|---------------------------|----------|---------|
| 1   | Laser Rangefinder Module  | 1 unit   | -       |
| 2   | Certificate of Conformity | 1 copy   | -       |
| 3   | Packaging Box             | 1 pc     | -       |
| 4   | Connector Plug            | 1 pc     | -       |

### Module Cleaning

#### Cleaning of Optical Components

- Dust particles should be removed using an air blower;
- Fingerprints should first be cleaned with absorbent cotton lightly moistened with a small amount of alcohol-ether mixture, and then wiped with a clean lens cloth.

#### Cleaning of Mechanical and Electronic Components

- With the power disconnected, gently wipe mechanical and electronic components with alcohol and allow them to dry naturally before use;
- Keep the ranging module, connectors, and cables away from moisture and contaminants whenever possible;
- Ensure that the equipment is completely dry before packaging.

### Inspection and Maintenance

## Routine Maintenance

When the product is used for the first time, or after replacement of related modules or components, both visual inspection and power-on inspection shall be performed. For products under normal operation, only a power-on inspection is required before use.

- Visual Inspection Procedure
  - Check whether the product appearance is normal;
  - Check whether the cable connections are correct and securely connected.
- Power-On Inspection Procedure
  - Perform the power-on procedure and verify that the standby current is correct;
  - Start the self-test function of the product;
  - After the inspection is completed, perform the power-off procedure.

## Periodic Maintenance

Under normal operating conditions, the Laser Rangefinder Module does not require routine maintenance. If the module has been stored in a dust-free environment for more than one year, maintenance should be performed, including general inspection and power-on inspection.

- General Inspection (Performed with Power Off)
  - All markings and serial numbers on the product and test cable connectors shall be correct and clearly legible;
  - All screws on the panel shall be securely fastened;
  - The optical glass of the product shall be free from visible defects that may affect normal operation, such as spots, pitting, water stains, fungus, fingerprints, dust particles, or cracks.
- Comprehensive Power-On Inspection and Maintenance
  - Connect the product power supply in sequence;
  - Perform the power-on procedure and verify that the standby current is correct;
  - Start the product self-test and complete the self-test procedure;



- Perform the power-off procedure after completion of the inspection.

## Troubleshooting

Field repair is not permitted in the event of any malfunction. The product shall be returned to the manufacturer for inspection and repair.

The following list only includes possible fault phenomena not caused by the product itself. If any other technical problems occur during operation, please contact our company for technical support.

| Problem / Symptom                                                  | Possible Cause                  | Troubleshooting Method                                                                                                                                                                                             | Diagnostic Criteria                                                                                                                     | Solution                                                                   |
|--------------------------------------------------------------------|---------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| No communication or abnormal communication with the ranging module | Power supply issue              | Check whether the power supply has hardware or software wake-up enabled, verify voltage settings, and ensure the current protection setting is correct. If the voltage is correct, try replacing the power supply. | If the module operates normally after changing the voltage or power supply, the fault is determined to be caused by the power supply.   | Set the correct voltage/current or replace the power supply.               |
|                                                                    | Cable connection issue          | Check whether the wiring is secure or replace the communication cable (TTL communication cables should not be excessively long).                                                                                   | If communication is restored after reconnecting or replacing the cable, the fault is determined to be caused by the cable connection.   | Reconnect or replace the communication cable.                              |
|                                                                    |                                 | Check whether the wiring matches the interface definition.                                                                                                                                                         | If the module operates normally after correcting the wiring, the fault is determined to be caused by incorrect wiring.                  | Rewire according to the correct interface definition.                      |
|                                                                    | Incorrect baud rate setting     | 1. Check whether the module status and baud rate settings match the communication protocol. 2. If baud rate configuration is supported, set the required baud rate and test communication again.                   | If communication becomes normal after correcting the baud rate, the fault is determined to be caused by an incorrect baud rate setting. | Set the Host Controller baud rate according to the communication protocol. |
|                                                                    | Incorrect communication command | Check whether the sent commands match the communication protocol and confirm that                                                                                                                                  | If communication becomes normal after sending correct commands, the fault is                                                            | Send the correct commands to the ranging module.                           |

|                               |                                               |                                                                                                                                                                                                                     |                                                                                                                                                |                                                                                                            |
|-------------------------------|-----------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|
|                               |                                               | commands are transmitted in hexadecimal format.                                                                                                                                                                     | determined to be caused by incorrect communication commands.                                                                                   |                                                                                                            |
|                               | RS422 driver not installed on Host Controller | Install the RS422 driver on the Host Controller.                                                                                                                                                                    | If communication becomes normal after driver installation, the fault is determined to be caused by the missing driver.                         | Install the required driver.                                                                               |
|                               | Main control program issue                    | If communication fails during integration with the main controller, verify whether standalone communication is normal.                                                                                              | If standalone communication is normal, the fault may be caused by the main control program.                                                    | Check the system software, including checksum settings and Host Controller data parsing/display functions. |
|                               | Other causes (circuit fault, etc.)            | Return to the manufacturer for inspection.                                                                                                                                                                          | To be determined by factory inspection.                                                                                                        | Return for repair.                                                                                         |
| Invalid ranging data returned | Operational issue                             | Check whether the transmitting or receiving lens is blocked, and ensure that there are no obstructions in the ranging environment (such as window glass or wall corners).                                           | If ranging returns to normal after removing the obstruction, the fault is determined to be caused by blockage.                                 | Remove the obstruction.                                                                                    |
|                               |                                               | Check whether the ranging axis and sighting axis are aligned.                                                                                                                                                       | If ranging returns to normal after realignment, the fault is determined to be caused by axis misalignment.                                     | Realign the optical axes.                                                                                  |
|                               | Laser failure                                 | Check whether the operating current is normal, observe whether the current fluctuates during ranging, send a self-test command, or use an infrared test card/CCD camera to observe whether a laser spot is present. | If the self-test indicates abnormal laser output and no spot is observed, the fault is preliminarily determined to be caused by laser failure. | Return for repair.                                                                                         |
|                               | Other causes (circuit fault, detector issue,  | Return to the manufacturer for inspection.                                                                                                                                                                          | To be determined by factory inspection.                                                                                                        | Return for repair.                                                                                         |

|                                 |                                               |                                                                                                                                                                                                                                        |                                                                                                                                                      |                                                                                                                                            |
|---------------------------------|-----------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
|                                 | etc.)                                         |                                                                                                                                                                                                                                        |                                                                                                                                                      |                                                                                                                                            |
| False alarm during ranging      | Electrical noise interference                 | Block the receiving lens or point the module toward the sky (away from direct sunlight) and check whether false alarms persist. Test the module with separate power supply and communication configurations to identify noise sources. | If false alarms disappear under isolated test conditions, the fault source can be identified as optical, communication, or power noise interference. | Reduce noise interference, improve grounding/filtering, use ferrite cores, or increase threshold settings (may reduce ranging capability). |
| Insufficient ranging capability | Weather conditions                            | Check whether weather conditions such as rain, snow, fog, dust, low visibility, high humidity, or atmospheric turbulence are present.                                                                                                  | If ranging capability meets specifications under proper weather conditions, the fault is determined to be caused by environmental conditions.        | Test under suitable weather conditions.                                                                                                    |
|                                 | Optical window issue                          | Check whether the optical window has low transmittance, incorrect wavelength coating, contamination, small aperture, or excessive tilt angle. Remove the optical window and retest.                                                    | If ranging capability returns to normal after removing the optical window, the fault is determined to be caused by the optical window.               | Replace the optical window according to the recommended specifications and installation requirements.                                      |
|                                 | Target size too small or reflectivity too low | Replace the target with a larger or higher-reflectivity object, preferably perpendicular to the optical axis.                                                                                                                          | If ranging capability improves with a more suitable target, the fault is determined to be caused by improper target selection.                       | Use a more suitable target or select a higher-performance ranging module.                                                                  |
|                                 | Operating temperature out of range            | Send a self-test command and check the module operating temperature. Retest after returning to normal temperature.                                                                                                                     | If ranging capability returns to normal after temperature recovery, the fault is determined to be caused by excessive operating temperature.         | Operate within the specified temperature range.                                                                                            |
|                                 | Optical axis deviation                        | Confirm whether the module has undergone vibration, shock, temperature cycling, or                                                                                                                                                     | To be determined by factory inspection.                                                                                                              | Return for repair.                                                                                                                         |

|                           |                                                                 |                                                                                                                           |                                                                                                                                                     |                                                                                                       |
|---------------------------|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|                           |                                                                 | drop events.                                                                                                              |                                                                                                                                                     |                                                                                                       |
|                           | Other causes<br>(circuit fault, low receiver sensitivity, etc.) | Return to the manufacturer for inspection.                                                                                | To be determined by factory inspection.                                                                                                             | Return for repair.                                                                                    |
| Accuracy out of tolerance | Large target reflectivity deviation                             | Confirm whether the test target has excessively high reflectivity and whether the returned data fluctuates significantly. | If accuracy returns to normal after changing the target, the fault is determined to be caused by target reflectivity.                               | Replace the target. High-reflectivity targets are not recommended.                                    |
|                           | Improper test operation                                         | Check whether the target is correctly aligned.                                                                            | If accuracy returns to normal after proper alignment, the fault is determined to be caused by improper operation.                                   | Realign the target.                                                                                   |
|                           | Calibration instrument issue                                    | Verify the accuracy of the calibration instrument.                                                                        | If accuracy returns to normal after replacing the calibration instrument, the fault is determined to be caused by inaccurate calibration equipment. | Replace the calibration instrument.                                                                   |
|                           | Low optical window transmittance                                | Check whether the returned ranging value is excessively large. Remove the optical window and retest.                      | If accuracy returns to normal after removing the optical window, the fault is determined to be caused by low optical window transmittance.          | Replace the optical window according to the recommended specifications and installation requirements. |

## Packaging and Transportation Requirements

### > Packaging

After unpacking, if the product needs to be placed back into storage, it shall be repackaged using the original packaging whenever possible.

If the product needs to be returned to the manufacturer, the original packaging is recommended. If alternative packaging is used, it shall not cause any degradation in product performance or physical damage.

### > Transportation

Repackaged products may be transported by automobile, railway, aircraft, or ship. During transportation, the package shall be securely fixed to the transport vehicle to avoid impact, improper handling, and exposure to rain or snow.

# 12

## Technical Support and Service

If a product malfunction occurs and factory return is required for fault analysis, troubleshooting, or repair, SunFlaser Technology (Chengdu) Co., Ltd. provides a one-year warranty and lifetime technical support from the date of product delivery.

During the warranty period, product failures caused by manufacturing or quality issues will be repaired or replaced free of charge by SunFlaser. For product damage caused by improper operation or other user-related factors, repair and replacement costs will be charged according to the actual situation.

This product is a precision optical instrument. Please handle and operate it carefully during use. If you have any additional questions regarding operation or maintenance, please contact our after-sales support personnel at any time.

# 13

## Contact Information

Website: [www.sunflaser.com](http://www.sunflaser.com)

Tel: +86 186 2827 7862 (Sales Manager: Mr. Cao)

Address: No. 58, Zhenxing West 1st Road, Building 1, Room 201, Jinniu District, Chengdu, Sichuan, China

## Appendix 1:

Default baud rate: 115200 bps;

Data format: 8 data bits, 1 start bit, 1 stop bit, no parity check. The data packet consists of a header byte, command field, data length field, parameter field, and checksum byte;

Communication mode: The Host Controller and the ranging module use a master-slave communication mode. The Host Controller sends control commands to the ranging module, and the ranging module receives and executes the commands. During ranging operation, the ranging module periodically returns ranging data and status information to the Host Controller according to the ranging cycle. The communication format and command definitions are shown in the following tables.

### a) Commands Sent by the Host Controller

The transmission packet format is as follows:

| STX0 | CMD | LEN | DATA1H | DATA1L | CHK |
|------|-----|-----|--------|--------|-----|
|------|-----|-----|--------|--------|-----|

Table 2. Transmit Packet Format Description

| No. | Field Name | Description               | Code                                      | Remarks   |
|-----|------------|---------------------------|-------------------------------------------|-----------|
| 1   | STX0       | Start-of-frame identifier | 55(H)                                     | —         |
| 2   | CMD        | Command code              | See Table 3                               | —         |
| 3   | LEN        | Data length               | Length of the parameter field             | —         |
| 4   | DATAH      | Parameter data            | See Table 3                               | High byte |
| 5   | DATAL      | Parameter data            | —                                         | Low byte  |
| 6   | CHK        | XOR checksum              | XOR of all bytes except the checksum byte | —         |

Command descriptions are provided below:

Table 3. Host Controller Command and Data Definitions for the Ranging Module

| No. | CMD  | Function                               | Data Bytes                     | Remarks                                                                  | Length  | Example Code                                   |
|-----|------|----------------------------------------|--------------------------------|--------------------------------------------------------------------------|---------|------------------------------------------------|
| 1   | 0x00 | Standby (Stop Continuous Ranging)      | 00 00                          | Stops ranging operation                                                  | 6 bytes | 55 00 02 00 00 57                              |
| 2   | 0x01 | Single Ranging                         | 00 00                          | —                                                                        | 6 bytes | 55 01 02 00 00 56                              |
| 3   | 0x02 | Continuous Ranging                     | DATAH = XX(H)<br>DATAL = YY(L) | DATA represents the ranging period in ms                                 | 6 bytes | 55 02 02 03 E8 BE<br>(1 Hz ranging)            |
| 4   | 0x03 | Self-Test                              | 00 00                          | —                                                                        | 6 bytes | 55 03 02 00 00 54                              |
| 5   | 0x04 | Minimum Distance Gate Setting          | DATAH = XX(H)<br>DATAL = YY(L) | DATA represents the blind-zone distance in meters                        | 6 bytes | 55 04 02 00 64 37<br>(Minimum distance: 100 m) |
| 6   | 0x06 | Accumulated Laser Emission Count Query | 00 00                          | Query accumulated laser emission count                                   | 6 bytes | 55 06 02 00 00 51                              |
| 7   | 0x22 | Target Mode Setting                    | DATAH = XX(H)<br>DATAL = YY(L) | Single target: 00 00<br>Triple target: 00 01<br>First/Last target: 00 10 | 6 bytes | 55 22 02 00 01 74<br>(Triple target mode)      |
| 8   | 0x26 | Baud Rate Setting                      | DATAH = XX(H)<br>DATAL = YY(L) | The baud rate parameter is encoded as:                                   | 6 bytes | 55 26 02 04 80<br>(Baud rate:115200)           |

## b) Host Controller Receive Format

The receive packet format is as follows:

| STX0 | CMD | LEN | DATA <sub>n</sub> | DATA0 | CHK |
|------|-----|-----|-------------------|-------|-----|
|------|-----|-----|-------------------|-------|-----|

Table 4. Receive Packet Format Description

| No. | Field Name | Description               | Code                                      | Remarks                 |
|-----|------------|---------------------------|-------------------------------------------|-------------------------|
| 1   | STX0       | Start-of-frame identifier | 55(H)                                     | —                       |
| 2   | CMD_JG     | Data command code         | See Table 5                               | —                       |
| 3   | LEN        | Data length               | Length of the parameter field             | —                       |
| 4   | Dn         | Parameter data            | See Table 5                               | High-order data byte(s) |
| 5   | D0         | Parameter data            | —                                         | Low-order data byte     |
| 6   | CHK        | XOR checksum              | XOR of all bytes except the checksum byte | —                       |

### Status Definitions for Data Received by the Host Controller:

Table 5. Ranging Module Response Data Definitions

| No. | CMD  | Function                                                                                                                                       | Data Bytes                             | Remarks                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                | Total Length |
|-----|------|------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| 1   | 0x00 | Standby (Stop Continuous Ranging)                                                                                                              | 00 00                                  | Same as request frame                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | 6 bytes      |
| 2   | 0x01 | Single Ranging (In single-target mode, the second and third target values are zero; in first/last target mode, the third target value is zero) | D9 D8 D7<br>D6 D5 D4<br>D3 D2 D1<br>D0 | D8–D6: First target distance (unit: 0.1 m)<br>D5–D3: Second target distance (unit: 0.1 m)<br>D2–D0: Third target distance (unit: 0.1 m) Targets are ordered from nearest to farthest.<br>D9 (bit7–bit0) status byte:<br>bit7: Main echo flag; 1 = valid main echo, 0 = no main echo.<br>bit6: Echo flag; 1 = echo detected, 0 = no echo.<br>bit5: Laser status; 1 = normal, 0 = laser fault.<br>bit4: Timeout flag; 1 = normal, 0 = timeout.<br>bit3: Reserved (set to 1).<br>bit2: APD status; 1 = normal, 0 = error.<br>bit1: Front target flag; 1 = front target detected, 0 = no front target detected (targets before the main target are considered front targets).<br>(Modulation bit, for reference only.)<br>bit0: Rear target flag; 1 = rear target detected, 0 = no rear target detected (targets after the main target are considered rear targets). (Modulation bit, for reference only.) | 14 bytes     |



|                                                    |      |                                                                                                                                                    |                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                |
|----------------------------------------------------|------|----------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
| 3                                                  | 0x02 | Continuous Ranging (In single-target mode, the second and third target values are zero; in first/last target mode, the third target value is zero) | D9 D8 D7<br>D6 D5 D4<br>D3 D2 D1<br>D0 | D8–D6: First target distance (unit: 0.1 m)<br>D5–D3: Second target distance (unit: 0.1 m)<br>D2–D0: Third target distance (unit: 0.1 m)<br>Targets are ordered from nearest to farthest.<br>D9 (bit7–bit0) status byte:<br>bit7: Main echo flag; 1 = valid main echo, 0 = no main echo.<br>bit6: Echo flag; 1 = echo detected, 0 = no echo.<br>bit5: Laser status; 1 = normal, 0 = laser fault.<br>bit4: Timeout flag; 1 = normal, 0 = timeout.<br>bit3: Reserved (set to 1).<br>bit2: APD status; 1 = normal, 0 = error.<br>bit1: Front target flag; 1 = front target detected, 0 = no front target detected (targets before the main target are considered front targets).<br>(Modulation bit, for reference only.)<br>bit0: Rear target flag; 1 = rear target detected, 0 = no rear target detected (targets after the main target are considered rear targets). (Modulation bit, for reference only.) | 14 bytes                       |
| 4                                                  | 0x03 | Self-Test                                                                                                                                          | D7 ~ D0                                | D7–D6: –5 V supply voltage, unit: 0.01 V.<br>D5–D4: Blind-zone value, unit: 1 m.<br>D3: APD high voltage value, unit: V.<br>D2: Signed 8-bit integer representing APD temperature in °C., indicating APD temperature in °C.<br>D1–D0: +5 V supply voltage, unit: 0.01 V.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | 12 bytes                       |
| 5                                                  | 0x04 | Minimum Distance Gate Setting                                                                                                                      | D1 D0                                  | DATA represents the minimum distance value in meters; high byte first, same as request frame.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | 6 bytes(Saved after power-off) |
| 6                                                  | 0x06 | Accumulated Laser Emission Count Query                                                                                                             | D3 ~ D0                                | DATA represents the accumulated laser emission count; 4-byte value, high byte first.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 8 bytes                        |
| 7                                                  | 0x22 | Target Mode Setting                                                                                                                                | D1 D0                                  | Same as transmit frame.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | 6 bytes                        |
| 8                                                  | 0x26 | Baud Rate Setting                                                                                                                                  | D1 D0                                  | D1 D0: Factory baud rate parameter, high byte first.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 6 bytes                        |
| Note:<br>① Undefined data bytes/bits default to 0. |      |                                                                                                                                                    |                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |                                |