

Exchange of head rest parts

7.2.3.06.c Service pack manual



Retailer	Rev.: 05	Date: 2014-03-25	Pages.: 1 of 7	Name: 7.2.3.06.c X3 group1 exchange of headrest parts - service manual rev05 2014 03 25.doc
Done by: vanderveer	Sign:		Saved:	

7.2.3.06.c

Service to be done by the retailer

No.	Action
1	If the seat has been involved in a crash: Do not change the EPS and do not let the seat to be used any longer!
2	What is needed: Parts (supplied by HTS BeSafe): EPS headrest : - EPS headrest X3 (J2000750) - 2 Stickers 'Do not remove' (M2001170) Optional parts: - Dowel pin head rest (K2002860) - Head rest height adjustment parts (L2001170) - Spring head rest (K2002850) - Head rest support (L2000990) Tools: - Cross head screwdriver - Flathead screwdriver (or similar flat piece of metal) - Pinchers (only needed when old push-in foam plugs are used) If one of the optional parts needs to be replaced, this set (see page 2) is useful to order; - Magnet tool and metal hook (901501)
3	Remove the upholstery of the seat 

Exchange of head rest parts

7.2.3.06.c Service pack manual

BeSafe®

Retailer	Rev.: 05	Date: 2014-03-25	Pages.: 2 of 7	Name: 7.2.3.06.c X3 group1 exchange of headrest parts - service manual rev05 2014 03 25.doc
Done by: vanderveer	Sign:	Saved:		

4	Remove the upholstery of the head rest 
5	Remove stickers of the head rest and remove the head rest EPS 
	When only the EPS head rest or "Do not remove" stickers need to be replaced: skip to nr 21 of this manual
6	Release the hook at the bottom of the head rest support in the guiding rail which is placed in the EPS seat shell. Use a flathead screwdriver or similar to make the opening wider. 
7	Use a hook to pull the spring and use a magnet to pull out the pin. Keep the pin! (without the pin the head rest cannot be assembled) You can order this set with number 901501 

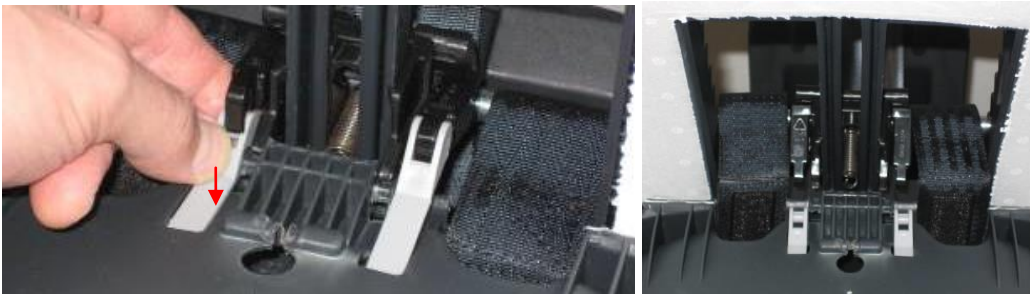
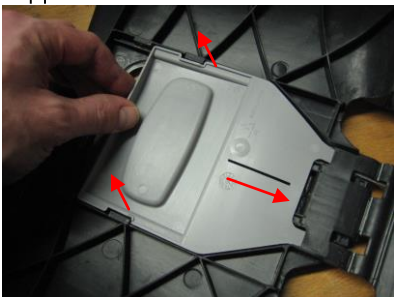
Example of magnet tool & spring hook tool

Exchange of head rest parts

7.2.3.06.c Service pack manual

BeSafe®

Retailer	Rev.: 05	Date: 2014-03-25	Pages.: 3 of 7	Name: 7.2.3.06.c X3 group1 exchange of headrest parts - service manual rev05 2014 03 25.doc
Done by: vanderveer	Sign:	Saved:		

8	Push the hooks of the cam block out of the hinges on the end of the two legs of the release handle to take the headrest of the seat 
9	Pull the buckles and harness belt straps through the holes of the head rest to remove the headrest 
10	Bend the “slide block head rest” open to get the head rest height adjustment parts of the seat shell 
11	Slide the “guiding pin harness belt” out of the “height adjuster head rest” to get the spring of the hook 
12	Slide the “release handle head rest” down, bend it a little to be able to get slide out of the “head rest support” 

Exchange of head rest parts

7.2.3.06.c Service pack manual

BeSafe®

Retailer	Rev.: 05	Date: 2014-03-25	Pages.: 4 of 7	Name: 7.2.3.06.c X3 group1 exchange of headrest parts - service manual rev05 2014 03 25.doc
Done by: vanderveer	Sign:	Saved:		

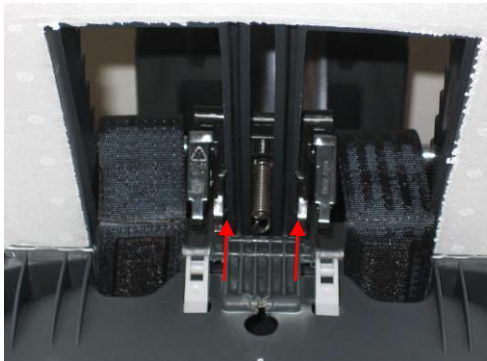
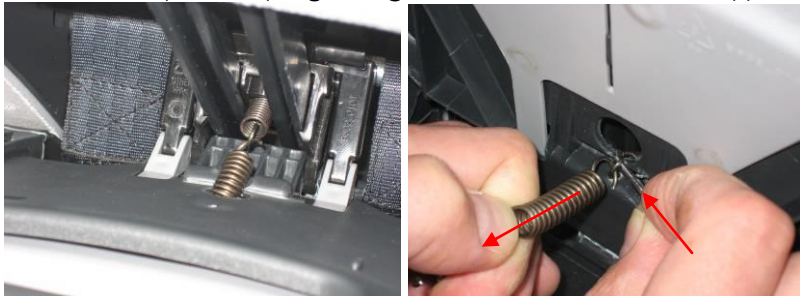
	-Reassembly of the seat-	
13	Slide the "release handle head rest" into the "head rest support"	
		
14	Put the spring on the hook and slide the "guiding pin harness belt" in the "height adjuster head rest" to lock it	
		
15	Assemble the head rest height adjustment parts and click it on the seat shell.	
		Place the two friction straps with the velcro on the top side
16	Put the buckles and harness belt straps back trough the holes of the head rest	
		

Exchange of head rest parts

7.2.3.06.c Service pack manual

BeSafe®

Retailer	Rev.: 05	Date: 2014-03-25	Pages.: 5 of 7	Name: 7.2.3.06.c X3 group1 exchange of headrest parts - service manual rev05 2014 03 25.doc
Done by: vanderveer	Sign:	Saved:		

17	Fold the headrest support over the film hinges 90 degrees and slide the axis in the hinge openings of the slide block 
18	click the hooks of the cam block over the hinges on the end of the two legs of the release handle 
19	use a hook to pull the spring through the hole of the head rest support and fix the spring with a pin 
20	click the hook at the bottom of the head rest support in the guiding rail which is placed in the EPS seat shell 

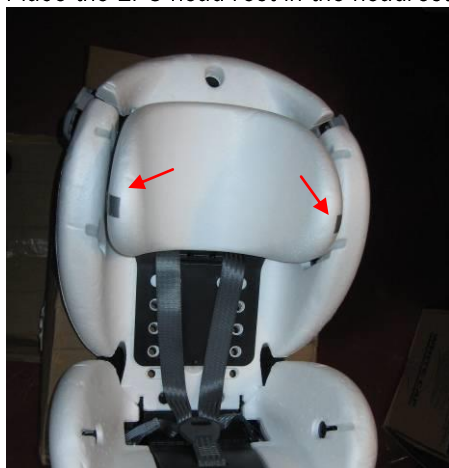
Exchange of head rest parts

7.2.3.06.c Service pack manual

BeSafe®

Retailer	Rev.: 05	Date: 2014-03-25	Pages.: 6 of 7	Name: 7.2.3.06.c X3 group1 exchange of headrest parts - service manual rev05 2014 03 25.doc
Done by: vanderveer	Sign:		Saved:	

- 21** Place the EPS head rest in the headrest support and fix the EPS with two stickers 'Do not remove'



The tape must be applied flat and without wrinkles

- 22** Put the upholstery back on the head rest



- 22** Put the upholstery back on the seat



Exchange of head rest parts

7.2.3.06.c Service pack manual

BeSafe®

Retailer	Rev.: 05	Date: 2014-03-25	Pages.: 7 of 7	Name: 7.2.3.06.c X3 group1 exchange of headrest parts - service manual rev05 2014 03 25.doc
Done by: vanderveer	Sign:	Saved:		

23				
	Please make photos of the replaced item together with the seat serial number and purchase date and email them to HTS BeSafe			