



INSTRUMENTS & SYSTEMS

I & S Building
30 Mohabbewala Industrial Area
Dehradun (Uttarakhand)- 248 002

Email :
sales@instruments-systems.com
info@instruments-systems.com

Web:
www.instruments-systems.in

FOLLOW US ON :  



ISTT-200

TEMPERATURE TRANSMITTER DUAL INPUT

Operating & Maintenance Manual



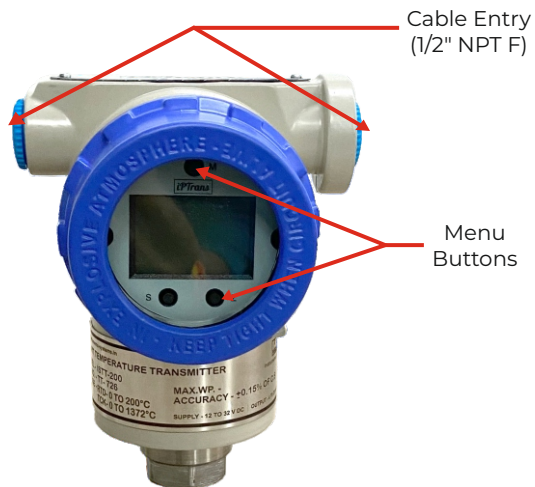
INSTRUMENTS & SYSTEMS

30 Mohabewala Industrial Area,
Mohabewala, Dehradun,
(Uttarakhand) - 248002



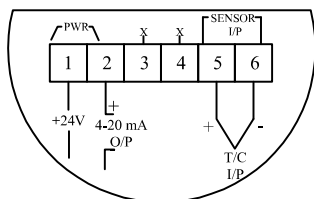
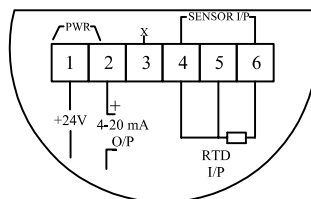
OUR COMPANY PROFILE

1. General Information

Front View**Back View (Single Input)**

2. Electrical Connection

(i) For Single Input

Single Input Thermocouple**Single Input RTD**

Manual Numbers	Description	Default Value in Display
0 0	No Change	
1 1	No Change	
2 2	Units : °C, °F, °R, K, Mv and OHM	2 °C
3 3	Low PV eg : 0.000	3 0.0000 °C
4 4	High PV eg : 200.00	4 200.00 °C
5 5	Damping eg : 0.0000	5 0.0000 °S
6 6	Zero Setting eg : 0.0000	6 0.0000 °C
7 7	Input Type Connection	7 385 °F
8 8	Number of wire connection : 2_W, 3_W & 4_W eg : 3 wire	8 3_W
9 9	OHM	9 0.0000 OHM
11 11	Second Sensor enabling/disabling	11 52_EN YES
12 12	Hot backup enabling/disabling	12 HOT EN YES
13 13	Dual Sensor Function Temperature Difference DIFFT Average Temperature AVERT Main Sensor Priority F_S_T	13 DUALS 13 F - 9 - T

Note :-

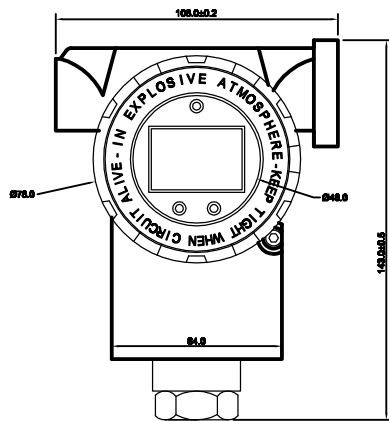
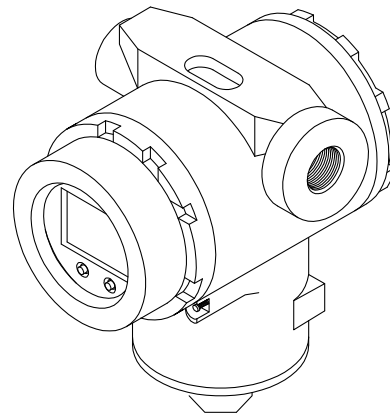
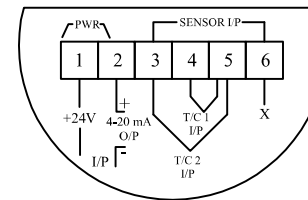
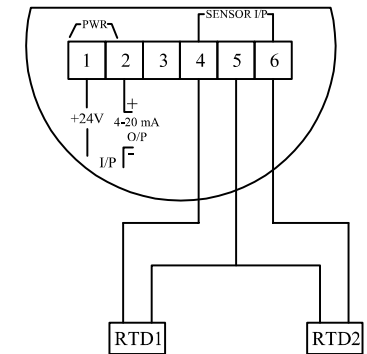
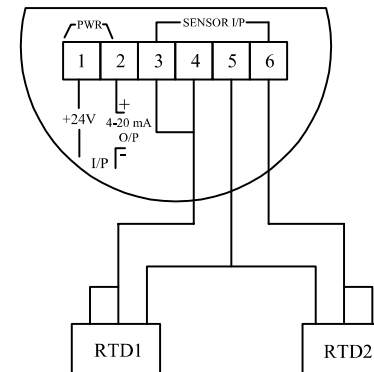
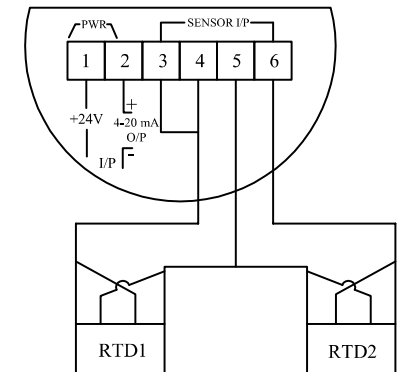
When Sensor 1 fails, **E1** is indicated on the bottom left side of the display and **E3** is indicated when sensor 2 fails.

Menu 8: Input for Number of Wire Connection

1. Key Z- Long press for 2-3 seconds. LCD will display a code- '00000'
2. Key Z- Again press this key for 4 times- '00000'
3. Key S- Press 8 times- '00008'
4. Key M- Press 1 time to go to Menu-8.
5. Key S- Press this key to select wire connection as 2 Wire, 3 Wire & 4 Wire.
6. Key M- Press this key until we get the 0 Menu.
7. Key S- Lastly press 1 time to save the setting.

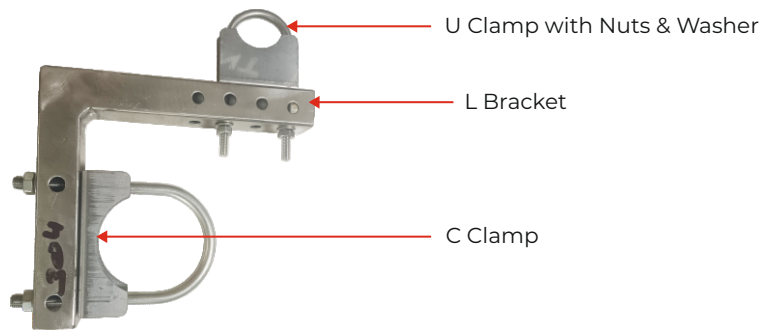
Number of wire connection : 2_ୱ, 3_ୱ & 4_ୱ

eg : 3 wire

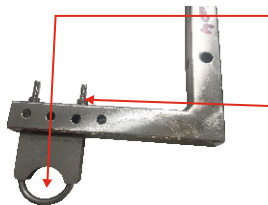
**6. GA Drawing & Dimensions****FIG.- FRONT VIEW****FIG.- ISOMETRIC VIEW****2. Electrical Connection****(ii) For Dual Input****Dual Input Thermocouple****Dual Input RTD 2-Wire****Dual Input RTD 3-Wire****Dual Input RTD 4-Wire**

3. Mechanical Installation

(Vertical / Horizontal)



Place the C Clamp with the L Bracket then ahead of C Clamp put transmitter and fasten it with U Clamp using nuts & washers.



Note :

1. The smaller size U Clamp & C Clamp pair will be used for PT mounting.

2. The bigger size U Clamp & C Clamp pair will be used for Pipe/Panel.

3. The clamping should be done with L Bracket in vertical or horizontal holes as per the mounting pipe requirement.

STEP 1



1. Now clamp the other side of the bracket as the same.

2. Place the C Clamp with the L Bracket then ahead of C Clamp and tighten it with the pipe/panel with U Clamp using nuts & washers tightly.



- The mounting arrangement of the PT in panel or pipe would be like this.

- This is the vertical pipe mounting it can be done with horizontal pipe mounting also, we just have to clamp the U Clamp in vertical holes of the L Bracket then the mounting will be as per horizontal pipe mounting.

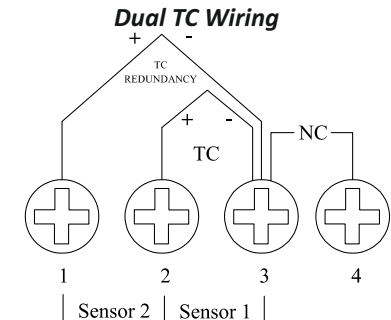
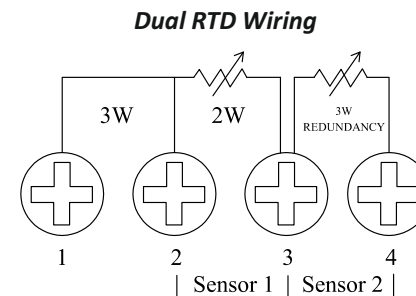
STEP 2

Please note :-

1. for vertical pipe mounting the both U Clamp & C Clamp should be tighten in the horizontal holes.
2. for horizontal pipe mounting the both U Clamp & C Clamp should be tighten in the vertical holes.

5. Sensor Connection/Wiring Diagram

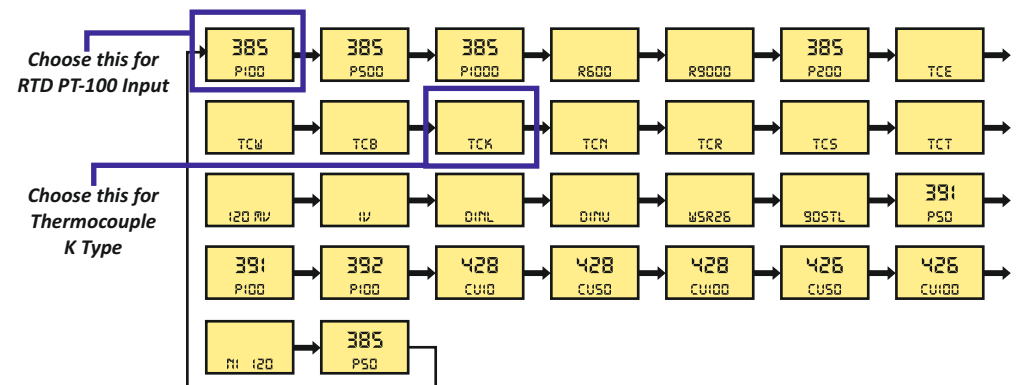
Through variable "Enable/Disable the second sensor" confirm whether to connect dual sensor. If disable of the second sensor, the wiring method is same, if enable of the second sensor, the wiring method as below :-

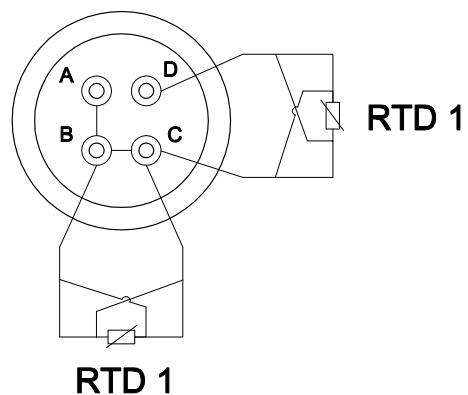


6. Adjustments with Keypad

Menu 7: For Input Type Connection Setting (RTD/TC)

1. Key Z- Long press for 2-3 seconds. LCD will display a code- '00000'
2. Key Z- Again press this key for 4 times- '00000'
3. Key S- Press 7 times- '00007'
4. Key M- Press 1 time to go to Menu-7.
5. Key S- Press this key until we get the required input type connection.
6. Key M- Press this key until we get the 0 Menu.
7. Key S- Lastly press 1 time to save the setting.



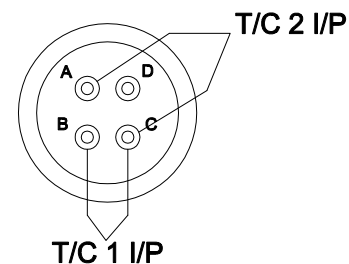
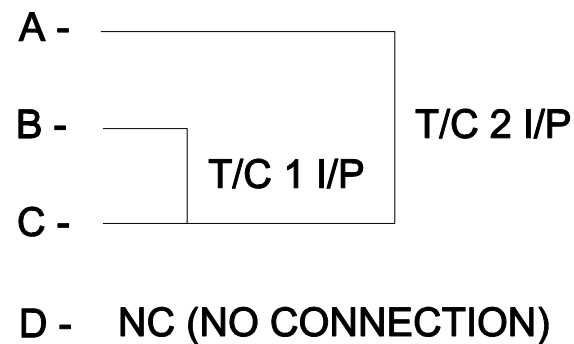
Dual Input RTD 4-Wire**FEMALE PART****LOOP DIAGRAM:-**

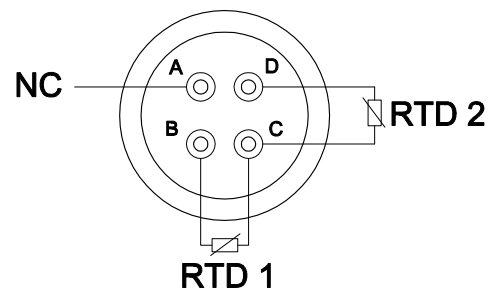
A - RTD 1

B - RTD 1

C - COM

D- RTD 2

4. Wiring Diagram***Dual Input Thermocouple*****FEMALE PART****LOOP DIAGRAM:-**

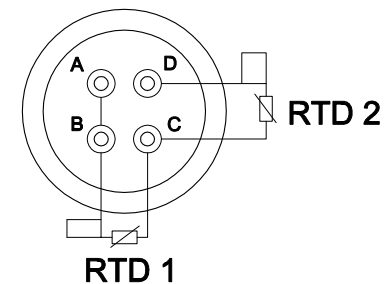
Dual Input RTD 2-Wire**FEMALE PART****LOOP DIAGRAM:-**

A - NC (NO CONNECTION)

B - RTD 1

C - COM

D- RTD 2

Dual Input RTD 3-Wire**FEMALE PART****LOOP DIAGRAM:-**

A - RTD 1

B -

C - COM

D- RTD 2