

FENIX A320 FAMILY

USER GUIDE



Contents

1.0 Introduction.....	4
1.1 The Fenix Airbus A320 family.....	4
2.0 Fenix A320 application.....	5
2.1 Product configuration.....	5
2.2 ACARS service.....	5
2.3 Flight Deck displays.....	6
2.4 Help & Support.....	6
3.0 Aircraft Configuration.....	7
3.1 Controls calibration –Thrust, Sidestick & Flaps.....	7
4.0 Electronic Flight Bag (EFB).....	8
4.1 The Fenix EFB.....	8
4.2 EFB Applications.....	8
4.3 Using the EFB on an external device or web browser.....	9
4.3.1 Access via external device.....	9
4.3.2 Access via browser on your PC.....	9
4.4 Web MCDU.....	9
4.4 Removing the EFB.....	10
4.5 Authorising Navigraph.....	10
5.0 Fenix app.....	11
5.0.1 Using Simbrief.com.....	11
5.0.2 Manually configure the aircraft load.....	12
5.1 Ground Services.....	13
5.2 Panel States.....	13
5.3 Sim Settings.....	14
6.0 Performance Calculations.....	19
6.1 Departure performance.....	19
6.2 Arrival performance.....	19
7.0 Charts app.....	20
8.0 Pilot Brief app.....	21
9.0 Failures app.....	22
10.0 Settings app.....	23
11.0 Walkaround mode (MSFS 2024 only).....	24
12.0 Company Messages.....	25
13.0 Fenix Installer & Livery Manager.....	25
13.1 Livery Manager.....	26
14.0 Frequently Asked Questions (FAQs).....	27

1.0 Introduction

1.1 The Fenix Airbus A320 family



Welcome aboard the Fenix A320 family. We've painstakingly modelled your aircraft so it faithfully replicates an Airbus A320 CEO family (Current Engine Option) with EIS2 (Electronic Instrumentation System, 2nd generation) equipment.


The Airbus A320 family are narrow-body airliners developed and produced by Airbus with parts manufactured across Europe. The aircraft was launched in March 1984, first flew on the 22nd February 1987 and was introduced into service in April 1988 by Air France.

With a versatile cabin, the A320 can carry up to 180 passengers and 16.6 tonnes of cargo with a range up to 3,300nm. The aircraft operates up to 39,000ft at up to Mach 0.82 with a maximum takeoff weight of 78 tonnes.

The Fenix Airbus A320 family stands 38' 7" tall, has a wingspan of 111' 11", with a length between 111' and 146' depending on the variant, and has a fuselage 13' wide.

There are nearly 400 airline operators of the A320 family globally, each able to customise the configuration of the aircraft. Fenix have provided the ability for you to customise your aircraft individually via settings in the EFB or based on the livery installed.

2.0 Fenix A320 application

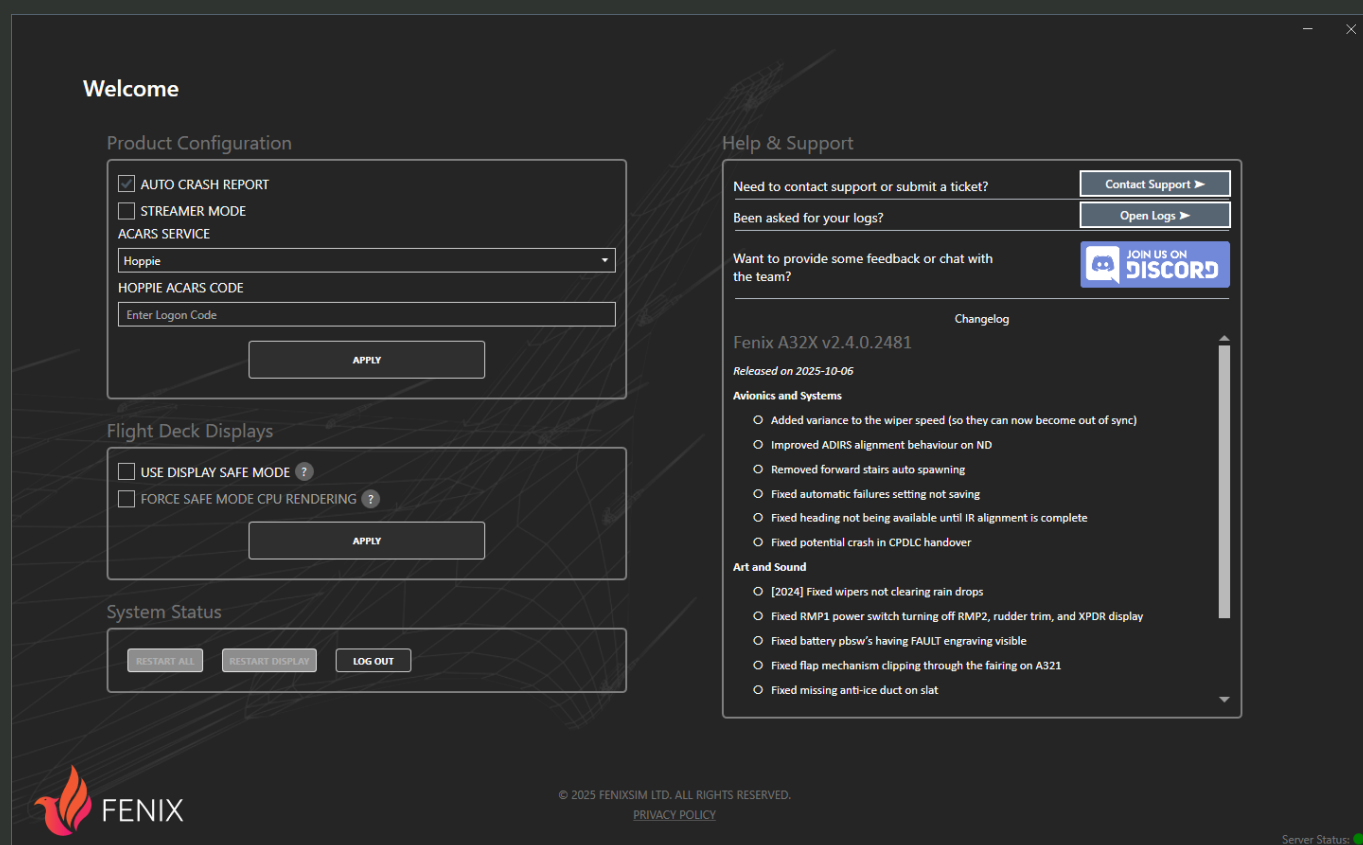

2.1 Product configuration

Automatic Crash reporting - Opting into automatic crashing reporting by ticking the **Auto Crash Report** option in the Fenix app significantly helps us trace the root cause of unexpected crashes and errors. You can find more about this feature and what information we receive as a part of the report [in this article](#) .

Streamer mode - Use streamer mode to hide your personal details like your username or email address if required.

2.2 ACARS service

You can make use of either SayIntentions, BeyondATC or the Hoppie ACARS service and we have fully integrated it into the MCDU as in the real aircraft. To make use of the Hoppie service you'll need to register an account by visiting <https://www.hoppie.nl/acars/system/register.html> . Once created, add your ACARS Login Code to this field to enable the ATC Comm menu in the MCDU.

In the case of using SayIntentions or BeyondATC, the API key is automatically read for you from the app.

Note: If the sim is running when you add the code, the changes will take effect the next time you load the aircraft in the simulator.

2.3 Flight Deck displays

We acknowledge that there are many different sim setups in use across the sim community, with varying budgets and configurations leading to different performance experienced when using MSFS. To ensure that different system setups can run Fenix smoothly, we've included various display rendering compatibility options.

Use Display Safe Mode

This setting may help with serious performance degradation issues or graphical glitches.

Note: Use this option only if you are instructed to so by the support staff.

Force Safe Mode CPU Rendering

This option can be used only with Display Safe Mode option enabled. Setting this to on will prefer using CPU to render displays.

Note: Use this option only if you are instructed to so by the support staff.

To find more about those settings see the following [What do the options in the Fenix App mean?](#) knowledge base article.

2.3.1 System status

In the case you encounter issues with the aircraft systems or displays not responding, you can try either of the following **RESTART ALL** or **RESTART DISPLAYS** buttons.

Pressing the **LOG OUT** button will log you out of the Fenix desktop app.


2.4 Help & Support

Use these options to raise a support ticket, access the log folder or our Discord server to connect with the Fenix community.

You're likely to find answers to most questions by checking documentation included with the product, checking the [Knowledge base](#), frequently asked questions (FAQs) section of this document or asking in the Discord server.

If you can't find what you're looking for our support team will be happy to assist you. To contact them, please use the button 'Contact Support' in the FenixSim A320 application or visit fenixsim.com/support and our team will respond to you as soon as possible.

If you are encountering the following **Login Failed** error message when starting the Fenix application:



Please follow the steps in the [How do I reset my Fenix A32X License/Activation?](#) article.

3.0 Aircraft Configuration

3.1 Controls calibration - Thrust, Sidestick & Flaps

Ahead of your first flight, you will need to calibrate your thrust levers if you are using one. The MCDU page is at **MENU > CONFIG > CONTROLS CONFIG**.

Choose the Calibrate option and the page will guide you where to set the thrust levers to set each detent.

When you have completed all of the steps choose **STORE CALIBRATION** to complete the process.

Notes:

- 1.) If your thrust lever doesn't have positions for reverse or idle reverse, leave the thrust lever in idle and progress past those steps in the calibration process by choosing **NEXT STEP**.
- 2.) If you are using the Thrustmaster Airbus TCA controller, see the FAQ section of this document for mapping controls in MSFS.

If you use an external controller for flap settings you can calibrate this in the same MCDU page by using the right arrow.

For further information and video guides, please visit following Knowledge Base Articles

[Fenix A320 Flight Control Calibration](#)

[How to setup your Thrustmaster TCA Throttle](#)

[Flaps are unresponsive / Flaps Calibration](#)



4.0 Electronic Flight Bag (EFB)



4.1 The Fenix EFB

An electronic flight bag (EFB) is an electronic information management device that helps flight crews perform flight management tasks more easily and efficiently with less reliance on paper materials. The EFB consolidates important information like navigational charts, performance calculators, checklists and other documents. The EFB supports inputs from both physical keyboard and virtual on-screen keyboard. In MSFS 2024 the EFB is also accessible as an app via the native virtual tablet.

The Fenix A320 family ships with a comprehensive set of apps that we fully expect to mature and increase in functionality in future updates.

4.2 EFB Applications

There are several applications installed on the Fenix EFB to help plan and carry out your flight:

- **Fenix App** – Flight information, ground services, aircraft mass & balance, panel states and sim settings
- **Departure Performance** – Calculate departure performance
- **Arrival Performance** – Calculate arrival performance
- **Charts** – Review departure, enroute and arrival charts. Supports both in-sim LIDO charts (MSFS 2024 ONLY) or Navigraph (requires [Navigraph Charts](#) subscription) – includes integration with [simbrief.com](#). For users without a subscription, you can use the route map feature.
- **Pilot Brief** – Operational flight plan, weather briefing, NOTAMs, checklist, QRH and other documentation
- **Failures** – Manage aircraft system failures. Manually enable, disable or arm failures based on specified conditions
- **Settings** – Adjust EFB settings, brightness, Simbrief username, printing features or reboot the EFB.
- **Web MCDU** – Only available if using the EFB on external device or via browser on your PC

A handy app switcher is also available via the  symbol at the top of the screen.

4.3 Using the EFB on an external device or web browser

You can connect to the EFB via your internet browser or via external device like iPad provided the device is on the same network as the computer running MSFS. Both options also gives you access to the Web MCDU.

4.3.1 Access via external device

With the simulator running and the Fenix A320 app running, navigate to <http://<LOCAL IP>:8083> (example: <http://192.168.1.60:8083>). Please ensure your firewall allows port 8083 to be used across the local network. Find more information in this [linking your tablet to the EFB](#) knowledge base article.

To find out your IP address of the computer running MSFS, search for Network Status in the Windows Search, choose Properties next to your active connection then read the IP address shown as IPv4 address.

4.3.2 Access via browser on your PC

To run the EFB on the same machine as your sim you can connect using <http://localhost:8083>.

Note, when viewing on a browser or external device, to return to the Home Screen of the EFB use the grey 'home button' shown in the bottom left-hand corner of the EFB screen. This button can be moved by dragging it to your desired location.

4.4 Web MCDU

Accessing your EFB from external device or your internet browser using guide mentioned above gives you option to use web version of the MCDU by clicking the **MCDU app** icon. Once opened you will be prompted to select if you want to control the left or right MCDU.



4.4 Removing the EFB

If you'd like to fly without the EFB displayed in the sim you can simply turn it off by using a click spot by the handheld cockpit microphone which is below the EFB. While using the EFB, don't forget to keep it charged, add the charging cable via the click spot near the home button.



4.5 Authorising Navigraph

On first use, you'll need to give permission for the EFB to receive information from your Navigraph account. Simply open the Navigraph app on your EFB in the simulator, scan the QR code or open <https://navigraph.com/code> and enter the code shown on your EFB screen. Follow the instructions on screen to grant access.






5.0 Fenix app

You can use the EFB to load passengers, cargo and fuel onto the aircraft for your flight and we also offer seamless integration with Simbrief and GSX to make planning and loading even easier and immersive. The **MY FLIGHT** tab contains information about your current flight, weather information and information about your route.

5.0.1 Using Simbrief.com

We have integrated Simbrief to allow you to load flight plans and data directly into the EFB and MCDU when you have created a flight plan in their interface. In order to use this service, you will need to create an account at [Simbrief.com](https://simbrief.com) and then enter your username or pilot ID into the EFB settings app.


When entered, you'll be able to use the **REQUEST INIT** functionality on the INIT and SEC-FPLN pages in the MCDU.

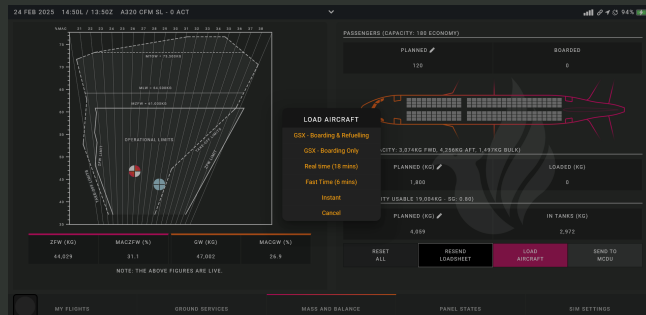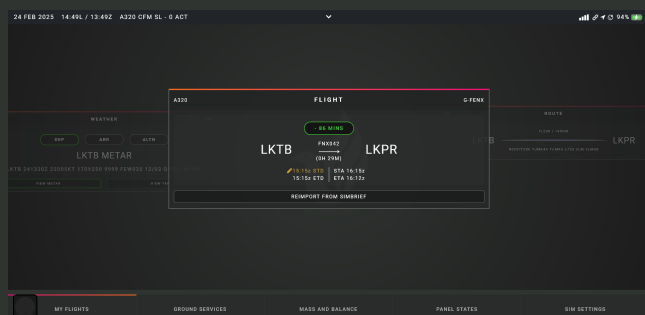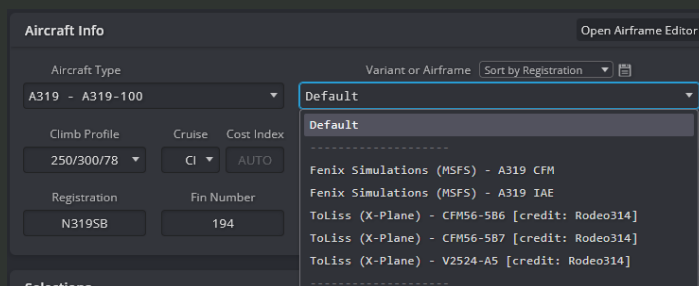


1. Add your Simbrief username to the settings app in EFB
2. Plan your flight with Simbrief as usual. Profiles for each of our airframes is available via Simbrief in the Variant or Airframe tab
3. Load MSFS and the Fenix aircraft at your chosen departure airfield
4. Open the **Fenix app** and choose **IMPORT FLIGHT FROM SIMBRIEF** on the **MY FLIGHT** tab
5. In the **MASS AND BALANCE** tab, select **LOAD AIRCRAFT** and choose how quickly you'd like the loading to take or if you would like to use GSX.
6. Preliminary loadsheets are delivered 30 minutes before departure and can be accessed via the **MCDU > ATSU > AOC MENU > RCVD MSGS**
7. Once loading is finished, you can use the **SEND TO MCDU** button to send your final weight and CG value to the Init B page of the MCDU.

5.0.2 Manually configure the aircraft load

If you're not using Simbrief to plan your flights you can manually enter values for passenger, cargo and fuel by pressing the edit pencil symbol against any of those fields and then using the slider to make your selection. When you're ready, press the **LOAD AIRCRAFT** button and choose how quickly you'd like the loading to take and access the loadsheets as before. Once loading is finished, you can use the **SEND TO MCDU** button to send your weight and CG to the Init B page of MCDU.

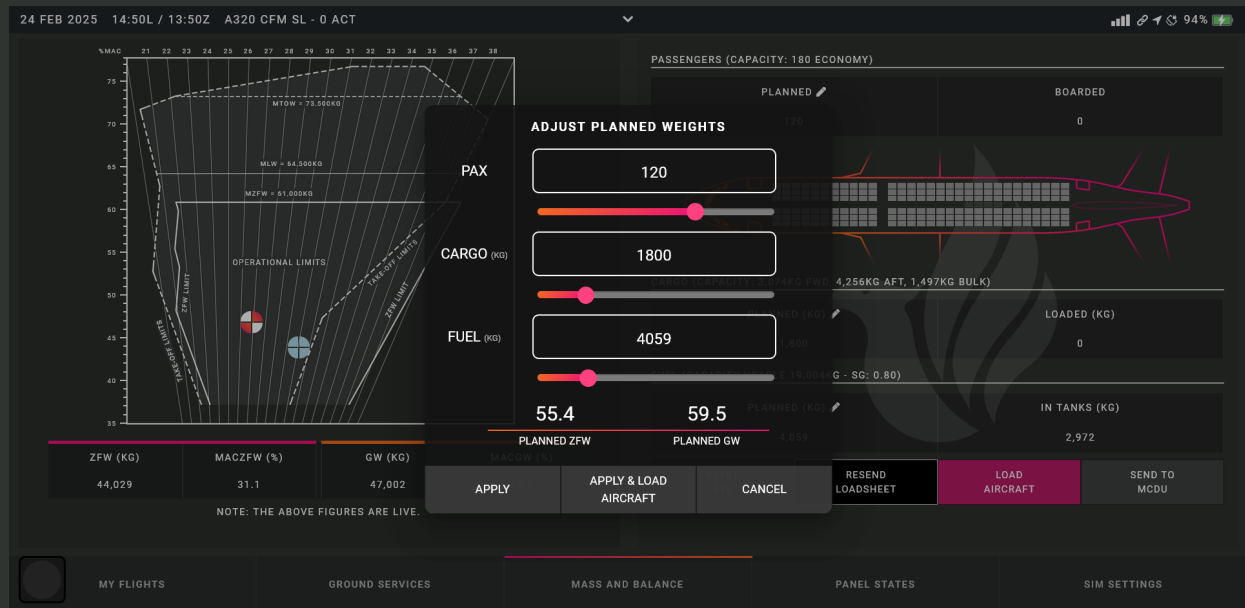


5.1 Ground Services

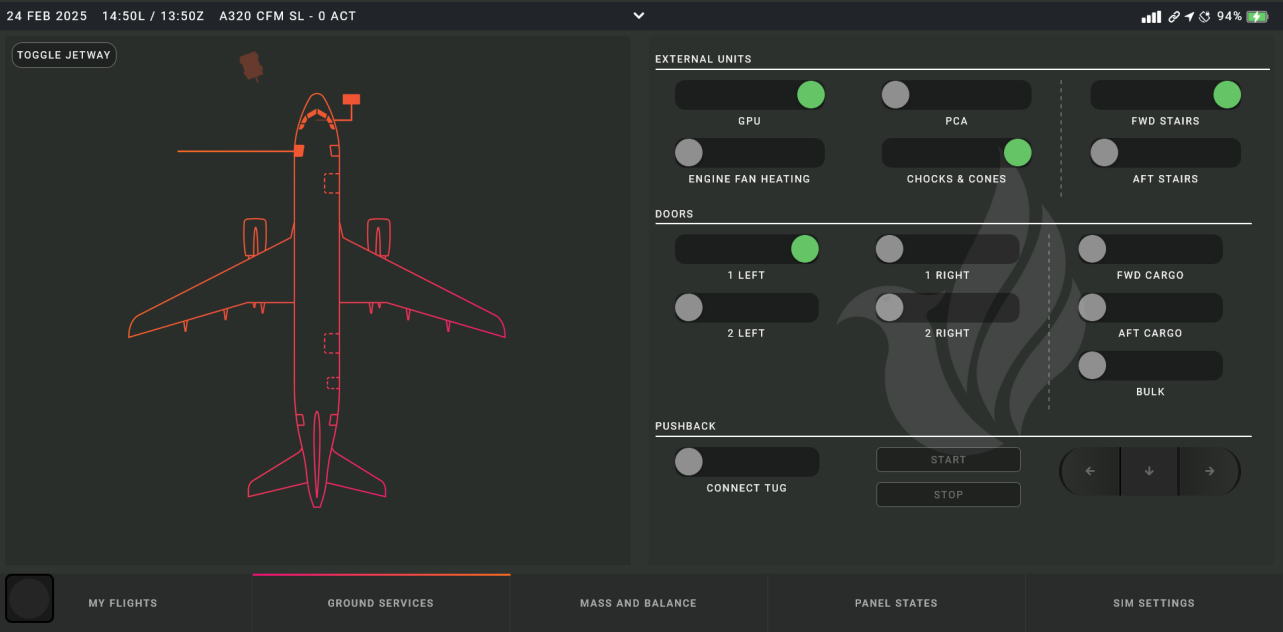

You can interact with ground services through the EFB by using the toggle switches available in the **GROUND SERVICES** tab. You can also use the pushback controls to connect and steer the tug.

5.2 Panel States

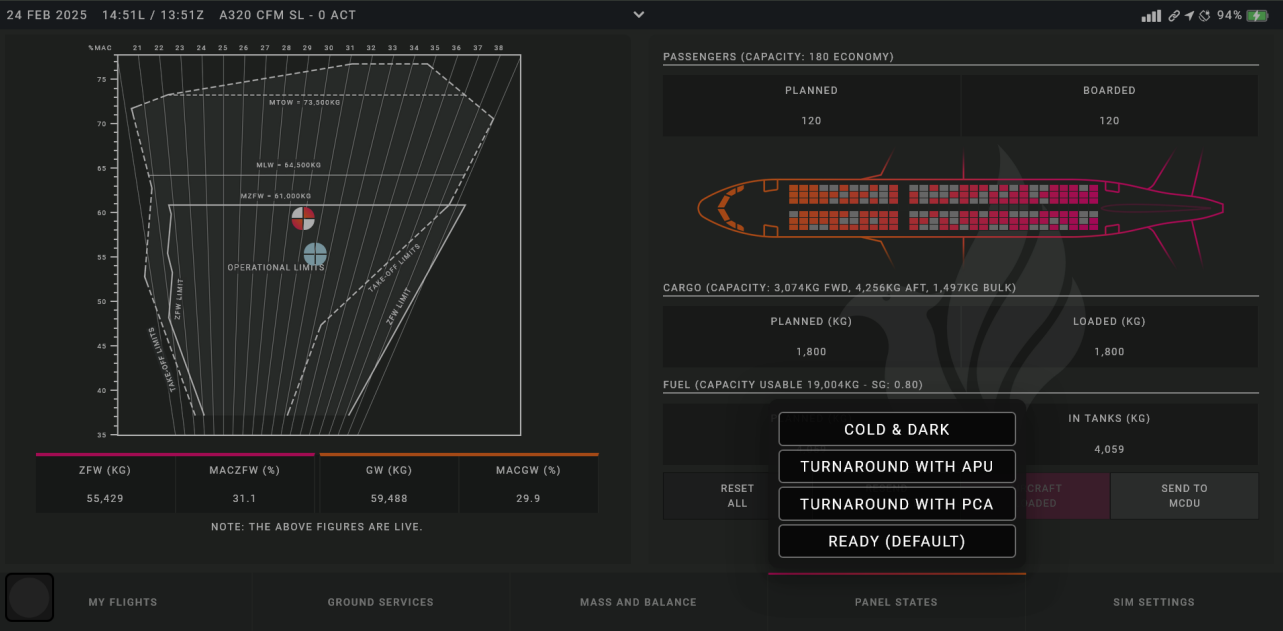

You can choose panel states via the FENIX app in the EFB. Choose the PANEL STATES menu item and then select the state you wish to activate. You can also choose which state acts as the default for each subsequent load of the aircraft.


5.3 Sim Settings

There are numerous airline options available to Airbus A320 customers and we have replicated those available in this simulation via the EFB **Fenix app**. Most are automatically set for each livery that you download from the livery manager. To honor those applicable to the aircraft selected, choose **RESTORE AIRLINE SETTINGS**.

Brief description of each tab below. You can find more information on what each option does in this [EFB Sim Settings Explained](#) knowledge base article.

Airframe

This section allows you to customize the equipment of the aircraft, from DDRMI (Digital Distance Radio Magnetic Indicator), swap between the Integrated Standby Instrument System (ISIS) or the analogue 3 pack, ACP and ADIRS units, enable metric standby altimeter, brake fans, DCDU units and the style or removal of the satcom antenna.

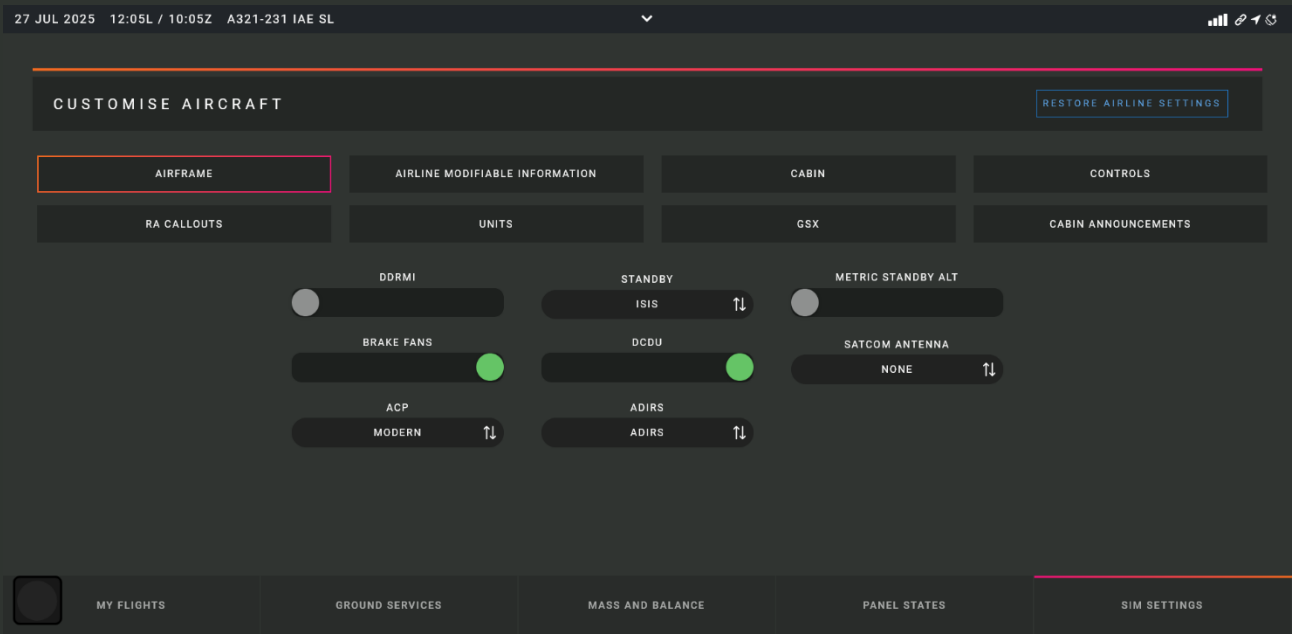

Airframe Modifiable Information

This section allows you to modify airline specific settings. Full guide explaining those settings in more detail can be found in this [EFB Sim Settings Explained](#) knowledge base article.

27 JUL 202512:05L / 10:05Z A321-231 IAE SL

CUSTOMISE AIRCRAFT

RESTORE AIRLINE SETTINGS

AIRFRAME

AIRLINE MODIFIABLE INFORMATION

CABIN

CONTROLS

RA CALLOUTS

UNITS

GSX

CABIN ANNOUNCEMENTS

FLS

TCAP (TCAS AUTOPILOT)

L/DEV

AC ESS AUTO SWITCHING

Y HYD STEERING

NAV IN GO AROUND

EFB MOUNT

DAID (DUAL ADVISORY ICE DETECTION)

THR RED HEIGHT (AGL)

ACC HEIGHT (AGL)

ENG OUT ACC HEIGHT (AGL)

VIRTUAL ACARS

1500

1500

1500

MY FLIGHTS

GROUND SERVICES

MASS AND BALANCE

PANEL STATES

SIM SETTINGS

Cabin

This section allows you to set cabin lighting level in 0 - 25 - 50 - 100% steps as well disable the cabin visibility which might help performance on low-end systems.

27 JUL 202512:05L / 10:05Z A321-231 IAE SL

CUSTOMISE AIRCRAFT

RESTORE AIRLINE SETTINGS

AIRFRAME

AIRLINE MODIFIABLE INFORMATION

CABIN

CONTROLS

RA CALLOUTS

UNITS

GSX

CABIN ANNOUNCEMENTS

CABIN LIGHTS

CABIN VISIBILITY

100

MY FLIGHTS

GROUND SERVICES

MASS AND BALANCE

PANEL STATES

SIM SETTINGS



Controls

This section allows you to modify control settings. Full guide explaining those settings in more detail can be found in this [EFB Sim Settings Explained](#) knowledge base article.

03 NOV 202511:20L / 10:20ZA320-232 IAE SL

📶🔊🔄

CUSTOMISE AIRCRAFT

RESTORE AIRLINE SETTINGS

AIRFRAME

AIRLINE MODIFIABLE INFORMATION

CABIN

CONTROLS

RA CALLOUTS

UNITS

GSX

CABIN ANNOUNCEMENTS

SCROLLING ACCELERATION

CONTROL POSITION

LEFT

EFIS BARO CTL

INDEP

FD/LS SYNC

INCREMENTAL THRUST HANDLING

AUTO JETWAY SIMULATION

AUTO DOOR SIMULATION

AUTO DISPLAY BRIGHTNESS

REFUEL RATE

REALISTIC (16KG/S)

HOME COCKPIT MODE

FCU READOUTS

LEGACY

MY FLIGHTS

GROUND SERVICES

MASS AND BALANCE

PANEL STATES

SIM SETTINGS

RA callouts

This section allows you to customize various Radio Altimeter callouts. Note that some of the selected callouts might not be played if higher priority callouts are being played at the time.

27 JUL 202512:05L / 10:05ZA321-231 IAE SL

📶🔊🔄

CUSTOMISE AIRCRAFT

RESTORE AIRLINE SETTINGS

AIRFRAME

AIRLINE MODIFIABLE INFORMATION

CABIN

CONTROLS

RA CALLOUTS

UNITS

GSX

CABIN ANNOUNCEMENTS

2500

2000

1000

500

400

300

200

100

50

40

30

20

10

5

MY FLIGHTS

GROUND SERVICES

MASS AND BALANCE

PANEL STATES

SIM SETTINGS

Units

This section allows you to choose preferred units of measurement used in both EFB and MCDU.

Note: Make sure units match units selected in your simbrief flight plan.

27 JUL 202512:05L / 10:05Z A321-231 IAE SL

📶🔊🔄

CUSTOMISE AIRCRAFT

RESTORE AIRLINE SETTINGS

AIRFRAME

AIRLINE MODIFIABLE INFORMATION

CABIN

CONTROLS

RA CALLOUTS

UNITS

GSX

CABIN ANNOUNCEMENTS

DISTANCE

METERS

↕

PRESSURE

HECTOPASCAL

↕

WEIGHT

KG

↕

MY FLIGHTS

GROUND SERVICES

MASS AND BALANCE

PANEL STATES

SIM SETTINGS

GSX

This section allows you to customize the behaviour of the included GSX integration. Full [GSX Integration guide](#) is available on the Knowledge Base.

27 JUL 202512:06L / 10:06Z A321-231 IAE SL

📶🔊🔄

CUSTOMISE AIRCRAFT

RESTORE AIRLINE SETTINGS

AIRFRAME

AIRLINE MODIFIABLE INFORMATION

CABIN

CONTROLS

RA CALLOUTS

UNITS

GSX

CABIN ANNOUNCEMENTS

SERVICE SEQUENCE

1: FUEL+CATERING

2: BOARDING

↕

AUTO CATERING

WAIT FOR REFUEL BEFORE BOARDING

AUTO-SELECT GROUND HANDLING AGENT

AUTO PUSHBACK

AUTO-DISCONNECT GPU ON PUSHBACK

AUTO-CONNECT GPU ON ARRIVAL

AUTO DEBOARD

AUTO-PUSHBACK: when enabled, GPU and chocks will be removed and GSX pushback will be requested when the **BEACON LIGHT** is turned on and if the **PARKING BRAKE** is set.

AUTO-CATERING: when enabled, catering will be called when using 1. Fuel+Catering 2. Boarding. If disabled, no catering is ever requested.

WAIT FOR REFUEL BEFORE BOARDING: when enabled, boarding will only be requested after fueling is complete. Otherwise, passengers will board during refuelling, followed by passenger baggage.

AUTO-DEBOARD: when enabled, debarking will be called when the beacon light is turned off and parking brake is set.

MY FLIGHTS

GROUND SERVICES

MASS AND BALANCE

PANEL STATES

SIM SETTINGS



Cabin Announcements

This section allows you to enable/disable the integrated cabin announcements feature. Full guide on this topic is available in this [Cabin Announcements Guide](#).

27 JUL 202512:06L / 10:06Z A321-231 IAE SL

CUSTOMISE AIRCRAFT

RESTORE AIRLINE SETTINGS

AIRFRAME

AIRLINE MODIFIABLE INFORMATION

CABIN

CONTROLS

RA CALLOUTS

UNITS

GSX

CABIN ANNOUNCEMENTS

ENABLED

MUTE ON TASK SWITCH

MY FLIGHTS

GROUND SERVICES

MASS AND BALANCE

PANEL STATES

SIM SETTINGS

6.0 Performance Calculations

The EFB has performance applications that will help you to calculate the performance of the aircraft during departure and arrival. Simply populate the data required to perform the calculations.

6.1 Departure performance

Input the **ICAO** of the airport, select the runway and its condition. Take off weight (TOW) and Take Off CG% (MACTOW) can be populated from either preliminary or final loadsheet by clicking the **SYNC LOADSHEET** button. METAR information can be obtained and populated by clicking the **SYNC LIVE WX** button. Calculated performance can be transferred to MCDU by clicking the **SEND TO MCDU** button.

24 FEB 202514:54L / 13:54Z A320 CFM SL - 0 ACT

Airport Info

ICAO CODE

LKTB

RUNWAY

27

RUNWAY SURFACE

DRY

Aircraft Configuration

FLAP CONFIG

1+F

FORCE TOGA

NO

ANTI-ICE

OFF

PACKS

OFF

TOW (T)

59.3

MACTOW (%)

29.9

SYNC LOADSHEET (FINAL)

Weather Conditions

WIND

220/05

TEMPERATURE

12

QNH (hPa)

1025

SYNC LIVE WX

TAKE OFF Rwy 27

V1

137

FLP RETR

F=136

STOP MARGIN

487

VR

137

SLT RETR

S=104

TO SHIFT

[M] []*

V2

137

CLEAN

0=205

FLAPS/THS

1/DN0.3

TRANS ALT

5000

FLEX TO TEMP

66°

THR RED/ACC

788/788

ENG OUT ACC

788

TOPL (KG)

82259

HW (KT)

3

INTERSECTION

-

VIEW INTERSECTION DATA

LIVE METAR

LKTB 241330Z 22005KT 170V250 9999 FEW035 12/03 Q1025 NOSIG

RUNWAY INFO

IDENT

27

LENGTH (M)

2,650

WIDTH (M)

60

COORD

49°8'0"N/16°42'0"E

ELEV (FT)

771

CALCULATE

SEND TO MCDU

RESET

6.2 Arrival performance

Input the **ICAO** of the airport, select the runway, its condition and landing weight of the aircraft. METAR information can be obtained and populated by clicking the **REFRESH METAR** and **APPLY METAR** buttons. If prompted to perform LDG Distance Procedure you can select the type of failure in the calculator to ensure the impact to performance taken into account.

24 FEB 202514:55L / 13:55Z A320 CFM SL - 0 ACT

RUNWAY

ICAO CODE

LKPR

RUNWAY

24

8 DRY

5 GOOD

4 GOOD/MED

3 MED

2 MED/POOR

1 POOR

REFRESH METAR

WEATHER

VRB/03

KT

11

°C

1024

hPa

APPLY METAR

METAR: LKPR 241330Z VRB03KT 9999 FEW025 11/05 Q1024 NOSIG

AIRCRAFT CONFIG

56.2

T

LOW A/BRAKE

↕

IDLE/NO REV

↕

MANUAL LAND

↕

FLAP FULL

↕

A/THR ON

↕

LDG DISTANCE PROCEDURE

ELECTRICAL SYSTEM

FLIGHT CONTROLS SYSTEM

SLATS AND FLAPS SYSTEM

HYDRAULICS SYSTEM

ANTI-ICE SYSTEM

BRAKING SYSTEM

NAVIGATION SYSTEM

BLEED SYSTEM

ENGINE SYSTEM

Wind

↑ VRB/3

→ - KT

↓ - KT

2,060 M

24

LDA (M)

3,715

LDR (M)

= 2,060

1.15LDR (M)

= 2,369

Fenix A320 family User Guide


Document version v2.0

© 2025 Fenix Simulations


Page 18 of 26

7.0 Charts app

Our Charts app automatically syncs with your imported Simbrief plan from the Fenix EFB app and fills the ICAO code fields for your departure, arrival and alternate airports. You can press the **SYNC ROUTE** button to do the same. If you are not using Simbrief you can enter ICAO codes manually. The app supports both **JEPPESEN** charts provided by Navigraph (requires subscription) as well as **LIDO** charts provided by the sim (available in MSFS 2024 in-sim only). If neither are available, the app can be used to follow your route and progress on map.

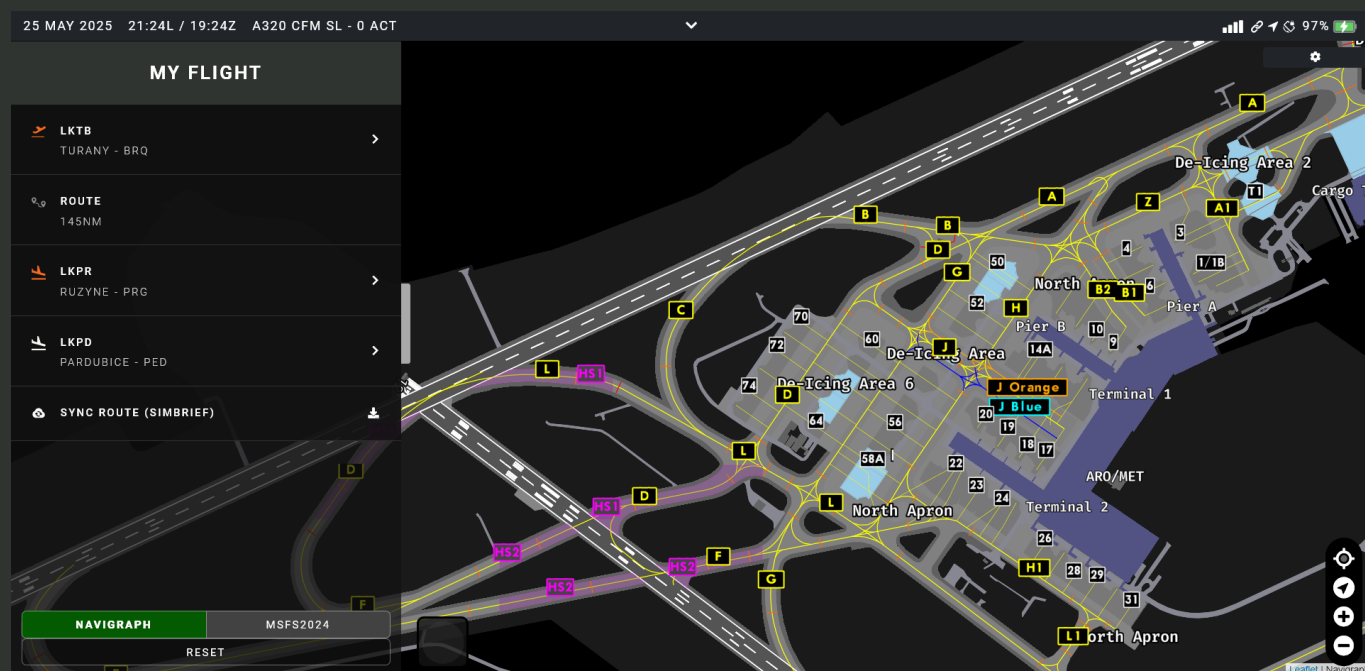

You can click the star icon next to the chart name for easier and quicker access to selected charts via the **Starred** tab. When importing flight via Simbrief, your Approach, Arrival as well as selected ground charts will be automatically starred.

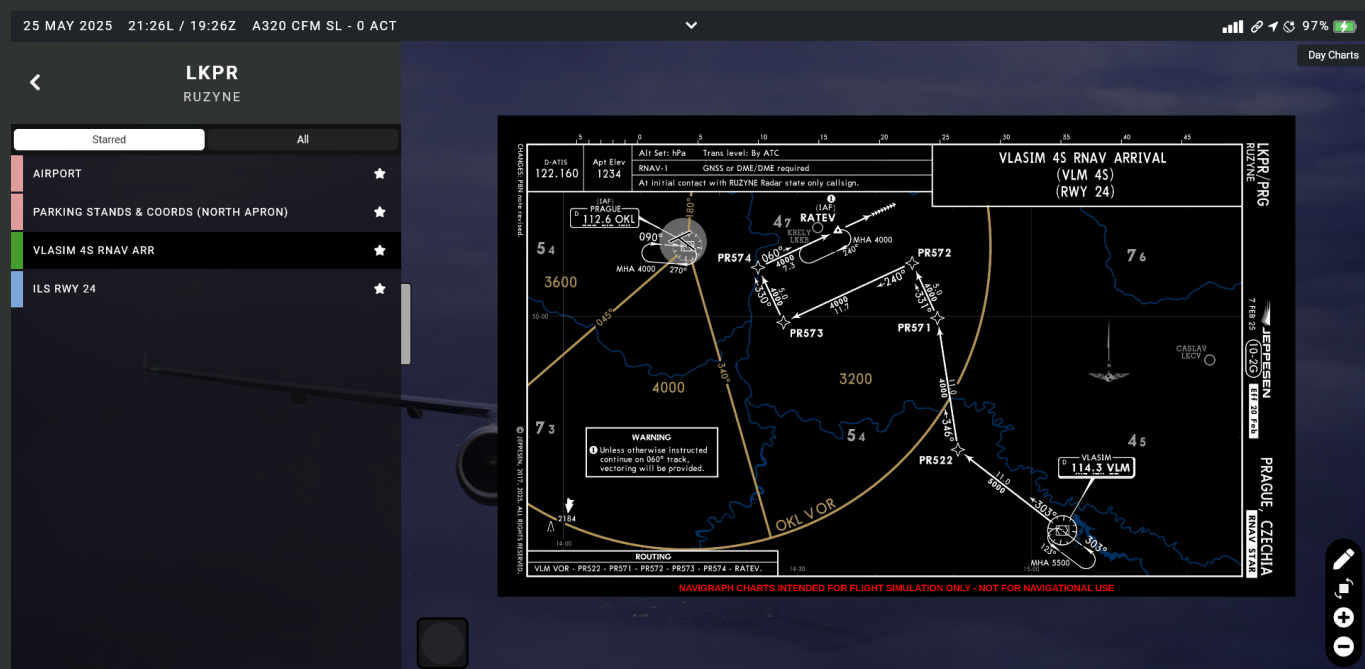


8.0 Pilot Brief app

The pilot brief app gives ability to check Operational flight plan, weather briefing, NOTAMs, checklist, the provided Quick Reference Handbook (QRH) and other PDF documentation.




You can add your own documentation in PDF format by placing it into the C:\Program Files\FenixSim A320\docs folder

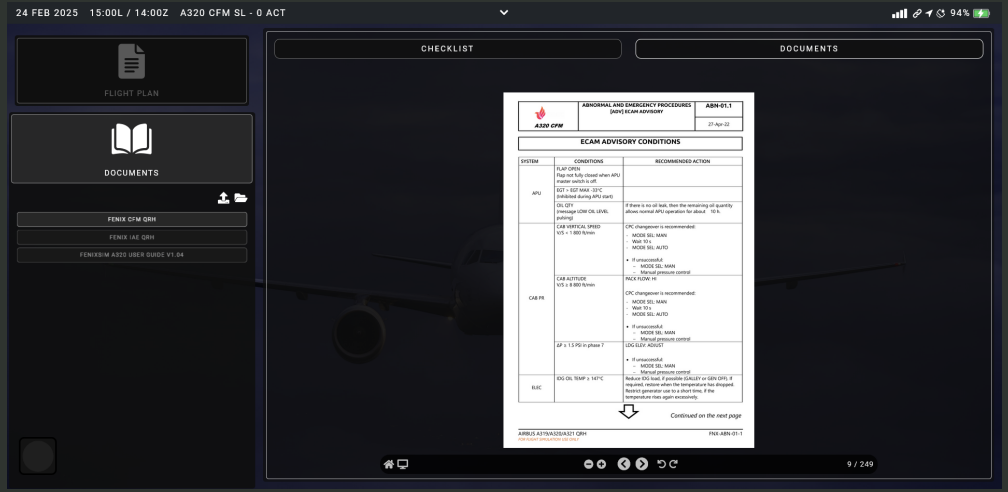

9.0 Failures app

In addition to the optional random failures based on MTBF (Mean-Time-Between-Failures) this app offers way to manually manage the complex failures system offered in the Fenix A320 family of aircraft. You can enable, arm and clear failures. Arming failures can be done based on selected conditions and events. You can find more information in the [Failures Guide](#) available on Knowledge Base.

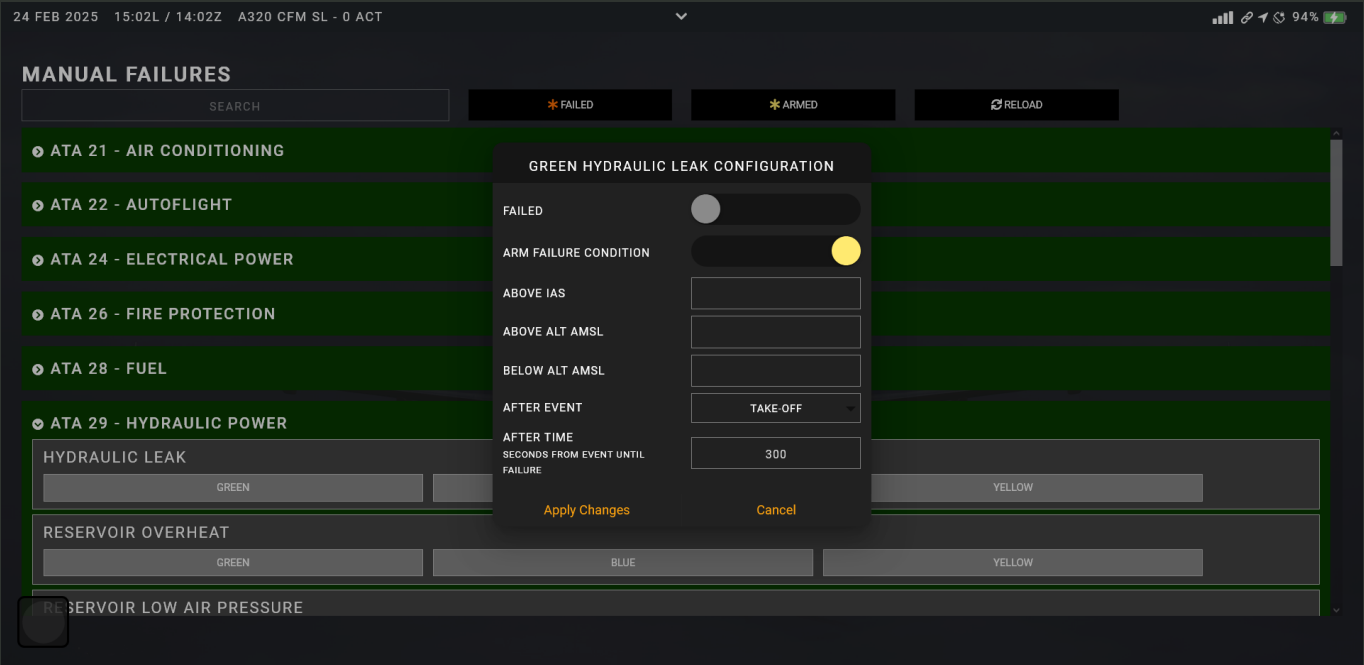

The intuitive UI provides an easy way to keep track of and to control active failures.



10.0 Settings app

EFB Settings

The Settings app allows you to enter your Simbrief username/ID, sign out of your navigraph connection, change the source for METAR source as well as the option to disable on-screen keyboard. It also offers a way to change the background picture of your EFB from your computer as well as an option for it to be changed automatically in connection with the Cabin announcement feature. You can find more about those features in the following Knowledge Base articles.

[How to change the EFB background image and access the WEB MCDU](#)

[How to have specific EFB backgrounds per announcement pack](#)


ACARS printer

The aircraft supports physical printing of incoming ACARS and TELEX messages via printers installed on your system as well as support for Pushover service, which allows you to have ACARS messages sent to your mobile device instead of a physical printer. You can find more information about the printing options in the [How to use the ACARS Printer](#) article.

ACP volume control

You can control volume of other processes running on your PC via the ACP knobs in the cockpit. To find the name of the process you want to control, open your task manager and head to the details tab and enter the name of the process into the field (without the .exe file extension).

You can control multiple processes via single knob by entering multiple process names separated by comma as seen on the example below.

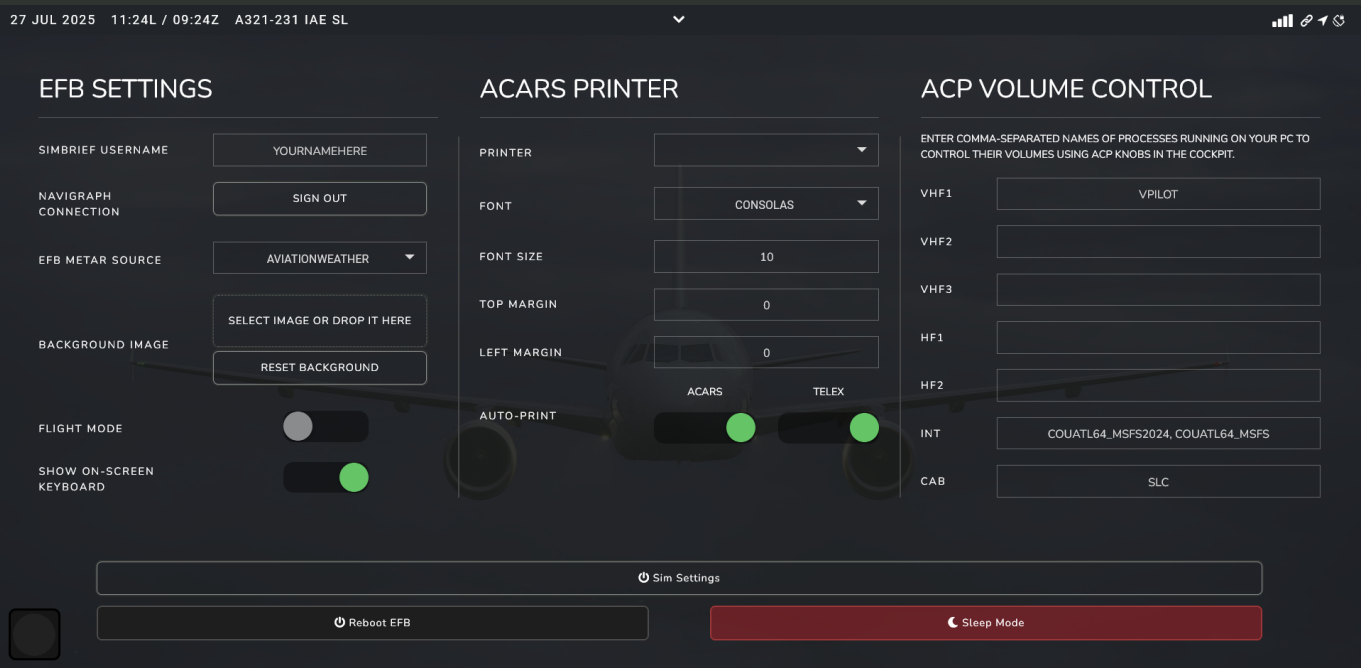

11.0 Walkaround mode (MSFS 2024 only)

With the introduction of the native compatibility for MSFS 2024, an extensive support of the sim walkaround function has been added.



To enter the walkaround mode, you can either use the sim key bind, or by clicking the high visibility vest hanged in the cockpit.

To exit the walkaround mode, you can click the coat hanger where the vest was hanging or by clicking the pilot seat.

You can move freely around and inside the aircraft and interact with various components such as doors, stairs, engines and various service hatches and controls like fuelling panel, cargo door controls and main gear door controls with all the associated system logic.



To operate the doors and controls, simply follow steps listed on the decals placed near the controls.

Note: For full functionality of aircraft systems, it is recommended to exit and re-enter the walkaround mode once to allow the aircraft systems to fully initialise.

Note: When spawning at a gate, MSFS2024 will force the avatar to spawn under the aircraft. This is out of our control but will only happen once, before the normal spawn point (standing in the cockpit) is used. You can check other walkaround mode quirks in the [FS2024 Walkaround Quirks](#) article.

12.0 Company Messages


From time to time the airline operations team will send messages to the aircraft ATSU AOC function as follows:

- **Loadsheets**– The preliminary loadsheet is sent around 30 minutes prior to the departure time. The final loadsheet is available once boarding is completed.
- **Departure time** – The on-time performance is monitored and a confirmation of the aircraft’s departure time compared to schedule is commutated to the crew. If the aircraft departs late the operations team will request an ADC Delay code. You can find a list of the appropriate codes on the home screen of the EFB by selecting DELAY ALLOCATION CARD

13.0 Fenix Installer & Livery Manager

Fenix installer serves to keep the aircraft up to date. The latest version of the installer can be downloaded directly from [here](#). Use your Fenix account credentials to log in. You can use it to both update and uninstall the aircraft.

Changelog for each version is provided in the window below.

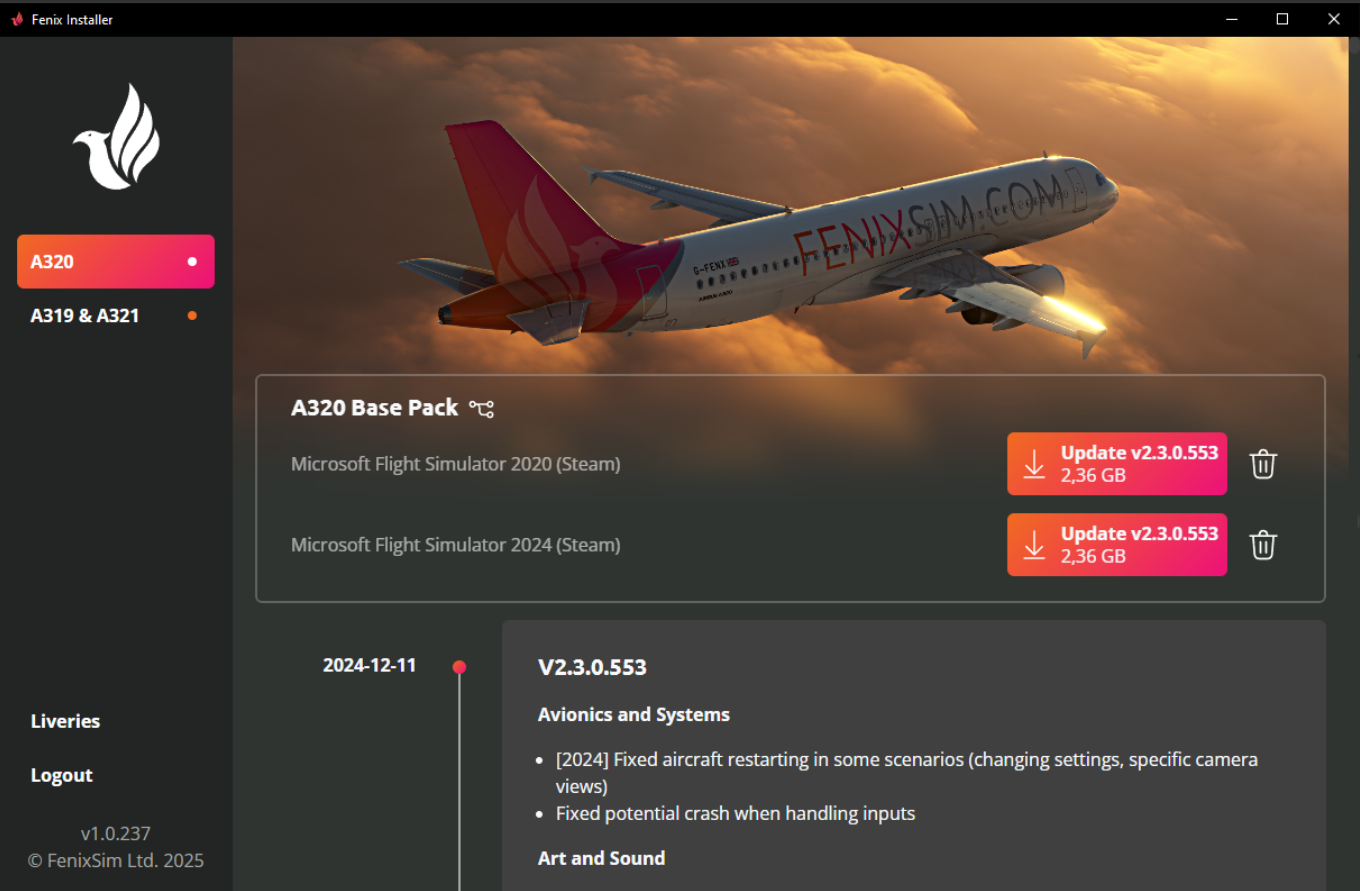


13.1 Livery Manager

The livery manager allows you to download, update and manage high quality in-house liveries with assured compatibility with the latest version of the aircraft. Available liveries can be filtered via aircraft type, airline, country of registration, engine type, wing type, number of additional center tanks, livery creator and the state of the install.

Quick access to installed liveries or liveries where update is available is provided by separate buttons.


As of July 2025, the livery manager is a part of the Fenix Installer and the standalone livery manager app is no longer used.

Clicking the settings cog allows you to select the preferred livery resolution between 4K and 8K.

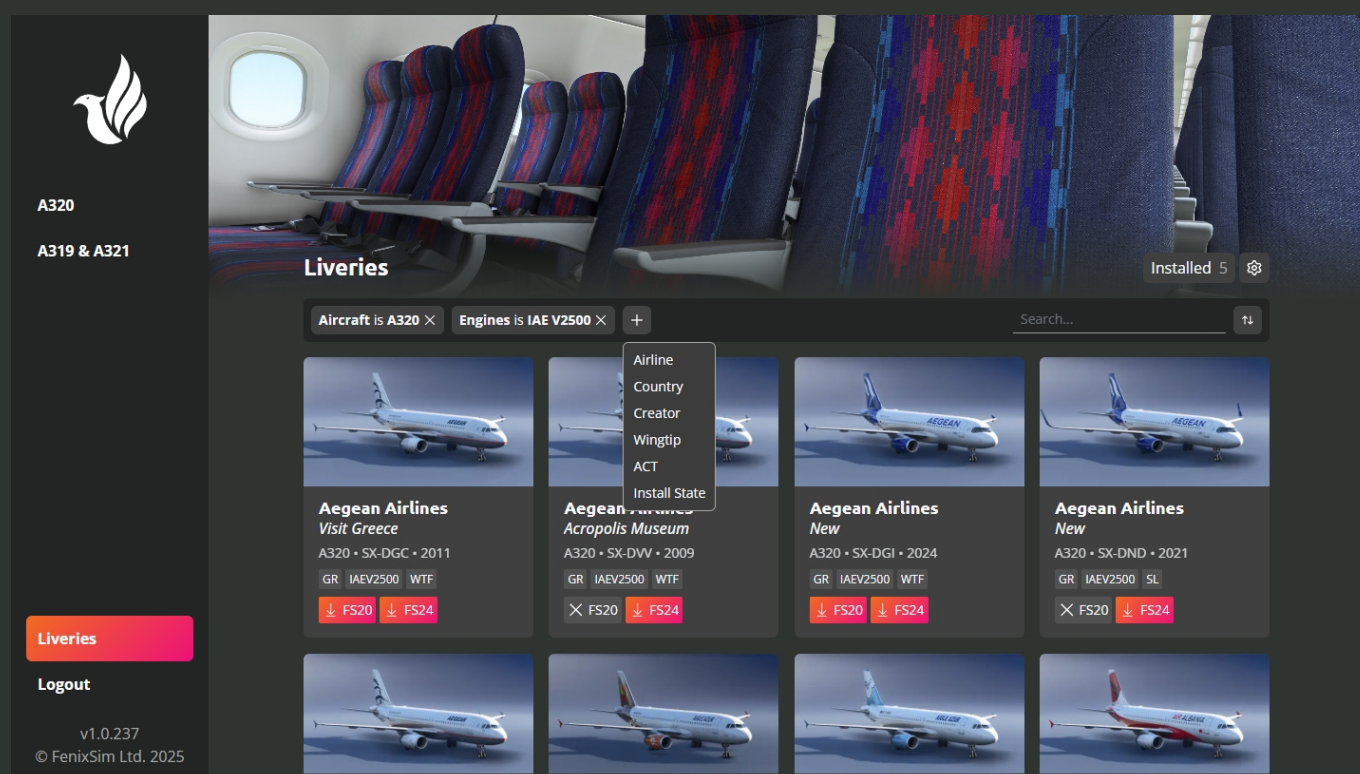

14.0 Frequently Asked Questions (FAQs)

Q: I'm encountering Login Failed – License already activated on different machine error when starting the Fenix application



A: Please follow the steps in the [How do I reset my Fenix A32X License/Activation?](#) article.

Q: My thrust control 'spikes' or behaves strangely

A: We've included a calibration tool to help you ensure that your thrust controls behave as expected. It's available in the MCDU Configuration menu – make sure to calibrate before you fly.

Q: I'm using the Thrustmaster Airbus TCA controller and throttle quadrant but can't map the controls properly

A: MSFS has multiple control binds for throttle controls. For the TCA controller you need to map your controls to 'Throttle 1 Axis' & 'Throttle 2 Axis'.

For further information and video guides, please visit following Knowledge Base Articles

[Fenix A320 Flight Control Calibration](#)

[How to setup your Thrustmaster TCA Throttle](#)

[Flaps are unresponsive / Flaps Calibration](#)

Q: My autopilot randomly disconnects during a flight

A: Make sure you don't have any conflicting bindings and that you have added deadzone to your flight controls axes. You can find more detailed information in this [Uncommanded Autopilot Disconnects](#) article.

Q: Some key bindings are not working

A: Not every key binding in MSFS2020 will work with the Fenix A320 due to its externalised architecture. We have created a set of default bindings for certain controls that is available in the [Useful default keybinds](#) article.

Q: The Ram Air Turbine (RAT) comes out when slewing the aircraft

A: This happens from time to time in MSFS 2020 so we recommend avoiding use of the slew function where possible. To avoid 'spawning' on occupied stands you can check whether the stand is available in a mapping tool i.e. Volanta.