

Device Control Manual

BASE24[®]



© 2011 by ACI Worldwide, Inc. All rights reserved.

All information contained in this documentation, as well as the software described in it, is confidential and proprietary to ACI Worldwide, Inc., or one of its subsidiaries, is subject to a license agreement, and may be used or copied only in accordance with the terms of such license. Except as permitted by such license, no part of this documentation may be reproduced, stored in a retrieval system, or transmitted in any form or by electronic, mechanical, recording, or any other means, without the prior written permission of ACI Worldwide, Inc., or one of its subsidiaries.

ACI, ACI Worldwide, and the ACI product names used in this documentation are trademarks or registered trademarks of ACI Worldwide, Inc., or one of its subsidiaries.

Other companies' trademarks, service marks, or registered trademarks and service marks are trademarks, service marks, or registered trademarks and service marks of their respective companies.

Contents

What's New	xiii
Preface	xv
Conventions Used in this Manual	xxi
1: Introduction	1-1
BASE24 Device Control	1-2
Accessing DCT Screens	1-3
BASE24 Logon Screen	1-4
BASE24 Virtual Menu	1-5
Operator Product Menu	1-6
DCT Menu	1-7
DCT Menu Options	1-14
BASE24-atm Options	1-14
BASE24-pos Options	1-15
BASE24-teller Options	1-15
Security	1-16
DCT Function Security	1-16
Limiting Terminal Access by Region and Branch	1-16
2: Process Control Commands Screen (Screen 4)	2-1
Warmbooting Processes	2-2
DCT Screen 4	2-3
Function Keys	2-6
Procedures	2-7
Warmbooting All BASE24 Processes	2-7
Warmbooting All Processes for a Single BASE24 Product	2-8
Warmbooting All Processes for a Single BASE24 Product with a Single IDF Record	2-8
Warmbooting a Single BASE24 Process	2-9
Warmbooting a Single BASE24 Process with a Single IDF Record	2-10
Warmbooting All BASE24-pos Processes with a Single File	2-11
Warmbooting a Single BASE24-pos Process with a Single File	2-11

3: EMT Control Commands Screen (Screen 5)	3-1
Warmbooting Extended Memory Tables	3-2
DCT Screen 5	3-4
Function Keys	3-6
Warmbooting a Shared Extended Memory Table	3-7
 4: ATM Terminal Commands Screen (Screen 7)	 4-1
DCT Screen 7	4-2
Function Keys	4-5
Procedures.	4-8
Displaying the Status of One Terminal.	4-8
Displaying the Status of All Terminals.	4-9
Displaying the Detailed Status of a Station	4-10
Starting a Station.	4-10
Opening an ATM	4-11
Closing an ATM	4-12
Stopping a Station.	4-12
Requesting the Status of the Bunch Note Acceptor Configuration to be Displayed as EMS Events	4-13
Status Response Screens.	4-14
Status of One Terminal Screen	4-15
Status of All Terminals	4-18
Detailed Status of a Station.	4-21
Detailed Status of NCR 5XXX Terminals	4-30
 5: ATM Balance Current Cash Screen (Screen 8)	 5-1
DCT Screen 8	5-3
Function Keys	5-8
Procedures.	5-11
Displaying Subtotals for Each Hopper	5-11
Increasing Cash, Cash Value, or the Number of Nonvalue Items in the Hoppers	5-12
Decreasing Cash, Cash Value, or the Number of Nonvalue Items in the Hoppers	5-14
Balancing with Current Cash, Cash Value, and Nonvalue Items	5-15
Retrieving the BNA Counts from the ATM	5-17

ATM Balance Current Cash Screen (Screen 8) *continued*

Subtotals Screens	5-18
ATM Current Cash Subtotals Screen	5-18
Diebold 10XX/478X Current Cash Subtotals Screen	5-23
NCR 5XXX Current Cash Subtotals Screen	5-25
6: ATM Balance Standard Cash Screen (Screen 9)	6-1
DCT Screen 9	6-3
Function Keys	6-7
Procedures	6-9
Displaying Subtotals for Each Hopper	6-9
Balancing with Standard Cash, Cash Value, and Nonvalue Items	6-10
Retrieving the BNA Counts from the ATM	6-12
Subtotals Screens	6-13
ATM Standard Cash Subtotals Screen	6-14
Diebold 10XX/478X Standard Cash Subtotals Screen	6-18
NCR 5XXX Standard Cash Subtotals	6-20
7: POS Merchant Host Interface Device Load Control Screen (Screen 15) ..	7-1
DCT Screen 15	7-2
Function Keys	7-4
Procedures	7-6
Turning On the Download Flag	7-6
Turning Off the Download Flag	7-6
8: ATM Olivetti Commands Screen (Screen 32)	8-1
DCT Screen 32	8-2
Function Keys	8-5
Procedures	8-6
Downloading a New Communications Key	8-6
Uploading a Directory from an ATM	8-7
Uploading a File from an ATM	8-7
Downloading a File to an ATM	8-8
Rebooting an ATM	8-8
Opening a Terminal	8-9

ATM Olivetti Commands Screen (Screen 32) *continued*

Procedures

Closing a Terminal	8-10
Immediately Closing a Terminal	8-10
Resetting a Terminal	8-11
Requesting Terminal and Supplies Status Information	8-11

9: ATM Fujitsu Commands Screen (Screen 37) 9-1

Loading Configuration Information	9-2
DCT Screen 37	9-4
Function Keys	9-8
Procedures	9-10
Downloading All Configuration Data	9-10
Downloading All Information from a Customized Load Group	9-11
Downloading a Screen from a Customized Load Group	9-11
Downloading a State from a Customized Load Group	9-12
Downloading a Screen from Load Group 0000	9-13
Downloading a State from Load Group 0000	9-13
Downloading a New Communications Key	9-14
Downloading a New MAC Key	9-15
Opening a Terminal	9-16
Closing a Terminal	9-16
Resetting Terminal Status Information and Clearing Faults	9-17
Requesting Hardware Status Information	9-17
Requesting Supply Status Information	9-18
Clearing Subdevice Supply Status Information	9-18

10: ATM IBM 36XX Commands Screen (Screen 38) 10-1

DCT Screen 38	10-2
Function Keys	10-7
Procedures	10-8
Downloading the Communications Key	10-9
Recovering the Base Communications Key	10-10
Changing the Display Message	10-10
Printing a Journal Message	10-11
Immediately Closing an ATM	10-12

ATM IBM 36XX Commands Screen (Screen 38) *continued***Procedures**

Deactivating an SNA Session	10-12
Displaying the Customized Option Data	10-13
Displaying Configuration Version Data	10-13
Displaying Maintenance Data	10-14
Displaying the Last Transaction Status	10-14
Suspending the Operation of an ATM	10-15
Releasing a Suspended ATM	10-16
Placing an ATM in Service Mode	10-16
Changing the Customized Option Data	10-17
Naming a Trace File	10-17
Starting the Trace Facility	10-18
Stopping the Trace Facility	10-18
Resetting the SNA Protocol	10-19
Opening a Terminal	10-20
Closing a Terminal	10-20
Requesting Terminal Status Information	10-21
Downloading Configuration Information	10-21

Secondary Screens	10-22
Display Message Screen	10-22
Journal Message Screen	10-25

11: ATM Diebold Commands Screen (Screen 39). 11-1

Downloading Configuration Information	11-2
9XX-Series Terminals	11-2
CashSource Plus Terminals	11-3
DCT Screen 39	11-4
Function Keys	11-8
Procedures	11-10
Downloading All Configuration Data	11-10
Downloading All Information from a Customized Load Group	11-11
Downloading a Screen from Load Group 0000	11-11
Downloading a New MAC Key	11-12
Downloading a Screen from a Customized Load Group	11-13
Downloading a State from Load Group 0000	11-13

ATM Diebold Commands Screen (Screen 39) *continued*

Procedures

Downloading a State from a Customized Load Group	11-14
Downloading a New Communications Key	11-14
Opening a Terminal	11-15
Closing a Terminal	11-16
Resetting Terminal Status Information and Clearing Faults	11-16

12: ATM Diebold 10XX Commands Screen (Screen 40) 12-1

Downloading Configuration Information	12-2
DCT Screen 40	12-4
Function Keys	12-12
Procedures	12-14
Downloading All Configuration Data	12-15
Downloading All Information from a Customized Load Group	12-15
Downloading a Screen from Load Group 0000	12-16
Downloading a New MAC Key	12-16
Downloading a Screen from a Customized Load Group	12-17
Downloading a State from Load Group 0000	12-18
Downloading a State from a Customized Load Group	12-18
Downloading a New Communications Key	12-19
Downloading a Public Key	12-20
Downloading a Master Key	12-20
Downloading All Keys	12-21
Downloading EMV-Specific Data	12-21
Copying a Font to a Library	12-22
Copying an Icon to a Library	12-23
Copying All Cells from One Library to Another	12-23
Copying Specified Cells from One Library to Another	12-24
Restoring the Standard Graphics Configuration	12-25
Opening a Terminal	12-25
Closing a Terminal	12-26
Resetting Terminal Status Information and Clearing Faults	12-26
Printing the Check Proof List File (CPLF)	12-27

13: ATM Docutel 5100 Commands Screen (Screen 41)	13-1
Downloading Configuration Information	13-2
DCT Screen 41	13-3
Function Keys	13-9
Procedures	13-11
Downloading a New Communications Key	13-12
Accessing the Host-Controlled Program Load Commands Screen	13-13
Stopping a Configuration File Download in Progress	13-13
Downloading Configuration Data from All Groups	13-14
Downloading the Financial Institution Interchange Table	13-14
Downloading System Parameters	13-15
Downloading Screens from All Groups	13-16
Downloading a Single Screen	13-16
Downloading the Receipt Header and Trailer Information	13-17
Downloading the Transaction Print Format	13-18
Downloading the RPQ Control Table	13-18
Downloading the Dictionary Table	13-19
Downloading the System Timers	13-20
Downloading the System Error Table	13-20
Downloading the Transaction State Table	13-21
Downloading the Transaction Definition Table	13-22
Downloading the Transaction Data Table	13-22
Downloading the Transaction Code Table	13-23
Downloading the Transaction Sequence Table	13-24
Downloading the Transaction Amount Table	13-24
Downloading the Transaction Description Table	13-25
Opening a Terminal	13-26
Closing a Terminal	13-26
Resetting Terminal Status Information and Clearing Faults	13-27
Requesting Terminal Status Information	13-27
Host-Controlled Program Load Commands Screen	13-28
Function Keys	13-30

ATM Docutel 5100 Commands Screen (Screen 41) *continued*

Procedures.	13-32
Entering an Optional HPL File Name.	13-32
Stopping a Host Program Download or Upload in Progress	13-33
Uploading a Host Program Load File to BASE24-atm	13-34
Uploading a Host Program Load File and Purging an Existing File	13-34
Downloading a Host Program Load File	13-35
 14: ATM Burroughs RT650 Commands Screen (Screen 43)	 14-1
DCT Screen 43	14-2
Function Keys	14-4
Procedures.	14-5
Downloading a New Communications Key	14-5
Opening a Terminal	14-6
Closing a Terminal	14-6
Requesting Terminal Status Information	14-7
 15: ATM IBM 4730 Commands Screen (Screen 44).	 15-1
DCT Screen 44	15-2
Function Keys	15-5
Procedures.	15-6
Displaying the Error Log	15-6
Displaying the Module Status.	15-7
Changing a Communications Key	15-7
Changing a Phrase on the ATM Screen	15-8
Setting the Date and Time	15-9
Updating the Device Configuration	15-9
Uploading from or Downloading to an ATM.	15-10
Opening a Terminal	15-12
Closing a Terminal	15-12
Downloading Configuration Files to a Terminal	15-13
Display the Status of All Terminal Modules	15-13
Secondary Screens	15-14
Change Phrase Screen.	15-14
Update Device Configuration Screen	15-17
Upload/Download Screen.	15-22

16: ATM NCR 5XXX Commands Screen (Screen 45)	16-1
Downloading Configuration Information	16-2
DCT Screen 45	16-3
Function Keys	16-4
NCR 5XXX Load Commands Screen	16-5
Function Keys	16-11
Procedures	16-13
Adding a New Terminal	16-14
Downloading All Configuration Information from Both Load Groups	16-15
Downloading All Configuration Information from a Customized Load Group	16-15
Downloading All Screens from Both Load Groups	16-16
Downloading All States from Both Load Groups	16-17
Downloading All Financial Institution Tables from Both Load Groups	16-17
Downloading the Current Date and Time	16-18
Downloading a New MAC Key	16-18
Downloading a New Communications Key	16-19
Downloading a Public Key	16-20
Downloading a Master Key	16-20
Downloading All Keys	16-21
Downloading the Key Entry Mode	16-21
Deleting a Public Key	16-22
Downloading a Primary Key	16-23
Load Master/Com Key	16-23
Downloading a Customer Screen from a Customized Load Group	16-24
Downloading a Cardholder Display Screen from a Customized Load Group	16-25
Downloading a Receipt Screen from a Customized Load Group	16-26
Downloading a State from Both Load Groups	16-26
Downloading a Financial Institution Table from Both Load Groups	16-27
Downloading Note IDs to an ATM Equipped with a BNA	16-28
Opening a Terminal	16-28
Closing a Terminal	16-29
Resetting a Terminal	16-29
Displaying Terminal Configuration Information	16-30
Displaying Supplies Counters	16-30
Printing the Check Proof List File (CPLF) at a Terminal	16-31

Index. Index-1

Index by Field Name Index-7

What's New

The following table highlights the major changes that have been made in the most recent update to the ***BASE24 Device Control Manual***. The first column of the table lists the sections and appendixes in which major changes have been made. The second column of the table describes the major changes for each section or appendix. These changes update the manual to release 6.0, version 10.

Section/ Appendix	Major Changes
----------------------	---------------

16	Adds the DELETE PUBLIC KEY, LOAD PRIMARY PUBLIC KEY, and LOAD MASTER/COM KEY fields to the NCR 5XXX Load Commands screen accessed from DCT screen 45.
----	---

ACI Worldwide, Inc.

Preface

The ***BASE24 Device Control Manual*** describes how to perform device control, process control, and shared extended memory table (EMT) control functions using the screens accessed from the BASE24 Device Control Terminal (DCT) Menu. Device control functions allow operators to operate and maintain terminals in the BASE24 product family, including ATMs, POS terminals, and attended teller terminals. The process control function described in this manual enables operators to warmboot selected processes to rebuild internal tables for transaction processing. The EMT control function described in this manual enables operators to warmboot, or reinitialize, a shared BASE24 extended memory table.

Audience

This manual is intended for operators responsible for operating and maintaining terminals for various BASE24 products. BASE24 operators referring to this manual for documentation on the process control or EMT control functions should read section 1 and then move directly to sections 2 or 3, which describe how to use the Process Control Commands Screen (Screen 4) and the EMT Control Commands Screen (Screen 5), respectively.

BASE24 operators referring to this manual for documentation on terminal control functions should read the material in section 1 and then move directly to the sections on the device control screens that apply to their installation.

Prerequisites

Readers should be familiar with the ***BASE24 User Security Manual*** before reading this manual. The ***BASE24 User Security Manual*** provides information about logging on to the BASE24 user access system by accessing screens and using function keys. Operators of the DCT screens should also be familiar with the operation of the terminals they will be controlling through these screens.

Additional Documentation

The BASE24 documentation set is arranged so that each BASE24 manual presents a topic or group of related topics in detail. When one BASE24 manual presents a topic that has already been covered in detail in another BASE24 manual, the topic is summarized and the reader is directed to the other manual for additional information. Information has been arranged in this manner to be more efficient for readers who do not need the additional detail and, at the same time, provide the source for readers who require the additional information. This manual contains references to the following BASE24 publications:

- The ***BASE24 User Security Manual*** provides an introduction to the BASE24 user access system, including instructions for logging on to the system and for accessing screens in the system.
- The ***BASE24 Logical Network Configuration File Manual*** describes the Logical Network Configuration File (LCONF), including the params used to warmboot processes and the assigns that contain default file names.
- The ***BASE24-atm Transaction Processing Manual*** and the ***BASE24-pos Transaction Processing Manual*** describe the Extended Memory Table Build utility.
- The ***BASE24-atm Diebold 910/911/912 Device Support Manual*** describes device-specific processing for the Diebold 910, 911, and 912 ATMs.
- The ***BASE24-atm Diebold 10XX/478X Device Support Manual*** describes device-specific processing for the Diebold 10XX/478X ATMs.
- The ***BASE24-atm Diebold 10XX/478X SSB Manual*** describes how the self-service banking add-on module is implemented for Diebold 10XX ATMs.
- The ***BASE24-atm NCR 5XXX Device Support Manual*** describes device-specific processing for the NCR 5XXX ATMs.
- The ***BASE24-atm NCR 5XXX SSB Manual*** describes how the self-service banking add-on module is implemented for NCR 5XXX ATMs.
- The ***BASE24-atm IBM 3624 Device Support Manual*** describes device-specific processing for the IBM 3624 ATMs.
- The ***BASE24-atm IBM 4730-Series Device Support Manual*** describes device-specific processing for the IBM 4730-series ATMs.
- The ***BASE24-atm Files Maintenance Manual*** contains information about the BASE24-atm Terminal Data files.

- The ***BASE24-atm EMV Manual*** provides information about configuring Europay, MasterCard, and Visa (EMV) to operate in conjunction with the BASE24-atm product and describes the processing of BASE24-atm EMV transactions.
- The ***BASE24-pos EMV Manual*** provides information about configuring EMV to operate in conjunction with the BASE24-pos product and describes the processing of BASE24-pos EMV transactions.
- The ***BASE24 Transaction Security Services Processing Guide*** contains information about the Channel Security Configuration File (CSECD). If you are using the Transaction Security Services process, you must add a new CSECD record whenever you add a new terminal.
- The ***NET24-XPNET Network Control Command Reference Manual*** contains information about the control settings for a station and how to change those settings on an XPNET network.

In addition to the above BASE24 publications, the manual contains references to the following device vendor publications:

- The ***IBM 3624 Programmer's Guide Manual*** provides specific information on the configuration of IBM 3624 ATMs.
- The ***NCR NDC+ Programmer's Reference Manual*** provides specific information on the configuration and status reporting of NCR ATMs.
- The ***Enhanced Monochrome Graphics (EMG) Programming Manual*** provides specific information on the Diebold 10XX/478X ATMs with the EMG module.

This manual also references the International Organization for Standardization (ISO) 4217 standard, ***Codes for the Representation of Currencies and Funds***, for valid currency codes.

Software

This manual documents standard processing as of its publication date. Software that is not current and custom software modifications (CSMs) may result in processing that differs from the material presented in this manual. The customer is responsible for identifying and noting these changes.

Manual Summary

The following is a summary of the contents of this manual:

“Conventions Used in this Manual” follows this preface and describes notation and documentation conventions necessary to understand the information in the manual.

Section 1, “Introduction,” provides an overview of device control and process control functions, describes how to access the DCT Menu and DCT screens, and describes how to restrict operator access to terminals by region and branch.

Section 2, “Process Control Commands Screen (Screen 4),” describes the screen used to warmboot, or reinitialize BASE24 processes.

Section 3, “EMT Control Commands Screen (Screen 5),” describes the screen used to warmboot shared extended memory tables.

Section 4, “ATM Terminal Commands Screen (Screen 7),” describes the screens used to remotely control an ATM terminal, as well as display its status. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks.

Section 5, “ATM Balance Current Cash Screen (Screen 8),” describes the screens used to balance an ATM terminal with the current cash method. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks.

Section 6, “ATM Balance Standard Cash Screen (Screen 9),” describes the screens used to balance an ATM terminal with the standard cash method. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks.

Section 7, “POS Merchant Host Interface Device Load Control Screen (Screen 15),” describes the screen used to download information to a POS terminal. This section describes the fields displayed on the screen, the function keys available on the screen, and the procedures used to perform common tasks.

Section 8, “Olivetti ATM Commands Screen (Screen 32),” describes the screen used to control an Olivetti ATM terminal. This section describes the fields displayed on the screen, the function keys available on the screen, and the procedures used to perform common tasks.

Section 9, “Fujitsu Commands Screen (Screen 37),” describes the screen used to control a Fujitsu ATM terminal. This section describes the fields displayed on the screen, the function keys available on the screen, and the procedures used to perform common tasks. An overview describes how ATMs load configuration information by two different load groups.

Section 10, “IBM 36XX Commands Screen (Screen 38),” describes the screens used to control an IBM 36XX-series ATM terminal. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks.

Section 11, “ATM Diebold Commands Screen (Screen 39),” describes the screens used to control a Diebold 910/911/912 ATM terminal. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks. An overview describes how ATMs load configuration information by two different load groups.

Section 12, “ATM Diebold 10XX Commands Screen (Screen 40),” describes the screens used to control a Diebold 10XX ATM terminal. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks. An overview describes how ATMs load configuration information by two different load groups.

Section 13, “ATM Docutel 5100 Commands Screen (Screen 41),” describes the screens used to control a Docutel 5100 ATM terminal. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks. An overview describes how ATMs load configuration information by two different load groups.

Section 14, “ATM Burroughs RT650 Commands Screen (Screen 43),” describes the screen used to control a Burroughs RT650 ATM terminal. This section describes the fields displayed on the screen, the function keys available on the screen, and the procedures used to perform common tasks.

Section 15, “ATM IBM 4730 Commands Screen (Screen 44),” describes the screens used to control an IBM 473X-series ATM terminal. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks.

Section 16, “ATM NCR 5XXX Commands Screen (Screen 45),” describes the screens used to control an NCR 5XXX ATM terminal. This section describes the fields displayed on each screen, the function keys available on each screen, and the procedures used to perform common tasks. An overview describes how ATMs load configuration information by two different load groups.

Readers can use the index by field name to locate information about a particular screen field.

Publication Identification

Three entries appearing at the bottom of each page uniquely identify this BASE24 publication. The publication number (for example, BA-AE000-06 for the ***BASE24 Device Control Manual***) appears on every page to assist readers in identifying the manual from which a page of information was printed. The publication date (for example, Sept-2011 for September, 2011) indicates the issue of the manual. The software release information (for example, R6.0v10 for release 6.0, version 10) specifies the software that the manual describes. This information matches the document information on the copyright page of the manual.

Conventions Used in this Manual

This section explains how field descriptions and unlabeled fields on screens are documented in this manual.

Field Descriptions

Each field appearing on a files maintenance screen is listed by name and then described. Field descriptions briefly summarize the contents, purpose, and permissible values, as shown in the following example taken from DCT screen 8 (ATM Balance Current Cash screen).

Example

FIID — The identifier of the financial institution that owns the specified ATM. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered in the field.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

Explanation

Each field description is completed by one or more of the following items of information:

Item	Description
Example	Illustrates a possible entry for the field to further clarify the value or values that can be entered.

Item	Description
Field Length	Specifies the size of the field and the type of characters that can be entered. This length refers to the field and valid values for the files maintenance screen, not the field in the DDLs. Possible values are alphabetic, alphanumeric, hexadecimal, and numeric. The term <i>alphanumeric</i> includes all alphabetic, numeric, and special characters that can be entered from a keyboard without using a control sequence. The term <i>hexadecimal</i> includes all numbers and the letters A through F. When a field value cannot be modified by the operator, the field length is <i>System Protected</i>.
Occurs	Indicates the number of times the field can be displayed on the screen. This information is provided only when the field can be displayed multiple times.
Required Field	Specifies whether a value has to be entered in the field. Possible values are Yes and No. Some fields are required only under certain conditions. In this case, the entry is Yes, followed by the conditions that determine when the field is required.
Default Value	Specifies the value that is automatically placed in the field when the screen is first displayed or when the F8 key is pressed to clear the screen.
Data Name	Provides the DDL name associated with the field appearing on the screen. Data names are included in the documentation to assist in communicating screen and field issues to your technical staff. Note that screen data is not always stored in the BASE24 database as it appears on the screen or as it is described in the field description. If you need information on how screen data is actually stored, consult the DDLs.

Unlabeled Fields on Screens

Angle brackets (< >) indicate an unlabeled field on a screen. An unlabeled field is a field that is present on a screen but is not preceded by an identifying literal label. For the purposes of documenting the field, a label has been assigned and appears inside the angle brackets.

In the field descriptions for the screen, the unlabeled field appears according to its place on the screen and is identified by the same label.

Unlabeled fields are not included in the index by field name; they appear by subject in the main index.

ACI Worldwide, Inc.

1: Introduction

This section introduces the operator to BASE24 device control. It provides an overview of the device control functions available on BASE24 Device Control Terminal (DCT) screens, shows how to access the DCT Menu and the DCT screens listed on it, briefly describes the functions available on each DCT screen, and explains how to restrict operator access to ATM and teller terminals by region and branch.

BASE24 Device Control

BASE24 device control functions allow you to operate and maintain terminals in the BASE24 product family, including ATMs, POS terminals, and attended teller terminals. Device control functions include such operations as the following:

- Opening and closing terminals
- Starting and stopping stations
- Displaying the status of terminals and stations
- Balancing terminals
- Downloading configuration files to, and uploading configuration files from, terminals
- Changing data encryption communications keys used by terminals


Regular performance of these functions helps ensure that an institution's network of terminals operates efficiently and continuously 24 hours a day, seven days a week.

This manual also covers process and extended memory table (EMT) control functions, which allow you to warmboot processes identified in the warmboot notify lists or EMT warmboot notify lists in the Logical Network Configuration File (LCONF). The warmboot notify lists are described in section 2 and the EMT warmboot notify lists are described in section 3.

Device control, process control, and EMT control functions are performed on DCT screens. These screens are accessed using the DCT Menu. Instructions on how to access the DCT Menu and the DCT screens listed on it are provided on the following pages.

Accessing DCT Screens

The following diagram illustrates the steps required to access DCT screens. Each of these steps is described on the following pages.

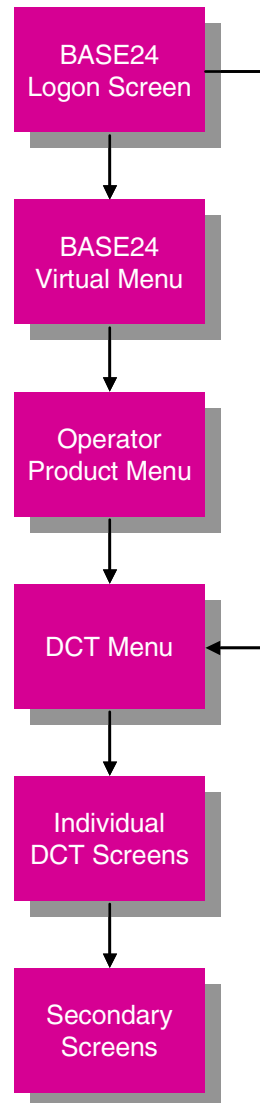

BASE24 Logon Screen

The BASE24 Logon screen, shown below, provides access to BASE24.

```

BASE24-ADMN  LOGON                                YY/MM/DD  HH:MM  01 OF 01

                P L E A S E   L O G   O N

USER NAME:                                PASSWORD:                                LOGICAL NET:

      BBBBBBBB      AAAA      SSSSSS      EEEEEEEE      22222222      4444
      BB      BB      AA      AA      SS      EE      22      44      44
      BB      BB      AA      AA      SS      EE      22      44      44
      BBBBBBBB      AAAAAAAAAA      SSSSSS      EEEEEEEE      22222222      44444444
      BB      BB      AA      AA      SS      EE      22      44
      BB      BBB      AA      AA      SS      EE      22      44
      BBBBBBBB      AA      AA      SSSSSS      EEEEEEEE      22222222      44

      SCREEN PRINTER: $S.#HOLD
      CHANGE PASSWORD (Y/N): N
      NEW PASSWORD:                                (TAKES EFFECT ON NEXT LOGON)

***** BASE24 *****
      FILE DESTINATION:
F1-ENTER DATA      F10-PRINT                                F16-EXIT      SF16-LOGOFF
  
```

The basic procedure to log on to BASE24 is as follows:

1. Enter your operator name in the USER NAME field.
2. Enter your password in the PASSWORD field.
3. Enter the identifier of the logical network you want to access in the LOGICAL NET field.
4. Press the **F1** key to display the BASE24 Virtual Menu, or enter DCT in the FILE DESTINATION field and press the **F1** key to bypass the Virtual Menu and Operator Product Menu and move directly to the DCT Menu.

The *BASE24 User Security Manual* provides additional information about these steps.

BASE24 Virtual Menu

The BASE24 Virtual Menu gives you access to all the BASE24 products your institution has purchased, assuming that you have the appropriate security to access those products.

```

BASE24-ADMN  VIRTUAL MENU                LLLL      YY/MM/DD  HH:MM  01 OF 01
              V I R T U A L  M E N U

              BASE                      ATM
              POS                      TELLER
              CORE                     BILLPAY
              KERNEL/IEP               MAIL
              CARD MANAGEMENT          CUSTOMER SERVICE
              OPERATOR FUNCTIONS       FREQUENT SHOPPER
              CHKA                     RFND

***** BASE24 *****
              FILE DESTINATION:
F1-ENTER DATA  F9-NEXT PAGE  F11-PREVIOUS PAGE      F10-PRINT  F16-EXIT

```

The example Virtual Menu shown above lists all currently available BASE24 products. The Virtual Menu that is accessed when you log on to BASE24 probably does not contain all these entries, but it should display an OPERATOR FUNCTIONS option, plus the BASE24 product or products purchased.

Note: Although other BASE24 products might be displayed on the Virtual Menu, only the BASE24-atm, BASE24-pos, BASE24-teller, and switch products use the DCT screens. Throughout this manual, the phrases “all BASE24 products” or “all BASE24 processes” refers only to BASE24 products that use the DCT screens.

If the Virtual Menu accessed from the Logon screen does not contain an OPERATOR FUNCTIONS entry, notify a supervisor so that he or she can update the security records. The *BASE24 User Security Manual* contains information about how security is updated.

To access the Operator Product Menu from the Virtual Menu, perform the following steps:

1. Place the cursor to the left of the OPERATOR FUNCTIONS menu item.
2. Press the **F1** key to display the Operator Product Menu.

Operator Product Menu

The Operator Product Menu gives you access to the following files and functions, assuming you have the proper security:

DCT = Device Control Terminal screens

EXTR = Extract screens

LMCF = Log Message Configuration File

NCS = Network Control Supervisor screen

REFR = Refresh screens

XNI = X.25 Network Inquiry screen

```

BASE24-ADMN  MENU                      LLLL      YY/MM/DD  HH:MM  01 OF 01
                O P R      P R O D U C T  M E N U

                DCT          EXTR          LMCF          NCS

                REFR          XNI

***** BASE24 *****
                        FILE DESTINATION:
F1-ENTER DATA   F9-NEXT PAGE   F11-PREVIOUS PAGE   F10-PRINT   F12-HELP
  
```

The example Operator Product Menu shown above lists all currently available BASE24 operator files and functions. The Operator Product Menu that is displayed when you access the OPERATOR FUNCTIONS item on the BASE24 Virtual Menu may not contain all these entries, but it should display the DCT option.

If the Operator Product Menu accessed from the BASE24 Virtual Menu does not contain a DCT entry, notify a supervisor so that he or she can update the security records. The ***BASE24 User Security Manual*** contains information about how security is updated.

To access the DCT Menu from the Operator Product Menu, perform the following steps:

1. Place the cursor to the left of the DCT menu item or enter DCT in the FILE DESTINATION field at the bottom of the screen.
2. Press the **F1** key to display the DCT Menu.

DCT Menu

The DCT Menu provides access to the DCT screens appropriate to the BASE24 product your institution has purchased and the type of terminal used with that BASE24 product, assuming that you have the appropriate security. The DCT Menu shown below contains all the DCT options currently available. The DCT Menu you access probably does not contain all of these items. A procedure for using the screen, field descriptions, item descriptions, and function key descriptions are provided following the screen sample.

```

BASE24-DCT   DCT                               LLLL       YY/MM/DD  HH:MM  01 OF 02

      USER ID:                                PASSWORD:

      4  PROCESS CONTROL                        5  EMT WARMBOOT CONTROL
      7  ATM TERMINAL CONTROL                   8  ATM BAL CURRENT CASH
      9  ATM BAL STANDARD CASH                 10  TELLER TERMINAL CONTROL
     15  POS MHI DEVICE LOAD CONTROL           32  ATM OLIVETTI COMMANDS
     37  ATM FUJITSU COMMANDS                  38  ATM IBM 36XX COMMANDS
     39  ATM DIEBOLD COMMANDS                  40  ATM DIEBOLD 10XX COMMANDS
     41  ATM DOCUTEL ETS 5100 COMMANDS         43  ATM BURROUGHS RT650 COMMANDS
     44  ATM IBM 4730 COMMANDS                 45  ATM NCR 5XXX COMMANDS
  
```

TYPE THE NUMBER OF THE DESIRED FUNCTION IN NEW PAGE FIELD AND KEY F7

```

***** BASE24 *****
NEW PAGE:      FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F7-GOTO F9-NEXT F10-PRINT F11-PAGE-BACK F12-HELP F13-CHANGE-LNET F16-EXIT
  
```

Note: The DCT Menu has two pages, as indicated by the “01 OF 02” message at the top of the screen. The second page is for future expansion of the menu and is currently blank. The **F9** and **F11** function keys are currently not used since they access this second screen.

Using the DCT Menu

To access a DCT screen from the DCT Menu, perform the following steps:

1. Enter your network control operator name in the USER field at the top of the screen, if required.
2. Enter your password in the PASSWORD field at the top of the screen, if required.
3. Enter the number of the DCT screen you want to access in the NEW PAGE field at the bottom of the screen.
4. Press the **F7** key to display the DCT screen selected. If you enter the number of a screen you do not have access to or that does not exist, the DCT Menu is redisplayed when you press the **F7** key.
5. Certain DCT screens also have additional secondary screens. Instructions for accessing these screens are found in the appropriate sections.

Field Descriptions

The DCT Menu displays the following fields.

USER ID — The name that uniquely identifies you to the network control subsystem. This name must match your alias in the Security File (SEC) and Network Control Supervisor Security File (NCSS) or access to network control is denied.

Normally, your supervisor gives you your user name. You must have security clearance under an identical user name for all logical networks you want to access, if you want to access a different logical network without logging on again.

Field Length:	1–16 alphanumeric characters
Required Field:	Yes, if network control security is enabled for your installation (i.e., the ENABLE-SECURITY param for the NCPI Server process is set to a value of ON).
Default Value:	None

PASSWORD — Your password. The network control subsystem requires each user to select a confidential password to ensure that user names are not employed by unauthorized individuals. Each user name and password combination must be unique within the network control subsystem.

Field Length: 1–16 alphanumeric characters
Required Field: Yes, if network control security is enabled for your installation (i.e., the ENABLE-SECURITY param for the NCPI Server process is set to a value of ON).
Default Value: None

DCT Screen Descriptions

If you have the appropriate security access, you can access the following screens from the DCT Menu:

Process Control (Screen 4) — Allows you to warmboot, or reinitialize, processes identified in one of the warmboot notify lists in the Logical Network Configuration File (LCONF). These notify lists are composed of params that identify processes to be warmbooted. A separate notify list is maintained for each BASE24 product.

Warmboots are performed from this screen for processes that continually require updated file information to perform transaction processing. These processes include the Authorization, Settlement Initiator, Host Interface, and Interchange Interface processes or modules. For the BASE24-pos product, the Authorization module is bound into the Device Handler/Router/Authorization process. When changes are made to the files read by these processes at initialization, the processes can be warmbooted to allow them to reread these files to rebuild their internal tables. This screen is described in section 2.

EMT Warmboot Control (Screen 5) — Allows you to warmboot, or reallocate, extended memory tables for processes identified in one of the EMT warmboot notify lists in the LCONF. These notify lists are composed of params that identify processes to be warmbooted when a specific extended memory table is rebuilt. A separate notify list is maintained for each shared BASE24 extended memory table.

Warmboots are performed from this screen for processes that require updated extended memory table information to perform transaction processing. These processes include the BASE24-atm and BASE24-pos Authorization, Device Handler, and Interchange Interface processes or modules. For the BASE24-pos

product, the Device Handler and Authorization modules are bound into the Device Handler/Router/Authorization process. When the extended memory tables read by these processes are updated (i.e., rebuilt using the Extended Memory Table Build utility), you must warmboot the processes to reallocate the new tables. This screen is described in section 3.

ATM Terminal Control (Screen 7) — Allows you to perform various functions on all ATMs defined in the BASE24-atm Terminal Data files for the network regardless of terminal type. These functions include displaying the status of terminals and stations, starting and stopping stations, and opening and closing ATMs. This screen is described in section 4.

ATM Balance Current Cash (Screen 8) — Allows you to balance ATMs that contain loose bills or non-currency items in their hoppers. Functions available on this screen include displaying the status and subtotals of ATMs, opening and closing ATMs, increasing or decreasing cash or non-currency items in ATMs, and balancing ATMs with current cash or non-currency items. In addition, you can use this screen to obtain the currency acceptor's counts from the specified ATM, provided that it is a Diebold ATM equipped with a currency acceptor. This screen is described in section 5.

ATM Balance Standard Cash (Screen 9) — Allows you to balance ATMs that use cartridge cash or non-currency item dispensers. Functions available on this screen include displaying the status and subtotals of ATMs, opening and closing ATMs, and balancing ATMs with standard cash or non-currency items. In addition, you can use this screen to obtain the currency acceptor's counts from the specified ATM, provided that it is a Diebold ATM equipped with a currency acceptor. This screen is described in section 6.

Teller Terminal Control (Screen 10) — Allows you to perform various functions on all attended teller terminals defined in the Teller Terminal Data File (TTDF) for the network. These functions include displaying the status of terminals and stations, starting stations, and stopping stations. This screen is not documented in this manual because it is device-dependent and typically is customized for an institution.

POS Merchant Host Interface Device Load Control (Screen 15) — Allows you to set the download pending flag in the BASE24-pos Terminal Data files for the devices connected to the Merchant Host. This screen is described in section 7.

ATM Olivetti Commands (Screen 32) — Allows you to perform various functions on Olivetti 6000 ATM terminals, including downloading a new communications key to an ATM and uploading and downloading ATM files. This screen is described in section 8.

ATM Fujitsu Commands (Screen 37) — Allows you to perform various functions on Fujitsu ATM terminals, including downloading new communications keys, screens, states, and financial institution tables (FITs) to ATMs. This screen is described in section 9.

ATM IBM 36XX Commands (Screen 38) — Allows you to perform various functions on IBM 36XX-series ATM terminals. These functions include displaying the status of ATMs, opening, closing, and suspending operation of ATMs, and downloading a new communications key to ATMs. This screen is described in section 10.

ATM Diebold Commands (Screen 39) — Allows you to perform various functions on Diebold 910/911/912 ATM terminals, including downloading screens, states, a new communications key, and financial institution tables (FITs) to ATMs. This screen is described in section 11.

ATM Diebold 10XX Commands (Screen 40) — Allows you to perform various functions on Diebold 10XX ATM terminals, including downloading screens, states, a new communications key, and financial institution tables (FITs) to ATMs. For Diebold 10XX ATMs equipped with Enhanced Monochrome Graphics (EMG), this screen also allows you to reposition or restructure Diebold prepackaged graphics and download them to the ATM. This screen is described in section 12.

ATM Docutel ETS 5100 Commands (Screen 41) — Allows you to perform various functions on Docutel ETS 5100 ATM terminals. These functions include downloading new communications keys to ATMs and downloading ATM configuration information. This screen is described in section 13.

ATM Burroughs RT650 Commands (Screen 43) — Allows you to download a new communications key to Burroughs RT650 ATM terminals. This screen is described in section 14.

ATM IBM 4730 Commands (Screen 44) — Allows you to perform various functions on IBM 4730 ATM terminals. These functions include displaying error and status information for ATMs, downloading a new communications key to ATMs, updating configuration of ATM devices, and uploading and downloading ATM files. This screen is described in section 15.

ATM NCR 5XXX Commands (Screen 45) — Allows you to perform various functions on NCR 5XXX ATM terminals. These functions include downloading a new communications key to ATMs and downloading screens, states, and financial institution tables (FITs) to ATMs. This screen is described in section 16.

Function Keys

The following table shows the functions assigned to the function keys on the DCT Menu. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F7	Goto New Screen — Displays the DCT screen for the number entered in the NEW PAGE field.
F9	Next Page — Displays screen 2 of the DCT Menu (currently not used).
F10	Print — Sends the image of the DCT Menu to the spooler location specified on the BASE24 Logon screen.
F11	Page Back — Displays screen 1 of the DCT Menu (currently not used).
F12	Display Help Screen — Displays the Help screen for the DCT Menu.
F13	Change Logical Network — Changes the specified logical network if you have made an entry in the NEW LOGICAL NETWORK ID field.

Key	Description
F16	Exit or Goto File — Returns you to the BASE24 Virtual Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which then returns you to a blank BASE24 Logon screen.

Many of the function keys used in the DCT screens are standard throughout BASE24. These function keys are described in the ***BASE24 User Security Manual***. When the use of these function keys differs for the DCT screens, the differences are noted in the section of the manual dealing with the screen grouping to which they apply. Most of the DCT screens also provide online Help screens that list the function keys applicable for each screen.

DCT Menu Options

With one exception, the DCT screens available to you using the DCT Menu depend on the following factors:

- The BASE24 product or products purchased by your institution
- The type or types of terminals your institution operates with the BASE24 product or products
- Your security authorization

The only exception is the Process Control Commands screen (screen 4), which can be accessed by authorized operators regardless of BASE24 product or terminal type.

BASE24-atm Options

If your institution is using the BASE24-atm product, the DCT screens that can appear on the DCT Menu are the following:

- Process Control Commands screen (screen 4)
- EMT Control Commands screen (screen 5)
- ATM Terminal Control screen (screen 7)
- ATM Balance Current Cash screen (screen 8)
- ATM Balance Standard Cash screen (screen 9)
- One or more terminal-specific device control screens

The terminal-specific device control screens available depend on the type or types of terminals the institution uses with BASE24-atm. A complete menu of terminal-specific screens consists of the following:

- ATM Olivetti Commands screen (screen 32)
- ATM Fujitsu Commands screen (screen 37)
- ATM IBM 36XX Commands screen (screen 38)
- ATM Diebold Commands screen (screen 39)
- ATM Diebold 10XX Commands screen (screen 40)
- ATM Docutel ETS 5100 Commands screen (screen 41)

- ATM Burroughs RT650 Commands screen (screen 43)
- ATM IBM 4730 Commands screen (screen 44)
- ATM NCR 5XXX Commands screen (screen 45)

BASE24-pos Options

If your institution is using the BASE24-pos product, the DCT screens that can appear on the DCT Menu are the following:

- Process Control Commands screen (screen 4)
- EMT Control Commands screen (screen 5)
- POS Merchant Host Interface Device Load Control screen (screen 15)

BASE24-teller Options

If your institution is using the BASE24-teller product, the DCT screens that can appear on the DCT Menu are the following:

- Process Control Commands screen (screen 4)
- Teller Terminal Control screen (screen 10)

Note: The Teller Terminal Control screen (screen 10) is not documented in this manual because it is device-dependent and typically is customized for an institution.

Security

Access to DCT functions can be secured by network operator user ID, password, and command profile. Access to ATMs and attended teller terminals can also be limited by region and branch.

DCT Function Security

If the ENABLE-SECURITY parameter is included in the declaration for the NCPI Server process in the Pathway Configuration File (PATHCONF), the network operator must be allowed access to several commands in a command profile defined in the Network Control Supervisor Profile File (NCSP) before certain DCT functions can be used. Access to the following commands must be provided to allow access to all DCT functions:

- DELIVER PROCESS
- INFO STATION
- START STATION
- STATISTICS STATION
- STATUS STATION
- STOP STATION

Limiting Terminal Access by Region and Branch

BASE24 gives institutions the ability to limit DCT operator access to terminals by region and branch. BASE24 defines a region as a subset of an institution's network of terminals. A branch is defined as a subset of a region. Thus, networks are composed of regions, which are composed of branches. The ability to divide networks into regions and branches gives an institution greater control of terminal security.

Note: Region and branch access can be defined for ATMs and attended teller terminals, but cannot be used for POS terminals.

To limit terminal access, the institution can specify in the Security File (SEC) the regions and branches within which each operator has access to terminals. The region and branch operator designations in the SEC must match the region and branch terminal designations in the applicable terminal data file—the BASE24-atm Terminal Data files (ATD or TDF) for BASE24-atm, the

BASE24-pos Terminal Data files (PTD or PTDF) for BASE24-pos, or the Teller Terminal Data File (TTDF) for BASE24-teller. The regions and branches included in the SEC and applicable terminal data file must be compatible with operators and terminals before DCT functions can be performed.

After region and branch security have been established, the operator must enter appropriate region and branch information whenever attempting to perform DCT functions. Region and branch information is appropriate when it matches the terminal's region and branch designation in the applicable terminal data file and the operator's region and branch access in the SEC.

If an institution does not choose to control security with the assistance of region and branch parameters, asterisks can be used in the REGION and BRANCH fields in the SEC to indicate that a operator has access to all terminals regardless of region or branch.

If the REGION and BRANCH fields on DCT screens are left blank, they default to asterisks for security checking purposes. If a operator does not have access to all regions and branches in the SEC, then the selected function is not allowed.

ACI Worldwide, Inc.

2: Process Control Commands Screen (Screen 4)

This section describes how to execute commands using the Process Control Commands screen. You access this screen from the DCT Menu as screen 4. This screen allows you to warmboot, or reinitialize, selected BASE24 processes. The processes that can be warmbooted from this screen are entered individually on the screen—or as a group using params defined in the Logical Network Configuration File (LCONF).

Warning: To maintain optimum performance of the BASE24 system, warmboot commands should not be executed when the system is processing peak volumes. In addition, the Settlement Initiator process should not be warmbooted between the start of the terminal cutover window and the logical network cutover time.

This section contains the following information about DCT screen 4:

- A brief overview of how processes are warmbooted
- A screen example and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks

Warmbooting Processes

Processes that can be warmbooted from this screen include the Authorization, Settlement Initiator, Host Interface, and Interchange Interface processes. When these processes are initialized, they read various files (e.g., Institution Definition File (IDF), Card Prefix File (CPF), Host Configuration File (HCF), etc.) to build internal tables. Whenever these files are updated, the processes that read them must be reinitialized in order to rebuild their internal tables.

The processes that can be warmbooted from DCT screen 4 are identified either individually on the screen using the symbolic name of the process or as a group using params in the Logical Network Configuration File (LCONF). Information about how to set up params in the LCONF is contained in the ***BASE24 Logical Network Configuration File Manual***. The LCONF warmboot params are organized by BASE24 product; there can be as many as 150 warmboot params per product. Each param identifies the symbolic name of a process to be warmbooted. The syntax of the param names for each product is shown in the following table.

Product	Param
BASE24-atm	ATM-WARM nn
BASE24-pos	POS-WARM nn
BASE24-teller	TLR-WARM nn
Switch	SWI-WARM nn

The nn variable contained in the param name syntax is a number such as ATM-WARM1 or ATM-WARM2, provided that it is unique and has not been used by another param for the same product.

Each param name is associated with param text that identifies the symbolic name of the specific process to be warmbooted. For example, the ATM-WARM1 param might have as its param text P1A^AUTH1, the BASE24-atm Authorization process.

Whenever you execute a WARMBOOT ALL command for a specified BASE24 product from DCT screen 4, the Process Control Terminal (PCT) Server process reads the warmboot params for that product in the LCONF and sends warmboot messages to the processes identified in each param text.

DCT Screen 4

DCT screen 4 allows you to warmboot selected BASE24 processes. Several of the fields on this screen are commands that can be performed. To use these fields, place the cursor to the left of the description and press the **F1** key. DCT screen 4 is shown below, followed by field descriptions, function key descriptions, and procedures for using the screen.

```

BASE24-PCT      PROCESS CONTROL COMMANDS LLLL      YY/MM/DD  HH:MM  04 OF 46

                                REINITIALIZATION COMMANDS

                                TYPE: 9501
PRODUCT INDICATOR:
                                _ ALL
                                LOGO:
                                _ FI-ID
                                PROCESS NAME:
                                _ PROCESS

***** BASE24 *****
NEW PAGE:      FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F1-ENTER      F12-HELP

```

TYPE — The type of warmboot to be executed by the system. Valid values are as follows:

- 9501 = The 9501 command is supported by all BASE24 products and is used to perform warmboots on all BASE24 products.
- 9520 = The 9520 command is supported only by BASE24-pos and is used only for certain types of BASE24-pos warmboots. See the “Warmbooting All BASE24-pos Processes with a Single File” and “Warmbooting a Single BASE24-pos Process with a Single File” topics below for more information on using the 9520 warmboot command.

Field Length: 4 numeric characters
 Required Field: Yes
 Default Value: 9501

PRODUCT INDICATOR — The BASE24 product for the process or processes to be warmbooted. The PCT Server process uses the value entered in this field to access the appropriate params in the warmboot notify list in the LCONF. For example, when ATM is entered in this field, the PCT Server process reads the LCONF for the params *.ATM-WARM1, *.ATM-WARM2, etc. Valid values are as follows:

ATM = BASE24-atm
POS = BASE24-pos
TELLER = BASE24-teller
SWI = Switch (Interchange Interface processes)
ALL = All products

Field Length: 3–6 alphabetic characters
Required Field: Yes
Default Value: No default value

ALL — Warmboots all processes for the product specified in the PRODUCT INDICATOR field that are contained in that product's warmboot notify list in the LCONF. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOGO — This field allows three types of entries as follows:

- Entering ALL warmboots all BASE24 processes for the product specified in the PRODUCT INDICATOR field
- Entering a specific FIID warmboots a process with a single record in the Institution Definition File (IDF)
- Entering a file acronym (with 9520 in the TYPE field and POS specified in the PRODUCT INDICATOR field) causes the Authorization module to reread one of the following files:
 - CAPF = Card Authorization Parameters File
 - INR = INAS National Negative Range File (MasterCard)
 - BNR = BASE National Negative Range File (VISA)

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: No default value

FI-ID — Performs one of three functions depending on the entry in the LOGO field. See the description of the LOGO field for an explanation of each function. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

PROCESS NAME — The symbolic name of a process belonging to the specified product that you want to warmboot.

Field Length: 1–16 alphanumeric characters

Required Field: No

Default Value: No default value

PROCESS — Warmboots the process specified by the PROCESS NAME field. If an FIID or file is entered in the LOGO field, the process reads only that FIID or file during warmboot processing. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 4. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Select or Validate — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid, this function highlights the field and displays an error message indicating the information that must be changed or added.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F10	Print — Sends the current image of DCT screen 4 to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 4. This Help screen lists the functions assigned to the function keys for DCT screen 4.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to a blank BASE24 Logon screen.

Procedures

You can use DCT screen 4 to perform the following tasks:

- Warmboot all BASE24 processes
- Warmboot all processes for a single BASE24 product
- Warmboot all processes for a single BASE24 product with a single IDF record
- Warmboot a single BASE24 process
- Warmboot a single BASE24 process with a single IDF record
- Warmboot all BASE24-pos processes with a single file
- Warmboot a single BASE24-pos process with a single file

The procedures for performing these tasks are described below and on the following pages.

Warmbooting All BASE24 Processes

This procedure warmboots all BASE24 processes regardless of product. When you execute this command, all processes specified in the warmboot notify lists for all products in the LCONF are fully warmbooted. This type of warmboot can be used by all BASE24 products.

To warmboot all BASE24 processes, perform the following steps:

1. Enter 9501 in the TYPE field on DCT screen 4.
2. Enter ALL in the PRODUCT INDICATOR field.
3. Place the cursor to the left of the ALL field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the warmboot message has been received by the appropriate processes.

Warmbooting All Processes for a Single BASE24 Product

This procedure warmboots all BASE24 processes belonging to a specified product. When the command is executed, all processes contained in the warmboot notify list for the product in the LCONF are fully warmbooted. This type of warmboot can be used by all BASE24 products.

To warmboot all processes of a specified BASE24 product, perform the following steps:

1. Enter 9501 in the TYPE field on DCT screen 4.
2. Enter the BASE24 product code whose processes you want to warmboot in the PRODUCT INDICATOR field. Valid values are as follows:
ATM = BASE24-atm
POS = BASE24-pos
TELLER = BASE24-teller
SWI = Switch (Interchange Interface processes)
3. Place the cursor to the left of the ALL field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the warmboot message has been received by the appropriate processes.

Warmbooting All Processes for a Single BASE24 Product with a Single IDF Record

This procedure warmboots all BASE24 processes belonging to a specified product using a single record in the Institution Definition File (IDF). When the command is executed, all processes contained in the warmboot notify list for the product in the LCONF are partially warmbooted, using the record in the IDF. This type of warmboot can be used by all BASE24 products.

To warmboot all processes of a BASE24 product with a single IDF record, perform the following steps:

1. Enter 9501 in the TYPE field on DCT screen 4.
2. Enter the BASE24 product code whose processes you want to warmboot in the PRODUCT INDICATOR field. Valid values are as follows:
ATM = BASE24-atm
POS = BASE24-pos
TELLER = BASE24-teller
SWI = Switch (Interchange Interface processes)
3. Enter an FIID in the LOGO field. This FIID is the institution whose IDF record you want the processes to read during the specified warmboot.
4. Place the cursor to the left of the FI-ID field name.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the warmboot message was received by the appropriate processes.

Warmbooting a Single BASE24 Process

This procedure warmboots a single BASE24 process. When the command has been executed, the specified process is fully warmbooted. This type of warmboot can be used by all BASE24 products.

To warmboot a single BASE24 process, perform the following steps:

1. Enter 9501 in the TYPE field on DCT screen 4.
2. Enter the BASE24 product code whose process you want to warmboot in the PRODUCT INDICATOR field. Valid values are as follows:
ATM = BASE24-atm
POS = BASE24-pos
TELLER = BASE24-teller
SWI = Switch (Interchange Interface processes)
3. Enter the name of the process you want to warmboot in the PROCESS NAME field.
4. Place the cursor to the left of the PROCESS field name.

5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the warmboot message has been received by the specified process.

Warmbooting a Single BASE24 Process with a Single IDF Record

This procedure warmboots a single BASE24 process using a single institution’s record in the Institution Definition File (IDF). When the command has been executed, the specified process is partially warmbooted using the institution’s IDF record. This type of warmboot can be used by all BASE24 products.

To warmboot a single BASE24 process with a single IDF record, perform the following steps:

1. Enter 9501 in the TYPE field on DCT screen 4.
2. Enter the BASE24 product code whose process you want to warmboot in the PRODUCT INDICATOR field. Valid values are as follows:
ATM = BASE24-atm
POS = BASE24-pos
TELLER = BASE24-teller
SWI = Switch (Interchange Interface processes)
3. Enter an FIID in the LOGO field. This FIID indicates which IDF record you want the specified process to read during the warmboot.
4. Enter the name of the process you want to warmboot in the PROCESS NAME field.
5. Place the cursor to the left of the FI-ID field name.
6. Press the **F1** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the warmboot message has been received by the specified process.

Warmbooting All BASE24-pos Processes with a Single File

This procedure warmboots all BASE24-pos processes using a single file. When this command is executed, all processes contained in the warmboot notify list in the LCONF are warmbooted, rereading the specified file.

Note: This type of warmboot can be used **only** by BASE24-pos.

To warmboot all BASE24-pos processes with a single file, perform the following steps:

1. Enter 9520 in the TYPE field on DCT screen 4.
2. Enter POS in the PRODUCT INDICATOR field.
3. Enter the name of the file you want the processes to read during the 9520 warmboot in the LOGO field. Valid values are as follows:
CAPF = Card Authorization Parameters File
INR = INAS National Negative Range File (MasterCard)
BNR = BASE National Negative Range File (VISA)
4. Place the cursor to the left of the FI-ID field name.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the warmboot message has been received by the appropriate processes.

Warmbooting a Single BASE24-pos Process with a Single File

This procedure warmboots a single BASE24-pos process using a single file. When the command is executed, the specified process is partially warmbooted rereading the indicated file.

Note: This type of warmboot can be used **only** by BASE24-pos.

To warmboot a single BASE24 process with a single file using a 9520 warmboot, perform the following steps:

1. Enter 9520 in the TYPE field on DCT screen 4.
2. Enter POS in the PRODUCT INDICATOR field.

3. Enter the name of the file you want the specified process to reread during the 9520 warmboot in the LOGO field. Valid values are as follows:
CAPF = Card Authorization Parameters File
INR = INAS National Negative Range File (MasterCard)
BNR = BASE National Negative Range File (VISA)
4. Enter the name of the process you want to warmboot in the PROCESS NAME field.
5. Place the cursor to the left of the PROCESS field name.
6. Press the **F1** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the warmboot message has been received by the specified process.

3: EMT Control Commands Screen (Screen 5)

This section describes how to execute ALTER ATTRIBUTE text commands using the EMT Control Commands screen. You access this screen from the DCT Menu as screen 5. This screen allows you to warmboot, or reinitialize, a shared BASE24 extended memory table by sending an ALTER ATTRIBUTE text command to all processes that use the extended memory table. This command forces the processes to reallocate the specified shared extended memory table. Currently, this screen is used by BASE24-atm, BASE24-pos, and Interchange Interface processes.

Whenever an extended memory table is rebuilt using the Extended Memory Table Build utility, the ALTER ATTRIBUTE text command must be executed on each process that reads the table before the process will start using the new table. These processes are defined as a group for each shared extended memory table using params defined in the Logical Network Configuration File (LCONF).

Warning: To maintain optimum performance of the BASE24 system, EMT warmboot commands should not be executed when the system is processing peak volumes.

This section contains the following information about DCT screen 5:

- A brief overview of how extended memory tables are warmbooted
- A screen example and descriptions of the fields
- Definitions of the functions assigned to the function keys
- A procedure you can follow to warmboot an extended memory table

Warmbooting Extended Memory Tables

When shared extended memory tables are warmbooted, the Process Control Terminal (PCT) Server process sends an ALTER ATTRIBUTE text command to the processes that read them, causing the processes to reallocate the tables in memory.

An ALTER ATTRIBUTE text command should be issued any time a change is made to the shared extended memory table data stored on disk (i.e., the file from which the table is built) and the extended memory table is rebuilt in memory by the Extended Memory Table Build utility. The rebuilt extended memory table will not be used in processing until the table is reallocated by the processes that access the table. For detailed information on the Extended Memory Table Build utility, refer to the *BASE24-atm Transaction Processing Manual* or the *BASE24-pos Transaction Processing Manual*.

The shared extended memory tables that can be warmbooted from DCT screen 5 are identified individually on the screen using the acronym of the file from which the extended memory table is built. The processes that reallocate shared extended memory tables are identified using the symbolic names of the processes defined in params in the Logical Network Configuration File (LCONF). Information about how to set up params in the LCONF is contained in the *BASE24 Logical Network Configuration File Manual*. The LCONF EMT warmboot params are organized by shared extended memory table; there can be as many as 150 warmboot params per shared extended memory table. Each param identifies the symbolic name of a process to receive the ALTER ATTRIBUTE text command. The syntax of the param names for each shared extended memory table is *filenameEMT-WARMidentifier*, where *filename* is the acronym of the file from which the extended memory table is built and *identifier* is usually a number, but can be any unique set of characters that has not already been declared by another APCFEMT-WARMidentifier param for multiple processes in the same logical network. For example, APCFEMT-WARM01 could contain the P1A^C10001 process and APCFEMT-WARM02 could contain the P1A^SPDH02 process.

A maximum of 150 APCFEMT-WARMidentifier params can be used to identify the processes to be warmbooted from the DCT. However, each param can include any combination of wildcard characters (i.e., asterisks) and alphanumeric characters, enabling one APCFEMT-WARMidentifier param to identify several processes. For example, P1A^N* identifies all processes that start with P1A^N.

Whenever you execute an ALTER ATTRIBUTE text command for a specified BASE24 shared extended memory table from DCT screen 5, the Process Control Terminal (PCT) Server process reads the warmboot params for that shared extended memory table from the LCONF and sends ALTER ATTRIBUTE messages to the processes identified in the text for each param.

DCT Screen 5

DCT screen 5 allows you to *warmboot* selected shared BASE24 extended memory tables. When an extended memory table is warmbooted, all processes that access the extended memory table reallocate the table. To use this screen, enter a valid shared extended memory table value in the ALTER ATTRIBUTE field and press the **F1** key. DCT screen 5 is shown below, followed by field descriptions, function key descriptions, and a procedure for using the screen.

```

BASE24-ECT      EMT CONTROL COMMANDS      LLLL      YY/MM/DD  HH:MM  05 OF 46

EMT WARMBOOT
ALTER ATTRIBUTE  _____ EMT

<status messages>

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F1-ENTER          F12-HELP

```

ALTER ATTRIBUTE — The file acronym for the shared extended memory table to be warmbooted. Valid values are as follows:

APCF	= Acquirer Processing Code File extended memory table
DCCD	= Dynamic Currency Conversion Data extended memory table
ERF	= Exchange Rate File extended memory table
IDF	= Institution Definition File extended memory table
IPCF	= Issuer Processing Code File extended memory table
NIDF	= Note ID File extended memory table
RCDF	= Response Code Description File extended memory table
RCPT	= Receipt File extended memory table
STRF	= Split Transaction Routing File extended memory table
TRF	= Terminal Receipt File extended memory table

Field Length: 4 alphanumeric characters
Required: Yes
Default Value: None

<status messages> — The status of the EMT warmboot command. This area can display up to nine process names and statuses of the command.

Field Length: System protected

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 5. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Select or Validate — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid, this function highlights the field and displays an error message indicating the information that must be changed or added.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F10	Print — Sends the current image of DCT screen 5 to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 5. This Help screen lists the functions assigned to the function keys for DCT screen 5.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to a blank BASE24 Logon screen.

Warmbooting a Shared Extended Memory Table

This procedure warmboots the specified shared extended memory table. When you execute this command, all processes in the EMT warmboot notify list for the specified shared extended memory table reallocate the table.

To warmboot a shared extended memory table, perform the following steps:

1. Verify that the shared extended memory table to be warmbooted has been successfully rebuilt using the Extended Memory Table Build utility.
2. Enter a valid file acronym for the shared extended memory table in the ALTER ATTRIBUTE field on DCT screen 5.
3. Press the **F1** key to send the command to the network.
4. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–2.
5. Check the network logging facility for messages indicating that the warmboot message has been received by the appropriate processes.

ACI Worldwide, Inc.

4: ATM Terminal Commands Screen (Screen 7)

This section describes how to execute commands using the ATM Terminal Commands screen. You access this screen from the DCT Menu as screen 7. This screen and the secondary screens you can access from it allow you to display the status of ATMs and stations, open and close ATMs, and start and stop stations. These functions allow you to monitor ATM status, close an ATM for routine maintenance, and cash balance an ATM. Procedures for balancing an ATM are provided in the sections describing the ATM Balance Current Cash screen (screen 8) and the ATM Balance Standard Cash screen (screen 9), sections 5 and 6, respectively.

This section contains the following information about DCT screen 7:

- A screen example and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks
- Descriptions of status response data that is displayed on DCT screen 7
- Descriptions of the secondary screens that you can access from DCT screen 7

DCT Screen 7

DCT screen 7 allows you to display the status of ATMs and stations, open and close ATMs, and start and stop stations. DCT screen 7 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT   TERMINAL COMMANDS           LLLL           YY/MM/DD  HH:MM  07 OF 46

ATM TERMID:           FIID:           REGION:           BRANCH:
STATUS:           4730 CONSOLE ID:

```

```

***** BASE24 *****
NEW PAGE:           FILE DESTINATION:           NEW LOGICAL NETWORK ID:
F2-STATUS F3-OPEN F5-CLOSE F6-STR F7-GOTO F8-STOP F9-STATUS ALL F12-HELP

```

ATM TERMID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the BASE24-atm Terminal Data files.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered, representing all financial institution identifiers.

Field Length: 1–4 alphanumeric characters
 Required Field: No
 Default Value: ****

REGION — The region in which the specified ATM is located. The region is determined by the institution identified in the FIID field, if applicable. Four asterisks (****) in this field represents all regions for the specified institution.

Field Length: 1–4 alphanumeric characters
 Required Field: No
 Default Value: ****

Note: The financial institution assigns terminals to a region and branch using fields in the BASE24-atm Terminal Data files. The value in the REGION field must match the region assigned to the terminal in the BASE24-atm Terminal Data files, unless four asterisks are entered.

BRANCH — The branch in which the specified ATM is located. The branch is determined by the institution identified in the FIID field and is a subdivision of the region entered in the REGION field. Four asterisks (****) in this field represents all branches for the specified region.

Note: The financial institution assigns terminals to a region and branch using fields in the BASE24-atm Terminal Data files. The values in the REGION and BRANCH fields must match the region and branch assigned to the terminal in the BASE24-atm Terminal Data files, unless four asterisks are entered.

Field Length: 1–4 alphanumeric characters
 Required Field: No
 Default Value: ****

STATUS — The type of terminals for which you want to display status information. Valid values are as follows:

ALL	= All terminals
BAL	= Terminals that are balanced
CLOSED	= Terminals that are closed
D910	= Diebold 910 ATM terminals
D911	= Diebold 911 ATM terminals
D911L	= Diebold 911L ATM terminals
D912	= Diebold 912 ATM terminals
D1000	= Diebold 10XX ATM terminals
D-CSP	= Diebold CashSource Plus terminals
DOC5100	= Docutel ETS 5100/5200 ATM terminals
DOWN	= Terminals that are down
FAULT	= Terminals that have one or more faults

FUJITSU	= Fujitsu ATM terminals
FUJ7	= Fujitsu 7000 terminals
I3624	= IBM 3624 ATM terminals
I473X	= IBM 4730 ATM terminals
N50	= NCR 5XXX ATM terminals
NCR-CASH	= NCR "Cash" ATM terminals
NOTRAN	= Terminals with no transactions in progress
NOT UP	= Terminals that are down, closed, or have one or more faults
OLIVETTI	= Olivetti ATM terminals
OPEN	= Terminals that are open
RT650	= Burroughs RT650 ATM terminals
TIDEL	= Tidel ATM terminals
TRAN	= Terminals with transactions in progress
TRITON	= Triton terminals
UNBAL	= Terminals that are unbalanced
UP	= Terminals that are up

Field Length: 1–8 alphanumeric characters
 Required Field: No
 Default Value: No default value

4730 CONSOLE ID — The number of the IBM 4730 ATM console unit on which to execute commands. This field is used for IBM 4730 terminals only. Valid values are as follows:

- 1 = Console 1
- 2 = Console 2

Field Length: 1 numeric character
 Required Field: No
 Default Value: No default value

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 7. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Validate — Checks selected fields on the screen for invalid entries. If an entry is invalid, this function highlights the field and displays an error message indicating the information that must be changed or added.
F2	Status — Displays status information for the specified terminal, including a list of any ATM components that are faulted. A number preceding each fault in the list indicates the number of times the fault has been reported. The status information is displayed on a Status Response screen, which overlays the lower part of DCT screen 7. This screen is described under the topic “Status of One Terminal” provided later in this section. Note: The F2 and F9 keys can give different results for the IBM 3624 ATM if the device has not yet been initialized.
F3	Open — Opens the specified terminal. Note: This function is not valid for Tidel, Triton, Diebold CashSource Plus, and NCR “Cash” dial-up ATM terminals.
F4	Station Inquiry — Displays detailed status information for the specified station. The status information is displayed on a Status Response screen, which overlays the lower part of DCT screen 7. This screen is described under the topic “Detailed Status of a Station” provided later in this section.
F5	Close — Closes the specified terminal. Note: This function is not valid for Tidel, Triton, Diebold CashSource Plus, and NCR “Cash” dial-up ATM terminals.

Key	Description
F6	Start — Starts the station for the specified terminal. Note: This function is not valid for Tidel, Triton, Diebold CashSource Plus, and NCR “Cash” dial-up ATM terminals.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F8	Stop — Stops the station for the specified terminal. Note: This function is not valid for Tidel, Triton, Diebold CashSource Plus, and NCR “Cash” dial-up ATM terminals.
F9	Status All — Displays the status of all terminals of the type entered in the STATUS field that are owned by the specified FIID, region, and branch of the financial institution. This function indicates which terminals have one or more faults, but does not display a fault list for each terminal. The status information is displayed on a Status Response screen, which overlays the lower part of DCT screen 7. This screen is described under the topic “Status of All Terminals” provided later in this section. Note: The F2 and F9 keys can give different results for the IBM 3624 ATM if the device has not yet been initialized.
F10	Print — Sends the current image of DCT screen 7 to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 7. This Help screen lists the functions assigned to the function keys for DCT screen 7.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.

Key	Description
Shift-F2	NCR 5XXX Detailed Status — Displays four screens for the specified NCR5XXX terminal. The information displayed includes the current status for all possible devices at the terminal, the hardware configuration of the specified terminal, supply status for all terminal components, and the state of the sensors at the terminal. These screens are illustrated later in this section, under the topic “Detailed Status of NCR 5XXX Terminal.”
Shift-F3	Shared BNA Status Command — Sends a "BNASTATUS" command to the ATM via the NCR Device Handler. The message "Command sent to network" appears on the screen. Based on the ATM's response to this command, the Device Handler will raise multiple EMS events indicating the status of various Bunch Note Acceptor configuration parameters.
Shift-F16	Logoff — Logs you off BASE24, which returns you to a blank BASE24 Logon screen.

Procedures

You can use DCT screen 7 to perform the following tasks:

- Display the status of one terminal
- Display the status of all terminals
- Display the detailed status of a station
- Start a station
- Open an ATM
- Close an ATM
- Stop a station
- Request the status of the Bunch Note Acceptor configuration to be displayed as EMS events

Procedures for performing these tasks are described below and on the following pages.

Displaying the Status of One Terminal

To display the status of one terminal, perform the following steps:

1. Enter a valid ATM terminal identifier in the ATM TERMID field.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the name of the region to which the ATM is assigned in the REGION field, if applicable.
4. Enter the name of the branch to which the ATM is assigned in the BRANCH field, if applicable.
5. Press the **F2** key to display the terminal status. Terminal status response information is displayed on a Status Response screen, which overlays the lower part of DCT screen 7. This response information is described later in this section, under the topic “Status of One Terminal.”

Additional detailed status screens are available for NCR 5XXX terminals by pressing the **Shift-F2** keys. These status screens are illustrated later in this section, under the topic “Detailed Status of NCR 5XXX Terminals.”

Displaying the Status of All Terminals

The **F9** key allows you to display the status of all terminals or the status of all terminals owned by a FIID or of a specified type.

To display the status of all terminals, perform the following steps:

1. Enter the identifier of the financial institution owning the ATM in the FIID field on DCT screen 7, if applicable, or set the field to four asterisks (****).
2. Enter ALL or blanks in the STATUS field if you want to display the status of all ATMs regardless of terminal type. Enter one of the following values if you want to display the status of all terminals of a specified type:

ALL	= All terminals
BAL	= Terminals that are balanced
CLOSED	= Terminals that are closed
D910	= Diebold 910 ATM terminals
D911	= Diebold 911 ATM terminals
D911L	= Diebold 911L ATM terminals
D912	= Diebold 912 ATM terminals
D1000	= Diebold 10XX ATM terminals
D-CSP	= Diebold CashSource Plus terminals
DOC5100	= Docutel ETS 5100/5200 ATM terminals
DOWN	= Terminals that are down
FAULT	= Terminals that have one or more faults
FUJITSU	= Fujitsu ATM terminals
FUJ7	= Fujitsu 7000 terminals
I3624	= IBM 3624 ATM terminals
I473X	= IBM 4730 ATM terminals
N50	= NCR 5XXX ATM terminals
NCR-CASH	= NCR "Cash" ATM terminals
NOTRAN	= Terminals with no transactions in progress
NOT UP	= Terminals that are down, closed, or have one or more faults
OLIVETTI	= Olivetti ATM terminals
OPEN	= Terminals that are open
RT650	= Burroughs RT650 ATM terminals
TIDEL	= Tidel ATM terminals
TRAN	= Terminals with transactions in progress
TRITON	= Triton terminals
UNBAL	= Terminals that are unbalanced
UP	= Terminals that are up

3. Press the **F9** key to display the terminal status. Terminal status response information is displayed on a Status Response screen, which overlays the lower part of DCT screen 7. This response information is described later in this section, under the topic “Status of All Terminals.”

Displaying the Detailed Status of a Station

To display the detailed status of a terminal station, perform the following steps:

1. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 7.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the name of the region to which the ATM is assigned in the REGION field, if applicable.
4. Enter the name of the branch to which the ATM is assigned in the BRANCH field, if applicable.
5. Press the **F4** key to display the detailed terminal station status. Terminal station status response information is displayed on a Status Response screen, which overlays the lower part of DCT screen 7. This response information is described later in this section, under the topic “Detailed Status of a Station.”

Starting a Station

Before any messages can be sent to or received from an ATM, the communications line and the ATM station must be started. Starting a station initiates polling to the ATM, which also opens the ATM. When the first station on a communications line is started, the line is also started.

To start a station, perform the following steps:

1. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 7.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the name of the region to which the ATM is assigned in the REGION field, if applicable.

4. Enter the name of the branch to which the ATM is assigned in the **BRANCH** field, if applicable.
5. Press the **F6** key to send the command to the network.
6. Verify that the message “STATION STARTED” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the station has started.

Opening an ATM

When an ATM is logically open (STATE = OPEN), it displays a welcome screen and allows customers to initiate transactions using EFT cards.

Note: Before opening or closing messages can be sent to an ATM, the station must be started and in an up status (STAT = UP). See the procedures above for starting a station.

To open an ATM, perform the following steps:

1. Enter a valid ATM terminal identifier in the **ATM TERMID** field on DCT screen 7.
2. Enter the identifier of the financial institution owning the ATM in the **FIID** field, if applicable, or enter four asterisks (****).
3. Enter the region to which the ATM is assigned in the **REGION** field, if applicable.
4. Enter the branch to which the ATM is assigned in the **BRANCH** field, if applicable.
5. Press the **F3** key to send the command to the network.
6. Verify that the message “COMMAND SENT TO NETWORK” is displayed on the screen. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the ATM is open.

Closing an ATM

When an ATM is logically closed (STATE = CLOSED), the ATM displays a “TEMPORARILY OUT OF ORDER” message and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed, and a corresponding message is sent to the network log.

To close an ATM, perform the following steps:

1. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 7.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the name of the region to which the ATM is assigned in the REGION field, if applicable.
4. Enter the name of the branch to which the ATM is assigned in the BRANCH field, if applicable.
5. Press the **F5** key to send the command to the network.
6. Verify that the message “COMMAND SENT TO NETWORK” is displayed on the screen. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the ATM is closed.

Stopping a Station

When a station is stopped, polling stops and the XPNET process considers the station to be offline. After the ATM timeout interval (usually 60 seconds) has expired, an “OUT OF SERVICE” message is displayed on the ATM screen.

If a customer transaction is in progress when you stop a station, the transaction is not completed. When the station is restarted, the transaction-in-progress is reversed. When the last station being polled on a line is stopped, the communications line is stopped.

Note: To facilitate an orderly shutdown of an ATM, close the ATM before stopping the station.

To stop a station, perform the following steps:

1. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 7.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the region to which the ATM is assigned in the REGION field, if applicable.
4. Enter the branch to which the ATM is assigned in the BRANCH field, if applicable.
5. Press the **F8** key to send the command to the network.
6. Verify that the message "STATION STOPPED" is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the station has stopped.

Requesting the Status of the Bunch Note Acceptor Configuration to be Displayed as EMS Events

To request the status of the Bunch Note Acceptor configuration to be displayed as EMS events (which is only available from an ATM running Wincor Nixdorf's firmware), perform the following steps:

1. Enter a valid ATM terminal identifier in the ATM TERMID field.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the name of the region to which the ATM is assigned in the REGION field, if applicable.
4. Enter the name of the branch to which the ATM is assigned in the BRANCH field, if applicable.
5. Press the **Shift-F3** key to send a "BNASTATUS" command to the ATM via the NCR Device Handler. The message "Command sent to network" appears on the screen.
6. Review the EMS log for the results.

Status Response Screens

Several procedures performed on DCT screen 7 request status information for stations and terminals. This status information is displayed on a Status Response screen, which overlays the lower part of DCT screen 7. The following Status Response screens are described in this subsection:

- Status of one terminal
- Status of all terminals
- Detailed status of a station

This section also describes the four Detailed Status Response screens that are displayed when you request the detailed status of an NCR 5XXX terminal.

Note: For dial-up ATMs, the status and state of a terminal displayed on Status Response screens may not accurately reflect the actual status and state of the ATM device.

Status of One Terminal Screen

The status response for one terminal is displayed when you request the status of one terminal from the Device Handler process by pressing the **F2** key. The status response screen for one terminal is shown below, followed by descriptions of its fields.

```

BASE24-DCT   TERMINAL COMMANDS          LLLL   ****   YY/MM/DD   HH:MM   07 OF 46

ATM TERMID:                FIID: ****   REGION: ****   BRANCH: ****
STATUS:                    4730 CONSOLE ID:

ATM-ID           OWNER  REGN  BRNCH TYPE  STAT  STATE  PHONE-NUMBER

*** DEVICE STATUS ***

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F2-STATUS F3-OPEN F5-CLOSE F6-STR F7-GOTO F8-STOP F9-STATUS ALL F12-HELP

```

ATM-ID — The ATM terminal identifier. This field displays the same value as the ATM TERMID field.

Field Length: System-protected

OWNER — The identifier of the financial institution (FIID) owning the ATM. This field displays the same value as the FIID field.

Field Length: System-protected

REGN — The region to which the ATM is assigned. This field displays the same value as the REGION field.

Field Length: System-protected

BRNCH — The branch to which the ATM is assigned. This field displays the same value as the BRNCH field.

Field Length: System-protected

TYPE — The ATM terminal type (e.g., D910, I3624, N50, etc.) Refer to the STATUS field previously described in this section for a list of valid types.

Field Length: System-protected

STAT — The last known physical status of the station as indicated in the BASE24-atm Terminal Data files. Valid values are as follows:

UP = Station is currently being polled.
DOWN = Station is currently offline.
HUNG = The ATM is marked as being hung. This value is valid for Olivetti
 6000 terminals only.
UNKN = The station status is unknown.

Field Length: System-protected

STATE — The logical state of the terminal. Valid values are as follows:

OPEN = Terminal is displaying a welcome screen and is ready for insertion
 of a card.
CLOSED = Terminal is displaying a “TEMPORARILY OUT OF ORDER”
 message and cannot accept an inserted card.
UNKNWN = The terminal state is unknown.

The following table shows the correlation between the STAT and STATE field values and the operator actions required to bring the ATM back into service for several possible combinations. These two fields are updated by the Device Handler process. The station status response shows similar values in the CURRENT and LOGICAL status fields. The station status is updated by the XPNET process and can be more current than the information provided in the STAT and STATE fields.

Status	State	Description
UP	OPEN	The ATM is polled (STAT = UP) and is able to perform transactions (STATE = OPEN).

Status	State	Description
UP	CLOSED	The ATM is polled (STAT = UP), but is prevented from performing transactions (STATE = CLOSED). Press the F3 key to open the ATM and bring it back into service.
DOWN	OPEN	The ATM is not polled (STAT = DOWN); the ATM remains open (STATE = OPEN). Press the F6 key to start the station and initiate polling. When polling resumes, the ATM is available to perform transactions.
DOWN	CLOSED	The ATM is not polled (STAT = DOWN); the ATM is closed and prevented from performing transactions (STATE = CLOSED). Press the F6 key to start the station and initiate polling. When polling initiates, the ATM is automatically opened.

Field Length: System-protected

PHONE-NUMBER — An emergency telephone number to call when the terminal is reporting errors. This number is maintained on BASE24-atm Terminal Data files (ATD) screen 1.

Field Length: System-protected

DEVICE STATUS — The ATM is currently reporting faults. Numbers preceding fault descriptions indicate the number of occurrences. Each terminal type has its own fault list associated with the faults it reports. Faults are reported based on flags set in the terminal control section of the record in the BASE24-atm Terminal Data files. Up to nine fault messages can be displayed on the screen.

Field Length: System-protected

Status of All Terminals

The status response screen for all terminals is displayed when you request the status of all terminals from the Device Handler process by pressing the **F9** key. If you select more terminals than can fit on one screen, press the **F9** key to see additional terminals. The status response screen for all terminals is shown below, followed by descriptions of its fields.

```

BASE24-DCT   TERMINAL COMMANDS          LLLL  ****  YY/MM/DD  HH:MM  07 OF 46

ATM TERMID:                FIID: ****    REGION: ****    BRANCH: ****
STATUS:                    4730 CONSOLE ID:

ATM-ID              OWNER  REGION  BRANCH  TYPE  STATUS  STATE  FAULT

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F2-STATUS F3-OPEN F5-CLOSE F6-STR F7-GOTO F8-STOP F9-STATUS ALL F12-HELP

```

ATM TERMID — The ATM terminal identifier. If you select more terminals than can fit on one screen, this field displays the terminal ID of the first terminal on the next page. Press the **F9** key to see additional terminals. You can also enter a specific terminal ID in this field and press the **F9** key to skip to that terminal.

Field Length: 1–16 alphanumeric characters
 Required Field: No
 Default Value: No default value

ATM-ID — The ATM terminal identifier.

Field Length: System-protected

OWNER — The identifier of the financial institution (FIID) owning the ATM. This field displays the same value as the FIID field.

Field Length: System-protected

REGION — The region in which the ATM is located. This field displays the same value as the REGION field at the top of the screen.

Field Length: System-protected

BRANCH — The branch in which the ATM is located. This field displays the same value as the BRANCH field at the top of the screen.

Field Length: System-protected

TYPE — The ATM terminal type (e.g., D910, I3624, N50, etc.) See the list of possible values provided earlier in this section in the STATUS field description for DCT screen 7.

Field Length: System-protected

STATUS — The last known physical status of the station as indicated in the BASE24-atm Terminal Data files. Valid values are as follows:

UP = Station is currently being polled.
DOWN = Station is currently offline.
HUNG = The ATM is marked as being hung. This value is valid for Olivetti
 6000 terminals only.
UNKN = The station status is unknown.

Field Length: System-protected

STATE — The logical state of the terminal. Valid values are as follows:

OPEN = Terminal is displaying a welcome screen and is ready for insertion
 of a card.
CLOSED = Terminal is displaying a “TEMPORARILY OUT OF ORDER”
 message and cannot accept an inserted card.
UNKNWN = The terminal state is unknown.

The following table shows the correlation between the STAT and STATE field values and the operator actions required to bring the ATM back into service for several possible combinations. These two fields are updated by the Device Handler process. The station status response shows similar values in the CURRENT and LOGICAL status fields. The station status is updated by the XPNET process and can be more current than the information provided in the STAT and STATE fields.

Status	State	Description
UP	OPEN	The ATM is polled (STAT = UP) and is able to perform transactions (STATE = OPEN).
UP	CLOSED	The ATM is polled (STAT = UP), but is prevented from performing transactions (STATE = CLOSED). Press the F3 key to open the ATM and bring it back into service.
DOWN	OPEN	The ATM is not polled (STAT = DOWN); the ATM remains open (STATE = OPEN). Press the F6 key to start the station and initiate polling. When polling resumes, the ATM is available to perform transactions.
DOWN	CLOSED	The ATM is not polled (STAT = DOWN); the ATM is closed and prevented from performing transactions (STATE = CLOSED). Press the F6 key to start the station and initiate polling. When polling initiates, the ATM is automatically opened.

Field Length: System-protected

FAULT — A group of three asterisks (***) in the fault column indicates that the ATM is reporting faults. You can view the error conditions that created the faults by displaying the status of that terminal. See the previous topic “Displaying the Status of One Terminal” in this section.

Field Length: System-protected

Detailed Status of a Station

The status response screen for the detailed status of a station is displayed when you request the detailed status of one terminal station from the XPNET process by pressing the **F4** key. For more information about the control settings for a station and how to change those settings, see the *NET24-XPNET Network Control Command Reference Manual*. The status response screen for the detailed status of a station is shown below, followed by field descriptions and function key definitions.

```

BASE24-DCT   TERMINAL COMMANDS           LLLL   ****   YY/MM/DD   HH:MM   07 OF 46

ATM TERMID:           FIID: ****         REGION: ****         BRANCH: ****
STATUS:               4730 CONSOLE ID:

STA. NAME             RN NAME
DEST NAME             ALT.  NAME
LINE NAME
STATUS: CURRENT      LOGICAL
QUEUE: CURRENT COUNT MAXIMUM COUNT
STATION POLLABLE     POLL ADDR          SELECT ADDR
NETMODE              START TYPE         <protocol state>
AUDIT:               INPUT              OUTPUT          BEFORE USI.
MESSAGES:            INPUT              OUTPUT          TERMINAL STATUS
FAILURES:            INPUT              OUTPUT          TERMINAL TYPE
RETRIES:             COUNT              MAXIMUM         DEVICE NUMBER
INTERVAL:            OUTPUT             REINSTATE       CONTROLLER STATION
NO. OF ERRORS        ERROR ACTION

***** BASE24 *****
NEW PAGE:             FILE DESTINATION:   NEW LOGICAL NETWORK ID:
F1-RETURN TO INITIAL SCREEN  F7-GOTO  F10-PRINT  F16-EXIT  SF16-LOGOFF

```

STA. NAME — The name of the station for which status information is displayed. This field displays the same value as the ATM TERMID field.

Field Length: System-protected

RN NAME — The name of the XPNET node on which the station resides.

DEST NAME — The name assigned in the XPNET node to the destination to which this station sends messages.

Field Length: System-protected

ALT. NAME — The name assigned in the XPNET node of the alternate destination to which this station sends messages. This field is used for BASE24-crt passthru functionality only.

Field Length: System-protected

LINE NAME — The name of the line on which the station resides.

Field Length: System-protected

STATUS

The following two fields display the status information about the station.

CURRENT — The current physical status of the station. Valid values are as follows:

- UP = Station is being polled.
- DOWN = Station is offline.
- HUNG = The ATM is marked as being hung. This value is valid for Olivetti 6000 terminals only.
- UNKN = The station status is unknown.

Field Length: System-protected

LOGICAL — The current logical status of the station. Logical status reflects the last entered command. Valid values are as follows:

- UP = The last operator action indicated the station is up.
- DOWN = The last operator action indicated the station is down.

Field Length: System-protected

QUEUE

The following two fields display information about the message queue.

CURRENT COUNT — The number of messages currently queued and waiting to be sent to the station.

Field Length: System-protected

MAXIMUM COUNT — The maximum number of messages that have been queued for the station since its maximum count was reset.

Field Length: System-protected

STATION POLLABLE — An indicator specifying whether the station can be polled. Valid values are as follows:

YES = Station is pollable.

NO = Station is not pollable.

Field Length: System-protected

POLL ADDR — The poll address of the station as assigned in the XPNET node.

Field Length: System-protected

SELECT ADDR — The select address of the station as assigned in the XPNET node.

Field Length: System-protected

NETMODE — The Netmode privilege indicator that specifies whether the station can issue inquiries or object-management commands to the XPNET process. Under XPNET 3.0 this field is no longer used and always displays “N/A.”

Field Length: System-protected

START TYPE — The initialization mode for the line on which the station resides, used for SDLC lines only. If the station does not use an SDLC line, this field displays N/A. Valid values are as follows:

SIM = Set initialization mode
SNRM = Set normal response mode

Field Length: System-protected

<protocol state> — An unlabeled field that indicates the current state of the line on which the station resides. The field name and possible values vary depending on the protocol of the line. If the station does not use a SDLC or SNA line, this field displays the value N/A. Valid field names are as follows:

SDLC: STATE
SNA: STATE

Valid values for the SDLC: STATE field are as follows:

ACTIVE = Active
CTL SIM = Control Set Initialization Mode
CTL SNRM = Control Set Normal Response Mode
CTL DISC = Control Disk Connect
INACTIVE = Inactive

Valid values for the SNA: STATE field are as follows:

STOPPED = Stopped
WAITING BIND = Waiting binding
WAITING STD IDLE = Waiting standard idle
REQ POSTED = Request posted

Field Length: System-protected

AUDIT

The following three fields display information about auditing of the station.

INPUT — Indicates whether the station is audited following conversion to the standard BASE24 message. Valid values are as follows:

ON = Input is audited.
OFF = Input is not audited.

Field Length: System-protected

OUTPUT — Indicates whether output to the station is audited. Valid values are as follows:

ON = Output is audited.
OFF = Output is not audited.

Field Length: System-protected

BEFORE USI — Indicates whether input from the station is audited prior to reaching User Station Input (USI) in the XPNET process. Valid values are as follows:

ON = Input is audited.
OFF = Input is not audited.

Field Length: System-protected

MESSAGES

The following two fields display information about the messages sent and received by the station.

INPUT — The number of station messages received by the XPNET process since the XPNET process was started or statistics were reset.

Field Length: System-protected

OUTPUT — The number of messages from the XPNET process received by the station since the XPNET process was started or the statistics were reset.

Field Length: System-protected

TERMINAL STATUS — The status of a CRT passthru terminal type, excluding NORMAL and HOST. (See the TERMINAL TYPE field description below.) This field is used for BASE24-crt passthru functionality only. If the terminal is not a CRT passthru terminal, N/A is displayed. Valid values are as follows:

BASE24 = Terminal has logged on to the BASE24 Pathway system.

HOST = Terminal has logged on to the host system.

SELECTION = Terminal has not been logged on.

Field Length: System-protected

FAILURES

The following two fields display information about message transmission failures.

INPUT — The number of message transmission failures for messages sent by the station to the XPNET process.

Field Length: System-protected

OUTPUT — The number of message transmission failures for messages sent by the XPNET process to the station.

Field Length: System-protected

TERMINAL TYPE — The CRT passthru terminal type. If the terminal is not a CRT passthru terminal, NORMAL is displayed. Valid values are as follows:

CRT = CRT passthru terminal (such as an IBM 327X-series compatible terminal used with BASE24-crt passthru functionality only)

HOST CRT = HOST CRT passthru terminal (such as a terminal on a Bisync Tributary or Bisync Point-to-Point line used with BASE24-crt passthru functionality only)

NORMAL = Any terminal not used with BASE24-crt passthru functionality

Field Length: System-protected

RETRIES

The following two fields display information about retries after an error.

COUNT — The number of retries in the current line error analysis interval.

Field Length: System-protected

MAXIMUM — The retry limit for each line error analysis interval. The retry limit is the number of times the XPNET process can attempt to send a message to the station before the action specified in the ERROR ACTION field (see below) is taken.

Field Length: System-protected

DEVICE NUMBER — The device number associated with a station.

Field Length: System-protected

INTERVAL

The following two fields display information about the station's intervals.

OUTPUT — The output interval, in seconds, is the amount of time between message transmissions to the station.

Field Length: System-protected

REINSTATE — The reinstate interval, in seconds, to be used when the ERROR ACTION field (see below) indicates that the station should be reinstated. The reinstate interval is the amount of time between the suspension of the station by the XPNET process and an attempt to reinstate it.

Field Length: System-protected

CONTROLLER STATION — The controller station number, if the station is a tributary station in a group. If the station is not a tributary, this field contains blanks.

Field Length: System-protected

NO. OF ERRORS — The cumulative error count since the XPNET process was started or the statistics were reset.

Field Length: System-protected

ERROR ACTION — The action to be taken when station errors are detected by the system. Valid values are as follows:

MARK DOWN = Indicates that attempts to communicate with the station cease. The station remains down until it is started using the START STATION procedure.

REINSTATE AFTER = Indicates that when the station retry maximum is reached, the XPNET process places the station in suspended status for the specified interval of time. Upon expiration of the suspension period, the station is reinstated under the default error action. If the station's retry maximum is reached again, the station is marked down indefinitely.

IGNORE ERRORS = Indicates that when the station retry maximum is reached, the XPNET process resets the station's retry count to zero. Attempts to communicate with the station continue normally.

REINSTATE EVERY = Indicates that when the station retry maximum is reached, the XPNET process places the station in suspended status for the specified interval of time. The station is reinstated without altering error action upon expiration of the suspension period, which prevents it from being marked down indefinitely.

Field Length: System-protected

Function Keys

The following table shows the functions assigned to the function keys on the Status Response screen when the detailed status response information for a station is displayed. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Return to Initial Screen — Displays DCT screen 7, with the key fields containing the last information entered, but no other data displayed.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F10	Print — Sends the image of the detailed status information to the spooler location specified on the BASE24 Logon screen.
F16	Exit or Goto File — Returns you to the DCT Menu, if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION fields. If you enter values in these fields, this function displays the name of the specified file in the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to a BASE24 Logon screen.

Detailed Status of NCR 5XXX Terminals

The following NCR Detailed Status Response screens are displayed when you press the **Shift-F2** keys from DCT screens 7, 8, or 9, and you have entered the identifier of an NCR 5XXX terminal in the ATM TERMID field. Certain fields on these screens are specific to an NCR 5XXX ATM that is equipped with the Document Processing Module (DPM) or the Check Cash Deposit Module (CCDM) and is using the BASE24-atm self-service banking (SSB) add-on product. For NCR terminals that are not using the SSB module these fields are blank.

All of the information for hardware fitness, hardware configuration, supplies status, and alarm sensors is defined by the terminal vendor and is kept in the device-dependent data portion of the BASE24-atm Terminal Data files. The BASE24-atm NCR 5XXX Device Handler process keeps the information in the BASE24-atm Terminal Data files updated with data from solicited and unsolicited messages received from the terminal.

For complete information about the NCR 5XXX status fields, refer to the ***NCR NDC+ Programmer's Reference Manual***.

To display the detailed status of an NCR 5XXX ATM, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMID field on DCT screen 7, 8, or 9.
2. Enter the identifier of the financial institution owning the NCR 5XXX ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the name of the region to which the ATM is assigned in the REGION field, if applicable.
4. Enter the name of the branch to which the ATM is assigned in the BRANCH field, if applicable.
5. Press the **Shift-F2** keys to display detail screens like those shown on the following pages.

Hardware Fitness Screen (Screen 1)

The Hardware Fitness screen (screen 1) shown below provides the status, or hardware fitness, for all possible devices at the ATM including those devices having a status of NO ERROR. Valid fitness codes are as follows:

- 0 = No error condition
- 1 = Routine error (temporary fault such as diverted bill, card inserted incorrectly, or deposit envelope not deposited in time)
- 2 = Warning condition (device requires noncritical service)
- 3 = Suspend (device temporarily removed from service for five minutes)
- 4 = Fatal error (device inoperative until serviced)

```

BASE24-DCT   HARDWARE FITNESS           LLLL  ****  YY/MM/DD  HH:MM  01 OF 04

|-----|
|          DEVICE          | | FITNESS | |          FITNESS          |
|-----| |-----| |-----|
|*****| |*****| |*****|
| TIME OF DAY CLOCK        | |          | | SECURITY CAMERA        |
| HIGH ORDER COMMUNICATIONS | |          | | DOOR ACCESS            |
| SYSTEM FLEX DISC         | |          | | CASSETTE TYPE 1        |
| MAGNETIC CARD READER/WRITER | |          | | CASSETTE TYPE 2        |
| CASH HANDLER             | |          | | CASSETTE TYPE 3        |
| DEPOSITORY               | |          | | CASSETTE TYPE 4        |
| RECEIPT PRINTER          | |          | | STATEMENT PRINTER      |
| JOURNAL PRINTER          | |          | | COIN DISPENSER        |
| VALIDATION PRINTER       | |          | | DPM CHECK DEPOSITORY BINS |
| VANDAL GUARD             | |          | | DPM CHECK DEPOSITORY DEVICES |
| NIGHT SAFE DEPOSITORY     | |          | | ENVELOPE DISPENSER     |
| DIGITAL AUDIO SERVICE    | |          | | CPM CHECK PROCESSING MODULE |
| ENCRYPTOR                 | |          | | BNA BUNCH NOTE ACCEPTOR |
|*****| |*****| |*****|
| FITNESS = 0 (NO ERROR)    | | 1 (ROUTINE ERROR)    | | 2 (WARNING CONDITION)    |
|                          | | 3 (SUSPEND. ATM IS SUSPENDED) | | 4 (FATAL ERROR)        |
|*****| |*****| |*****|
|                          | | BASE24          | |*****|
| NEW PAGE:                | | FILE DESTINATION:    | | NEW LOGICAL NETWORK ID:    |
| F1-RETURN TO PAGE1 F7-GOTO F9-NEXT PAGE F10-PRINT F16-EXIT SF16-LOGOFF

```

Press the **F9** key to move to the next page of detailed status information, or press the **F16** key to return to DCT screen 7, 8, or 9.

Hardware Configuration Screen (Screen 2)

The Hardware Configuration screen (screen 2) shown below displays the hardware configuration of the specified ATM. Refer to the *NCR NDC+ Programmer's Reference Manual* for descriptions of each field.

```

BASE24-DCT   HARDWARE CONFIG           LLLL   ****   YY/MM/DD   HH:MM   02 OF 04

|          DEVICE          | CONFIG |          CONFIG          | | | |
|*****|*****|*****|*****|*****|*****|
| PRODUCT CLASS            |        | TAMPER INDICATING BINS   |
| MAGNETIC CARD READER/WRITER |      | OPERATOR KEYBOARD       |
| CASH HANDLER             |      | CARD HOLDER DISPLAY/VOICE |
| DEPOSITORY               |      | STATEMENT PRINTER       |
| RECEIPT PRINTER          |      | COIN DISPENSER          |
| JOURNAL PRINTER          |      | DPM VARIANT             |
| VALIDATON PRINTER        |      | DPM POCKET / CPM BIN COUNT |
| VANDAL GUARD             |      | CDM TAMPER INDICATORS    |
| NIGHT SAFE DEPOSITORY    |      | DPM TAMPER INDICATORS    |
| ENCRYPTOR                 |      | ENVELOPE DISPENSER       |
| SECURITY CAMERA           |      | CPM CHECK PROCESSING MODULE |
| DIGITAL AUDIO SERVICE    |      | BNA BUNCH NOTE ACCEPTOR  |
| DOOR ACCESS              |      | RESERVED                 |
|*****|*****|*****|*****|*****|*****|

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-RETURN TO PAGE1 F7-GOTO F9-NEXT PAGE F10-PRINT F16-EXIT SF16-LOGOFF

```

Press the **F9** key to move to the next page of detailed status information, press the **F1** key to return to the Hardware Fitness screen, or press the **F16** key to return to DCT screen 7, 8, or 9.

Supplies Status Screen (Screen 3)

The Supplies Status screen (screen 3) shown below displays the supply status for all terminal components. Refer to the *NCR NDC+ Programmer's Reference Manual* for descriptions of each field.

```

BASE24-DCT    SUPPLIES STATUS                LLLL  ****  YY/MM/DD  HH:MM  03 OF 04

|          DEVICE          | SUPPLIES |          SUPPLIES |
|*****|*****|*****|
| CARD CAPTURE BIN        |          | COIN DISPENSER/CDM HOPR 1 |
| CASH HANDLER REJECT BIN |          | CHECK BIN 1/CCDM RETRCT BIN |
| DEPOSIT BIN             |          | CHECK BIN 2/CCDM CASSETTE 1 |
| RECEIPT PAPER           |          | CHECK BIN 3/CCDM CASSETTE 2 |
| JOURNAL PAPER           |          | CDM HOPR 2                |
| NIGHT SAFE DEPOSITORY    |          | CDM HOPR 3                |
| TYPE 1 CURRENCY CASSETTE |          | CDM HOPR 4                |
| TYPE 2 CURRENCY CASSETTE |          | DPM RIBBON/INKWELLS       |
| TYPE 3 CURRENCY CASSETTE |          | DPM REJECT/ENVELOPE BIN   |
| TYPE 4 CURRENCY CASSETTE |          | DPM IMAGE ARCHIVE AREA    |
| STATEMENT PAPER         |          | BNA BUNCH NOTE ACCEPTOR   |
| STATEMENT RIBBON        |          | CPM CHECK PROCESSING MODULE |
|*****|*****|*****|

SUPPLIES = 0 (NOT CONFIGURED),      1 (GOOD STATE),      2 (MEDIA LOW),
              3 (MEDIA OUT),        4 (OVERFILL)
***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F1-RETURN TO PAGE1 F7-GOTO F9-NEXT PAGE F10-PRINT F16-EXIT SF16-LOGOFF

```

Press the **F9** key to move to the next page of detailed status information, press the **F1** key to return to the Hardware Fitness screen, or press the **F16** key to return to DCT screen 7, 8, or 9.

Alarm Sensors Screen (Screen 4)

The Alarm Sensors screen (screen 4) shown below displays the state of the sensors at the terminal. Refer to the *NCR NDC+ Programmer's Reference Manual* for descriptions of each field.

```

BASE24-DCT   ALARM SENSORS                LLLL  ****  YY/MM/DD  HH:MM  04 OF 04

|          DEVICE          | SENSORS |          SENSORS |
|*****|*****|*****|
| SUPERVISOR MODE         |         | 56XX COIN DISPENSER HOPR 1 |
| VIBRATION SENSOR        |         | 56XX COIN DISPENSER HOPR 2 |
| DOOR CONTACT SENSOR     |         | 56XX COIN DISPENSER HOPR 3 |
| SILENT SIGNAL SENSOR    |         | 56XX COIN DISPENSER HOPR 4 |
| ELECTRONIC ENCLOSURE SENSOR |        | 56XX DPM DOCUMENT POCKETS  |
| 5081 DEPOSIT BIN        |         | CCDM SHUTTER                |
| 5070 BIN OR 5081 CARD BIN |        | CCDM STACKER                |
| CURRENCY REJECT BIN     |         | CCDM RETRACT BIN            |
| CURRENCY CASSETTE IN POS 1 |        | CCDM CASSETTE 1             |
| CURRENCY CASSETTE IN POS 2 |        | CCDM CASSETTE 2             |
| CURRENCY CASSETTE IN POS 3 |        | CCDM INPUT POSITION          |
| CURRENCY CASSETTE IN POS 4 |        | CCDM OUTPUT POSITION         |
| 56XX COIN DISPENSER MODULE |        | RESERVED                    |
|*****|*****|*****|

```

Press the **F1** key to return to the Hardware Fitness screen, or press the **F16** key to return to DCT screen 7, 8, or 9.

5: ATM Balance Current Cash Screen (Screen 8)

This section describes how to execute commands using the Balance Current Cash screen. You access this screen from the DCT Menu as screen 8. This screen allows you to balance ATM terminals that use loose bill or noncurrency item (e.g., traveler checks or coupons) hopper dispensers, regardless of terminal type. The Balance Current Cash method is used when you balance ATMs from this screen. From this screen, you can also increase or decrease the amount of cash, the amount of noncurrency items with a cash value (e.g., traveler checks or postage stamps), or the number of noncurrency items with no value (e.g., coupons) in the hoppers. ATMs that use cartridge cash or noncurrency item hopper dispensers are balanced using the Balance Standard Cash method from the Balance Standard Cash screen (DCT screen 9), which is described in section 6.

The Balance, Increase, or Decrease functions in the DCT make changes to the cash, cash value, or nonvalue item totals stored in the BASE24-atm Terminal Data files record for each ATM. Balancing with current cash involves several aspects of ATM control, including checking the amounts or counts in the hoppers, increasing or decreasing these amounts or counts as necessary, and determining the current cash, cash value, or nonvalue amount or count in the ATM. The current cash amount, cash value amount, or nonvalue count can vary each time the ATM is balanced. The ATM must be balanced to these amounts or counts. Balancing can also be done at the ATM itself with an administrative card. The DCT screens are not used in this case. The method used to balance the ATM is determined by your institution's policies and procedures.

Note: Balancing an ATM during the balancing and cutover window automatically cuts over the ATM.

Throughout this section, the term *noncurrency* refers to any item dispensed from an ATM other than cash or coins. Noncurrency items that have a cash value are referred to as *cash value* items. Noncurrency items with no cash value are referred to as *nonvalue* items.

This section contains the following information for DCT screen 8:

- A screen example and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks
- Descriptions of the Subtotals screens that you can access from DCT screen 8

DCT Screen 8

DCT screen 8 allows you to balance ATM terminals using the Balance Current Cash method. Three of the fields on this screen (SUBTOTALS, BALANCE, and COUNTS) are commands that can be executed. To use these fields, place the cursor to the left of the field name and press the **F1** key. DCT screen 8 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT  BAL CURRENT CASH          LLLL          YY/MM/DD  HH:MM  08 OF 46
ATM TERMID:                FIID:        REGION:        BRANCH:
 _ SUBTOTALS  _ BALANCE    _ COUNTS    STATUS:        4730 INDICATOR:
HOPPER NUM AMT          HOPPER NUM AMT          HOPPER NUM AMT
1                      0          2                      0          3                      0
4                      0          5                      0          6                      0
7                      0          8                      0

```

```

***** BASE24 *****
NEW PAGE:                FILE DESTINATION:        NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F4-INCR F5-CLOSE F6-DECR F9-STATUS ALL F12-HELP

```

ATM TERMID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the BASE24-atm Terminal Data files.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered, representing all financial institution identifiers.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

REGION — The region in which the specified ATM is located. The region is determined by the institution identified in the FIID field, if applicable. Four asterisks (****) in this field represent all regions for the specified institution.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

Note: The financial institution assigns terminals to a region and branch using fields in the BASE24-atm Terminal Data files. The value in the REGION field must match the region assigned to the terminal in the BASE24-atm Terminal Data files, unless four asterisks are entered.

BRANCH — The branch in which the specified ATM is located. The branch is determined by the institution identified in the FIID field and is a subdivision of the region entered in the REGION field. Four asterisks (****) in this field represent all branches for the specified region.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

Note: The financial institution assigns terminals to a region and branch using fields in the BASE24-atm Terminal Data files. The value in the BRANCH field must match the branch assigned to the terminal in the BASE24-atm Terminal Data files, unless four asterisks are entered.

SUBTOTALS — Displays a screen with a subtotal for each hopper (1–6 or 1–8) for the specified ATM. This screen is described later in this section, under the topic “Subtotals Screens.” Place the cursor to the left of the field name and press the **F1** key to display this screen.

Field Length: Cursor placement only

BALANCE — Balances the specified ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

COUNTS — Obtains the currency acceptor’s counts from the specified ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task. This process is valid for Diebold ATMs which are equipped with a currency acceptor device or for ATMs running Wincor Nixdorf’s firmware which are equipped with a BNA (Bulk Note Acceptor).

Field Length: Cursor placement only

STATUS — The type of terminals for which you want to display status information. Valid values are as follows:

ALL	= All terminals
BAL	= Terminals that are balanced
CLOSED	= Terminals that are closed
D910	= Diebold 910 ATM terminals
D911	= Diebold 911 ATM terminals
D911L	= Diebold 911L ATM terminals
D912	= Diebold 912 ATM terminals
D1000	= Diebold 10XX ATM terminals
D-CSP	= Diebold CashSource Plus terminals
DOC5100	= Docutel ETS 5100/5200 ATM terminals
DOWN	= Terminals that are down
FAULT	= Terminals that have one or more faults
FUJITSU	= Fujitsu ATM terminals
FUJ7	= Fujitsu 7000 terminals
I3624	= IBM 3624 ATM terminals
I473X	= IBM 4730 ATM terminals
N50	= NCR 5XXX ATM terminals
NCR-CASH	= NCR “Cash” ATM terminals
NOTRAN	= Terminals with no transactions in progress

NOT UP = Terminals that are down, closed, or have one or more faults
OLIVETTI = Olivetti ATM terminals
OPEN = Terminals that are open
RT650 = Burroughs RT650 ATM terminals
TIDEL = Tidel ATM terminals
TRAN = Terminals with transactions in progress
TRITON = Triton terminals
UNBAL = Terminals that are unbalanced
UP = Terminals that are up

Field Length: 1–8 alphanumeric characters
Required Field: No
Default Value: No default value

4730 INDICATOR — The number of the IBM 4730 ATM console unit on which to execute commands. This field is used for IBM 4730 terminals only. Valid values are as follows:

1 = Console 1
2 = Console 2

Field Length: 1 numeric character
Required Field: No
Default Value: No default value

HOPPER NUM — The hopper number that corresponds with the AMT field below. Valid display values are 1–8.

Field Length: System-protected

AMT — The amount of cash, the amount of cash value items, or the number of nonvalue items to be added to or subtracted from each hopper by the cash increase or cash decrease functions. Note that this amount or count must be a whole number; no decimal places can be entered. Decimal places are implied, however, when a hopper contains coins or a cash value item, with the exception of traveler checks. Because bills and traveler checks are issued in whole denominations, decimal places are not implied. The amount entered in this field must be evenly divisible by the bill value of the cash or cash value item.

For example, to increase bills or traveler checks in a hopper by \$100.00 (U.S.), you would enter 100, not 10000 or 100.00. To increase a hopper containing coins or a cash value item (e.g., postage stamps), the amount has implied decimals for the

currency configured for the hopper in the BASE24-atm Terminal Data files. For example, if the hopper uses U.S. currency, a value of 100 in this field would increase the hopper by \$1.00, while a value of 640 would increase the hopper by \$6.40

When using this field to increase or decrease the number of nonvalue items (e.g., coupons), enter the number of items to be added to or subtracted from the hopper. In this case, no decimal places are implied. For example, to increase the number of coupons in a hopper by 1000, you would enter 1000, not 100000 or 1000.00.

Field Length: 9 numeric characters
Required Field: No
Default Value: No default value

Function Keys

The functions assigned to the function keys for DCT screen 8 are shown in the following table. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Select or Validate — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command (SUBTOTALS, BALANCE, or COUNTS). If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added. When you use this key to request subtotals and the command is successfully executed, subtotal information is displayed on a Subtotals screen, which overlays the lower part of DCT screen 8. This information is described later in this section under the topic “Subtotals Screens.”
F2	Status — Displays status information for the specified terminal, including a list of any ATM components that are faulted. A number preceding each fault in the list indicates the number of times the fault has been reported. The Status Response screen displayed when this key is pressed is described under the topic “Status of One Terminal” in section 4. Note: The F2 and F9 keys can give different results for the IBM 3624 ATM if the device has not yet been initialized.
F3	Open — Opens the specified terminal. Note: This function is not valid for Tidel, Triton, Diebold CashSource Plus, and NCR “Cash” dial-up ATM terminals.
F4	Increase Cash Using Current Cash — Increases the amount of cash, the amount of cash value, or the number of nonvalue items by the value specified in the AMT field of each respective hopper.
F5	Close — Closes the specified terminal. Note: This function is not valid for Tidel, Triton, Diebold CashSource Plus, and NCR “Cash” dial-up ATM terminals.

Key	Description
F6	Decrease Cash Using Current Cash — Decreases the amount of cash, the amount of cash value, or the number of nonvalue items by the value specified in the AMT field of each respective hopper.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F9	Status All — Displays the status of all terminals of the type entered in the STATUS field that are owned by the specified FIID, region, and branch of the financial institution. This function indicates which terminals have one or more faults, but does not display a fault list for each terminal. The Status Response screen displayed when this key is pressed is described under the topic “Status of All Terminals” in section 4. Note: The F2 and F9 keys can give different results for the IBM 3624 ATM if the device has not yet been initialized.
F10	Print — Sends the current image of DCT screen 8 to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 8. This Help screen lists the functions assigned to the function keys for DCT screen 8.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F2	NCR 5XXX Detailed Status — Displays four screens for the specified NCR 5XXX terminal. The information displayed includes the current status for all possible devices at the terminal, the hardware configuration of the specified terminal, supply status for all terminal components, and the state of the sensors at the terminal. These screens are illustrated under the topic “Detailed Status of NCR 5XXX Terminals” in section 4.

Key	Description
Shift-F3	Subtotals - Page 2 — Displays additional subtotals information for hoppers 7 and 8. NCR 5XXX devices with the SSB add-on module have four bill hoppers and four coin hoppers. This screen is described later in this section, under the topic “NCR 5XXX Current Cash Subtotals.”
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 8 to perform the following tasks:

- Display subtotals for each hopper
- Increase cash, cash value, or the number of nonvalue items in the hoppers
- Decrease cash, cash value, or the number of nonvalue items in the hoppers
- Balance with current cash, cash value, and nonvalue items
- Obtain the currency acceptor's counts from the ATM (only applies to Diebold ATMs equipped with a currency acceptor or for ATMs running Wincor Nixdorf's firmware equipped with a BNA (Bulk Note Acceptor))

Procedures for performing these tasks are described below and on the following pages.

Like DCT screens 7 and 9, you can also perform the following tasks on this screen.

- Display the status of one terminal
- Display the status of all terminals
- Open an ATM
- Close an ATM

Refer to section 4 for information about these procedures.

Displaying Subtotals for Each Hopper

Displaying subtotals provides information necessary for proper ATM balancing, such as the starting and ending balances of each hopper and the changes made to the hoppers. The Subtotals screen also includes information about the contents of the ATM, such as the number of envelopes deposited and cards captured. This screen is described later in this section, under the topic "Subtotals Screens." Two variations of the Subtotals screen for specific terminal types (i.e., Diebold 10XX/478X and NCR 5XXX with the SSB add-on module) are described under the topics "Diebold 10XX/478X Current Cash Subtotals" and "NCR 5XXX Current Cash Subtotals," respectively.

Subtotals can be displayed at any time while performing the balancing procedure described below. You can print the subtotals information (using the **F10** key) at several points during the balancing procedure as a physical record of the successful

completion of a task. The subtotals information duplicates the information on BASE24-atm Terminal Data files (ATD) screens 4 and 5, so you do not have to display the ATD files maintenance screens to check the current hopper totals.

To display subtotals, perform the following steps:

1. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 8.
2. Place the cursor to the left of the SUBTOTALS field name.
3. Press the **F1** key to display the subtotals. The subtotals information is displayed on the Subtotals screen, which overlays the lower part of DCT screen 8. The Subtotals screen varies according to the type of ATM specified. When you perform any other function while subtotals are displayed, DCT screen 8 replaces the Subtotals screen.
 - For all ATMs other than a Diebold 10XX/478X with the SSB add-on module, the Subtotals screen is described under the topic “ATM Current Cash Subtotals.”
 - If the ATM is a Diebold 10XX/478X with the SSB add-on module, the Subtotals screen is described under the topic “Diebold 10XX/478X Current Cash Subtotals.”
 - For an NCR 5XXX ATM with the SSB add-on module, an additional Subtotals screen is used to view the contents of the last two hoppers. Press the **Shift-F3** keys from DCT screen 8 or from anywhere on the first Subtotals screen to view the second screen. This additional Subtotals screen is described under the topic “NCR 5XXX Current Cash Subtotals.” To return to the first Subtotals screen, place the cursor in the SUBTOTALS field and press the **F1** key.

The function keys for Subtotals screens are the same as for DCT screen 8.

Increasing Cash, Cash Value, or the Number of Nonvalue Items in the Hoppers

You can increase the amount of cash, cash value, or the number of nonvalue items in any hopper in a specified ATM. Perform this procedure when you have been notified by authorized financial institution personnel that cash or noncurrency items have been physically added to hoppers in the ATM.

To increase cash, cash value, or the number of nonvalue items in a specified ATM, perform the following steps:

1. Close the ATM by performing the following steps.
 - a. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 8.
 - b. Press the **F5** key to send the command to the network.
 - c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed several times. If it is not displayed, repeat steps 1a–b.
 - d. Check the network logging facility for messages indicating that the ATM has been closed for administrative processing.
2. Increase cash, cash value, or the number of nonvalue items in the ATM by performing the following steps.
 - a. Press the **Tab** key to position the cursor on the AMT fields and enter the amount of cash, cash value, or the number of nonvalue items that has been added to each hopper. You can increase cash, cash value, or the number of nonvalue items in more than one hopper at a time.
 - b. Press the **F4** key to send the command to the network.
 - c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed several times.
 - d. Check the screen to make sure that the message “CASH INCREASE COMPLETED” is displayed. If either or both messages are not displayed, repeat steps 2a–2b.
3. Open the ATM by performing the following steps.
 - a. Press the **F3** key to send the command to the network.
 - b. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat step 3a.
 - c. Check the network logging facility for messages indicating that the ATM has been opened.

Decreasing Cash, Cash Value, or the Number of Nonvalue Items in the Hoppers

You can decrease the amount of cash, cash value, or the number of nonvalue items in any hopper in a specified ATM. Perform these steps when you have been notified by authorized financial institution personnel that cash or noncurrency items have been physically removed from hoppers in the ATM. For instance, an ATM may be down for an extended period of time, and cash or noncurrency items have been removed for security purposes.

Note: You cannot decrease cash in IBM 3624 ATMs.

To decrease cash, cash value, or the number of nonvalue items in a specified ATM, perform the following steps:

1. Close the ATM by performing the following steps.
 - a. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 8.
 - b. Press the **F5** key to send the command to the network.
 - c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed several times. If it is not displayed, repeat steps 1a–b.
 - d. Check the network logging facility for messages indicating that the ATM has been closed for administrative processing.
2. Decrease cash, cash value, or the number of nonvalue items in the ATM hopper by performing the following steps.
 - a. Press the **Tab** key to position the cursor on the AMT fields and enter the amount of cash, cash value, or the number of nonvalue items that have been removed from each hopper. You can decrease cash, cash value, or the number of nonvalue items in more than one hopper at a time.
 - b. Press the **F6** key to send the command to the network.
 - c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed.
 - d. Check the screen to make sure that the message “CASH DECREASE COMPLETED” is displayed. If either or both messages are not displayed, repeat steps 2a–b.

3. Open the ATM by performing the following steps.
 - a. Press the **F3** key to send the command to the network.
 - b. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed several times. If it is not displayed, repeat step 3a.
 - c. Check the network logging facility for messages indicating that the ATM has been opened.

Balancing with Current Cash, Cash Value, and Nonvalue Items

To balance a specified ATM using current cash, cash value, and nonvalue items, perform the following steps:

1. Close the ATM by performing the following steps.
 - a. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 8.
 - b. Press the **F5** key to send the command to the network.
 - c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed several times. If it is not displayed, repeat steps 1a–b.
 - d. Check the network logging facility for messages indicating that the ATM has been closed for administrative processing.
2. Display subtotals for the ATM by performing the following steps. The subtotals information is described later in this section.
 - a. Place the cursor to the left of the SUBTOTALS field name.
 - b. Press the **F1** key to display the Subtotals screen. The Subtotals screen is described under the topics “ATM Current Cash Subtotals,” “Diebold 10XX/478X Current Cash Subtotals,” or “NCR 5XXX Current Cash Subtotals” provided later in this section. If the ATM terminal is an NCR 5XXX with the SSB add-on module, you must also press the **Shift-F3** key to display the second Subtotals screen, which is described under the topic “NCR 5XXX Current Cash Subtotals.”
 - c. Check the subtotals for each hopper displayed on the screen.

Note: If the Diebold ATM is equipped with a currency acceptor or if the ATM running Wincor Nixdorf's firmware is equipped with a BNA (Bulk Note Acceptor), perform the steps listed under "Retrieving the BNA (Bulk Note Acceptor) Counts from the ATM" before continuing with step 3.

3. Balance the ATM by performing the following steps.

- a. Place the cursor to the left of the BALANCE field name.
- b. Press the **F1** key to send the command to the network.

If the Diebold ATM is equipped with a currency acceptor or if the ATM running Wincor Nixdorf's firmware is equipped with a BNA (Bulk Note Acceptor), and you have yet to retrieve the counts from the ATM, the message "COMMAND IGNORED, COUNTS MUST FIRST BE OBTAINED" will appear.

You must perform the steps listed under "Retrieving the BNA (Bulk Note Acceptor) Counts from the ATM," which is described below, before the ATM can be balanced.

- c. Check the screen to make sure that the message "COMMAND SENT TO NETWORK" is displayed several times.
- d. Check the screen to make sure that the message "ATM BALANCE SUCCESSFUL" is displayed. If either or both messages are not displayed, repeat steps 2–3b.

4. Open the ATM by performing the following steps.

- a. Press the **F3** key to send the command to the network.
- b. Check the screen to make sure that the message "COMMAND SENT TO NETWORK" is displayed. If it is not displayed, repeat step 4a.
- c. Check the network logging facility for messages indicating that the ATM has been opened.

Retrieving the BNA Counts from the ATM

To retrieve the BNA (Bulk Note Acceptor) counts from a Diebold ATM equipped with a currency acceptor or from an ATM running Wincor Nixdorf's firmware equipped with a BNA, perform the following steps:

1. If the ATM is not already closed, close the ATM by performing the following steps.
 - a. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 8.
 - b. Press the **F5** key to send the command to the network.
 - c. Check the screen to make sure that the message "COMMAND SENT TO NETWORK" appears. If it does not appear, repeat steps 1a–b.
 - d. Check the network logging facility for messages indicating that the ATM has been shut down.
2. Retrieve the BNA counts by performing the following steps.
 - a. Place the cursor to the left of the COUNTS field name.
 - b. Press the **F1** key to send the command to the network.

If the ATM is not a Diebold ATM equipped with a currency acceptor or an ATM running Wincor Nixdorf's firmware equipped with a BNA (Bulk Note Acceptor), then either the message "COMMAND IGNORED, ATM DOES NOT HAVE BNA" or the message "COUNTS COMMAND NOT APPLICABLE FOR THIS DEVICE TYPE" will appear.

- c. Check the screen to make sure that the message "COMMAND SENT TO NETWORK" appears.

Subtotals Screens

The Subtotals screen is displayed when you place the cursor next to the SUBTOTALS field on DCT screen 8 and press the **F1** key. The Subtotals screen overlays the lower part of DCT screen 8. The format of the Subtotals screen varies according to the type of ATM specified. The following Subtotals screen formats are described in this subsection:

- ATM Current Cash Subtotals
- Diebold 10XX/478X Current Cash Subtotals
- NCR 5XXX Current Cash Subtotals

Note: Data in the BASE24-atm Terminal Data files is actually stored in different files on disk, depending on the type of ATM terminal for the BASE24-atm Terminal Data files record. For Diebold 10XX and NCR 5XXX terminals, the data displayed on Subtotals screens is retrieved from the ATM Terminal Data—Dynamic File (ATDD1). For all other terminal types, the data is retrieved from the device-dependent data in the Terminal Data File (TDF). The data names in this section use the disk file names from which the data displayed is obtained.

ATM Current Cash Subtotals Screen

The ATM Current Cash Subtotals screen is displayed when you request subtotals for any ATM other than a Diebold 10XX with the SSB add-on module. The screen displays the current contents of each hopper in the BASE24-atm Terminal Data files. See the topic “Displaying Subtotals for Each Hopper” earlier in this section for information on how to access this screen.

The ATM Current Cash Subtotals screen is shown below, followed by descriptions of its fields.

```

BASE24-DCT  BAL CURRENT CASH          LLLL  ****  YY/MM/DD  HH:MM  08 OF 46
ATM TERMID:                FIID: ****  REGION: ****  BRANCH: ****
 _ SUBTOTALS  _ BALANCE  _ COUNTS  STATUS:  4730 INDICATOR:
HOPPER NUM AMT          HOPPER NUM AMT          HOPPER NUM AMT
1                0      2                0      3                0
4                0      5                0      6                0
7                0      8                0
CCODE:  840  <type> (HOP 1)  840  <type> (HOP 2)  840  <type> (HOP 3)
START:                0                0                0
INCR:                0                0                0
DECR:                0                0                0
OUT:                0                0                0
END:                0                0                0
CCODE:  840  <type> (HOP 4)  840  <type> (HOP 5)  840  <type> (HOP 6)
START:                0                0                0
INCR:                0                0                0
DECR:                0                0                0
OUT:                0                0                0
END:                0                0                0
NUM OF ENV: 00000000  AMT:                0.00  CAPTURED CARDS: 0000
***** BASE24 *****
NEW PAGE:                FILE DESTINATION:                NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F4-INCR F5-CLOSE F6-DECR F9-STATUS ALL F12-HELP

```

The following seven fields are displayed for each of the hoppers. The hoppers are filled with the smallest whole bill denomination in the first hopper, then the next smallest bill denomination in the second hopper, and so on. Coins are placed in the next hopper after the highest whole bill denomination.

For hoppers containing cash or nonvalue items, amounts or counts are displayed as whole numbers with no decimal places. For hoppers containing coins or cash value items, amounts are displayed with decimal places.

CCODE — The currency code for the type of currency in the hopper. This code is included for each hopper because certain ATMs allow currency from two different countries. Valid values are listed in the ISO 4217 standard, *Codes for the Representation of Currencies and Funds*.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CRNCY-CDE
 TDF.HOPR.CRNCY-CDE

<type> — A code describing the contents of each hopper. Valid values are as follows:

CASH = Paper currency
COINS = Coin currency
TCHK = Traveler checks
NC03 = Noncurrency dispense item
NC04 = Noncurrency dispense item
NC05 = Noncurrency dispense item
NC06 = Noncurrency dispense item
NC07 = Noncurrency dispense item
NC08 = Noncurrency dispense item
NC09 = Noncurrency dispense item
NC10 = Noncurrency dispense item

The values TCHK and NC03 through NC10 represent different noncurrency dispense items such as traveler checks, postage stamps, public passes, event tickets, or coupons.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CONTENTS
TDF.HOPR.CONTENTS

START — The amount of cash or cash value items, or the number of nonvalue items in the hopper at the start of the current balancing period (the balance procedure is described above under the topic “Balancing with Current Cash.”) This value is filled in from the BEG CASH field on ATD screen 4 or 5, which is where you enter the initial beginning amount or count in the ATM. After that initial entry, these fields are updated automatically. The STD BEG CASH field on ATD screen 4 or 5 is intended for use with the Balance Standard Cash method (described in section 6). If you enter the initial value in that field by mistake, the value in the START field on this screen is inaccurate until the first time you balance using the Balance Current Cash method.

Balancing the ATM replaces the value in the START field with the value from the END field. Increasing and decreasing functions do not affect the value in the START field until the next balance is done.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.BEG-CASH
TDF.HOPR.BEG-CASH

INCR — The amount of cash or cash value items, or the number of nonvalue items, that have been added to the hopper through the increase procedure (described above under the topic “Increasing Cash in the Hoppers”). This amount or count is added to the END field for this hopper; balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CASH-INCR
 TDF.HOPR.CASH-INCR

DECR — The amount of cash or cash value items, or the number of nonvalue items, that have been removed from the hopper through the decrease procedure (described above under the topic “Decreasing Cash in the Hoppers”). This amount or count is subtracted from the END field for this hopper; balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CASH-DECR
 TDF.HOPR.CASH-DECR

OUT — The accumulated amount of cash or cash value items or the number of nonvalue items dispensed from this hopper through cardholder withdrawals since it was last balanced. Each time a transaction withdraws from this hopper, the withdrawal amount or count is subtracted from the END field for this hopper. Balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CASH-OUT
 TDF.HOPR.CASH-OUT

END — The running total of cash, cash value, or nonvalue items in the hopper. This amount or count is adjusted with every customer withdrawal, and with operator increases and decreases through the DCT. Balancing the ATM copies this value to the START field for this hopper.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.END-CASH
 TDF.HOPR.END-CASH

The following three fields are displayed for the ATM as a whole.

NUM OF ENV — The number of deposit envelopes, excluding commercial deposits, accepted at the terminal since the last terminal balancing transaction. Balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.NUM-DEP
 TDF.NUM-DEP

AMT — The unverified amount of the deposits in envelopes, excluding commercial deposits, accepted at the terminal since the last terminal balancing transaction. Balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.AMT-DEP
 TDF.AMT-DEP

CAPTURED CARDS — The number of cards retained at the terminal since the last terminal balancing transaction. Balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.CRDS-RET
 TDF.CRDS-RET

Diebold 10XX/478X Current Cash Subtotals Screen

The Subtotals screen is slightly different for Diebold 10XX/478X terminals that have the BASE24-atm self-service banking add-on module. The Diebold 10XX/478X has four bill hoppers, and four coin hoppers. For reporting purposes, the Diebold 10XX/478X groups all of its coin hoppers in the next hopper after the last bill hopper. Therefore, the sixth hopper is never used, and in its place, additional information for the deposit bins is displayed. See the topic “Displaying Subtotals for Each Hopper” earlier in this section for information on how to access this screen.

```

BASE24-DCT  BAL CURRENT CASH          LLLL  ****  YY/MM/DD  HH:MM  08 OF 46
ATM TERMID:                FIID: ****  REGION: ****  BRANCH: ****
 _ SUBTOTALS  _ BALANCE  _ COUNTS  STATUS:          4730 INDICATOR:
HOPPER NUM AMT          HOPPER NUM AMT          HOPPER NUM AMT
1              0          2              0          3              0
4              0          5              0          6              0
7              0          8              0
CCODE: 840 <type> (HOP 1)  840 <type> (HOP 2)  840 <type> (HOP 3)
START:              0              0              0
INCR:              0              0              0
DECR:              0              0              0
OUT:              0              0              0
END:              0              0              0
CCODE: 840 <type> (HOP 4)  840 <type> (HOP 5)
START:              0              0              0
INCR:              0              0              0
DECR:              0              0              0
OUT:              0              0              0
END:              0              0              0
DEPOSIT BIN
COUNT  AMOUNT
0 0      0      0.00
0 1      0      0.00
0 2      0      0.00
0 3      0      0.00
NUM OF ENV: 00000000  AMT:              0  CAPTURED CARDS: 0000
***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F4-INCR F5-CLOSE F6-DECR F9-STATUS ALL F12-HELP

```

The fields on the Diebold 10xx/478X Subtotals screen are the same as the ATM Current Cash Subtotals screen described earlier, with the addition of the following two fields:

DEPOSIT BIN

The following two fields contain information about the deposit bins in the ATM.

COUNT — The number of items deposited into each of the four deposit bins since the last time the ATM was balanced. Balancing the ATM resets this field to zero.

Field Length: System-protected

Data Name: ATDD1.ATDD1-CORE.SSBC.DEP-BIN.SSBC-NUM-CHK

AMOUNT — The total amount deposited into each of the four deposit bins since the last time the ATM was balanced. Balancing the ATM resets this field to zero.

Field Length: System-protected

Data Name: ATDD1.ATDD1-CORE.SSBC.DEP-BIN.SSBC-AMT-CHK

NCR 5XXX Current Cash Subtotals Screen

The first Subtotals screen for NCR 5XXX terminals that have the BASE24-atm self-service banking (SSB) add-on module is the same as for all terminals (except the Diebold 10XX/478X described earlier). Unlike the Diebold 10XX/478X, the NCR 5XXX displays all four of the coin hoppers, in addition to displaying the four bill hoppers. The two additional hoppers, plus deposit bin totals, are displayed on a second screen shown below.

Press the **Shift-F3** keys from DCT screen 8 or the first Subtotals screen to view the second screen. The fields for each hopper are the same as described previously under the topic “ATM Current Cash Subtotals,” and the Deposit Bin totals are the same as described above for the Diebold 10XX/478X Current Cash Subtotals screen. To return to the first Subtotals screen from the second Subtotals screen, place the cursor in the SUBTOTALS field, and press the **F1** key.

```

BASE24-DCT  BAL CURRENT CASH          LLLL  ****  YY/MM/DD  HH:MM  08 OF 46
ATM TERMID:                               FIID:  ****  REGION:  ****  BRANCH:  ****
SUBTOTALS  _ BALANCE  _ COUNTS  STATUS:  4730 INDICATOR:
HOPPER NUM AMT  HOPPER NUM AMT  HOPPER NUM AMT
1              0      2              0      3              0
4              0      5              0      6              0
7              0      8              0
CCODE:  840  <type> (HOP 7)  840  <type> (HOP 8)
START:              0              0
INCR:               0              0
DECR:               0              0
OUT:                0              0
END:                0              0

      DEPOSIT BIN
COUNT  AMOUNT
0        0      0.00
1        0      0.00
2        0      0.00
3        0      0.00
***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F4-INCR F5-CLOSE F6-DECR F9-STATUS ALL F12-HELP

```

ACI Worldwide, Inc.

6: ATM Balance Standard Cash Screen (Screen 9)

This section describes how to execute commands using the Balance Standard Cash Screen. Access this screen from the DCT Menu as screen 9. This screen allows you to balance ATM terminals that use cartridge cash or noncurrency item (e.g., traveler checks or coupons) dispensers regardless of terminal type. The Balance Standard Cash method is used when you balance ATMs from this screen. ATMs that use loose bill or noncurrency item hopper dispensers are balanced using the Balance Current Cash screen (DCT screen 8), which is described in section 5.

The Balance function in the DCT makes changes to the cash, cash value, or nonvalue item totals stored in the BASE24-atm Terminal Data files record for each ATM. Balancing with standard cash is performed whenever the current cartridge is replaced with a new cartridge. The amount of cash or cash value items or the count of nonvalue items contained in the new cartridge is a fixed amount or count that becomes the beginning cash amount or item count. Balancing can also be done at the ATM with an administrative card. The DCT screens are not used in this case. The method used to balance the ATM is determined by your institution's policies and procedures.

Note: Balancing an ATM during the balancing and cutover window automatically cuts over the ATM.

Throughout this section, the term *noncurrency* refers to any item dispensed from an ATM other than cash or coins. Noncurrency items that have a cash value are referred to as *cash value* items. Noncurrency items with no cash value are referred to as *nonvalue* items.

This section contains the following information for DCT screen 9:

- A screen example and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks
- Descriptions of the Subtotals screens that you can access from DCT screen 9

DCT Screen 9

DCT screen 9 allows you to balance ATM terminals using the Balance Standard Cash method. Three of the fields on this screen (SUBTOTALS, BALANCE, and COUNTS) are commands that can be executed. To use these fields, place the cursor to the left of the field name and press the **F1** key. DCT screen 9 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT   BAL STANDARD CASH           LLLL           YY/MM/DD  HH:MM  09 OF 46

ATM TERMID:           FIID:           REGION:           BRANCH:
 _ SUBTOTALS    _ BALANCE    _ COUNTS    STATUS:           4730 INDICATOR:

```

```

***** BASE24 *****
NEW PAGE:           FILE DESTINATION:           NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F5-CLOSE F9-STATUS ALL F12-HELP

```

ATM TERMID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the BASE24-atm Terminal Data files.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered, representing all financial institution identifiers.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

REGION — The region in which the specified ATM is located. The region is determined by the institution identified in the FIID field, if applicable. Four asterisks (****) in this field represents all regions for the specified institution.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

Note: The financial institution assigns terminals to a region and branch using fields in the BASE24-atm Terminal Data files. The value in the REGION field must match the region assigned to the terminal in the BASE24-atm Terminal Data files, unless four asterisks are entered.

BRANCH — The branch in which the specified ATM is located. The branch is determined by the institution identified in the FIID field and is a subdivision of the region displayed in the REGION field. Four asterisks (****) in this field represents all branches for the specified region.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

Note: The financial institution assigns terminals to a region and branch using fields in the BASE24-atm Terminal Data files. The value in the BRANCH field must match the branch assigned to the terminal in the BASE24-atm Terminal Data files, unless four asterisks are entered.

SUBTOTALS — Displays a screen with a subtotal for each hopper (1–8) for the specified ATM. This screen is described later in this section, under the topic “Subtotals Screens.” Place the cursor to the left of the field name and press the **F1** key to display this screen.

Field Length: Cursor placement only

BALANCE — Balances the specified ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

COUNTS — Obtains the currency acceptor’s counts from the specified ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task. This process is valid only for Diebold ATMs which are equipped with a currency acceptor device or for ATMs running Wincor Nixdorf’s firmware which are equipped with a BNA (Bulk Note Acceptor).

Field Length: Cursor placement only

STATUS — The type of terminals for which you want to display status information. Valid values are as follows:

ALL	= All terminals
BAL	= Terminals that are balanced
CLOSED	= Terminals that are closed
D910	= Diebold 910 ATM terminals
D911	= Diebold 911 ATM terminals
D911L	= Diebold 911L ATM terminals
D912	= Diebold 912 ATM terminals
D1000	= Diebold 10XX ATM terminals
D-CSP	= Diebold CashSource Plus terminals
DOC5100	= Docutel ETS 5100/5200 ATM terminals
DOWN	= Terminals that are down
FAULT	= Terminals that have one or more faults
FUJITSU	= Fujitsu ATM terminals
FUJ7	= Fujitsu 7000 terminals
I3624	= IBM 3624 ATM terminals
I473X	= IBM 4730 ATM terminals
N50	= NCR 5XXX ATM terminals
NCR-CASH	= NCR “Cash” ATM terminals
NOTRAN	= Terminals with no transactions in progress

NOT UP = Terminals that are down, closed, or have one or more faults
OLIVETTI = Olivetti ATM terminals
OPEN = Terminals that are open
RT650 = Burroughs RT650 ATM terminals
TIDEL = Tidel ATM terminals
TRAN = Terminals with transactions in progress
TRITON = Triton terminals
UNBAL = Terminals that are unbalanced
UP = Terminals that are up

Field Length: 1–8 alphanumeric characters
Required Field: No
Default Value: No default value

4730 INDICATOR — The number of the console using IBM 4730 ATMs on which to execute commands. This field is used for IBM 4730 terminals only. Valid values are as follows:

1 = Console 1
2 = Console 2

Field Length: 1 numeric character
Required Field: No
Default Value: No default value

Function Keys

The functions assigned to the function keys for DCT screen 9 are shown in the following table. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Select or Validate — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command (SUBTOTALS, BALANCE, or COUNTS). If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added. When you use this key to request subtotals and the command is successfully executed, subtotal information is displayed on a Subtotals screen, which overlays the lower part of DCT screen 9. This information is described later in this section under the topic “Subtotals Screens.”
F2	Status — Displays status information for the specified terminal, including a list of any ATM components that are faulted. A number preceding each fault in the list indicates the number of times the fault has been reported. The Status Response screen displayed when this key is pressed is described under the topic “Status of One Terminal” in section 4.
F3	Open — Opens the specified terminal. Note: This function is not valid for Tidel, Triton, Diebold CashSource Plus, and NCR “Cash” dial-up ATM terminals.
F5	Close — Closes the specified terminal. Note: This function is not valid for Tidel, Triton, Diebold CashSource Plus, and NCR “Cash” dial-up ATM terminals.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.

Key	Description
F9	Status All — Displays the status of all terminals of the type entered in the STATUS field that are owned by the specified FIID, region, and branch of the financial institution. This function indicates which terminals have one or more faults, but does not display a fault list for each terminal. The Status Response screen displayed when this key is pressed is described under the topic “Status of All Terminals” in section 4.
F10	Print — Sends the current image of DCT screen 9 to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 9. This Help screen lists the functions assigned to the function keys for DCT screen 9.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F2	NCR 5XXX Detailed Status — Displays four screens for the specified NCR 5XXX terminal. The information displayed includes the current status for all possible devices at the terminal, the hardware configuration of the specified terminal, supply status for all terminal components, and the state of the sensors at the terminal. These screens are illustrated under the topic “Detailed Status of NCR 5XXX Terminals” in section 4.
Shift-F3	Subtotals - Page 2 — Displays an additional subtotals information for hoppers 7 and 8. NCR 5XXX devices with the SSB add-on module have four bill hoppers and four coin hoppers. This screen is described later in this section, under the topic “NCR 5XXX Standard Cash Subtotals.”
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 9 to perform the following tasks:

- Display subtotals for each hopper
- Balance with standard cash, cash value, or nonvalue items
- Obtain the currency acceptor's counts from the ATM (only applies to Diebold ATMs equipped with a currency acceptor or for ATMs running Wincor Nixdorf's firmware equipped with a BNA (Bulk Note Acceptor))

Procedures for performing these tasks are described below and on the following pages.

Like DCT screens 7 and 8, you can also perform the following tasks on this screen.

- Display the status of one terminal
- Display the status of all terminals
- Open an ATM
- Close an ATM

Refer to section 4 for information about these procedures.

Displaying Subtotals for Each Hopper

Displaying subtotals provides information necessary for proper ATM balancing, such as the starting and ending balances of each hopper and the changes made to the hoppers. The Subtotals screen also includes information about the contents of the ATM, such as the number of envelopes deposited and cards captured. This screen is described later in this section, under the topic "Subtotals Screens." Two variations of the Subtotals screen for specific terminal types (i.e., Diebold 10XX/478X and NCR 5XXX with the SSB add-on module) are described under the topics "Diebold 10XX/478X Standard Cash Subtotals" and "NCR 5XXX Standard Cash Subtotals," respectively.

Subtotals can be displayed at any time while performing the balancing procedure described below. You can print the subtotals information (using the **F10** key) at several points during the balancing procedure as a physical record of the successful completion of a task. The subtotals information duplicates the information on BASE24-atm Terminal Data files (ATD) screens 4 and 5, so you do not have to display the ATD files maintenance screens to check the current hopper totals.

To display subtotals, perform the following steps:

1. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 9.
2. Place the cursor to the left of the SUBTOTALS field name.
3. Press the **F1** key to display the subtotals. The subtotals information is displayed on the Subtotals screen, which overlays the lower part of DCT screen 9. The Subtotals screen varies according to the type of ATM specified. When you perform any other function while subtotals are displayed, DCT screen 9 replaces the Subtotals screen.
 - For all ATMs other than a Diebold 10XX/478X with the SSB add-on module, the Subtotals screen is described under the topic “ATM Standard Cash Subtotals.”
 - If the ATM is a Diebold 10XX/478X with the SSB add-on module, the Subtotals screen is described under the topic “Diebold 10XX/478X Standard Cash Subtotals.”
 - For an NCR 5XXX ATM with the SSB add-on module, an additional Subtotals screen is used to view the contents of the last two hoppers. Press the **Shift-F3** keys from DCT screen 9 or from anywhere on the first Subtotals screen to view the second screen. This additional Subtotals screen is described under the topic “NCR 5XXX Standard Cash Subtotals.” To return to the first Subtotals screen, place the cursor in the SUBTOTALS field and press the **F1** key.

The function keys for Subtotals screens are the same as for DCT screen 9.

Balancing with Standard Cash, Cash Value, and Nonvalue Items

To balance a specified ATM using standard cash, cash value, and nonvalue items, perform the following steps:

1. Close the ATM by performing the following steps.
 - a. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 9.
 - b. Press the **F5** key to send the command to the network.
 - c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed several times. If it is not displayed, repeat steps 1a–b.

- d. Check the network logging facility for messages indicating that the ATM has been closed for administrative processing.
2. Display subtotals for the ATM by performing the following steps. The subtotals information is described later in this section.
 - a. Place the cursor to the left of the SUBTOTALS field name.
 - b. Press the **F1** key to display the Subtotals screen. The Subtotals screen is described under the topics “ATM Standard Cash Subtotals,” “Diebold 10XX/478X Standard Cash Subtotals,” or “NCR 5XXX Standard Cash Subtotals” provided later in this section. If the ATM terminal is an NCR 5XXX with the SSB add-on module, you must also press the **Shift-F3** key to display the second Subtotals screen, which is also described under the topic “NCR 5XXX Standard Cash Subtotals.”
 - c. Check the subtotals for each hopper displayed on the screen.

Note: If the Diebold ATM is equipped with a currency acceptor or if the ATM running Wincor Nixdorf’s firmware is equipped with a BNA (Bulk Note Acceptor), perform the steps listed under “Retrieving the BNA (Bulk Note Acceptor) Counts from the ATM” before continuing with step 3.

3. Balance the ATM by performing the following steps.
 - a. Place the cursor to the left of the BALANCE field name.
 - b. Press the **F1** key to send the command to the network.

If the Diebold ATM is equipped with a currency acceptor or if the ATM running Wincor Nixdorf’s firmware is equipped with a BNA (Bulk Note Acceptor), and you have yet to retrieve the counts from the ATM, the message “COMMAND IGNORED, COUNTS MUST FIRST BE OBTAINED” will appear.

You must perform the steps listed under “Retrieving the BNA (Bulk Note Acceptor) Counts from the ATM,” which is described below, before the ATM can be balanced.
 - c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed several times.
 - d. Check the screen to make sure that the message “ATM BALANCE SUCCESSFUL” is displayed. If either or both messages are not displayed, repeat steps 2–3b.
4. Open the ATM by performing the following steps.
 - a. Press the **F3** key to send the command to the network.

- b. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat step 4a.
- c. Check the network logging facility for messages indicating that the ATM has been opened.

Retrieving the BNA Counts from the ATM

To retrieve the BNA (Bulk Note Acceptor) counts from a Diebold ATM equipped with a currency acceptor or from an ATM running Wincor Nixdorf’s firmware equipped with a BNA, perform the following steps:

1. If the ATM is not already closed, close the ATM by performing the following steps.
 - a. Enter a valid ATM terminal identifier in the ATM TERMID field on DCT screen 9.
 - b. Press the **F5** key to send the command to the network.
 - c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” appears. If it does not appear, repeat steps 1a–b.
 - d. Check the network logging facility for messages indicating that the ATM has been shut down.
2. Retrieve the BNA counts by performing the following steps.
 - a. Place the cursor to the left of the COUNTS field name.
 - b. Press the **F1** key to send the command to the network.

If the ATM is not a Diebold ATM equipped with a currency acceptor or an ATM running Wincor Nixdorf’s firmware equipped with a BNA (Bulk Note Acceptor), then either the message “COMMAND IGNORED, ATM DOES NOT HAVE BNA” or the message “COUNTS COMMAND NOT APPLICABLE FOR THIS DEVICE TYPE” will appear.

- c. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” appears.

Subtotals Screens

The Subtotals screen is displayed when you place the cursor next to the SUBTOTALS field on DCT screen 9 and press the **F1** key. The Subtotals screen overlays the lower part of DCT screen 9. The format of the Subtotals screen varies according to the type of ATM specified. The following Subtotals screen formats are described in this subsection:

- ATM Standard Cash Subtotals
- Diebold 10XX/478X Standard Cash Subtotals
- NCR 5XXX Standard Cash Subtotals

Note: Data in the BASE24-atm Terminal Data files is actually stored in different files on disk, depending on the type of ATM terminal for the BASE24-atm Terminal Data files record. For Diebold 10XX and NCR 5XXX terminals, the data displayed on Subtotals screens is retrieved from the ATM Terminal Data Dynamic File—general data (ATDD1). For all other terminal types, the data is retrieved from the Terminal Data File (TDF). The data names in this subsection use the disk file names from which the data displayed is obtained.

ATM Standard Cash Subtotals Screen

The ATM Standard Cash Subtotals screen is displayed when you request subtotals for any ATM other than a Diebold 10XX/478X with the SSB add-on module. The screen displays the current contents of each hopper in the BASE24-atm Terminal Data files. See the topic “Displaying Subtotals for Each Hopper” earlier in this section for information on how to access this screen. The ATM Standard Cash Subtotals screen is shown below, followed by descriptions of its fields.

```

BASE24-DCT   BAL STANDARD CASH           LLLL  ****  YY/MM/DD  HH:MM  09 OF 46

ATM TERMID:           FIID: ****  REGION: ****  BRANCH: ****
 _ SUBTOTALS    _ BALANCE    _ COUNTS    STATUS:           4730 INDICATOR:

CCODE: 840  <type> (HOP 1)  840  <type> (HOP 2)  840  <type> (HOP 3)
START:                0                0                0
INCR:                 0                0                0
DECR:                 0                0                0
OUT:                  0                0                0
END:                  0                0                0

CCODE: 840  <type> (HOP 4)  840  <type> (HOP 5)  840  <type> (HOP 6)
START:                0                0                0
INCR:                 0                0                0
DECR:                 0                0                0
OUT:                  0                0                0
END:                  0                0                0
NUM OF ENV: 00000000    AMT:                0.00    CAPTURED CARDS: 0000
***** BASE24 *****
NEW PAGE:           FILE DESTINATION:           NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F5-CLOSE F9-STATUS ALL F12-HELP

```

The following seven fields are displayed for each of the hoppers. The hoppers are filled with the smallest whole denomination in the first hopper, then the next smallest in the second hopper, and so on. Coins are placed in the next hopper after the highest whole denomination.

For hoppers containing cash or a nonvalue item, amounts or counts are displayed as whole numbers with no decimal places. For hoppers containing coins or cash value items, amounts are displayed with decimal places.

CCODE — The currency code for the type of currency in the hopper. This code is included for each hopper because certain ATMs allow currency from two different countries. Valid values are listed in the ISO 4217 standard, *Codes for the Representation of Currencies and Funds*.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CRNCY-CDE
 TDF.HOPR.CRNCY-CDE

<type> — A code describing the contents of each hopper. Valid values are as follows:

CASH = Paper currency
COINS = Coin currency
TCHK = Traveler checks
NC03 = Noncurrency dispense item
NC04 = Noncurrency dispense item
NC05 = Noncurrency dispense item
NC06 = Noncurrency dispense item
NC07 = Noncurrency dispense item
NC08 = Noncurrency dispense item
NC09 = Noncurrency dispense item
NC10 = Noncurrency dispense item

The values TCHK and NC03 through NC10 represent different noncurrency dispense items such as traveler checks, postage stamps, public passes, event tickets, or coupons.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CONTENTS
 TDF.HOPR.CONTENTS

START — The amount of cash or cash value items, or the number of nonvalue items in the hopper at the start of the current balancing period (the balance procedure is described above under the topic “Balancing with Standard Cash.”) This value is filled in from the STD BEG CASH field on ATD screen 4 or 5, which is where you enter the cash amount or the nonvalue item count that is in the cartridge. Balancing the ATM copies this amount to the END field for this hopper on this screen.

When you initially enter a value in the STD BEG CASH field on ATD screen 4 or 5, the value in the START field on this screen remains at zero until after you complete a balance procedure, at which time the value in the STD BEG CASH field for this hopper is copied to the START and END fields.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.BEG-CASH
 TDF.HOPR.STD-BEG-CASH

INCR — This field is not used for the Balance Standard Cash method.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CASH-INCR
 TDF.HOPR.CASH-INCR

DECR — This field is not used for the Balance Standard Cash method.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CASH-DECR
 TDF.HOPR.CASH-DECR

OUT — The accumulated amount of cash or cash value items or the number of nonvalue items dispensed from this hopper through cardholder withdrawals since it was last balanced. Each time a transaction withdraws from this hopper, the withdrawal amount or count is subtracted from the END field for this hopper. Balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.CASH-OUT
 TDF.HOPR.CASH-OUT

END — The running total of cash, cash value, or nonvalue items in the hopper. This amount or count is adjusted with every customer withdrawal. Performing a balance copies the value of the STD BEG CASH field on ATD screen 4 or 5 for this hopper to this field.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.HOPR.END-CASH
 TDF.HOPR.END-CASH

The following three fields are displayed for the ATM as a whole:

NUM OF ENV — The number of deposit envelopes, excluding commercial deposits, accepted at the terminal since the last terminal balancing transaction. Balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.NUM-DEP
 TDF.NUM-DEP

AMT — The unverified amount of the deposits in envelopes, excluding commercial deposits, accepted at the terminal since the last terminal balancing transaction. Balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.AMT-DEP
 TDF.AMT-DEP

CAPTURED CARDS — The number of cards retained at the terminal since the last terminal balancing transaction. Balancing the ATM resets this field to zero.

Field Length: System-protected
Data Name: ATDD1.ATDD1-CORE.CRDS-RET
 TDF.CRDS-RET

Diebold 10XX/478X Standard Cash Subtotals Screen

The Subtotals screen is slightly different for Diebold 10XX/478X terminals that have the BASE24-atm self-service banking (SSB) add-on module. The Diebold 10XX/478X has four bill hoppers, and four coin hoppers. For reporting purposes, the Diebold 10XX/478X groups all of its coin hoppers in the next hopper after the last bill hopper. Therefore, the sixth hopper is never used, and in its place, additional information for the deposit bins is displayed. See the topic “Displaying Subtotals for Each Hopper” earlier in this section for information on how to access this screen. The Diebold 10XX/478X Standard Cash Subtotals screen is shown below, followed by descriptions of its fields.

```

BASE24-DCT  BAL STANDARD CASH          LLLL  ****  YY/MM/DD  HH:MM  09 OF 46

ATM TERMID:                FIID: ****  REGION: ****  BRANCH: ****
 _ SUBTOTALS  _ BALANCE  _ COUNTS  STATUS:        4730 INDICATOR:

CCODE: 840  <type> (HOP 1)  840  <type> (HOP 2)  840  <type> (HOP 3)
START:                0                0                0
INCR:                 0                0                0
DECR:                 0                0                0
OUT:                  0                0                0
END:                  0                0                0

CCODE: 840  <type> (HOP 4)  840  <type> (HOP 5)
START:                0                0
INCR:                 0                0 0 0
DECR:                 0                0 1 0
OUT:                  0                0 2 0
END:                  0                0 3 0

DEPOSIT BIN
COUNT  AMOUNT
0.00
0.00
0.00
0.00

NUM OF ENV: 00000000  AMT:                CAPTURED CARDS: 0000
***** BASE24 *****
NEW PAGE:                FILE DESTINATION:                NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F5-CLOSE F9-STATUS ALL F12-HELP

```

The fields on the Diebold 10XX/478X Subtotals screen are the same as the ATM Standard Cash Subtotals screen described above, with the addition of the following two fields:

DEPOSIT BIN

The following two fields contain information about the deposit bins in the ATM.

COUNT — The number of items deposited into each of the four deposit bins since the last time the ATM was balanced. Balancing the ATM resets this field to zero.

Field Length: System-protected

Data Name: ATDD1.ATDD1-CORE.SSBC.DEP-BIN.SSBC-NUM-CHK

AMOUNT — The total amount deposited into each of the four deposit bins since the last time the ATM was balanced. Balancing the ATM resets this field to zero.

Field Length: System-protected

Data Name: ATDD1.ATDD1-CORE.SSBC.DEP-BIN.SSBC-AMT-CHK

NCR 5XXX Standard Cash Subtotals

The first Subtotals screen for NCR 5XXX terminals that have the BASE24-atm self-service banking (SSB) add-on module is the same as that for all terminals (except the Diebold 10XX/478X described earlier). Unlike the Diebold 10XX/478X, the NCR 5XXX displays all four of the coin hopper, in addition to displaying the four bill hoppers. The two additional hoppers, plus deposit bin totals, are displayed on a second screen shown below.

Press the **Shift-F3** keys from DCT screen 9 or the first Subtotals screen to view the second screen. The fields for each hopper are the same as described previously under the topic “ATM Standard Cash Subtotals,” and the Deposit Bin totals are the same as described above for the Diebold 10XX/478X Standard Cash Subtotals screen. To return to the first Subtotals screen from the second Subtotals screen, place the cursor in the SUBTOTALS field, and press the **F1** key. The NCR 5XXX Standard Cash Subtotals screen is shown below.

```

BASE24-DCT  BAL STANDARD CASH          LLLL  ****  YY/MM/DD  HH:MM  09 OF 46

ATM TERMID:                FIID: ****  REGION: ****  BRANCH: ****
 _ SUBTOTALS  _ BALANCE  _ COUNTS  STATUS:          4730 INDICATOR:

CCODE: 840  <type> (HOP 7)  840  <type> (HOP 8)
START:                0                0
INCR:                 0                0
DECR:                 0                0
OUT:                  0                0
END:                  0                0

      DEPOSIT BIN
COUNT  AMOUNT
0        0        0.00
1        0        0.00
2        0        0.00
3        0        0.00

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F5-CLOSE F9-STATUS ALL F12-HELP

```

7: POS Merchant Host Interface Device Load Control Screen (Screen 15)

This section describes how to execute commands from the POS Merchant Host Interface (MHI) Device Load Control screen. You access this screen from the DCT Menu as screen 15. This screen allows you to set the download pending flag in the POS Terminal Data File for terminals connected to the Merchant Host Interface (MHI) process. These functions are only supported for terminal control. One POS Terminal Data File record must exist for each POS terminal attached to the host or controller.

This section contains the following information for DCT screen 15:

- An example of the screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks

DCT Screen 15

DCT screen 15 allows you to set the download pending flag in the POS Terminal Data File for terminals connected to the Merchant Host Interface (MHI) process. DCT screen 15 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT      DEVICE LOAD CNTL      LLLL      YY/MM/DD  HH:MM  15 OF 46

      M E R C H A N T      H O S T      I N T E R F A C E
      D E V I C E      L O A D      C O N T R O L      S C R E E

      FIID:

      TERMINAL ID:

      OR

      TERMINAL GROUP:

      PRESS APPROPRIATE FUNCTION KEY...

***** BASE24 *****
NEW PAGE:      FILE DESTINATION:      NEW LOGICAL NETWORK ID:
      F2-DOWNLOAD FLAG ON      F3-DOWNLOAD FLAG OFF      F12-HELP

```

FIID — The identifier of the financial institution that owns the specified terminal. This identifier must have a record in the Institution Definition File (IDF) unless ALL is entered.

Field Length: 1–4 alphanumeric characters
 Required Field: Yes
 Default Value: ALL

TERMINAL ID — The terminal identifier that specifies the BASE24-pos terminal on which commands are performed. This identifier must have a record in the POS Terminal Data File.

Field Length: 1–16 alphanumeric characters
Required Field: You must enter a value in either the TERMINAL ID or TERMINAL GROUP field.
Default Value: No default value

TERMINAL GROUP — The terminal group identifier to which this terminal belongs for downloads from the Merchant Host Interface Device Handler process.

Field Length: 1–4 alphanumeric characters
Required Field: You must enter a value in either the TERMINAL ID or TERMINAL GROUP field.
Default Value: No default value

Function Keys

The functions assigned to the function keys for DCT screen 15 are shown in the following table. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Validate Data — Checks selected fields from the screen for valid entries. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F2	Turn Download Flag On — Turns on the download pending flag in the device-dependent portion of the POS Terminal Data File. This flag prompts the terminal to send a download request to BASE24 for an update to configuration parameters.
F3	Turn Download Flag Off — Turns off the download pending flag in the device-dependent portion of the POS Terminal Data File.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F8	Clear Screen — Clears all fields in which you have entered data, replacing them with spaces or default values.
F10	Print Screen — Sends the current image of DCT screen 15 to the spooler location specified on the BASE24 Logon screen.
F12	Help Screen — Displays the Help screen for DCT screen 15. This Help screen lists the functions assigned to the function keys for DCT screen 15.
F13	Change Logical Net — Changes the logical network to the value specified in the NEW LOGICAL NETWORK ID field.

Key	Description
F16	Exit — Returns you to the DCT Menu, if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION fields. If you enter values in these fields, this function displays the name of the specified file in the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 15 to perform the following tasks:

- Turn on the download flag in the POS Terminal Data File
- Turn off the download flag in the POS Terminal Data File

Procedures for performing these tasks are described below.

Turning On the Download Flag

To turn on the download flag in the POS Terminal Data File, perform the following steps:

1. Enter the identifier of the financial institution owning the terminal in the FIID field, if applicable, or set the field to ALL on DCT screen 15.
2. If you want to turn on the download flag for one terminal, enter a valid POS terminal identifier in the TERMINAL ID field. If you want to turn on the download flag for a terminal group, enter a valid terminal group identifier in the TERMINAL GROUP field.
3. Press the **F2** key to send the command to the network.
4. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.

Turning Off the Download Flag

To turn off the download flag in the POS Terminal Data File, perform the following steps:

1. Enter the identifier of the financial institution owning the terminal in the FIID field, if applicable, or set the field to ALL on DCT screen 15.
2. If you want to turn off the download flag for one terminal, enter a valid POS terminal identifier in the TERMINAL ID field. If you want to turn off the download flag for a terminal group, enter a valid terminal group identifier in the TERMINAL GROUP field.
3. Press the **F3** key to send the command to the network.
4. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.

8: ATM Olivetti Commands Screen (Screen 32)

This section describes how to execute commands from the ATM Olivetti Commands screen. You access this screen from the DCT Menu as screen 32. This screen allows you to perform various maintenance functions to Olivetti 6000 ATM terminals.

This section contains the following information about DCT screen 32:

- An example of the screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks

DCT Screen 32

DCT screen 32 allows you to perform various maintenance functions on Olivetti 6000 ATM terminals. Several of the fields on this screen are commands that can be executed. To use these fields, place the cursor to the left of the field name and press the **F1** key. DCT screen 32 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT   OLIVETTI 6000 ATM           LLLL           YY/MM/DD  HH:MM  32 OF 46

      ATM TERMINAL ID: _____      FIID: _____
      LOAD KEY:  _  (0 OR 1)
LOAD FILE NAME PREFIX: _____

      SELECT ONE AND PRESS F1
_  LOADKEY
_  UPLOAD DIR
_  UPLOAD FILE
_  DOWNLOAD
_  REBOOT
_  DATETIME

***** BASE24 *****
NEW PAGE:           FILE DESTINATION:           NEW LOGICAL NETWORK ID:
F1-SELECT F2-STATUS F3-SIGNON F5-SIGNOFF F6-SIGNOFF (IMM) F9-RESET F16-EXIT

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the Terminal Data File.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

LOAD KEY — The type of key to be downloaded to the specified ATM when the LOADKEY command is executed. Valid values are as follows:

0 = Master key
1 = Communications key

Note: The master key is used for PIN encryption and decryption. The communications key is used for message encryption and decryption. As a security measure, both keys must be routinely changed.

Field Length: 1 numeric character
Required Field: Yes
Default Value: No default value

LOAD FILE NAME PREFIX — The name of a file or directory to be uploaded or downloaded.

Field Length: 34 alphanumeric characters
Required Field: Yes
Default Value: No default value

SELECT ONE AND PRESS F1

The following five fields allow you to perform various maintenance functions.

LOADKEY — Downloads the key type specified in the LOAD KEY field to the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

UPLOAD DIR — Uploads the directory specified in the LOAD FILE NAME PREFIX field from the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

UPLOAD FILE — Uploads the file specified in the LOAD FILE NAME PREFIX field from the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DOWNLOAD — Downloads the file specified in the LOAD FILE NAME PREFIX field into the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

REBOOT — Restarts the specified ATM and causes internal software to be reloaded. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DATETIME — Downloads the current date and time to the ATM. The new date and time is calculated from the Tandem system time plus the value of the TIME OFFSET field on BASE24-atm Terminal Data files (ATD) screen 1 for this terminal. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 32. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Select — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added
F2	Status — Displays status information for the specified terminal on the network logging facility.
F3	Signon — Opens the specified ATM.
F5	Signoff — Closes the specified ATM upon completion of the transaction in progress.
F6	Signoff (IMM) — Closes the specified ATM immediately, aborting any transactions in progress.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F9	Reset — Resets the transaction and load status of the terminal.
F10	Print — Sends the current image of DCT screen 32 to the spooler location specified by the Logon screen.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 32 to perform the following tasks:

- Download a new communications key
- Upload a directory from an ATM
- Upload a file from an ATM
- Download a file to an ATM
- Reboot an ATM
- Open an ATM
- Close an ATM
- Immediately close an ATM
- Reset an ATM
- Request terminal and supplies status information

Procedures for performing these tasks are described below and on the following pages.

Downloading a New Communications Key

The LOADKEY command downloads a new master or communications key to the specified ATM.

To download a new key, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the key type you want to download in the LOAD KEY field. Valid key types are as follows:
 - 0 = Master key
 - 1 = Communications key
4. Place the cursor to the left of the LOADKEY field name.
5. Press the **F1** key to send the command to the network.

6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the key has been downloaded successfully.

Uploading a Directory from an ATM

The UPLOAD DIR command uploads the directory specified in the LOAD FILE NAME PREFIX field from the ATM and displays the names of the files in the network log.

To upload a directory, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the name of the directory you want to upload in the LOAD FILE NAME PREFIX field.
4. Place the cursor to the left of the UPLOAD DIR field name.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility to view the names of all files located in the specified directory.

Uploading a File from an ATM

The UPLOAD FILE command uploads the file specified in the LOAD FILE NAME PREFIX field from the ATM.

To upload a file, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).

3. Enter the file name of the file you want to upload in the LOAD FILE NAME PREFIX field.
4. Place the cursor to the left of the UPLOAD FILE field name.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified file has been uploaded successfully.

Downloading a File to an ATM

The DOWNLOAD command downloads the file specified in the LOAD FILE NAME PREFIX field to the ATM.

To download a file, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the file name of the file you want to download in the LOAD FILE NAME PREFIX field.
4. Place the cursor to the left of the DOWNLOAD field name.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified file has been downloaded successfully.

Rebooting an ATM

The Reboot command restarts the specified ATM and causes internal software to be reloaded.

To reboot an ATM, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the REBOOT field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the ATM has been booted successfully.

Opening a Terminal

Olivetti 6000 ATMs must be opened before they will accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened.

To open an Olivetti 6000 ATM, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing an Olivetti 6000 ATM displays a “TEMPORARILY OUT OF ORDER” message at the ATM and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed. To close an Olivetti 6000 ATM, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Immediately Closing a Terminal

This procedure can be used to close an Olivetti 6000 ATM terminal immediately. If a transaction is in progress when this procedure is performed, it is aborted.

To immediately close an Olivetti 6000 ATM, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F6** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Resetting a Terminal

This procedure can be used to reset the transaction and load status of an Olivetti 6000 ATM.

To reset an Olivetti 6000 ATM, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F9** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully reset.

Requesting Terminal and Supplies Status Information

This procedure can be used to request terminal and supplies status information for an Olivetti 6000 ATM.

To request the terminal and supplies status for an Olivetti 6000 ATM, perform the following steps:

1. Enter a valid Olivetti 6000 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 32.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F2** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages providing the current terminal and supplies status.

ACI Worldwide, Inc.

9: ATM Fujitsu Commands Screen (Screen 37)

This section describes how to execute commands from the Fujitsu Commands screen. Access this screen from the DCT Menu as screen 37. This screen allows you to download configuration and communications key information to Fujitsu 4000, 6000, 6100, and 7000 ATMs as well as to perform other important ATM functions.

The Fujitsu Device Handler process, which supports the 4000, 6000, and 6100 ATMs, is a superset of the Diebold 910 Device Handler process. Therefore, additional information about BASE24-atm support of these Fujitsu ATMs can be found in the *BASE24-atm Diebold 910/911/912 Device Support Manual*.

The Fujitsu 7 Device Handler process supports the 7000 ATM. Additional information about BASE24-atm support for the 7000 ATM can be found in the ATxxFUJ7.FUJ7MAN file, where *xx* is the number of the current release.

This section contains the following information for DCT screen 37:

- A description of how configuration information is downloaded
- An example screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks

Loading Configuration Information

DCT screen 37 screen allows you to download configuration information to Fujitsu 4000, 6000, 6100, and 7000 ATMs. This information is taken from the Fujitsu configuration files (CNFGFUJ or CNFGFUJ7), which are resident in the BASE24-atm system. The Fujitsu 4000, 6000, and 6100 ATMs use the CNFGFUJ file, and the Fujitsu 7000 ATM uses the CNFGFUJ7 file. Modifications to the CNFGFUJ and CNFGFUJ7 can be made using the Fujitsu entry program (ENTFUJ) and Fujitsu 7000 entry program (ENTFUJ7), respectively.

Configuration information is downloaded and stored by load group. Two different load groups can be established in the configuration file for each Fujitsu terminal. Group 0000, which can be downloaded to any Fujitsu ATM, maintains basic information about screens, states, and financial institution tables (FITs) used by all Fujitsu terminals. A second, customized load group maintains information specific to certain types of Fujitsu terminals and is only downloaded to those terminals.

For example, if only certain terminals support Fast Cash transactions, special states and screens are set up in the configuration file to implement Fast Cash transactions at these terminals. These special states and screens are set up in a customized load group.

The number of the customized load group for each ATM terminal is specified in the Terminal Data File record for that ATM, using the TERMINAL GROUP field shown on BASE24-atm Terminal Data files (ATD) screen 7.

Information maintained in load group 0000 includes states, screens, FITs, and miscellaneous data. Information maintained in customized load groups is limited to states, screens, and miscellaneous data groups. Miscellaneous data groups include the following:

- Depository printer parameters
- The number of bad card reads required before the ATM transmits an unsolicited status message
- Logical Unit Number (LUNO)
- Up to 14 software timers for customer transactions

Whenever one of the download commands shown on DCT screen 37 is executed, miscellaneous data from both load group 0000 and the customized load group is also downloaded. When configuration information from both groups is downloaded, the information from the customized load group overwrites corresponding group 0000 data.

DCT Screen 37

DCT screen 37 screen allows you to download configuration information to Fujitsu 4000, 6000, and 6100 ATMs. DCT screen 37 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT   FUJITSU COMMANDS           LLLL           YY/MM/DD  HH:MM  37 OF 46

      ATM TERMINAL ID: _____      FIID: ____

1. LOAD GROUP
2. LOAD GROUP SCREEN      0
3. LOAD GROUP STATE      0
4. LOAD SCREEN            0
5. LOAD STATE             0
6. LOAD KEY               _
7. LOAD MAC KEY

      LOAD OPTION: _ (ENTER 1 THROUGH 7, THEN PRESS F1)

SEND STATUS OPTION: _

***** BASE24 *****
NEW PAGE:      FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F1-ENTR F3-OPEN F4-LOAD F5-CLOSE F7-GOTO F9-RESET F13-STAT F14-SUPLY F15-ZERO

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the Terminal Data File.

Field Length: 1–16 alphanumeric characters

Required Field: Yes

Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered, representing all financial institution identifiers.

Field Length: 1–4 alphanumeric characters

Required Field: No

Default Value: ****

LOAD GROUP — An option to download all configuration, communications key, and miscellaneous information from the load group specified in the Terminal Data File record of the terminal. The information downloaded also includes configuration and miscellaneous data from load group 0000. Select this option by entering a value of 1 in the LOAD OPTION field.

Enter information into one of the following five fields, depending on the data you want to download.

LOAD GROUP SCREEN — The screen number to be downloaded from the load group identified in the Terminal Data File record of the terminal. Miscellaneous data from the customized load group and load group 0000 is also downloaded. Select this option by entering a value of 2 in the LOAD OPTION field.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD GROUP STATE — The state number to be downloaded from the load group identified in the Terminal Data File record of the terminal. Miscellaneous data from both the customized load group and load group 0000 is also downloaded. Select this option by entering a value of 3 in the LOAD OPTION field.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD SCREEN — The screen number from load group 0000 that you want to download to the ATM. Miscellaneous data from both the customized load group and load group 0000 is also downloaded. Select this option by entering a value of 4 in the LOAD OPTION field.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD STATE — The state number from load group 0000 that you want to download to the ATM. Miscellaneous data from both the customized load group and load group 0000 is also downloaded. Select this option by entering a value of 5 in the LOAD OPTION field.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD KEY — A code specifying the decryption option for downloading a new communications key. Currently, the Fujitsu Device Handler process does not support changing the master key of the ATM. Select this option by entering a value of 6 in the LOAD OPTION field. Valid values are as follows:

- 1 = Decrypt new master key using current master key (not currently supported).
- 2 = Decrypt new communications key using current master key.
- 3 = Decrypt new communications key using current communications key.
- 4 = Use power up communications key as current communications key (not currently supported).

Field Length: 1 numeric character
Required Field: No
Default Value: No default value

LOAD MAC KEY — An option to generate and download a new message authentication code (MAC) key to the terminal. Select this option by entering a value of 7 in the LOAD OPTION field. This option is available for Fujitsu 7000 ATMs only.

LOAD OPTION — Specifies the option used to execute the requested function when the **F1** key is pressed. Valid values are as follows:

- 1 = LOAD GROUP
- 2 = LOAD GROUP SCREEN
- 3 = LOAD GROUP STATE
- 4 = LOAD SCREEN
- 5 = LOAD STATE
- 6 = LOAD KEY
- 7 = LOAD MAC KEY

Field Length: 1 numeric character
Required Field: Yes
Default Value: No default value

SEND STATUS OPTION — A code specifying the subdevice for which status information is requested for a Fujitsu 7000 ATM. Valid values are as follows:

0 = Status all subdevices
2 = Receipt printer
3 = Journal printer
4 = Bill dispenser
5 = Card reader
6 = DES chip
8 = Depository
9 = Floppy disk
B = Voice guidance
C = Camera
D = Electronic journal
E = MICR depository with imaging (MDI)
F = Coin dispenser unit (CDU)

Field Length: 1 alphanumeric character
Required Field: No
Default Value: 0

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 37. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Enter or Validate — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F3	Open — Opens the specified terminal.
F4	Load — Downloads all information from the load group specified in the Terminal Data File record and information from group 0000 to the terminal. Use of the F4 key is not dependent on the location of your cursor on the screen.
F5	Close — Closes the specified terminal.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F9	Reset — Resets the transaction and download status and clears all device faults for the terminal.
F10	Print — Sends the current image of DCT screen 37 to the spooler location specified on the BASE24 Logon screen.
F13	Send Status — Instructs the specified ATM to send hardware status information. This information is sent to the network log. For the Fujitsu 7000 ATM, the value in the SEND STATUS OPTION field specifies the subdevice for which hardware status information is returned.
F14	Send Supply — Instructs the specified ATM to send supplies status information. This information is sent to the network log.

Key	Description
F15	Zero — Instructs the specified ATM to zero (or clear) its subdevice supplies status information. This function is valid for Fujitsu 7000 ATMs only.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 37 to perform the following tasks:

- Download all configuration data
- Download all information from a customized load group
- Download a screen from a customized load group
- Download a state from a customized load group
- Download a screen from load group 0000
- Download a state from load group 0000
- Download a new communications key
- Download a new MAC key
- Open a terminal
- Close a terminal
- Reset transaction and download status and clear all device faults
- Request hardware status information
- Request supplies status information
- Clear subdevice supplies information

Procedures for performing these tasks are described below and on the following pages.

Downloading All Configuration Data

This procedure downloads all information from the customized load group specified in the Terminal Data File record and all information from group 0000. This information includes financial institution tables (FITs), screens, states, communications key information, and miscellaneous data.

To download all configuration data, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).

3. Press the **F4** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the information has been downloaded successfully.

Downloading All Information from a Customized Load Group

The LOAD GROUP command downloads screens, states, miscellaneous data, and communications key information from the customized load group identified in the Terminal Data File record of the terminal. In addition, this command downloads configuration and miscellaneous data from load group 0000. Information supplied by this command overwrites information that was previously downloaded to the ATM.

To download information from a customized load group, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter a value of 1 in the LOAD OPTION field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the load group information has been downloaded successfully.

Downloading a Screen from a Customized Load Group

The LOAD GROUP SCREEN command downloads a single screen from the customized load group identified in the Terminal Data File record of the terminal. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. When the new screen is downloaded to the ATM, it overwrites any previously downloaded screen data having the same number.

To download a screen from a customized load group, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the screen number to be downloaded in the LOAD GROUP SCREEN field.
4. Enter a value of 2 in the LOAD OPTION field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified screen and other information have been downloaded successfully.

Downloading a State from a Customized Load Group

The LOAD GROUP STATE command downloads a single state from the customized load group identified in the Terminal Data File record of the terminal. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. Changing a state changes the functionality of the screens associated with that state.

To download a state from a customized load group, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the state to be downloaded in the LOAD GROUP STATE field.
4. Enter a value of 3 in the LOAD OPTION field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified state and other information have been downloaded successfully.

Downloading a Screen from Load Group 0000

The LOAD SCREEN command downloads a new screen from load group 0000 to the ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. When the new screen is downloaded to the ATM, it overwrites any previously downloaded screen with the same number.

To download a screen from load group 0000, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the screen to be downloaded in the LOAD SCREEN field.
4. Enter a 4 in the LOAD OPTION field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified screen and other information have been downloaded successfully.

Downloading a State from Load Group 0000

The LOAD STATE command downloads a new state from load group 0000 to the ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. Changing a state changes the functionality of the screens associated with that state.

To download a state from load group 0000, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the state to be downloaded in the LOAD STATE field.
4. Enter a value of 5 in the LOAD OPTION field.

5. Press the **F1** key to send the command to the network.
6. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified state and other information have been downloaded successfully.

Downloading a New Communications Key

The LOAD KEY command downloads a new communications key to the ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. The new communications key overwrites the communications key that was previously used.

To download a new communications key, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the decryption option to be used in downloading the new communications key. Valid options are as follows:
 - 1 = Decrypt new master key using current master key (not currently supported).
 - 2 = Decrypt new communications key using current master key.
 - 3 = Decrypt new communications key using current communications key.
 - 4 = Use power up communications key as current communications key (not currently supported).
4. Enter a value of 6 in the LOAD OPTION field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the communications key and other information have been downloaded successfully.

Downloading a New MAC Key

The LOAD MAC KEY command generates and downloads a new MAC key to the ATM. The new MAC key overwrites the MAC key that was previously used. This command is available for 7000 terminals only.

To download a new MAC key, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter a value of 7 in the LOAD OPTION field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the MAC key has been generated and downloaded successfully.

Opening a Terminal

Fujitsu ATMs must be opened before they will accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened.

To open a Fujitsu ATM, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing a Fujitsu ATM displays a “TEMPORARILY OUT OF ORDER” message at the ATM and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed. To close a Fujitsu ATM, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Resetting Terminal Status Information and Clearing Faults

This procedure can be used to reset the hardware and supplies status and clear all device faults for a Fujitsu ATM. To reset a Fujitsu ATM, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F9** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully reset.

Requesting Hardware Status Information

This procedure allows you to request the current status of hardware at the specified Fujitsu ATM. To request the hardware status from a Fujitsu ATM, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the subdevice status option code in the SEND STATUS OPTION field if you need the status of a specific subdevice. This step applies to 7000 terminals only.
4. Press the **F13** key to send the command to the network.
5. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating the current status of hardware at the terminal.

Requesting Supply Status Information

This procedure allows you to request the current status of supplies at the specified Fujitsu ATM. To request the supplies status from a Fujitsu ATM, perform the following steps:

1. Enter a valid Fujitsu terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F14** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating the current status of supplies at the terminal.

Clearing Subdevice Supply Status Information

This procedure allows you to clear (or zero out) the supply status information for subdevices at the specified Fujitsu 7000 ATM. To clear subdevice supply status information at a Fujitsu 7000 ATM, perform the following steps:

1. Enter a valid Fujitsu 7000 terminal identifier in the ATM TERMINAL ID field on DCT screen 37.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F15** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the subdevice supply status at the terminal was successfully cleared.

10: ATM IBM 36XX Commands Screen (Screen 38)

This section describes how to execute commands using the IBM 36XX Commands screen. Access this screen from the DCT Menu as screen 38. This screen allows you to perform various functions on IBM 36XX-series ATM terminals. Supported ATM models include the IBM 3614 and the IBM 3624 version 7 and 8.

Additional information about BASE24-atm support of IBM 3624 ATMs can be found in the ***BASE24-atm IBM 3624 Device Support Manual***.

This section contains the following information for DCT screen 38:

- An example screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks
- Descriptions of the secondary screens that you can access from DCT screen 38

DCT Screen 38

DCT screen 38 allows you to perform various functions on IBM 36XX-series ATM terminals. Many of the fields on this screen are commands that can be executed. To use these fields, place the cursor to the left of the field name and press the **F1** key. DCT screen 38 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT   IBM 36XX COMMANDS           LLLL           YY/MM/DD  HH:MM  38 OF 46

  ATM TERMINAL ID: _____  FIID: _____

  _ CHANGE COMMUNICATIONS KEY           _ RECOVER BASE COMMUNICATIONS KEY
  _ CHANGE DISPLAY MESSAGE              _ JOURNAL PRINT
  _ CLOSE IMMEDIATE
  _ DEACTIVATE SESSION
  _ DISPLAY CUSTOMIZED OPTION           _ DISPLAY VERSION DATA
  _ DISPLAY MAINTENANCE DATA
  _ DISPLAY LAST TRANSACTION STATUS
  _ SUSPEND                             _ RELEASE
  _ SERVICE
  _ CHANGE OPTION DATA  00  <option data>_____
  _ NAME TRACE FILE _____
  _ TRACE ON                           _ TRACE OFF
  _ RESET

***** BASE24 *****
NEW PAGE:           FILE DESTINATION:           NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F4-LOAD F5-CLOSE F7-GOTO F8-LOADKEY F16-EXIT

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the Terminal Data File.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

CHANGE COMMUNICATIONS KEY — Downloads a new communications key to the terminal. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

RECOVER BASE COMMUNICATIONS KEY — Causes the ATM to revert to using the base communications key. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

CHANGE DISPLAY MESSAGE — Temporarily replaces a display message at the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

JOURNAL PRINT — Prints a message on a blank receipt at the ATM and stores that receipt in the escrow hopper of the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

CLOSE IMMEDIATE — Immediately closes the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DEACTIVATE SESSION — Deactivates the SNA session between the ATM and its IBM 36XX-series Device Handler process. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DISPLAY CUSTOMIZED OPTION — Sends customized option data for the ATM to the network logging facility. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DISPLAY VERSION DATA — Sends configuration version data for the ATM to the network logging facility. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DISPLAY MAINTENANCE DATA — Sends maintenance data for the ATM to the network logging facility. Maintenance data includes machine status, error log, error statistics, bill counters, configuration data, transaction sequence numbers, feed calibrations, required intervention code, and machine control flags. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DISPLAY LAST TRANSACTION STATUS — Sends the status of the last transaction data for the ATM to the network logging facility. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

SUSPEND — Suspends operation of the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

RELEASE — Releases a suspended ATM, allowing it to return to normal operation. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

SERVICE — Places the ATM in service mode. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

CHANGE OPTION DATA — Indicates the number of the customized option data to be used by an ATM. Enter the number of the option to be changed to the right of the field name. Refer to the ATM's documentation from IBM for valid values.

After entering values in the CHANGE OPTION DATA and <option data> fields, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 2 decimal characters
Required Field: Yes, if the CHANGE OPTION DATA command is selected.
Default Value: 00

<option data> — The option data in hexadecimal format to be changed using the CHANGE OPTION DATA command. Refer to the ATM's documentation from IBM for valid values.

Field Length: 40 hexadecimal characters
Required Field: Yes, if the CHANGE OPTION DATA command is selected.
Default Value: No default value

NAME TRACE FILE — Names a file or device to which trace messages from the ATM are directed. Enter the file or device name to the right of the field name. This name must be a valid Tandem file or device name.

After entering a value in the NAME TRACE FILE field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 35 alphanumeric characters

Required Field: Yes, if the NAME TRACE FILE command is selected.

Default Value: No default value

TRACE ON — Turns on the BASE24 trace facility. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

TRACE OFF — Stops the BASE24 trace facility. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

RESET — Resets SNA protocol information. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 38. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Enter — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F2	Status — Displays status information for the specified terminal on the network logging facility.
F3	Open — Opens the specified terminal.
F4	Load — Downloads all information from the configuration file to the specified terminal. Use of the F4 key is not dependent on the location of your cursor on the screen.
F5	Close — Closes the specified terminal.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F8	Loadkey — Downloads a new communications key to the specified terminal.
F10	Print — Sends the current image of DCT screen 38 to the spooler location specified on the BASE24 Logon screen.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 38 to perform the following tasks:

- Download the communications key
- Recover a base communications key
- Change the display message
- Print a journal message
- Close an ATM immediately
- Deactivate an SNA session
- Display customized option data
- Display configuration version data
- Display maintenance data
- Display the last transaction status
- Suspend operation of an ATM
- Release a suspended ATM
- Place an ATM in service mode
- Change customized option data
- Name a trace file
- Start the trace facility
- Stop the trace facility
- Reset the SNA protocol
- Open a terminal
- Close a terminal
- Request terminal status information
- Download configuration information

Procedures for performing these tasks are described on the following pages.

Downloading the Communications Key

The CHANGE COMMUNICATIONS KEY command changes the data encryption communications key to a random value and downloads the new value to the ATM. Sets of communications keys are stored by both BASE24-atm and an IBM 36XX-series terminal, each of which maintains its own encrypted version of the key.

You can use one of two procedures to change a communications key. Each of these procedures is described below. The first procedure uses the CHANGE COMMUNICATIONS KEY field. The second procedure uses the **F8** key.

To change the communications key using the CHANGE COMMUNICATIONS KEY field, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the CHANGE COMMUNICATIONS KEY field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the new communications key has been downloaded successfully.

To change the communications key using the **F8** key, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F8** key to send the command to the network.
4. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the new communications key has been downloaded successfully.

Recovering the Base Communications Key

The RECOVER BASE COMMUNICATIONS KEY command causes the ATM to revert to the base communications data encryption key. This command allows the IBM 36XX-series Device Handler process to resynchronize transaction sequence numbering.

To recover the base communications key, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the RECOVER BASE COMMUNICATIONS KEY field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the ATM has reverted to the base communications key.

Changing the Display Message

The CHANGE DISPLAY MESSAGE command replaces a display message in the memory of the ATM with a temporary display message such as a holiday or marketing message. When the ATM is reloaded, the original message is displayed.

To temporarily replace a display message, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the CHANGE DISPLAY MESSAGE field name.
4. Press the **F1** key to display the Display Message screen. This screen is described later in this section, under the topic “Display Message Screen.”

5. Enter values in the MSG NUMBER and MSG TEXT fields on the Display Message screen.
6. Press the **F1** key to send the modified message text to the ATM.
7. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 5–6.
8. Check the network logging facility for messages indicating that the replacement message has been received by the terminal.
9. Press the **F2** key to return to DCT screen 38.

Printing a Journal Message

The JOURNAL PRINT command prints a message on blank receipt paper in the ATM and transports it to the escrow hopper of the ATM. You can use this command to leave messages for institution personnel who service the ATM.

To print a journal message, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the JOURNAL PRINT field name.
4. Press the **F1** key to display the Journal Message screen. This screen is described later in this section, under the topic “Journal Message Screen.”
5. Enter the message into the JOURNAL TEXT field on the Journal Message screen.
6. Press the **F1** key to send the composed message to the ATM.
7. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 5–6.
8. Check the network logging facility for messages indicating that the journal message has been printed and stored at the specified terminal.
9. Press the **F2** key to return to DCT screen 38.

Immediately Closing an ATM

The CLOSE IMMEDIATE command immediately closes an ATM regardless of its current state.

To close an ATM immediately, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the CLOSE IMMEDIATE field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the ATM has been closed successfully.

Deactivating an SNA Session

The DEACTIVATE SESSION command deactivates the Systems Network Architecture (SNA) session between the ATM and the IBM 36XX-series Device Handler process. Use this command to reset SNA deadlock conditions. This command does not affect the external status of the ATM. If, for example, the ATM is open when this command is executed, the ATM appears to be open until the next attempt to use the ATM.

To deactivate an SNA session, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the DEACTIVATE SESSION field name.
4. Press the **F1** key to send the command to the network.

5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the SNA session has been deactivated.

Displaying the Customized Option Data

The DISPLAY CUSTOMIZED OPTION command displays customized option data for the ATM on the network logging facility. The ATM transmits the customized option data to the Device Handler process, which then sends it to the log.

To display customized options on the network logging facility, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the DISPLAY CUSTOMIZED OPTION field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility to view the customized option data.

Displaying Configuration Version Data

The DISPLAY VERSION DATA command displays configuration version data for an ATM on the network logging facility. For more information on ATM configuration version data, refer to the *IBM 3624 Programmer's Guide*.

To display configuration version data on the network logging facility, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.

2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the DISPLAY VERSION DATA field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility to view the configuration version data for the ATM.

Displaying Maintenance Data

The DISPLAY MAINTENANCE DATA command formats the 112-byte block of internal maintenance data at the ATM into a hexadecimal string and records it on the network logging facility. Maintenance data includes machine status, error log, error statistics, bill counters, configuration data, transaction sequence numbers, feed calibrations, required intervention code, and machine control flags. Refer to the vendor’s documentation for descriptions of these fields.

To record maintenance data on the network logging facility, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the DISPLAY MAINTENANCE DATA field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility to view the maintenance data for the ATM.

Displaying the Last Transaction Status

The DISPLAY LAST TRANSACTION STATUS command sends status information for the last transaction at the ATM to the network logging facility. This status information can be used to recover a transaction failure.

To display the status of the last transaction at this ATM, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the DISPLAY LAST TRANSACTION STATUS field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility to view status information for the last transaction at the ATM.

Suspending the Operation of an ATM

The SUSPEND command suspends operation of the ATM. While operation is suspended, the ATM remains open but cannot process customer transactions. When a card is inserted during ATM suspension, the ATM screen displays the message “PLEASE WAIT A FEW MOMENTS.” Use the RELEASE command to return a suspended ATM to normal operation.

To suspend operation of an ATM, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the SUSPEND field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the ATM has been suspended.

Releasing a Suspended ATM

The RELEASE command releases or opens a suspended ATM, allowing it to return to normal operation.

To release a suspended ATM, perform the following steps:

1. Enter the IBM 36XX-series ATM terminal identifier of the ATM you want to release in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the RELEASE field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the suspended ATM has been released.

Placing an ATM in Service Mode

The SERVICE command places the ATM in service mode. Use this command when an ATM does not accept administrative cards. This command can be executed when an ATM is open, closed, or inactive.

To place an ATM in service mode, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the SERVICE field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the ATM has been placed in service mode.

Changing the Customized Option Data

The CHANGE OPTION DATA command changes the customized option data used by an ATM. New option data submitted to the ATM replaces the current option data.

To change customized option data, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the option to be changed to the right of the CHANGE OPTION DATA field.
4. Enter the data to be changed on the line to the right of the CHANGE OPTION DATA field. This unlabeled field has a maximum of 40 hexadecimal characters.
5. Place the cursor to the left of CHANGE OPTION DATA.
6. Press the **F1** key to send the command to the network.
7. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the customized option data for the specified terminal has been changed.

Naming a Trace File

The NAME TRACE FILE command names a file or device to which trace messages from the ATM are sent.

To specify a trace file name or device name, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the trace file name or device name on the line to the right of the NAME TRACE FILE field (35 characters maximum). This name must be a valid Tandem file or device name.

4. Place the cursor to the left of the NAME TRACE FILE field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the trace file or device has been named.

Starting the Trace Facility

The TRACE ON command starts the BASE24 trace facility, which sends a copy of all messages between the ATM and BASE24 to the currently designated trace file or device.

To start the trace facility, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the TRACE ON field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the trace facility has been started.

Stopping the Trace Facility

The TRACE OFF command stops the BASE24 trace facility, which terminates the message flow to the currently designated trace file or device.

To stop the trace facility, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).

3. Place the cursor to the left of the TRACE OFF field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the trace facility has been stopped.

Resetting the SNA Protocol

The RESET command resets the SNA protocol information.

To reset SNA protocol information, perform the following steps:

1. Enter a valid IBM 36XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the RESET field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to verify that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the SNA protocol has been reset.

Opening a Terminal

IBM 36XX-series ATMs must be opened before they will accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened.

To open an IBM 36XX-series ATM, perform the following steps:

1. Enter a valid IBM 36XX-series terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it does not, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing an IBM 36XX-series ATM displays a “TEMPORARILY OUT OF ORDER” message and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed. To close an IBM 36XX-series ATM, perform the following steps:

1. Enter a valid IBM 36XX-series terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it does not, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Requesting Terminal Status Information

This procedure allows you to request the current status of the specified IBM 36XX-series ATM. To request the status from an IBM 36XX-series ATM, perform the following steps:

1. Enter a valid IBM 36XX-series terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F2** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it does not, repeat steps 1–3.
5. Check the network logging facility for messages providing the current status of the terminal.

Downloading Configuration Information

This procedure allows you to download configuration information from the terminal configuration file to the specified IBM 36XX-series ATM. To download configuration information to an IBM 36XX-series ATM, perform the following steps:

1. Enter a valid IBM 36XX-series terminal identifier in the ATM TERMINAL ID field on DCT screen 38.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F4** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it does not, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal was successfully loaded.

Secondary Screens

Certain procedures on DCT screen 38 require that you access additional screens to perform the procedures. The following additional screens are described in this section:

- Display Message screen
- Journal Message screen

Display Message Screen

The Display Message screen allows you to replace a display message in the memory of the ATM with a temporary display message such as a holiday or marketing message. The temporary message is displayed until the ATM is reloaded, at which time it redisplay the original display message. Refer to the topic “Changing the Display Message” previously described in this section for information about accessing the Display Message screen. The Display Message screen is shown below, followed by field descriptions and function key definitions.

```

ATM TERMINAL ID: _____ FIID: ****

MSG NUMBER  0000

MSG TEXT
*****
*                                     *
*                                     *
*                                     *
*                                     *
*                                     *
*                                     *
*****

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
DEPRESS FKEY1 TO SEND TEXT, F2-RETURN TO INITIAL SCREEN      F7-GOTO

```


ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This field was entered on DCT screen 38.

Field Length: System-protected

FIID — The identifier of the financial institution that owns the ATM terminal. This field was entered on DCT screen 38.

Field Length: System-protected

MSG NUMBER — The number of the display screen whose message you want to modify.

Field Length: 4 numeric characters

Required Field: Yes

Default Value: 0000

MSG TEXT — The text of the replacement message in the message text box (outlined by asterisks). You can use any combination of upper and lower case alphanumeric characters. To enter a quotation mark ("), use two consecutive apostrophes.

Field Length: Up to six lines of text, with up to 40 characters per line

Required Field: Yes

Default Value: No default value

Function Keys

The following table shows the functions assigned to the function keys on the Display Message screen. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Send Text — Sends the modified text message to the ATM.
F2	Return To Initial Screen — Returns you to DCT screen 38.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F10	Print — Sends the current image of the Display Message screen to the spooler location specified on the BASE24 Logon screen.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Journal Message Screen

The Journal Message screen prints a message on blank receipt paper in the ATM and transports it to the escrow hopper of the ATM. You can use this command to leave messages for institution personnel who service the ATM. Refer to the topic “Printing a Journal Message” previously described in this section for information about accessing the Journal Message screen. The Journal Message screen is shown below, followed by field descriptions and function key definitions.

```

ATM TERMINAL ID: _____ FIID: ****

JOURNAL TEXT
*****
*
*
*
*
*****

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
DEPRESS FKEY1 TO SEND TEXT, F2-RETURN TO INITIAL SCREEN      F7-GOTO

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This field was entered on DCT screen 38.

Field Length: System-protected

FIID — The identifier of the financial institution that owns the ATM terminal. This field was entered on DCT screen 38.

Field Length: System-protected

JOURNAL TEXT — The message you want to print in the journal text box (outlined by asterisks). Only uppercase A–Z, hyphen (-), apostrophe ('), and slash (/) characters or the numbers 0–9 can be printed on the receipt printer. To enter a quotation mark ("), use two consecutive apostrophes.

Field Length: Up to four lines of text, with up to 34 characters per line
Required Field: Yes
Default Value: No default value

Function Keys

The following table shows the functions assigned to the function keys on the Journal Message screen. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Send Text — Sends the journal message to the ATM.
F2	Return To Initial Screen — Returns you to DCT screen 38.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F10	Print — Sends the current image of the Journal Message screen to the spooler location specified on the BASE24 Logon screen.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

ACI Worldwide, Inc.

11: ATM Diebold Commands Screen (Screen 39)

This section describes how to execute commands from the ATM Diebold Commands screen. Access this screen from the DCT Menu as screen 39. This screen allows you to download configuration and communications key information to Diebold 9XX-series and CashSource Plus ATMs as well as to perform other important ATM functions. These Diebold series include Diebold ATM models 910, 911, 911L, 912, and CashSource Plus.

Additional information for BASE24-atm support of Diebold 910/911/912 ATMs can be found in the ***BASE24-atm Diebold 910/911/912 Device Support Manual***. Additional information for BASE24-atm support of Diebold CashSource Plus ATMs can be found in the ATxxDCSP.DCSPMAN file on the Tandem system, where *xx* is the number of the current release. These manuals contain descriptions of BASE24-atm software support for Diebold ATMs and information from the Diebold entry program that is used to modify the Diebold configuration files CNFG910 and CNFG912. The Diebold CashSource Plus terminal does not use a downloadable configuration file. Any screen or logic flow configuration changes for the Diebold CashSource Plus terminal must be performed manually using operator menus at the ATM. The only data that can be downloaded from BASE24-atm to a Diebold CashSource Plus ATM include a new PIN encryption key, the health message interval timer, and a surcharge amount. This data is obtained from the terminal's Terminal Data File record.

This section contains the following information about DCT screen 39:

- A description of how configuration information is downloaded
- An example screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks

Downloading Configuration Information

DCT screen 39 allows you to download configuration information to Diebold 9XX-series ATMs. For 9XX-series terminals, this information is taken from the Diebold configuration files (CNFG910 or CNFG912) that are resident on the BASE24-atm system. For Diebold CashSource Plus terminals, this information is obtained from the terminal's Terminal Data File record.

9XX-Series Terminals

Configuration information is downloaded by load group. Two different load groups can be established in the configuration file for each Diebold terminal. Load group 0000, which can be downloaded to any Diebold ATM, maintains basic information about screens, states, and financial institution tables (FITs) used by all terminals.

A second load group maintains information specific to certain types of Diebold terminals and is only downloaded to those terminals. For example, if only certain terminals support Fast Cash transactions, special states and screens are set up in the configuration file to implement Fast Cash transactions at these terminals. These special states and screens are set up as a customized load group.

The number of the customized load group for each ATM terminal is specified in the TERMINAL GROUP field on BASE24-atm Terminal Data files (ATD) screen 7.

Information maintained in load group 0000 includes states, screens, FITs, and miscellaneous data. Information maintained in customized load groups is limited to states, screens, and miscellaneous data. Miscellaneous data includes the following information:

- Depository printer parameters
- The number of bad card reads required before the ATM transmits an unsolicited status message
- Logical Unit Number (LUNO)
- Up to 14 timers for customer transactions

Whenever one of the download commands from DCT screen 39 is executed, miscellaneous data from both load group 0000 and the customized load group is also downloaded. When configuration information from both groups is downloaded, the information from the customized load group overrides corresponding load group 0000 data.

CashSource Plus Terminals

The new PIN encryption key, health message interval timer, and surcharge amount can be downloaded from the terminal's Terminal Data File record. When you initiate a download to a CashSource Plus terminal by pressing the **F4** key, the Device Handler process sets a flag in the terminal's Terminal Data File record, indicating that a download is requested. In the next response sent to the terminal, the Device Handler process instructs the terminal to send a configuration load request to BASE24. The aforementioned data is then sent in the configuration load response.

DCT Screen 39

DCT screen 39 allows you to download configuration information to Diebold 9XX-series or CashSource Plus ATMs. Many of the fields on this screen are commands that can be executed on 9XX-series terminals. To use these fields, place the cursor to the left of the field name and press the **F1** key. DCT screen 39 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```
BASE24-DCT    DIEBOLD COMMANDS          LLLL          YY/MM/DD  HH:MM  39 OF 46
```

```
ATM TERMINAL ID:
```

```
FIID:
```

```
_ LOAD GROUP          _ LOAD SCREEN      0  _ LOAD MAC KEY
_ LOAD GROUP SCREEN    0  _ LOAD STATE      0
_ LOAD GROUP STATE     0  _ LOAD PIN KEY
```

```
***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-ENTER  F3-OPEN  F4-LOAD  F5-CLOSE  F7-GOTO  F9-RESET  F12-HELP
```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the Terminal Data File.

Field Length: 1–16 alphanumeric characters

Required Field: Yes

Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

LOAD GROUP — Downloads configuration, communications keys, and miscellaneous information from the customized load group specified in the Terminal Data File record for the 9XX-series terminal. Configuration and miscellaneous data information is also downloaded from load group 0000. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOAD SCREEN — Downloads a specified screen from load group 0000. Miscellaneous data from both the customized load group specified in the Terminal Data File record of the 9XX-series terminal and load group 0000 is also downloaded. Enter the screen number from load group 0000 that you want to download to the ATM to the right of the LOAD SCREEN field name.

After entering a value in the LOAD SCREEN field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD MAC KEY — Downloads a new message authentication (MAC) key to the 9XX-series ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOAD GROUP SCREEN — Downloads a specified screen from the customized load group identified in the Terminal Data File record for the 9XX-series terminal. Miscellaneous data from the customized load group specified in the Terminal Data File record of the terminal and load group 0000 is also downloaded. Enter the screen number to be downloaded to the right of the LOAD GROUP SCREEN field name.

After entering a value in the LOAD GROUP SCREEN field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD STATE — Downloads a specified state from load group 0000 for the 9XX-series terminal. Miscellaneous data from both the customized load group specified in the Terminal Data File record of the terminal and load group 0000 is also downloaded. Enter the state number from load group 0000 that you want to download to the right of the LOAD STATE field name.

After entering a value in the LOAD STATE field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD GROUP STATE — Downloads a state from the customized load group identified in the Terminal Data File for the 9XX-series terminal. Miscellaneous data from both the customized load group specified in the Terminal Data File record and load group 0000 is also downloaded. Enter the state number to be downloaded to the right of the LOAD GROUP STATE field name.

After entering a value in the LOAD GROUP STATE field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD PIN KEY — Specifies the decryption option for the new communications key. Enter the decryption option to the right of the LOAD PIN KEY field name. Currently, the Diebold Device Handler process does not support changing the master key of the ATM. Valid decryption options are as follows:

- 1 = Decrypt new master key using current master key (not currently supported).
- 2 = Decrypt new communications key using current master key.
- 3 = Decrypt new communications key using current communications key.
- 4 = Use power up communications key as current communications key (not currently supported).

After entering a value in the LOAD PIN KEY field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length:	1 numeric character
Required Field:	No
Default Value:	No default value

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 39. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Select or Validate — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F3	Open — Opens the specified 9XX-series terminal. This function is not valid for CashSource Plus terminals.
F4	Load — For a 9XX-series terminal, this function downloads all of the configuration data in load group 0000 and the customized load group specified in the Terminal Data File record to the terminal. For a CashSource Plus terminal, this function initiates a download of the new PIN encryption key, health message interval timer, and surcharge amount from the terminal's Terminal Data File record. Use of the F4 key is not dependent on the location of your cursor on the screen.
F5	Close — Closes the specified 9XX-series terminal. This function is not valid for CashSource Plus terminals.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F9	Reset — Resets the transaction and download status of the terminal, and clears all device faults for the terminal.
F10	Print — Sends the image of DCT screen 39 to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 39. This Help screen lists the functions assigned to the function keys on DCT screen 39.

Key	Description
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 39 to perform the following tasks:

- Download all configuration data
- Download all information from a customized load group
- Download a screen from load group 0000
- Download a new MAC key
- Download a screen from a customized load group
- Download a state from load group 0000
- Download a state from a customized load group
- Download a new communications key
- Open a terminal
- Close a terminal
- Reset a terminal and clear all device faults

Procedures for performing these tasks are presented below and on the following pages.

Downloading All Configuration Data

For 9XX-series terminals, this procedure downloads all information from the customized load group specified in the Terminal Data File record for the terminal and all information from load group 0000. This information includes financial institution tables (FITs), screens, states, communications key information, and miscellaneous data.

For CashSource Plus terminals, this procedure initiates a download sequence for the PIN encryption key, health message interval timer, and surcharge amount from the terminal's Terminal Data File record.

To download information from both load groups, perform the following steps:

1. Enter a valid Diebold 9XX-series or CashSource Plus ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).

3. Press the **F4** key to send the command to the network.
4. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the load group information has been downloaded successfully.

Downloading All Information from a Customized Load Group

The LOAD GROUP command downloads screens, states, miscellaneous data, and communications key information from the customized load group identified in the Terminal Data File record for the 9XX-series terminal. In addition, this command downloads miscellaneous data from load group 0000. Information supplied by this command overwrites information that was previously downloaded to the ATM.

To download all information from a customized load group, perform the following steps:

1. Enter a valid Diebold 9XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD GROUP field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the load group information has been downloaded successfully.

Downloading a Screen from Load Group 0000

The LOAD SCREEN command downloads a new screen from load group 0000 to a Diebold 9XX-series ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. When the new screen is downloaded to the ATM, it overrides any previously downloaded screen with the same number.

To download a screen from load group 0000, perform the following steps:

1. Enter a valid Diebold 9XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the screen you want to download to the right of the LOAD SCREEN field.
4. Place the cursor to the left of the LOAD SCREEN field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified screen and other information have been downloaded successfully.

Downloading a New MAC Key

The LOAD MAC KEY command downloads a new MAC key to a Diebold 9XX-series ATM. The new MAC key overrides the MAC key that was previously used.

To download a new MAC key, perform the following steps:

1. Enter a valid Diebold 9XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD MAC KEY field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the MAC key was downloaded successfully.

Downloading a Screen from a Customized Load Group

The LOAD GROUP SCREEN command downloads a single screen from the customized load group identified in the Terminal Data File record of a Diebold 9XX-series terminal. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. When the new screen has been downloaded to the ATM, it overrides any previously downloaded screen with the same number.

To download a screen from a customized load group, perform the following steps:

1. Enter a valid Diebold 9XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the screen you want to download to the right of the LOAD GROUP SCREEN field.
4. Place the cursor to the left of the LOAD GROUP SCREEN field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified screen and other information have been downloaded successfully.

Downloading a State from Load Group 0000

The LOAD STATE command downloads a new state from load group 0000 to a Diebold 9XX-series ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. Changing a state changes the functionality of the screens associated with that state.

To download a state from load group 0000, perform the following steps:

1. Enter a valid Diebold 9XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the state you want to download to the right of the LOAD STATE field.

4. Place the cursor to the left of the LOAD STATE field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified state and other information have been downloaded successfully.

Downloading a State from a Customized Load Group

The LOAD GROUP STATE command downloads a single state from the load group identified in the Terminal Data File record for a Diebold 9XX-series terminal. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. Changing a state changes the functionality of the screens associated with that state.

To download a state from a customized load group, perform the following steps:

1. Enter a valid Diebold 9XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the state you want to download to the right of the LOAD GROUP STATE field.
4. Place the cursor to the left of the LOAD GROUP STATE field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified state and other information have been downloaded successfully.

Downloading a New Communications Key

The LOAD PIN KEY command downloads a new communications key to a Diebold 9XX-series ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. The new communications key overrides the communications key that was previously used.

To download a new communications key, perform the following steps:

1. Enter a valid Diebold 9XX-series ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the decryption option to be used in downloading the key to the right of the LOAD PIN KEY field. Valid options are as follows:
 - 1 = Decrypt new master key using current master key (not currently supported).
 - 2 = Decrypt new communications key using current master key.
 - 3 = Decrypt new communications key using current communications key.
 - 4 = Use power up communications key as current communications key (not currently supported).
4. Place the cursor to the left of the LOAD PIN KEY field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the communications key and other information have been downloaded successfully.

Opening a Terminal

Diebold 9XX-series ATMs must be opened before they will accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened. This procedure is not valid for Diebold CashSource Plus ATMs.

To open a Diebold 9XX-series ATM, perform the following steps:

1. Enter a Diebold 9XX-series terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to send the command to the network.

4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing a Diebold 9XX-series ATM displays a “TEMPORARILY OUT OF ORDER” message at the ATM and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed.

Note: This procedure is not valid for Diebold CashSource Plus ATMs.

To close a Diebold 9XX-series ATM, perform the following steps:

1. Enter a valid Diebold 9XX-series terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Resetting Terminal Status Information and Clearing Faults

This procedure can be used to reset the transaction and download status and clear device faults for a Diebold 9XX-series or CashSource Plus ATM. To reset a Diebold 9XX-series or CashSource Plus ATM, perform the following steps:

1. Enter a valid Diebold 9XX-series or CashSource Plus terminal identifier in the ATM TERMINAL ID field on DCT screen 39.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F9** key to send the command to the network.

4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully reset.

ACI Worldwide, Inc.

12: ATM Diebold 10XX Commands Screen (Screen 40)

This section describes how to execute commands from the ATM 10XX Diebold Commands screen. Access this screen from the DCT Menu as screen 40. This screen allows you to download configuration and communications key information to Diebold 10XX ATMs as well as to perform other important ATM functions.

Additional information for BASE24-atm support of Diebold 10XX ATMs can be found in the ***BASE24-atm Diebold 10XX/478X Device Support Manual***. This manual contains descriptions of BASE24-atm software support for Diebold 10XX ATMs and information from the Diebold entry program that is used to modify the Diebold configuration file CNFG1000.

This section contains the following information about DCT screen 40:

- A description of how configuration information is downloaded
- An example screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks

Downloading Configuration Information

DCT screen 40 allows you to download configuration information to Diebold 10XX ATMs. This information is taken from the Diebold configuration file (CNFG1000) that is resident on the BASE24-atm system.

Configuration information is downloaded by load group. Two different load groups can be established in the configuration file for each Diebold terminal. Load group 0000, which can be downloaded to any Diebold ATM, maintains basic information about screens, states, and financial institution tables (FITs) used by all terminals.

A second load group maintains information specific to certain types of Diebold terminals and is only downloaded to those terminals. For example, if only certain terminals support Fast Cash transactions, special states and screens are set up in the configuration file to implement Fast Cash transactions at these terminals. These special states and screens are set up as a customized load group.

The number of the customized load group for each ATM terminal is specified in the **TERMINAL GROUP** field on BASE24-atm Terminal Data files (ATD) screen 7.

Information maintained in load group 0000 includes states, screens, FITs, and miscellaneous data. Information maintained in customized load groups is limited to states, screens, and miscellaneous data. Miscellaneous data includes the following information:

- Depository printer parameters
- The number of bad card reads required before the ATM transmits an unsolicited status message
- Logical Unit Number (LUNO)
- Up to 14 timers for customer transactions

Whenever one of the download commands from DCT screen 40 is executed, miscellaneous data from both load group 0000 and the customized load group is also downloaded. When configuration information from both groups is downloaded, the information from the customized load group overrides corresponding load group 0000 data.

Note: For Diebold 10XX ATMs configured as dial-up terminals, load commands can be stored in the ATM Dial-Up Command File (ADCF) until the terminal connects. Once a dial-up terminal initiates a connection, the load commands are processed on a first-in, first-out basis after the current transaction is processed.

DCT Screen 40

DCT screen 40 allows you to download configuration information to Diebold 10XX ATMs. Many of the fields on this screen are commands that can be executed. To use these fields, place the cursor to the left of the field name and press the **F1** key. DCT screen 40 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT    DIEBOLD 10XX COMMANDS    LLLL          YY/MM/DD  HH:MM  40 OF 46

      ATM TERMINAL ID:                      FIID:

      _ LOAD GROUP                      _ LOAD SCREEN      0  _ LOAD MAC KEY
      _ LOAD GROUP SCREEN      0  _ LOAD STATE      0  _ LOAD PUBLIC KEY
      _ LOAD GROUP STATE      0  _ LOAD PIN KEY      0  _ LOAD MASTER KEY
      _ LOAD EMV DATA          _ LOAD NOTE IDS      _ LOAD ALL KEYS

      THE FOLLOWING ARE ONLY APPLICABLE FOR 1000 TERMINALS WITH EMG

      _ COPY FONT      TO LIBRARY
      _ COPY ICON      0 TO LIBRARY
      _ COPY CELL DATA FROM LIBRARY      TO LIBRARY
      _ COPY      0 CELLS FROM LIBRARY      CELL      0 TO LIBRARY      CELL      0
      _ RESTORE STANDARD CONFIGURATION

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-ENTER F3-OPEN F4-LOAD F5-CLOSE F7-GOTO F9-RESET F12-HELP F14-PROOF LIST

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the BASE24-atm Terminal Data files.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered.

Field Length: 1–4 alphanumeric characters
 Required Field: No
 Default Value: ****

LOAD GROUP — Downloads configuration, communications keys, and miscellaneous information from the customized load group specified in the BASE24-atm Terminal Data files record for the terminal. Configuration and miscellaneous data information also is downloaded from load group 0000. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOAD SCREEN — Downloads a specified screen from load group 0000. Miscellaneous data from both the customized load group specified in the BASE24-atm Terminal Data files record of the terminal and load group 0000 is also downloaded. Enter the screen number from load group 0000 that you want to download to the ATM to the right of the LOAD SCREEN field name.

After entering a value in the LOAD SCREEN field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD MAC KEY — Downloads a new message authentication (MAC) key to the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOAD GROUP SCREEN — Downloads a specified screen from the customized load group identified in the BASE24-atm Terminal Data files record. Miscellaneous data from the customized load group specified in the BASE24-atm Terminal Data files record of the terminal and load group 0000 is also downloaded. Enter the screen number to be downloaded to the right of the LOAD GROUP SCREEN field name.

After entering a value in the LOAD GROUP SCREEN field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD STATE — Downloads a specified state from load group 0000. Miscellaneous data from both the customized load group specified in the BASE24-atm Terminal Data files record of the terminal and load group 0000 is also downloaded. Enter the state number from load group 0000 that you want to download to the right of the LOAD STATE field name.

After entering a value in the LOAD STATE field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD PUBLIC KEY — Initiates the message sequence in which the BASE24-atm system and the ATM authenticate each other and exchange public keys. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOAD GROUP STATE — Downloads a state from the customized load group identified in the BASE24-atm Terminal Data files. Miscellaneous data from both the customized load group specified in the BASE24-atm Terminal Data files record and load group 0000 is also downloaded. Enter the state number to be downloaded to the right of the LOAD GROUP STATE field name.

After entering a value in the LOAD GROUP STATE field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD PIN KEY — Specifies the decryption option for the new communications key. Enter the decryption option to the right of the LOAD PIN KEY field name. Currently, the Diebold Device Handler process does not support changing the master key of the ATM. Valid decryption options are as follows:

- 1 = Decrypt new master key using current master key (not currently supported).
- 2 = Decrypt new communications key using current master key.

- 3 = Decrypt new communications key using current communications key.
- 4 = Use power up communications key as current communications key (not currently supported).

After entering a value in the LOAD PIN KEY field, place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 1 numeric character
Required Field: No
Default Value: No default value

LOAD NOTE IDS — Downloads data to update the Note ID List in the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: 1 numeric character
Required Field: No
Default Value: No default value

LOAD MASTER KEY — Downloads the master key to the terminal. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOAD EMV DATA — Downloads all Europay, MasterCard, and Visa (EMV) application and EMV scheme data to a Diebold 10XX/478X ATM running Diebold's EMV Smart Card application or downloads the Wincor EMV AID Table to a Wincor D91X EMV terminal. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOAD ALL KEYS — Downloads all keys to the terminal. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

THE FOLLOWING ARE ONLY APPLICABLE FOR 1000 TERMINALS WITH EMG

The following commands provide support for Diebold 10XX/478X ATMs with Enhanced Monochrome Graphics (EMG). Terminals that support EMG contain an additional memory board dedicated to storing graphics data. EMG memory is divided into seven banks, six of which are supported by BASE24. Each of these banks holds eight libraries, and each library holds 128 cells. A cell is one screen element, such as a character in a font, or a part of a pictorial icon. A screen can display graphics from only one bank at a time. By moving cells between libraries, you can select any combination of graphics for display on a given screen. The Diebold *Enhanced Monochrome Graphics (EMG) Programming Manual* contains additional information about these concepts, and also provides a list of all fonts and icons that Diebold provides with the EMG module.

The following DCT commands allow you to move icons and character sets from one library to another and to restore the initial graphics configuration. Many of the commands require you to enter one or more values in an associated entry field.

COPY FONT — Specifies the font to be copied into a library. Valid values include uppercase letters, numbers from 1 to 9, and the following special characters:

: ; < = > ? @ [\] ^ _

The TO LIBRARY entry field on this line determines the target library to which the font is copied. After entering values in the COPY FONT and TO LIBRARY fields, place the cursor to the left of the COPY FONT field name and press the **F1** key to copy the font.

Field Length:	1 character
Required Field:	No
Default Value:	No default value

TO LIBRARY — The target library that receives font values from the COPY FONT command. Valid values for specifying library IDs are uppercase letters, numbers from 0 to 9, and the following special characters:

: ; < = > ? @ [\] ^ _

Field Length: 1 character
 Required Field: No
 Default Value: No default value

COPY ICON — A code specifying the icon that is to be copied to a library. Valid values are 000–254.

The TO LIBRARY entry field on this line determines the target library to which the icon is copied. After entering values in the COPY ICON and TO LIBRARY fields, place the cursor to the left of the COPY ICON field name and press the **F1** key to copy the icon.

Field Length: 3 numeric characters
 Required Field: No
 Default Value: 0

TO LIBRARY — The target library that receives the icon from the COPY ICON command. Valid values for specifying library IDs are uppercase letters, numbers from 0 to 9, and the following special characters:

: ; < = > ? @ [\] ^ _

Field Length: 1 character
 Required Field: No
 Default Value: No default value

COPY CELL DATA FROM LIBRARY — Specifies the originating library from which cells are to be copied. Valid values for specifying library IDs are uppercase letters, numbers from 0 to 9, and the following special characters:

: ; < = > ? @ [\] ^ _

The TO LIBRARY entry field on this line determines the target library to which cells are copied. After entering values in the COPY CELL DATA FROM LIBRARY and TO LIBRARY fields, place the cursor to the left of the COPY CELL DATA FROM LIBRARY field name and press the **F1** key to copy the cells.

Field Length: 1 character
Required Field: No
Default Value: 0

TO LIBRARY — The target library that receives cell data from the COPY CELL DATA FROM LIBRARY command. Valid values for specifying library IDs are uppercase letters, numbers from 0 to 9, and the following special characters:

: ; < = > ? @ [\] ^ _

Field Length: 1 character
Required Field: No
Default Value: No default value

COPY CELLS — Specifies the number of cells to copy from an originating library to a target library. Valid values are 001–128.

The following four fields are additional entry fields for the COPY CELLS command. The FROM LIBRARY field determines the originating library, the CELL field specifies the beginning cell number from which to start copying, the TO LIBRARY field determines the target library, and the last CELL field specifies the beginning cell number in the target library to which you want to copy the specified cells. After entering values in the COPY CELLS, FROM LIBRARY, CELL, TO LIBRARY, and CELL fields, place the cursor to the left of the COPY CELLS field name and press the **F1** key to copy the cells.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

FROM LIBRARY — The originating library from which cell data is to be copied. Valid values for specifying library IDs are uppercase letters, numbers from 0 to 9, and the following special characters:

: ; < = > ? @ [\] ^ _

Field Length: 1 character
 Required Field: No
 Default Value: No default value

CELL — Specifies the beginning cell number in the originating library from which the COPY CELLS command is to start copying.

Field Length: 3 numeric characters
 Required Field: No
 Default Value: 0

TO LIBRARY — Specifies the target library to which the COPY CELLS command is to copy. Valid values for specifying library IDs are uppercase letters, numbers from 0 to 9, and the following special characters:

: ; < = > ? @ [\] ^ _

Field Length: 1 character
 Required Field: No
 Default Value: No default value

CELL — Specifies the beginning cell number in the target library that the COPY CELLS command is to start copying.

Field Length: 3 numeric characters
 Required Field: No
 Default Value: 0

RESTORE STANDARD CONFIGURATION — Restores the initial graphics configuration from load group 0000. This information includes default screens, states, communications key information, and miscellaneous data. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 40. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Select or Validate — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F3	Open — Opens the specified terminal.
F4	Load — Downloads all of the configuration data in load group 0000 and the customized load group specified in the BASE24-atm Terminal Data files record to the terminal. Use of the F4 key is not dependent on the location of your cursor on the screen.
F5	Close — Closes the specified terminal.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F9	Reset — Resets the transaction and download status of the terminal, and clears all device faults for the terminal.
F10	Print — Sends the image of DCT screen 40 to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 40. This Help screen lists the functions assigned to the function keys on DCT screen 40.
F14	Proof List — Prints the Check Proof List File (CPLF) at the ATM. This function key can be used only with the BASE24-atm self-service banking (SSB) Device Handler extension module for Diebold 10XX/478X terminals. The CPLF is described in the <i>BASE24-atm Diebold 10XX/478X SSB Manual</i> .

Key	Description
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 40 to perform the following tasks:

- Download all configuration data
- Download all information from a customized load group
- Download a screen from load group 0000
- Download a new MAC key
- Download a screen from a customized load group
- Download a state from load group 0000
- Download a state from a customized load group
- Download a new communications key
- Download a public key
- Download a master key
- Download all keys
- Download EMV-specific data
- Copy a font to a library
- Copy an icon to a library
- Copy all cells from one library to another
- Copy specified cells from one library to another
- Restore the standard graphics configuration
- Open a terminal
- Close a terminal
- Reset a terminal and clear all device faults
- Print the Check Proof List File (CPLF) for a terminal

Procedures for performing these tasks are presented on the following pages.

Downloading All Configuration Data

This procedure downloads all information from the customized load group specified in the BASE24-atm Terminal Data files record for the terminal and all information from load group 0000. This information includes financial institution tables (FITs), screens, states, communications key information, and miscellaneous data.

To download information from both load groups, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F4** key to send the command to the network.
4. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the load group information has been downloaded successfully.

Downloading All Information from a Customized Load Group

The LOAD GROUP command downloads screens, states, miscellaneous data, and communications key information from the customized load group identified in the BASE24-atm Terminal Data files record for the terminal. In addition, this command downloads miscellaneous data from load group 0000. Information supplied by this command overwrites information that was previously downloaded to the ATM.

To download all information from a customized load group, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD GROUP field.
4. Press the **F1** key to send the command to the network.

5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the load group information has been downloaded successfully.

Downloading a Screen from Load Group 0000

The LOAD SCREEN command downloads a new screen from load group 0000 to the ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. When the new screen is downloaded to the ATM, it overrides any previously downloaded screen with the same number.

To download a screen from load group 0000, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the screen you want to download to the right of the LOAD SCREEN field.
4. Place the cursor to the left of the LOAD SCREEN field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified screen and other information have been downloaded successfully.

Downloading a New MAC Key

The LOAD MAC KEY command downloads a new MAC key to the ATM. The new MAC key overrides the MAC key that was previously used.

To download a new MAC key, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.

2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD MAC KEY field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the MAC key was downloaded successfully.

Downloading a Screen from a Customized Load Group

The LOAD GROUP SCREEN command downloads a single screen from the customized load group identified in the BASE24-atm Terminal Data files record of the terminal. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. When the new screen has been downloaded to the ATM, it overrides any previously downloaded screen with the same number.

To download a screen from a customized load group, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the screen you want to download to the right of the LOAD GROUP SCREEN field.
4. Place the cursor to the left of the LOAD GROUP SCREEN field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified screen and other information have been downloaded successfully.

Downloading a State from Load Group 0000

The LOAD STATE command downloads a new state from load group 0000 to the ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. Changing a state changes the functionality of the screens associated with that state.

To download a state from load group 0000, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the state you want to download to the right of the LOAD STATE field.
4. Place the cursor to the left of the LOAD STATE field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified state and other information have been downloaded successfully.

Downloading a State from a Customized Load Group

The LOAD GROUP STATE command downloads a single state from the load group identified in the BASE24-atm Terminal Data files record for the terminal. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. Changing a state changes the functionality of the screens associated with that state.

To download a state from a customized load group, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the state you want to download to the right of the LOAD GROUP STATE field.

4. Place the cursor to the left of the LOAD GROUP STATE field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified state and other information have been downloaded successfully.

Downloading a New Communications Key

The LOAD PIN KEY command downloads a new communications key to the ATM. In addition, this command downloads miscellaneous data from both load group 0000 and the customized load group. The new communications key overrides the communications key that was previously used.

To download a new communications key, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the decryption option to be used in downloading the key to the right of the LOAD PIN KEY field. Valid options are as follows:
 - 1 = Decrypt new master key using current master key (not currently supported).
 - 2 = Decrypt new communications key using current master key.
 - 3 = Decrypt new communications key using current communications key.
 - 4 = Use power up communications key as current communications key (not currently supported).
4. Place the cursor to the left of the LOAD PIN KEY field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the communications key and other information have been downloaded successfully.

Downloading a Public Key

This procedure initiates the message sequence in which the BASE24-atm system and the Diebold 10XX/478X ATM authenticate each other and exchange public keys. To initiate public key download processing, perform the following steps:

1. Enter a valid Diebold 10XX/478X ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD PUBLIC KEY field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the public key exchange was successful.

Downloading a Master Key

This procedure initiates the message sequence that results in downloading a master key to the Diebold 10XX/478X ATM. Before loading a new master key for the first time, a public key download must have been performed, as described above. To initiate master key download processing, perform the following steps:

1. Enter a valid Diebold 10XX/478X ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD MASTER KEY field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the master key has been downloaded successfully.

Downloading All Keys

This procedure initiates the message sequence that results in downloading up to four keys to the Diebold 10XX/478X ATM. The keys downloaded depend on whether the terminal supports the Automated Key Distribution System (AKDS).

For terminals that support AKDS, the Device Handler process downloads the following keys in the order shown, then opens the terminal.

1. Public key
2. Master key
3. MAC encryption key, if the MAC SUPPORT TYPE field on ATD screen 9 contains a value of 3
4. PIN encryption key, if the PIN ENCRYPT TYPE field on ATD screen 9 contains a value of 01, 03, 04, or 05

For terminals that do not support AKDS, the Device Handler process downloads only the MAC encryption key and the PIN encryption key. To initiate this key download processing, perform the following steps:

1. Enter a valid Diebold 10XX/478X ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD ALL KEYS field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating whether the ATM terminal supports AKDS and that the appropriate keys have been downloaded successfully.

Downloading EMV-Specific Data

The LOAD EMV DATA command downloads all Europay, MasterCard, and Visa (EMV) application and EMV scheme data to a Diebold 10XX/478X ATM running Diebold’s EMV Smart Card application or downloads the Wincor EMV AID Table to a Wincor D91X EMV terminal. Records are downloaded from the load group in the ATD.

To download the EMV application and scheme data or just the Wincor EMV AID Table, perform the following steps:

1. Enter a valid Diebold 10XX/478X ATM or Wincor D91X terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD EMV DATA field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” appears. If it does not appear, repeat steps 1–3.
6. Check the network logging facility for messages indicating that the specified data have been downloaded successfully.

Copying a Font to a Library

The COPY FONT command copies a font to a specified library. This procedure is valid only for Diebold 10XX/478X ATMs with Enhanced Monochrome Graphics (EMG).

To copy a font, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the font ID that you want to copy to the right of the COPY FONT field.
4. Enter the library ID that you want to copy to in the TO LIBRARY field (on the same line as the COPY FONT field).
5. Place the cursor to the left of the COPY FONT field.
6. Press the **F1** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the font has been copied successfully.

Copying an Icon to a Library

The COPY ICON command copies an icon to a specified library. This procedure is valid only for Diebold 10XX/478X ATMs with Enhanced Monochrome Graphics (EMG).

To copy an icon, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the icon number that you want to copy to the right of the COPY ICON field.
4. Enter the library ID that you want to copy to in the field to the right of the TO LIBRARY label (on the same line as the COPY ICON field).
5. Place the cursor to the left of the COPY ICON field.
6. Press the **F1** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the icon has been copied successfully.

Copying All Cells from One Library to Another

The COPY CELL DATA command copies data from all cells in one specified library to another library. This procedure is valid only for Diebold 10XX/478X ATMs with Enhanced Monochrome Graphics (EMG).

To copy all cells from one library to another, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the library ID that you want to copy to the right of the COPY CELL DATA FROM LIBRARY field.

4. Enter the library ID that you want to copy to in the field to the right of the TO LIBRARY label (on the same line as the COPY CELL DATA field).
5. Place the cursor to the left of the COPY CELL DATA field.
6. Press the **F1** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the library has been copied successfully.

Copying Specified Cells from One Library to Another

The COPY CELLS command copies certain cells from one library to another library. The cells to be copied must be consecutively numbered. This procedure is valid only for Diebold 10XX/478X ATMs with Enhanced Monochrome Graphics (EMG).

To copy cells from one library to another, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of cells you want to copy in the field between the COPY and the CELLS labels.
4. Enter the library ID that you want to copy from in the field to the right of the FROM LIBRARY label (on the same line as the COPY CELLS field).
5. Enter the cell number in the originating library that you want to begin copying from in the field to the right of the CELL label (before the TO LIBRARY label on the COPY CELLS line).
6. Enter the library ID that you want to copy to in the field to the right of the TO LIBRARY label (on the same line as the COPY CELLS field).
7. Enter the cell number in the target library that you want to begin copying to in the field to the right of the CELL label (the last field on the COPY CELLS line).
8. Place the cursor to the left of the COPY CELLS field.
9. Press the **F1** key to send the command to the network.

10. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–9.
11. Check the network logging facility for messages indicating that the cells have been copied successfully.

Restoring the Standard Graphics Configuration

The RESTORE STANDARD CONFIGURATION command restores the initial graphics configuration from load group 0000. This information includes default screens, states, communications key information, and miscellaneous data.

To restore the initial graphics configuration, perform the following steps:

1. Enter a valid Diebold 10XX ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the RESTORE STANDARD CONFIGURATION field.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the initial graphics configuration has been restored successfully.

Opening a Terminal

Diebold 10XX ATMs must be opened before they will accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened.

To open a Diebold 10XX ATM, perform the following steps:

1. Enter a Diebold 10XX terminal identifier in the ATM TERMINAL ID field on DCT screen 40.

2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing a Diebold 10XX ATM displays a “TEMPORARILY OUT OF ORDER” message at the ATM and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed. To close a Diebold 10XX ATM, perform the following steps:

1. Enter a valid Diebold 10XX terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Resetting Terminal Status Information and Clearing Faults

This procedure can be used to reset the transaction and download status and clear device faults for a Diebold 10XX ATM. To reset a Diebold 10XX ATM, perform the following steps:

1. Enter a valid Diebold 10XX terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F9** key to send the command to the network.

4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully reset.

Printing the Check Proof List File (CPLF)

This procedure allows you to print the Check Proof List File (CPLF) for an Diebold 10XX ATM. To print the CPLF, perform the following steps:

1. Enter a valid Diebold 10XX terminal identifier in the ATM TERMINAL ID field on DCT screen 40.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F14** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the CPLF has been successfully printed.

ACI Worldwide, Inc.

13: ATM Docutel 5100 Commands Screen (Screen 41)

This section describes how to execute commands using the ATM Docutel 5100 Commands screen. Access this screen from the DCT Menu as screen 41. This screen allows you to download configuration and communications key information to Docutel ETS 5100/5200 ATMs as well as to perform other important ATM functions.

This section contains the following information about DCT screen 41:

- Descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks
- Descriptions of the secondary screens that you can access from DCT screen 41

Downloading Configuration Information

DCT screen 41 allows you to download configuration information to Docutel ETS 5100/5200 ATMs. This screen also allows you to upload configuration information from Docutel ETS 5100/5200 ATMs to BASE24-atm. Configuration information is maintained in the Host Program Load (HPL) File and the CNFG5100 File, both of which are resident in the BASE24-atm system.

Configuration information is downloaded by load group. Two different load groups can be established in the configuration file for each Docutel ETS 5100/5200 terminal. Load group 0000, which can be downloaded to any Docutel ATM, maintains basic information used by all Docutel terminals. A second, customized load group maintains information specific to certain types of terminals and is only downloaded to those terminals. For example, if certain Docutel terminals support Fast Cash transactions, special states and screens are established for those terminals in a customized load group.

The number of the customized load group for each ATM terminal is specified in the Terminal Data File record for the ATM using the TERMINAL GROUP field on BASE24-atm Terminal Data files (ATD) screen 7.

Customized load groups are established by the institution using the Docutel ETS 5100 software cassette provided by the vendor. Configuration information from the cassette is written to the configuration file using the Docutel ETS 5100 Entry Program. This configuration file is then used for downloads.

DCT screen 41 supports downloading and uploading of the HPL File. It also supports two methods of downloading configuration data from the CNFG5100 File. Function key **F1** downloads configuration data from load group 0000, and then overlays it with configuration data from the customized load group. Function key **F9** downloads only the configuration data contained in the customized load group of the terminal.

DCT Screen 41

DCT screen 41 allows you to download configuration information to Docutel ETS 5100/5200 ATMs and upload configuration information from Docutel ETS 5100/5200 ATMs to BASE24-atm. Many of the fields on this screen are commands that can be executed. To use these fields, place the cursor to the left of the field name and press the **F1** key. DCT screen 41 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT  DOCUTEL 5100 COMMANDS  LLLL  ****  YY/MM/DD  HH:MM  41 OF 46
      ATM TERMINAL ID _____  FIID: ****
      LOADKEY OPTION _
-  HOST-CONTROLLED PROGRAM LOAD COMMANDS
      *** CONFIGURATION LOAD COMMANDS ***
-  LOAD RESET                      -  LOAD ALL
-  LOAD FIIT TABLE                -  LOAD SYSTEM PARAMETERS
-  LOAD SCREENS (ALL)              -  LOAD SCREEN 0
-  LOAD RECEIPT HEADER/TRAILER     -  LOAD TRAN PRINT FORMAT
-  LOAD RPQ CONTROL TABLE         -  LOAD DICTIONARY TABLE
-  LOAD SYSTEM TIMERS              -  LOAD SYSTEM ERROR TABLE
-  LOAD TRAN STATE TABLE          -  LOAD TRAN DEFINITION TABLE
-  LOAD TRAN DATA TABLE          -  LOAD TRAN CODE TABLE
-  LOAD TRAN SEQUENCE TABLE       -  LOAD TRAN AMOUNT TABLE
-  LOAD TRAN DESCRIPTION TABLE

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-ENTER F3-OPEN F5-CLOSE F8-LOADKEY F9-LOAD GROUP F12-HELP F13-RESET

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the Terminal Data File.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

LOADKEY OPTION — Specifies the decrypting option for the new communications key. Enter the decrypting option to the right of the field name. Currently, the Docutel Device Handler process does not support changing the master key of the terminal. Valid values are as follows:

- 1 = Decrypt new master key using current master key (not currently supported).
- 2 = Decrypt new communications key using current master key.
- 3 = Decrypt new communications key using current communications key.
- 4 = Use power up communications key as current communications key (not currently supported).

After entering a decryption option in this field, press the **F8** key to download a new communications key to the ATM.

Field Length: 1 numeric character
Required Field: No
Default Value: No default value

HOST-CONTROLLED PROGRAM LOAD COMMANDS — Displays the Docutel 5100 Host-Controlled Program Load Commands screen, which has its own set of procedures. For a description of Host-Controlled load commands, see the topic “Host-Controlled Program Load Commands Screen” provided later in this section. Place the cursor to the left of the field name and press the **F1** key to display this screen.

Field Length: Cursor placement only

CONFIGURATION LOAD COMMANDS

The following fields are commands that perform various ATM maintenance tasks.

LOAD RESET — Stops the configuration file download from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD ALL — Downloads all configuration information from the CNFG5100 File to the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

LOAD FIIT TABLE — Downloads financial institution interchange tables (FIITs) from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD SYSTEM PARAMETERS — Downloads new or updated system parameters from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD SCREENS (ALL) — Downloads all screens from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD SCREEN — Loads the indicated screen from both load groups or from the customized load group. Enter the screen number in the field to the right of the field name. Then place the cursor to the left of the field name and either press the **F1** key to download the indicated screen from both load groups or press the **F9** key to download the indicated screen from the customized load group to the ATM.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD RECEIPT HEADER/TRAILER — Downloads receipt header and trailer information from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD TRAN PRINT FORMAT — Downloads new or updated transaction print formats from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD RPQ CONTROL TABLE — Downloads new or updated RPQ control tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD DICTIONARY TABLE — Downloads new or updated dictionary tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD SYSTEM TIMERS — Downloads new timeout limits from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD SYSTEM ERROR TABLE — Downloads new or updated system error tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD TRAN STATE TABLE — Downloads new or updated transaction state tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD TRAN DEFINITION TABLE — Downloads new or updated transaction definition tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD TRAN DATA TABLE — Downloads new or updated transaction data tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD TRAN CODE TABLE — Downloads new or updated transaction code tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD TRAN SEQUENCE TABLE — Downloads transaction sequence tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD TRAN AMOUNT TABLE — Downloads new or updated transaction amount tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

LOAD TRAN DESCRIPTION TABLE — Downloads new or updated transaction description tables from either the customized load group or both load groups to the ATM. Place the cursor to the left of the field name and either press the **F1** key to download from both load groups or press the **F9** key to download from the customized load group to the ATM.

Field Length: Cursor placement only

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 41. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Enter or Validate — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added. When used in conjunction with one of the download fields, this function downloads configuration data from load group 0000, and then overlays it with configuration data from the customized load group.
F2	Status — Displays status information for the specified terminal.
F3	Open — Opens the specified terminal.
F5	Close — Closes the specified terminal.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F8	Loadkey — Downloads a new communications key to the specified terminal.
F9	Configuration Group Load — Downloads information from the customized load group identified in the Terminal Data File record of the terminal.
F10	Print — Sends the image of DCT screen 41 to the spooler location specified on the Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 41. This Help screen lists the functions assigned to the function keys on DCT screen 41.
F13	Reset — Performs a reset of transaction and download status flags and clears all device faults.

Key	Description
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 41 to perform the following tasks:

- Download a new communications key
- Access the Host-Controlled Program Load Commands screen
- Stop a configuration file download in progress
- Download configuration data from all groups
- Download the financial institution interchange table
- Download system parameters
- Download screens from all groups
- Download a single screen
- Download the receipt header and trailer information
- Download the transaction print format
- Download the RPQ control table
- Download the dictionary table
- Download the system timers
- Download the system error table
- Download the transaction state table
- Download the transaction definition table
- Download the transaction data table
- Download the transaction code table
- Download the transaction sequence table
- Download the transaction amount table
- Download the transaction description table
- Open a terminal
- Close a terminal
- Reset a terminal and clear all device faults
- Request status information for a terminal

Procedures for performing these tasks are described on the following pages.

You can also access the Docutel 5100 Host-Controlled Program Load Commands screen from DCT screen 41. For a description of Host-Controlled load commands and procedures, see the topic “Host-Controlled Program Load Commands Screen” provided later in this section.

Downloading a New Communications Key

The LOADKEY OPTION command downloads a new communications key to the ATM.

To download a new communications key, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the decrypting option to the right of the LOADKEY OPTION field name. This option is used when downloading the key. Currently, the Docutel Device Handler process does not support changing the master key of the ATM. Valid values are as follows:
 - 1 = Decrypt new master key using current master key (not currently supported).
 - 2 = Decrypt new communications key using current master key.
 - 3 = Decrypt new communications key using current communications key.
 - 4 = Use power up communications key as current communications key (not currently supported).
4. Press the **F8** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the new communications key has been downloaded successfully.

Accessing the Host-Controlled Program Load Commands Screen

To access the Host-Controlled Program Load Commands screen, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Place the cursor to the left of the HOST-CONTROLLED PROGRAM LOAD COMMANDS field name.
3. Press the **F1** key to display the Host-Controlled Program Load Commands screen. This screen is described later in this section, under the topic “Host-Controlled Program Load Commands Screen.”

Stopping a Configuration File Download in Progress

The LOAD RESET command stops a configuration file download that is in progress.

Note: This command is not the same as the LOAD RESET command using the Host-Controlled Program Load commands screen that stops a download of a Host Program Load (HPL) File in progress.

To stop a download in progress, perform the following steps:

1. Enter the Docutel ETS 5100/5200 ATM terminal identifier of the terminal being downloaded in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD RESET field name.
4. Either press the **F1** key to stop a load group 0000 download or press the **F9** key to stop a download of the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the download has been stopped successfully.

Downloading Configuration Data from All Groups

The LOAD ALL command downloads to the ATM all configuration information in all tables in the CNFG5100 File.

To download all configuration information, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to close the ATM.
4. Place the cursor to the left of the LOAD ALL field name.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that all configuration information has been downloaded successfully.

Downloading the Financial Institution Interchange Table

The LOAD FIIT TABLE command downloads a new or updated financial institution interchange table (FIIT) to the ATM. The information to be downloaded is taken from the FIIT values in the CNFG5100 File.

To download an FIIT, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD FIIT TABLE field name.
4. Either press the **F1** key to download the FIIT from load group 0000 and overlay it with the FIIT from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the table from the load group specified in the Terminal Data File record of the terminal.

5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the table has been downloaded successfully.

Downloading System Parameters

The LOAD SYSTEM PARAMETERS command downloads new or updated system parameters, such as card read and write retries and card removal timeouts, to the ATM. The information to be downloaded is taken from the system parameter values in the CNFG5100 File.

To download system parameters, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD SYSTEM PARAMETERS field name.
4. Either press the **F1** key to download system parameters from load group 0000 and overlay them with system parameters from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download system parameters from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that system parameters have been downloaded successfully.

Downloading Screens from All Groups

The LOAD SCREENS (ALL) command downloads all screens to the ATM. The information to be downloaded is taken from the ATM display screen values in the CNFG5100 File.

To download all screens, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD SCREENS (ALL) field name.
4. Either press the **F1** key to download all screens from load group 0000 and overlay them with screens from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download all screens from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that all screens have been downloaded successfully.

Downloading a Single Screen

The LOAD SCREEN command downloads a new screen to the ATM. The screen information to be downloaded is taken from the ATM display screen formats in the CNFG5100 File.

To download a new screen, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the screen you want to download to the right of the LOAD SCREEN field name.
4. Place the cursor to the left of the LOAD SCREEN field name.

5. Either press the **F1** key to download a screen from load group 0000 and overlay it with a screen from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download a screen from the load group specified in the Terminal Data File record of the terminal.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the specified screen has been downloaded successfully.

Downloading the Receipt Header and Trailer Information

The LOAD RECEIPT HEADER/TRAILER command downloads new receipt header and trailer information to the ATM. The information to be downloaded is taken from the receipt header and trailer table values in the CNFG5100 File.

To download receipt header and trailer information, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD RECEIPT HEADER/TRAILER field name.
4. Either press the **F1** key to download receipt header and trailer information from load group 0000 and overlay it with receipt header and trailer information from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download receipt header and trailer information from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that receipt header and trailer information has been downloaded successfully.

Downloading the Transaction Print Format

The LOAD TRAN PRINT FORMAT command downloads a new or updated transaction print format to the ATM. The information to be downloaded is taken from the transaction print format values in the CNFG5100 File.

To download a transaction print format, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD TRAN PRINT FORMAT field name.
4. Either press the **F1** key to download the transaction print format from load group 0000 and overlay it with the transaction print format from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the transaction print format from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the transaction print format has been downloaded successfully.

Downloading the RPQ Control Table

The LOAD RPQ CONTROL TABLE command downloads a new or updated RPQ control table to the ATM. The information to be downloaded is taken from the RPQ control table values in the CNFG5100 File.

To download an RPQ control table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD RPQ CONTROL TABLE field name.

4. Either press the **F1** key to download the RPQ control table from load group 0000 and overlay it with the RPQ control table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the RPQ control table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the RPQ control table has been downloaded successfully.

Downloading the Dictionary Table

The LOAD DICTIONARY TABLE command downloads a new or updated dictionary table to the ATM. The information to be downloaded is taken from the dictionary table values in the CNFG5100 File.

To download a dictionary table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD DICTIONARY TABLE field name.
4. Either press the **F1** key to download the dictionary table from load group 0000 and overlay it with the dictionary table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the dictionary table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the dictionary table has been downloaded successfully.

Downloading the System Timers

The LOAD SYSTEM TIMERS command downloads new timeout limits to the ATM. The information to be downloaded is taken from the system timer values in the CNFG5100 File.

To download new timeout limits, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD SYSTEM TIMERS field name.
4. Either press the **F1** key to download the timeout limits from load group 0000 and overlay them with the timeout limits from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the timeout limits from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the new timeout limits have been downloaded successfully.

Downloading the System Error Table

The LOAD SYSTEM ERROR TABLE command downloads a new or updated system error table to the ATM. The information to be downloaded is taken from the system error table values in the CNFG5100 File.

To download a system error table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD SYSTEM ERROR TABLE field name.

4. Either press the **F1** key to download the system error table from load group 0000 and overlay it with the system error table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the system error table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the system error table has been downloaded successfully.

Downloading the Transaction State Table

The LOAD TRAN STATE TABLE command downloads a new or updated transaction state table to the ATM. The information to be downloaded is taken from the transaction state table values in the CNFG5100 File.

To download a transaction state table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD TRAN STATE TABLE field name.
4. Either press the **F1** key to download the transaction state table from load group 0000 and overlay it with the transaction state table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the transaction state table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the transaction state table has been downloaded successfully.

Downloading the Transaction Definition Table

The LOAD TRAN DEFINITION TABLE command downloads a new or updated transaction definition table to the ATM. The information to be downloaded is taken from the transaction definition table values in the CNFG5100 File.

To download a transaction definition table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD TRAN DEFINITION TABLE field name.
4. Either press the **F1** key to download the transaction definition table from load group 0000 and overlay it with the transaction definition table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the transaction definition table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the transaction definition table has been downloaded successfully.

Downloading the Transaction Data Table

The LOAD TRAN DATA TABLE command downloads a new or updated transaction data table to the ATM. The information to be downloaded is taken from the transaction data table values in the CNFG5100 File.

To download a transaction data table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD TRAN DATA TABLE field name.

4. Either press the **F1** key to download the transaction data table from load group 0000 and overlay it with the transaction data table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the transaction data table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the transaction data table has been downloaded successfully.

Downloading the Transaction Code Table

The LOAD TRAN CODE TABLE command downloads a new or updated transaction code table to the ATM. The information to be downloaded is taken from the transaction code table values in the CNFG5100 File.

To download a transaction code table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD TRAN CODE TABLE field name.
4. Either press the **F1** key to download the transaction code table from load group 0000 and overlay it with the transaction code table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the transaction code table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the transaction code table has been downloaded successfully.

Downloading the Transaction Sequence Table

The LOAD TRAN SEQUENCE TABLE command downloads a transaction sequence table to the ATM. The information to be downloaded is taken from the transaction sequence table values in the CNFG5100 File.

To download a transaction sequence table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD TRAN SEQUENCE TABLE field name.
4. Either press the **F1** key to download the transaction sequence table from load group 0000 and overlay it with the transaction sequence table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the transaction sequence table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the transaction sequence table has been downloaded successfully.

Downloading the Transaction Amount Table

The LOAD TRAN AMOUNT TABLE command downloads a new or updated transaction amount table to the ATM. The information to be downloaded is taken from the transaction amount table values in the CNFG5100 File.

To download a transaction amount table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD TRAN AMOUNT TABLE field name.

4. Either press the **F1** key to download the transaction amount table from load group 0000 and overlay it with the transaction amount table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the transaction amount table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the transaction amount table has been downloaded successfully.

Downloading the Transaction Description Table

The LOAD TRAN DESCRIPTION TABLE command downloads a new or updated transaction description table to the ATM. The information to be downloaded is taken from the transaction description table values in the CNFG5100 File.

To download a transaction description table, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD TRAN DESCRIPTION TABLE field name.
4. Either press the **F1** key to download the transaction description table from load group 0000 and overlay it with the transaction description table from the load group specified in the Terminal Data File record of the terminal or press the **F9** key to download the transaction description table from the load group specified in the Terminal Data File record of the terminal.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the transaction description table has been downloaded successfully.

Opening a Terminal

Docutel ETS 5100/5200 ATMs must be opened before they can accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened.

To open a Docutel ETS 5100/5200 ATM, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing a Docutel ETS 5100/5200 ATM displays a “TEMPORARILY OUT OF ORDER” message at the terminal and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed. To close a Docutel ETS 5100/5200 ATM, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Resetting Terminal Status Information and Clearing Faults

This procedure can be used to reset the transaction and download status, and clear device faults for a Docutel ETS 5100/5200 ATM. To reset a Docutel ETS 5100/5200 ATM, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F9** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully reset.

Requesting Terminal Status Information

This procedure allows you to request the current status of the specified Docutel ETS 5100/5200 ATM. To request the status from a Docutel ETS 5100/5200 ATM, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F2** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages providing the current status of the terminal.

Host-Controlled Program Load Commands Screen

The Host-Controlled Program Load Commands screen is accessed from DCT screen 41. Many of the fields on this screen are commands that perform host-controlled program downloads to or uploads from an ATM. To use these fields, place the cursor to the left of the field name and press the **F1** key. To return to DCT screen 41, press the **F11** key. The Host-Controlled Program Load Commands screen is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT   DOCUTEL 5100 COMMANDS   LLLL   ****   YY/MM/DD   HH:MM   41 OF 46
ATM TERMINAL ID _____ FIID: ****

*** HOST-CONTROLLED PROGRAM LOAD COMMANDS ***

- LOAD RESET
- UPLINE PROGRAM LOAD
- UPLINE PROGRAM LOAD (PURGES EXISTING HPL FILE)
- DOWNLINE PROGRAM LOAD

HPL FILE NAME _____ (OPTIONAL)

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-ENTER F3-OPEN F5-CLOSE F11-RETURN TO INITIAL SCREEN F12-HELP

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This field was entered on DCT screen 41.

Field Length: System-protected

FIID — The identifier of the financial institution that owns the ATM terminal. This field was entered on DCT screen 41.

Field Length: System-protected

HOST-CONTROLLED PROGRAM LOAD COMMANDS

The following fields are commands that perform various ATM maintenance tasks.

LOAD RESET — Stops a download or upload of a Host Program Load (HPL) File that is in progress. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

UPLINE PROGRAM LOAD — Uploads a Host Program Load (HPL) File for an ATM to the BASE24-atm system. If a file with that name already exists, this command will fail; see the topic “Uploading a Host Program Load File and Purging an Existing File” later in this section for the procedure to use if the file already exists. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

UPLINE PROGRAM LOAD (PURGES EXISTING HPL FILE) — Uploads a Host Program Load (HPL) File for an ATM to the BASE24-atm system and purges the existing HPL File in the system. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DOWNLINE PROGRAM LOAD — Downloads an HPL File to the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

HPL FILE NAME — This optional field specifies a file name that is used to override the file name specified in the HPL LOAD FILENAME field on screen 7 of the BASE24-atm Terminal Data files (ATD). If there is no entry in the HPL LOAD FILENAME field on ATD screen 7, the file name specified in the Logical Network Configuration File (LCONF) assign ATM-DH-HPL5100 is overridden.

Field Length: 35 alphanumeric characters
Required Field: No
Default Value: No default value

Function Keys

The functions assigned to the function keys for the Host-Controlled Program Load Commands screen are shown in the following table. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Enter or Validate — Checks selected fields on the screen for valid entries and, if valid, executes the selected command. If an entry is invalid, this function highlights the field and displays an error message indicating the information that must be changed or added.
F2	Status — Displays status information for the specified terminal.
F3	Open — Opens the specified terminal.
F5	Close — Closes the specified terminal.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F10	Print — Sends the current image of this screen to the spooler location specified on the Logon screen.
F11	Return to Initial Screen — Returns you to the initial DCT screen 41.
F12	Display Help Screen — Displays the Help screen for the Host-Controlled Program Load Commands screen. This Help screen lists the functions assigned to the function keys for this screen.
F13	Reset — Performs a reset of transaction and load status and clears all device faults.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.

Key	Description
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use the Host-Controlled Program Load Commands screen to perform the following tasks:

- Enter an optional HPL file name.
- Stop a program download or upload in progress.
- Upload a host program load file to BASE24-atm.
- Upload a host program load file and purge an existing file.
- Download a host program load file.

Procedures for performing these tasks are described below and on the following pages. In addition, by using various function keys, the Host-Controlled Program Load Commands screen allows you to display status information, to reset the status of the terminal, and to open and close the terminal. These procedures are exactly the same whether they are performed from the Host-Controlled Program Load Command screen or from DCT screen 41. Refer to the procedure descriptions provided earlier in this section for DCT screen 41.

Entering an Optional HPL File Name

You can enter a file name in the HPL FILE NAME field before performing any of the upload or download procedures below. When you perform any of these uploads or downloads, the Device Handler process first checks to see if a file name has been entered in the HPL FILE NAME field, and if so, that file is uploaded or downloaded. Next, the Device Handler process checks to see if there is an entry in the HPL LOAD FILENAME field on ATD screen 7, and if there is, that file is uploaded or downloaded. If there is no override file name entered in either of these two places, the file name entered in the Logical Network Configuration File (LCONF) assign ATM-DH-HPL5100 is uploaded or downloaded.

To enter an HPL file name, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).

3. Place the cursor to the left of the HOST-CONTROLLED PROGRAM LOAD COMMANDS field name and press the **F1** key to display the Host-Controlled Program Loads Commands screen.
4. Enter a valid HPL file name in the HPL FILE NAME field on the Host-Controlled Program Load Commands screen.
5. Place the cursor to the left of one of the following commands: UPLINE PROGRAM LOAD, UPLINE PROGRAM LOAD (PURGES EXISTING HPL FILE) or DOWNLINE PROGRAM LOAD.
6. Press the **F1** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the command has been executed successfully.

Stopping a Host Program Download or Upload in Progress

The LOAD RESET command stops an upload or download of a Host Program Load (HPL) File that is in progress.

To stop an HPL File download or upload, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the HOST-CONTROLLED PROGRAM LOAD COMMANDS field name and press the **F1** key to display the Host-Controlled Program Loads Commands screen.
4. Place the cursor in the LOAD RESET field.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the Host Program Load has been stopped successfully.

Uploading a Host Program Load File to BASE24-atm

The UPLINE PROGRAM LOAD command uploads the Host Program Load (HPL) File to the BASE24-atm system. If a file with that name already exists, this command will fail; see the next topic in this section for the procedure to use if the file already exists.

To upload an HPL File for an ATM, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the HOST-CONTROLLED PROGRAM LOAD COMMANDS field name and press the **F1** key to display the Host-Controlled Program Loads Commands screen.
4. Enter the name of the HPL File you want to upload in the HPL FILE NAME field, if needed. See the topic “Entering an Optional HPL File Name” above.
5. Place the cursor in the UPLINE PROGRAM LOAD field.
6. Press the **F1** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the HPL File has been uploaded successfully.

Uploading a Host Program Load File and Purging an Existing File

The UPLINE PROGRAM LOAD (PURGES EXISTING HPL FILE) command uploads a Host Program Load (HPL) File for an ATM to the BASE24-atm system and purges the existing HPL File in the system.

To upload an HPL File for an ATM and purge the existing HPL File, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.

2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the HOST-CONTROLLED PROGRAM LOAD COMMANDS field name and press the **F1** key to display the Host-Controlled Program Loads Commands screen.
4. Enter the name of the HPL File you want to upload in the HPL FILE NAME field, if needed. See the topic “Entering an Optional HPL File Name” above.
5. Place the cursor in the UPLINE PROGRAM LOAD (PURGES EXISTING HPL FILE) field.
6. Press the **F1** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the HPL File has been uploaded successfully and the existing HPL File purged.

Downloading a Host Program Load File

The DOWNLINE PROGRAM LOAD command downloads an HPL File to the ATM.

To download an HPL File, perform the following steps:

1. Enter a valid Docutel ETS 5100/5200 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 41.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the HOST-CONTROLLED PROGRAM LOAD COMMANDS field name and press the **F1** key to display the Host-Controlled Program Loads Commands screen.
4. Enter the name of the HPL File you want to download in the HPL FILE NAME field, if needed. See the topic “Entering an Optional HPL File Name” above.
5. Place the cursor in the DOWNLINE PROGRAM LOAD field.
6. Press the **F1** key to send the command to the network.

7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–6.
8. Check the network logging facility for messages indicating that the HPL File has been downloaded successfully.

14: ATM Burroughs RT650 Commands Screen (Screen 43)

This section describes how to execute commands using the ATM Burroughs RT650 Commands screen. You access this screen from the DCT Menu as screen 43. This screen allows you to download a new communications key to Burroughs RT650/750 ATMs as well as to perform other important ATM functions.

This section contains the following information about DCT screen 43:

- An example screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks

DCT Screen 43

DCT screen 43 is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT      BURROUGHS RT650      LLLL  ****  YY/MM/DD  HH:MM  43 OF 46

      ATM TERMINAL ID: _____      FIID: ****

      LOAD KEY  _

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F2-STATUS F3-OPEN F5-CLOSE F7-GOTO F8-LOADKEY F10-PRINT F16-EXIT SF16-LOGOFF

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the Terminal Data File.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the specified ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered.

Field Length: 1–4 alphanumeric characters
 Required Field: No
 Default Value: ****

LOADKEY — Specifies the decrypting option for the new communications key. Enter the decrypting option to the right of the field name. Currently, the Burroughs Device Handler process does not support changing the master key of the ATM. Valid values are as follows:

- 1 = Decipher new master key using current master key (not currently supported).
- 2 = Decipher new communications key using current master key.
- 3 = Decipher new communications key using current communications key.
- 4 = Use power up communications key as current communications key (not currently supported).

After entering a value in this field, press the **F8** function key to download a new communications key to the ATM.

Field Length: 1 numeric character
Required Field: No
Default Value: No default value

Function Keys

The functions assigned to the function keys for DCT screen 43 are shown in the following table. The first column of the table identifies a specific function key. The second column describes the BASE24 functions that can be accomplished with these function keys.

Key	Description
F2	Status — Displays status information for the specified terminal.
F3	Open — Opens the specified terminal.
F5	Close — Closes the specified terminal.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F8	Loadkey — Downloads a new communications key to the specified terminal.
F10	Print — Sends the current image of DCT screen 43 to the spooler location specified on the Logon screen.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 43 to perform the following procedures:

- Download a new communications key
- Open a terminal
- Close a terminal
- Request status information for a terminal

The procedures for performing these tasks are described below and on the following pages.

Downloading a New Communications Key

To download a new communications key, perform the following steps:

1. Enter a valid Burroughs RT650/750 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 43.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the decrypting option in the LOAD KEY field. Valid values are as follows:
 - 1 = Decipher new master key using current master key (not currently supported).
 - 2 = Decipher new communications key using current master key.
 - 3 = Decipher new communications key using current communications key.
 - 4 = Use power up communications key as current communications key (not currently supported).
4. Press the **F8** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the new communications key has been downloaded successfully.

Opening a Terminal

A Burroughs RT650/750 ATM must be opened before it will accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened.

To open a Burroughs RT650/750 ATM, perform the following steps:

1. Enter a valid Burroughs RT650/750 terminal identifier in the ATM TERMINAL ID field on DCT screen 43.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing a Burroughs RT650/750 ATM displays a “TEMPORARILY OUT OF ORDER” message at the terminal and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed. To close a Burroughs RT650/750 ATM, perform the following steps:

1. Enter a valid Burroughs RT650/750 terminal identifier in the ATM TERMINAL ID field on DCT screen 43.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Requesting Terminal Status Information

This procedure allows you to request the current status of the specified Burroughs RT650/750 ATM. To request the status from a Burroughs RT650/750 ATM, perform the following steps:

1. Enter a valid Burroughs RT650/750 terminal identifier in the ATM TERMINAL ID field on DCT screen 43.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F2** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages providing the current status of the terminal.

ACI Worldwide, Inc.

15: ATM IBM 4730 Commands Screen (Screen 44)

This section describes how to execute commands using the ATM IBM 4730 Commands screen. Access this screen from the DCT Menu as screen 44. This screen and three secondary screens allow you to perform various functions to IBM 4730-series ATM terminals. Additional information for BASE24-atm support of IBM 4730-series ATMs can be found in the *BASE24-atm IBM 4730-series Device Support Manual*.

This section contains the following information about DCT screen 44:

- An example screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks
- Descriptions of the secondary screens that you can access from DCT screen 44

DCT Screen 44

Many of the fields on DCT screen 44 are commands that can be executed. To use these fields, place the cursor to the left of the field name and press the **F1** key. DCT screen 44 is shown below, followed by field descriptions, function key definitions, procedures for using the screen, and descriptions of secondary screens accessed from the screen.

```

BASE24-DCT   IBM 4730 COMMANDS          LLLL  ****  YY/MM/DD  HH:MM  44 OF 46
  ATM TERMINAL ID: _____  FIID:  ****  CONSOLE (1/2) _

  _ DISPLAY ERROR LOG

  _ DISPLAY MODULE STATUS

  _ CHANGE COMMUNICATION KEY

  _ CHANGE PHRASE

  _ SET DATE & TIME

  _ UPDATE DEVICE CONFIGURATION

  _ UPLOAD/DOWNLOAD

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
F1-ENTER F2-STATUS F3-OPEN F4-LOAD F5-CLOSE F7-GOTO F8-LOADKEY F10-PRINT

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the ATM on which commands are to be performed. This identifier must have a record in the Terminal Data File.

Field Length: 1–16 alphanumeric characters
 Required Field: Yes
 Default Value: No default value

FIID — The identifier of the financial institution that owns the ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered.

Field Length: 1–4 alphanumeric characters
Required Field: No
Default Value: ****

CONSOLE (1/2) — The number of the IBM 4730 ATM console unit on which to execute commands. Valid values are as follows:

1 = Console 1
2 = Console 2

Field Length: 1 numeric character
Required Field: Yes, for some functions
Default Value: No default value

DISPLAY ERROR LOG — Displays the error log for the ATM on the network logging facility. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

DISPLAY MODULE STATUS — Displays the status of all modules of the ATM on the network logging facility. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

CHANGE COMMUNICATION KEY — Changes the communications key to a random value and downloads the new key to the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

CHANGE PHRASE — Displays a secondary screen where you can change a screen phrase for the ATM. This screen is described later in this section under the topic “Changing a Phrase on the ATM Screen.” Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

SET DATE & TIME — Sets the date and time for the ATM. Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

UPDATE DEVICE CONFIGURATION — Displays a secondary screen where you can update configuration of the modules of the ATM. This screen is described later in this section under the topic “Updating the Device Configuration.” Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

UPLOAD/DOWNLOAD — Displays a secondary screen where you can specify one or more configuration files to upload from or download to the ATM. This screen is described later in this section under the topic “Uploading from or Downloading to an ATM.” Place the cursor to the left of the field name and press the **F1** key to perform this task.

Field Length: Cursor placement only

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 44. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Enter — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F2	Status — Displays the status of all modules of the specified terminal.
F3	Open — Opens the specified terminal.
F4	Load — Downloads the configuration files identified in the Terminal Data File record for the specified ATM to the ATM.
F5	Close — Closes the specified terminal.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F8	Loadkey — Not currently supported.
F10	Print — Sends the current image of DCT screen 44 to the spooler location specified on the BASE24 Logon screen.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use DCT screen 44 to perform the following tasks:

- Display the error log
- Display the module status
- Change a communications key
- Change a phrase on the ATM screen
- Set the date and time
- Update the device configuration
- Upload from or download to an ATM
- Open a terminal
- Close a terminal
- Download configuration files to a terminal
- Display the status of all modules of a terminal

Procedures for performing these tasks are described below and on the following pages.

Displaying the Error Log

The DISPLAY ERROR LOG command displays error codes for the last six errors that have occurred at an ATM. These error codes are displayed at the network logging facility for the ATM.

To display the error log for an ATM, perform the following steps:

1. Enter a valid IBM 4730 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the DISPLAY ERROR LOG field name.
4. Press the **F1** key to send the command to the network.

5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for the terminal to view the error log.

Displaying the Module Status

The DISPLAY MODULE STATUS command displays the status of all modules, or parts, that make up an IBM 4730 ATM. This status information is displayed at the network logging facility for the ATM.

To display the module status for an ATM, perform the following steps:

1. Enter a valid IBM 4730 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the IBM 4730 ATM console unit for which you want status information in the CONSOLE field. Valid values are as follows:
 - 1 = Console 1
 - 2 = Console 2
4. Place the cursor to the left of the DISPLAY MODULE STATUS field name.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for the ATM to view the status of its modules.

Changing a Communications Key

The CHANGE COMMUNICATION KEY command changes the data encryption communications key to a random value and downloads the new value to the ATM. Sets of communications keys are stored by both BASE24-atm and IBM 4730 terminals, each of which maintains its own encrypted version of the key. This command does not change the master key that is used for PIN encryption.

To change a communications key, perform the following steps:

1. Enter a valid IBM 4730 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the IBM 4730 ATM console unit for which you want to change the communications key in the CONSOLE field. Valid values are as follows:
1 = Console 1
2 = Console 2
4. Place the cursor to the left of the CHANGE COMMUNICATION KEY field name.
5. Press the **F1** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility to make sure that the message “COMMUNICATION KEY CHANGE SUCCESSFUL” is displayed.

Changing a Phrase on the ATM Screen

The CHANGE PHRASE command enables you to change a phrase on an ATM screen. A phrase is a word or a group of words used in screen and statement printer headings, prompts, or messages.

To change a phrase, perform the following steps:

1. Enter a valid IBM 4730 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the CHANGE PHRASE field name.
4. Press the **F1** key to display the secondary screen. This screen is described later in this section, under the topic “Change Phrase Screen.”
5. Enter values in the LANGUAGE NUMBER, PHRASE NUMBER, and PHRASE fields on the Change Phrase screen.
6. Press the **F1** key to send the command to the network.

7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 5–6.
8. Check the network logging facility to make sure that the message “PHRASE CHANGE SUCCESSFUL” is displayed.
9. Press the **F2** key to return to DCT screen 44.

Setting the Date and Time

The SET DATE & TIME command sets the current date and time at the ATM. If the IBM 4730 terminal specified has two console units, this command sets the date and time on both consoles. The new date and time is calculated from the Tandem system time, plus the value of the TIME OFFSET field on BASE24-atm Terminal Data files (ATD) screen 1 for this terminal.

To set the date and time, perform the following steps:

1. Enter a valid IBM 4730 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the SET DATE & TIME field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility to make sure that the message “DATE AND TIME SET” is displayed.

Updating the Device Configuration

The UPDATE DEVICE CONFIGURATION command allows you to disable or enable one or more specific modules of an ATM, such as a statement printer.

To disable or enable an ATM module, perform the following steps:

1. Enter a valid IBM 4730 ATM terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).

3. Enter the number of the IBM 4730 ATM console unit that you want to update in the **CONSOLE** field. Valid values are as follows:
 - 1 = Console 1
 - 2 = Console 2
4. Place the cursor to the left of the **UPDATE DEVICE CONFIGURATION** field name.
5. Press the **F1** key to display the secondary screen. This screen is described later in this section, under the topic “Update Device Configuration Screen.”
6. Enter the number of the option you want to execute in the field to the left of one or more of the modules displayed.
7. Press the **F1** key to send the command to the network.
8. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 6–7.
9. Check the network logging facility to make sure that the message “DEVICE CONFIGURATION UPDATED” is displayed.
10. Press the **F2** key to return to DCT screen 44.

Uploading from or Downloading to an ATM

The **UPLOAD/DOWNLOAD** command either uploads one or more files from an ATM to BASE24-atm, or downloads one or more files from BASE24-atm to an ATM.

To upload or download files, perform the following steps:

1. Enter a valid IBM 4730 ATM terminal identifier in the **ATM TERMINAL ID** field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the **FIID** field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the **UPLOAD/DOWNLOAD** field name.
4. Press the **F1** key to display the secondary screen. This screen is described later in this section, under the topic “Upload/Download Screen.”
5. Enter one or more file names of the types of file you want to upload or download in the **DATA FILE NAME**, **MICROCODE FILE NAME**, or **MICROCODE PATCH FILE NAME** fields. If you do not enter one or more of these fields, the **DATA FILE NAME** field defaults to the configuration file name specified in the Terminal Data File.

6. Enter a file type in the field, THE DATA FILE IS A. Valid values are as follows:
 - C = Custom image file
 - P = Picture file
 - J = Journal file
7. Enter a value in the PURGE EXISTING FILES field. Valid values are as follows:
 - Y = One or more files you want to download already exist and you want to delete the old copy and replace it with the new copy.
 - N = Generate an error message.
8. Enter a value in the LOAD OR RETRIEVE field to determine if this procedure downloads or uploads data. Valid values are as follows:
 - L = Load (download to ATM)
 - R = Retrieve (upload from ATM)
9. Press the appropriate function key to upload or download the specified files. The function keys for this screen are described later in this section, under the topic “Upload/Download Screen.”
10. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 5–9.
11. Check the network logging facility to make sure that the message “FILE LOAD SUCCESSFUL” is displayed.
12. Press the **F2** key to return to DCT screen 44.

Opening a Terminal

An IBM 4730 ATM must be opened before it will accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened.

To open an IBM 4730 ATM, perform the following steps:

1. Enter a valid IBM 4730 terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing an IBM 4730 ATM displays a “TEMPORARILY OUT OF ORDER” message at the terminal and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed. To close an IBM 4730 ATM, perform the following steps:

1. Enter a valid IBM 4730 terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Downloading Configuration Files to a Terminal

This procedure downloads the configuration files identified in the Terminal Data File record for the specified ATM to the ATM. To download configuration files to an IBM 4730 ATM, perform the following steps:

1. Enter a valid IBM 4730 terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F4** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Display the Status of All Terminal Modules

This procedure displays the status of all modules at the terminal in a series of event messages. To display module status information on an IBM 4730 ATM, perform the following steps:

1. Enter a valid IBM 4730 terminal identifier in the ATM TERMINAL ID field on DCT screen 44.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F2** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Review the network logging facility for messages indicating the status of each terminal module.

Secondary Screens

Certain procedures on DCT screen 44 require that you access a secondary screen to perform the procedures. The following secondary screens are described in this subsection:

- Change Phrase screen
- Update Device Configuration screen
- Upload/Download screen

Change Phrase Screen

The Change Phrase screen allows you to change a phrase on an ATM screen. Refer to the topic “Changing a Phrase on the ATM Screen” previously described in this section for information about using this screen. Additional information about the possible phrases can be found in the appropriate IBM programmer’s reference manual for your ATM model. The Change Phrase screen is shown below, followed by field descriptions and function key definitions.

```

ATM TERMINAL ID: _____ FIID: ****

CHANGE PHRASE:  ENTER LANGUAGE NUMBER, PHRASE NUMBER, AND PHRASE TEXT

LANGUAGE NUMBER: 01

PHRASE NUMBER: 000

PHRASE
*****
* _____ *
*****

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
DEPRESS FUNCTION KEY 1 TO SEND TEXT  F2-RETURN TO INITIAL SCREEN F7-GOTO

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the IBM 4730 ATM on which commands are to be performed. This field was entered on DCT screen 44.

Field Length: System-protected

FIID — The identifier of the financial institution that owns the ATM terminal. This field was entered on DCT screen 44.

Field Length: System-protected

CHANGE PHRASE

The following three fields enable you to specify the phrase to be changed.

LANGUAGE NUMBER — The number of the language in which you want the phrase to be displayed. Valid values are as follows:

- 01 = Primary language
- 02 = Secondary language

Field Length: 2 numeric characters
Required Field: Yes
Default Value: 01

PHRASE NUMBER — The number of the phrase you want to change.

Field Length: 3 numeric characters
Required Field: Yes
Default Value: 000

PHRASE — Specifies the text of the new phrase. The entry line is below the field name, and is outlined with asterisks (*).

Field Length: Up to 72 alphanumeric characters
Required Field: Yes
Default Value: No default value

Function Keys

The functions assigned to the function keys for the Change Phrase screen are shown in the following table. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Enter — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F2	Return To Initial Screen — Returns you to DCT screen 44.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.

Update Device Configuration Screen

The Update Device Configuration screen allows you to disable or enable one or more specific modules of an ATM. Refer to the topic “Updating the Device Configuration” previously described in this section for information about using this screen. The Update Device Configuration screen is shown below, followed by field descriptions and function key definitions.

```

ATM TERMINAL ID _____ FIID: ****    CONSOLE (1/2) 1
UPDATE DEVICE CONFIGURATION: ( ENTER OPTION NEXT TO EACH DEVICE )
  0 = NO CHANGE ( DEFAULT )   1 = DECONFIGURE   2 = CONFIGURE
    0 STATEMENT PRINTER
    0 ENVELOPE DEPOSITORY
    0 CHECK DEPOSITORY
    0 DOCUMENT FEED #1
    0 DOCUMENT FEED #2
    0 DOCUMENT FEED #3
    0 DOCUMENT FEED #4
    0 DOCUMENT FEED #5
    0 COIN FEED #1
    0 COIN FEED #2
    0 COIN FEED #3
    0 COIN FEED #4
    0 JOURNAL DISK *
    0 CAMERA *
    0 PROTECTIVE DOOR *

                                     * Not available on the IBM 4730.
                                     Optional on all other 473x models

***** BASE24*****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
DEPRESS FUNCTION KEY 1 TO SEND CONFIGURATION DATA F2-RETURN TO INITIAL SCREEN

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the IBM 4730 ATM on which commands are to be performed. This field was entered on DCT screen 44.

Field Length: System-protected

FIID — The identifier of the financial institution that owns the ATM terminal. This field was entered on DCT screen 44.

Field Length: System-protected

CONSOLE (1/2) — The number of the IBM 4730 ATM console unit on which to execute commands. Valid values are as follows:

- 1 = Console 1
- 2 = Console 2

Field Length: 1 numeric character
Required Field: Yes, for some functions
Default Value: No default value

UPDATE DEVICE CONFIGURATION

The following fifteen fields allow you to indicate the specific modules to be enabled or disabled.

STATEMENT PRINTER — Disables (deconfigures) or enables (configures) the statement printer of the ATM. Valid values are as follows:

- 0 = NO CHANGE
- 1 = DECONFIGURE
- 2 = CONFIGURE

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0

ENVELOPE DEPOSITORY — Disables (deconfigures) or enables (configures) the envelope depository of the ATM. Valid values are as follows:

- 0 = NO CHANGE
- 1 = DECONFIGURE
- 2 = CONFIGURE

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0

CHECK DEPOSITORY — Disables (deconfigures) or enables (configures) the check depository of the ATM. Valid values are as follows:

- 0 = NO CHANGE
- 1 = DECONFIGURE
- 2 = CONFIGURE

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0

DOCUMENT FEED #1

DOCUMENT FEED #2

DOCUMENT FEED #3

DOCUMENT FEED #4

DOCUMENT FEED #5 — Disables (deconfigures) or enables (configures) one or more of the document feeders of the ATM. Valid values are as follows:

- 0 = NO CHANGE
- 1 = DECONFIGURE
- 2 = CONFIGURE

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0

COIN FEED #1

COIN FEED #2

COIN FEED #3

COIN FEED #4 — Disables (deconfigures) or enables (configures) one or more of the coin feeders of the ATM. Valid values are as follows:

- 0 = NO CHANGE
- 1 = DECONFIGURE
- 2 = CONFIGURE

Field Length: 1 numeric character
Required Field: Yes
Default Value: 0

JOURNAL DISK — Disables (deconfigures) or enables (configures) the journal disk of the ATM. This field is not valid for the IBM 4730 model. It is optional on other IBM 473X models. Valid values are as follows:

- 0 = NO CHANGE
- 1 = DECONFIGURE
- 2 = CONFIGURE

Field Length: 1 numeric character

Required Field: Yes

Default Value: 0

CAMERA — Disables (deconfigures) or enables (configures) the camera of the ATM. This field is not valid for the IBM 4730 model. It is optional on other IBM 473X models. Valid values are as follows:

- 0 = NO CHANGE
- 1 = DECONFIGURE
- 2 = CONFIGURE

Field Length: 1 numeric character

Required Field: Yes

Default Value: 0

PROTECTIVE DOOR — Disables (deconfigures) or enables (configures) the protective door of the ATM. This field is not valid for the IBM 4730 model. It is optional on other IBM 473X models. Valid values are as follows:

- 0 = NO CHANGE
- 1 = DECONFIGURE
- 2 = CONFIGURE

Field Length: 1 numeric character

Required Field: Yes

Default Value: 0

Function Keys

The functions assigned to the function keys for the Update Device Configuration screen are shown in the following table. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Send Configuration Data — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F2	Return To Initial Screen — Returns you to DCT screen 44.

Upload/Download Screen

The Upload/Download screen allows you to upload one or more files from an ATM to BASE24-atm, or download one or more files from BASE24-atm to an ATM. Refer to the topic “Uploading from or Downloading to an ATM” previously described in this section for information about accessing the Upload/Download screen. The Upload/Download screen is shown below, followed by field descriptions and function key definitions.

```

ATM TERMINAL ID: _____ FIID: ****

UTILITY SESSION: (ENTER FILE NAMES IF DIFFERENT FROM DEFAULT VALUES)

DATA FILE NAME          : _____
THE DATA FILE IS A: _  C = CUSTOM IMAGE (DEFAULT) ,
                        P = PICTURE FILE, J = JOURNAL FILE

MICROCODE FILE NAME     : _____
MICROCODE PATCH FILE NAME : _____
PURGE EXISTING FILES [Y/N]: _
LOAD OR RETRIEVE       [L/R]: _

F3 - ALL FILES           SF7 - DATA FILE & MICROCODE FILE
F4 - DATA FILE ONLY     F8 - DATA FILE & MICROCODE PATCH
F5 - MICROCODE ONLY      F9 - MICROCODE & MICROCODE PATCH
F6 - MICROPATCH ONLY

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:          NEW LOGICAL NETWORK ID:
DEPRESS THE DESIRED FUNCTION KEY TO SEND COMMAND F2-RETURN TO INITIAL SCREEN

```

ATM TERMINAL ID — The ATM terminal identifier that specifies the IBM 4730 ATM on which commands are to be performed. This field was entered on DCT screen 44.

Field Length: System-protected

FIID — The identifier of the financial institution that owns the specified ATM terminal. This field was entered on DCT screen 44.

Field Length: System-protected

UTILITY SESSION

The following six fields specify the files to upload or download.

DATA FILE NAME — The name of the data file to upload to, or download from the ATM. This name must be a valid Tandem file name.

Field Length: 34 alphanumeric characters
Required Field: No
Default Value: No default value

THE DATA FILE IS A — A flag indicating what type of information is in the data file. If you do not enter a value in this field, the data file is assumed to be a custom image file. Valid values are as follows:

C = Custom image file
P = Picture file
J = Journal file

Field Length: 1 alphabetic character
Required Field: No
Default Value: No default value

MICROCODE FILE NAME — The name of the microcode file. This name must be a valid Tandem file name.

Field Length: 34 alphanumeric characters
Required Field: No
Default Value: No default value

MICROCODE PATCH FILE NAME — The name of the microcode patch file. This name must be a valid Tandem file name.

Field Length: 34 alphanumeric characters
Required Field: No
Default Value: No default value

PURGE EXISTING FILES — A flag indicating the action to be taken if a file already exists on the ATM. If you do not enter a value in this field, existing files are not replaced. Valid values are as follows

Y = One or more files you want to download already exist and you want to delete the old copy and replace it with the new copy.

N = Generate an error message.

Field Length: 1 alphabetic character

Required Field: No

Default Value: No default value

LOAD OR RETRIEVE — A flag indicating whether the specified file(s) are to be uploaded from or downloaded to the ATM. If you do not enter a value in this field, the program downloads the file to the ATM. Valid values are as follows:

L = Load (download to ATM)

R = Retrieve (upload from ATM)

Field Length: 1 alphabetic character

Required Field: No

Default Value: No default value

Function Keys

The functions assigned to the function keys for the Upload/Download screen are shown in the following table. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F2	Return To Initial Screen — Returns you to DCT screen 44.
F3	All Files — Uploads or downloads all files.
F4	Data File Only — Uploads or downloads only data files (custom image, picture, or journal file).
F5	Microcode Only — Uploads or downloads a microcode file only.

Key	Description
F6	Micropatch Only — Uploads or downloads the microcode patch file only.
SF7	Data File and Microcode File — Uploads or downloads data files (custom image, picture, or journal file) and microcode files.
F8	Data File and Microcode Patch — Uploads or downloads data files (custom image, picture, or journal file) and microcode patch files.
F9	Microcode and Microcode Patch — Uploads or downloads microcode and microcode patch files.

ACI Worldwide, Inc.

16: ATM NCR 5XXX Commands Screen (Screen 45)

This section describes how to execute commands using the ATM NCR 5XXX Commands screen and the NCR 5XXX Load Commands screen. You access the ATM NCR 5XXX Commands screen from the DCT Menu as screen 45. The NCR 5XXX Load Commands screen, which is accessed from the ATM NCR 5XXX Command screen by selecting the DOWNLINE LOAD DATA option, allows you to download specified information to NCR 5XXX ATMs.

The NCR 5XXX Configuration File Menu, which is accessed from the ATM NCR 5XXX Commands screen by selecting the ACCESS CONFIGURATION FILE option, is described in the *BASE24-atm NCR 5XXX Device Support Manual*. The configuration screens accessed from the NCR 5XXX Configuration File Menu are described in the *BASE24-atm NCR 5XXX Device Support Manual* and in the *BASE24-atm NCR 5XXX SSB Manual*.

This section contains the following information about DCT screen 45:

- A description of how configuration information is downloaded
- An example screen and descriptions of the fields
- Definitions of the functions assigned to the function keys
- Procedures you can follow to perform tasks

Downloading Configuration Information

The NCR 5XXX Load Commands screen allows you to download configuration information to NCR 5XXX ATMs. Configuration information is taken from the CNFG5070 File, which is resident on the BASE24-atm system.

Configuration information is downloaded by load group, and two different load groups can be established in the configuration file for each NCR 5XXX terminal. Load group 0 is downloaded to all ATMs and maintains the basic set of screens and states that control all NCR 5XXX ATM transactions. In addition to load group 0, you can select one additional load group (1–9999), which is a customized load group that contains information specific to certain types of terminals.

You can download the following types of information to a specified ATM:

- Information from both load group 0 and the customized load group established for the terminal
- Information only from the customized load group established for the terminal

The number of the customized load group to be used for each ATM terminal is specified in the BASE24-atm Terminal Data files for that ATM using the **TERMINAL GROUP** field on BASE24-atm Terminal Data files (ATD) screen 7.

Commands for downloading data to specified ATMs are executed from the NCR 5XXX Load Commands screen that can be accessed from DCT screen 45. To access the NCR 5XXX Load Commands screen, place the cursor in the **DOWNLINE LOAD DATA** field on DCT screen 45 and press the **F1** key.

Note: For NCR 5XXX ATMs configured as dial-up terminals, load commands can be stored in the ATM Dial-Up Command File (ADCF) until the terminal connects. Once a dial-up terminal initiates a connection, the load commands are processed on a first-in, first-out basis after the current transaction is processed.

DCT Screen 45

DCT screen 45 is shown below, followed by field descriptions and function key definitions.

```

BASE24-DCT      NCR 5XXX COMMANDS      LLLL      YY/MM/DD  HH:MM  45 OF 46

-  DOWNLINE LOAD DATA

-  ACCESS CONFIGURATION FILE

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F1-ENTER    F7-GOTO    F10-PRINT    F12-HELP    F16-EXIT    SF16-LOGOFF

```

DOWNLINE LOAD DATA — Displays the NCR 5XXX Load Commands screen. This screen is described later in this section under the topic “NCR 5XXX Load Commands Screen.” Place the cursor to the left of the field name and press the **F1** key to display this screen.

Field Length: Cursor placement only

ACCESS CONFIGURATION FILE — Displays the NCR 5XXX Configuration File Menu. This menu and the file screens accessed from this menu are used to update the CNFG5070 File. These screens are described in the *BASE24-atm NCR 5XXX Device Support Manual*, *BASE24-atm NCR 5XXX SSB Manual*, and *BASE24-atm EMV Manual*. Place the cursor to the left of the field name and press the **F1** key to display these screens.

Field Length: Cursor placement only

Function Keys

The following table shows the functions assigned to the function keys on DCT screen 45. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Select — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F7	Goto New Screen — Displays the DCT screen corresponding to the number entered in the NEW PAGE field.
F10	Print — Sends the image of DCT screen 45 to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for DCT screen 45. This Help screen lists the functions assigned to the function keys for DCT screen 45.
F16	Exit or Goto File — Returns you to the DCT Menu if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, returning you to the BASE24 Logon screen.

NCR 5XXX Load Commands Screen

The NCR 5XXX Load Commands screen allows you to download specified information to NCR 5XXX ATMs. To access the NCR 5XXX Load Commands screen, place the cursor to the left of the DOWNLINE LOAD DATA field name on DCT screen 45 and press the **F1** key. Many of the fields on the NCR 5XXX Load Commands screen are commands that can be executed. To use these fields, place the cursor to the left of the field name and press the **F6** key. The NCR 5XXX Load Commands screen is shown below, followed by field descriptions, function key definitions, and procedures for using the screen.

```

BASE24-DCT  NCR 5XXX LOAD COMMANDS  LLLL      YY/MM/DD  HH:MM  01 OF 01
ATM TERMINAL ID: _____  LOAD GROUP:      0  FIID: _____

```

```

_ LOAD ALL (INCLUDING KEYS)          _ LOAD PUBLIC KEY
_ LOAD ALL IN GROUP                  _ LOAD MASTER KEY
_ LOAD ALL SCREENS                    _ LOAD ALL KEYS
_ LOAD ALL STATES                     LOAD KEY ENTRY MODE 1
_ LOAD ALL FITS
_ LOAD DATE AND TIME
_ LOAD MAC KEY                        _ LOAD NOTE IDS
LOAD KEY TYPE 1
LOAD CUST SCREEN 0      LANG 0       _ DELETE PUBLIC KEY X
LOAD C-SCREEN  C  0      _ LOAD PRIMARY PUBLIC KEY
LOAD R-SCREEN  R  0      _ LOAD MASTER/COM KEY
LOAD STATE      0
LOAD FIT        0
_ LOAD EMV GROUP      0

```

```

***** BASE24 *****
NEW PAGE:          FILE DESTINATION:      NEW LOGICAL NETWORK ID:
F1-ENTER F2-CNFG F3-CNTRS F4-OPEN F5-CLOSE F6-LOAD F7-RESET F8-CPLF F16-EXIT

```

ATM TERMINAL ID — The ATM terminal identifier that identifies the NCR 5XXX ATM on which commands are to be performed. This identifier must have a record in the BASE24-atm Terminal Data files.

Field Length: 1–16 alphanumeric characters

Required Field: Yes

Default Value: No default value

LOAD GROUP — The number of the load group from which you want to download the specified information. Refer to the *BASE24-atm NCR 5XXX Device Support Manual* for a list of valid values.

FIID — The identifier of the financial institution (FIID) that owns the ATM terminal. This identifier must have a record in the Institution Definition File (IDF) unless four asterisks (****) are entered.

Field Length: 4 numeric characters
Required Field: No
Default Value: ****

LOAD ALL (INCLUDING KEYS) — Downloads all configuration and communications key information from both load group 0 and the customized load group specified in the LOAD GROUP field on this screen or in the TERMINAL GROUP field on ATD screen 7. If a value is specified in the LOAD GROUP field, it overrides the value in the BASE24-atm Terminal Data files. Place the cursor to the left of the field name and press the **F6** key to perform this task.

Field Length: Cursor placement only

LOAD PUBLIC KEY — Initiates the message sequence in which the BASE24-atm system and the ATM authenticate each other and exchange public keys. Place the cursor to the left of the field name and press the **F6** key to perform this task.

Field Length: Cursor placement only

LOAD ALL IN GROUP — Downloads all customer, supervisor, and printer configuration screens, states, financial institution tables (FITs), and the configuration ID from the customized load group specified in the TERMINAL GROUP field on ATD screen 7. Place the cursor to the left of the field name and press the **F6** key to perform this task.

LOAD MASTER KEY — Downloads the master key to the terminal. Place the cursor to the left of the field name and press the **F6** key.

Field Length: Cursor placement only

LOAD ALL SCREENS — Downloads all screens from both load group 0 and the customized load group specified in the TERMINAL GROUP field on ATD screen 7. Place the cursor to the left of the field name and press the **F6** key to perform this task.

Field Length: Cursor placement only

LOAD ALL KEYS — Downloads all keys to the terminal. Place the cursor to the left of the field name and press the **F6** key.

Field Length: Cursor placement only

LOAD ALL STATES — Downloads all states from both load group 0 and the customized load group specified in the **TERMINAL GROUP** field on **ATD** screen 7. Place the cursor to the left of the field name and press the **F6** key to perform this task.

Field Length: Cursor placement only

LOAD KEY ENTRY MODE — Downloads the key entry mode to the encrypted PIN pad (EPP) of the ATM. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field. Valid values are as follows:

- 1 = Single length without XOR
- 2 = Single length with XOR
- 3 = Double length with XOR
- 4 = Double length restricted

Field Length: 1 numeric character

Required Field: No

Default Value: No default value

LOAD ALL FITS — Downloads all financial institution tables (FITs) from both load group 0 and the customized load group specified in the **TERMINAL GROUP** field on **ATD** screen 7. Place the cursor to the left of the field name and press the **F6** key to perform this task.

Field Length: Cursor placement only

LOAD DATE AND TIME — Downloads the current date and time to the ATM. The new date and time is calculated from the Tandem system time plus the value of the **TIME OFFSET** field on **ATD** screen 1 for this terminal. Place the cursor to the left of the field name and press the **F6** key to perform this task.

Field Length: Cursor placement only

LOAD MAC KEY — Downloads the new message authentication (MAC) key to the ATM. Place the cursor to the left of the field name and press the **F6** key to perform this task.

Field Length: Cursor placement only

LOAD NOTE IDS — Downloads a new or updated set of Note IDs to the ATM. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field.

Field Length: 1 alphanumeric character

Required Field No

Default Value: No default value

LOAD KEY TYPE — Downloads a new communications key to the ATM. The new communications key is decrypted using the specified type. Currently, the NCR 5XXX Device Handler process does not support changing the master key of the ATM. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field. Valid values are as follows:

- 1 = Decrypt new master key using current master key (not currently supported).
- 2 = Decrypt new communications key using current master key.
- 3 = Decrypt new communications key using current communications key.
- 4 = Use power up communications key as current communications key (not currently supported).

Field Length: 1 numeric character

Required Field: No

Default Value: No default value

LOAD CUST SCREEN — The number of the customer screen you want downloaded to the ATM from the customized load group specified in the LOAD GROUP field. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field.

Field Length: 3 numeric characters

Required Field No

Default Value: 0

LANG — A code indicating the language of the customer screen to be downloaded. Valid values are 0-9

Field Length: 1 numeric character
Required Field No
Default Value: 0

DELETE PUBLIC KEY — For ATMs supporting NCR's Enhanced AKDS scheme, a code indicating whether to delete the BASE24 Primary Public key and optionally, the BASE24 Root Public key. To perform this task, enter a valid value and press the F1 key while the cursor is positioned in the field. Valid values are as follows:

R = Delete the BASE24 Root Public key and the BASE24 Primary Public key
P = Delete the BASE24 Primary Public key

Field Length: Cursor placement and valid value
Required Field No
Default Value: None

LOAD C-SCREEN — The number of the cardholder display screen (C-screen) you want downloaded to the ATM from the customized load group specified in the LOAD GROUP field. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field.

Field Length: 2 numeric characters
Required Field: No
Default Value: 0

LOAD PRIMARY PUBLIC KEY — For ATMs supporting NCR's Enhanced AKDS scheme, downloads only the BASE24 Primary Public key to the ATM if it has been deleted. To perform this task, press the F1 key while the cursor is positioned in the field.

Field Length: Cursor placement only

LOAD R-SCREEN — The number of the receipt screen (R-screen) you want downloaded to the ATM from the customized load group specified in the LOAD GROUP field. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field.

Field Length: 2 numeric characters
Required Field: No
Default Value: 0

LOAD MASTER/COM KEY — For ATMs supporting NCR's Enhanced AKDS scheme, downloads the new Master key to the ATM, followed by the PIN key and a MAC key if MACing is supported. To perform this task, press the F1 key while the cursor is positioned in the field.

Field Length: Cursor placement only

LOAD STATE — The number of the state you want downloaded to the ATM from the customized load group specified in the LOAD GROUP field. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD FIT — The number of the financial institution table (FIT) you want downloaded to the ATM from the customized load group specified in the LOAD GROUP field. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field.

Field Length: 3 numeric characters
Required Field: No
Default Value: 0

LOAD EMV GROUP — The number of the EMV group you want to download to the ATM from the customized load group specified in the **LOAD GROUP** field. To perform this task, enter a valid value and press the **F6** key while the cursor is positioned in the field.

Field Length: 1–4 numeric characters
 Required Field: No
 Default Value: 0

Function Keys

The following table shows the functions assigned to the function keys on the NCR 5XXX Load Commands screen. The first column of the table shows the BASE24 key. The second column describes the functions that can be accomplished with these function keys.

Key	Description
F1	Enter — Checks selected fields from the screen for valid entries and, if these entries are valid, executes the selected command. If an entry is invalid or missing, this function highlights the field and displays an error message indicating the information that must be changed or added.
F2	Configuration — Retrieves configuration information from the ATM and displays the data on the network logging facility. If the ATM is to be reconfigured, this command must be executed before the LOAD ALL command. See the topic “Adding a New Terminal” later in this section for more information.
F3	Counters — Retrieves supplies counters from the ATM and displays the data on the network logging facility.
F4	Open — Opens the specified terminal.
F5	Close — Closes the specified terminal.
F6	Load — Downloads the specified information from the CNFG5070 File to the ATM. For this function, the cursor must be positioned on the same line of the command to be performed.

Key	Description
F7	Reset — Resets the transaction status to expected transaction, the load in progress status to false, and the administration status to indicate that administrative processing is completed.
F8	CPLF — Prints a Check Proof List File (CPLF) at the ATM. This function key can be used only with the BASE24-atm self-service banking (SSB) Device Handler extension add-on module for NCR 5XXX ATMs. This report is described in the <i>BASE24-atm NCR 5XXX SSB Manual</i> .
F10	Print — Sends the current image of the NCR 5XXX Load Commands screen to the spooler location specified on the BASE24 Logon screen.
F12	Display Help Screen — Displays the Help screen for the NCR 5XXX Load Commands screen. This Help screen lists the functions assigned to the function keys for the NCR 5XXX Load Commands screen.
F16	Exit or Goto File — Returns you to DCT screen 45 if you have not made an entry in either the NEW LOGICAL NETWORK ID or FILE DESTINATION field. If you enter values in either or both of these fields, this function displays the specified file on the specified logical network.
Shift-F16	Logoff — Logs you off BASE24, which returns you to the BASE24 Logon screen.

Procedures

You can use the NCR 5XXX Load Commands screen to perform the following tasks:

- Add a new terminal
- Download all configuration information from both load groups
- Download all configuration information from a customized load group
- Download all screens from both load groups
- Download all states from both load groups
- Download all financial institution tables (FITs) from both load groups
- Download the current date and time
- Download a MAC key
- Download a new communications key
- Download a public key
- Download a master key
- Download all keys
- Delete a public key
- Download the key entry mode
- Download a primary public key
- Download a master and communication key
- Download a customer screen from a customized load group
- Download a cardholder display screen from a customized load group
- Download a receipt screen from a customized load group
- Download a state from both load groups
- Download a financial institution table (FIT) from both load groups
- Download Note IDs to an ATM equipped with a BNA (Bunch Note Acceptor)
- Open a terminal
- Close a terminal
- Reset a terminal
- Display terminal configuration information

- Display supplies counters
- Print the Check Proof List File (CPLF) at a terminal

Procedures for performing these tasks are described below and on the following pages. Refer to the ***BASE24-atm EMV Support Manual*** for information about downloading an EMV group.

Adding a New Terminal

The procedure to add a new NCR 5XXX terminal is similar to the procedure for downloading all configuration data, with additional steps. Adding a new terminal downloads all screens, states, and the financial institution table (FIT) to the ATM. Also downloaded are enhanced configuration parameter information from load group 0 and the customized load group specified in the **TERMINAL GROUP** field on **ATD** screen 7. The information to be downloaded is taken from the **CNFG5070** File.

To add a new terminal, you must first add the **BASE24-atm** Terminal Data files record for the terminal. If you are using the Transaction Security Services process, you also must add a new Channel Security Configuration File (CSECD) record, as well. You can then start the terminal from an **XPNET** network control facility. After the terminal is started, perform the following steps:

1. Enter the terminal identifier in the **ATM TERMINAL ID** field on the **NCR 5XXX Load Commands** screen.
2. Enter the identifier of the financial institution owning the ATM in the **FIID** field, if applicable, or enter four asterisks (****).
3. Press the **F2** key to retrieve the configuration information for the ATM.
4. Place the cursor to the left of the **LOAD ALL (INCLUDING KEYS)** field name.
5. Press the **F6** key to send the command to the network.
6. Check the screen to make sure that the message “**COMMAND SENT TO NETWORK**” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that all configuration information has been loaded successfully.

Refer to the ***BASE24-atm Files Maintenance Manual*** for more information on the **BASE24-atm** Terminal Data files. Refer to the ***BASE24 Transaction Security Services Processing Guide*** for more information about the **CSECD**.

Downloading All Configuration Information from Both Load Groups

The LOAD ALL (INCLUDING KEYS) command downloads all screens, states, and the financial institution table (FIT) to the ATM. It also downloads enhanced configuration parameter information from load group 0 and the customized load group specified in the LOAD GROUP field on this screen or in the TERMINAL GROUP field on ATD screen 7. If a customized load group is specified in the LOAD GROUP field, it overrides the value in the BASE24-atm Terminal Data files. The information to be downloaded is taken from the CNFG5070 File.

To download all configuration information, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Optionally, enter the customized load group value in the LOAD GROUP field. If you do not enter a value in this field, the customized load group specified in the TERMINAL GROUP field on ATD screen 7 is used. A value in the LOAD GROUP field overrides the value in the BASE24-atm Terminal Data files.
4. Place the cursor to the left of the LOAD ALL (INCLUDING KEYS) field name.
5. Press the **F6** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
7. Check the network logging facility for messages indicating that all configuration information has been downloaded successfully.

Downloading All Configuration Information from a Customized Load Group

The LOAD ALL IN GROUP command downloads all customer, supervisor, and printer configuration screens, states, financial institution tables (FITs), and the configuration ID from the customized load group to the ATM. The information to be downloaded is taken from the CNFG5070 File.

To download all configuration information from a customized load group, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter a valid customized load group number (1–9999) in the LOAD GROUP field.
3. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
4. Place the cursor to the left of the LOAD ALL IN GROUP field name.
5. Press the **F6** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
7. Check the network logging facility for messages indicating that all configuration information has been downloaded successfully.

Downloading All Screens from Both Load Groups

The LOAD ALL SCREENS command downloads all screen information from load group 0 and the customized load group specified in the TERMINAL GROUP field on ATD screen 7. The information to be downloaded is taken from the screen values in the CNFG5070 File.

To download all screen information, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD ALL SCREENS field name.
4. Press the **F6** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that all screen information has been downloaded successfully.

Downloading All States from Both Load Groups

The LOAD ALL STATES command downloads all state information from load group 0 and the customized load group specified in the TERMINAL GROUP field on ATD screen 7. The information to be downloaded is taken from the state values in the CNFG5070 File.

To download all state information, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD ALL STATES field name.
4. Press the **F6** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that all state information has been downloaded successfully.

Downloading All Financial Institution Tables from Both Load Groups

The LOAD ALL FITS command downloads all financial institution tables (FITs) from load group 0 and the customized load group specified in the TERMINAL GROUP field on ATD screen 7. The information to be downloaded is taken from the FIT values in the CNFG5070 File.

To download all FITs, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD ALL FITS field name.
4. Press the **F6** key to send the command to the network.

5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that all FITs have been downloaded successfully.

Downloading the Current Date and Time

The LOAD DATE AND TIME command downloads the current date and time to the ATM. The new date and time are calculated from the Tandem system time, plus the value of the TIME OFFSET field on ATD screen 1 for this terminal.

To download the current date and time, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD DATE AND TIME field name.
4. Press the **F6** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the date and time have been downloaded successfully.

Downloading a New MAC Key

The LOAD MAC KEY command downloads a new message authentication (MAC) key to the ATM.

To download a MAC key, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD MAC KEY field name.
4. Press the **F6** key to send the command to the network.

5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the MAC key has been downloaded successfully.

Downloading a New Communications Key

The LOAD KEY TYPE command downloads a new communications key to the ATM. The communications key must be downloaded to change the key currently being used.

To download a new communications key, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter the number of the decryption type you want used in downloading the key in the LOAD KEY TYPE field. Currently, the NCR Device Handler process does not support changing the master key of the ATM. Valid values are as follows:
 - 1 = Decrypt new master key using current master key (not currently supported).
 - 2 = Decrypt new communications key using current master key.
 - 3 = Decrypt new communications key using current communications key.
 - 4 = Use power up communications key as current communications key (not currently supported).
4. While the cursor is placed in the LOAD KEY TYPE field, press the **F6** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the new communications key has been downloaded successfully.

Downloading a Public Key

This procedure initiates the message sequence that results in downloading a public key to the NCR 5XXX ATM. To initiate this processing, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD PUBLIC KEY field name.
4. Press the **F6** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the public key has been downloaded successfully.

Downloading a Master Key

This procedure initiates the message sequence that results in downloading a master key to the NCR 5XXX ATM. Before loading a new master key, you must first load a new public key, as described above. To initiate master key download processing, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD MASTER KEY field name.
4. Press the **F6** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the master key has been downloaded successfully.

Downloading All Keys

This procedure initiates the message sequence that results in downloading up to four keys to the NCR 5XXX ATM. The keys downloaded depend on whether the terminal supports the Automated Key Distribution System (AKDS).

For terminals supporting NCR's Enhanced AKDS scheme, the Device Handler process deletes the BASE24 Root Public key and BASE24 Primary Public key, downloads the following keys in the order shown, then opens the terminal.

1. BASE24 Root Public key and BASE24 Primary Public key
2. Master key
3. MAC encryption key, if the MAC SUPPORT TYPE field on ATD screen 9 contains a value of 3
4. PIN encryption key, if the PIN ENCRYPT TYPE field on ATD screen 9 contains a value of 01, 03, 04, or 05

For terminals that support AKDS, the Device Handler process downloads the following keys in the order shown, then opens the terminal.

1. Public key
2. Master key
3. MAC encryption key, if the MAC SUPPORT TYPE field on ATD screen 9 contains a value of 3
4. PIN encryption key, if the PIN ENCRYPT TYPE field on ATD screen 9 contains a value of 01, 03, 04, or 05

For terminals that do not support AKDS, the Device Handler process downloads only the MAC encryption key and the PIN encryption key. To initiate this key download processing, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD ALL KEYS field name.
4. Press the **F6** key to send the command to the network.
5. Check the screen to make sure that the message "COMMAND SENT TO NETWORK" is displayed. If it is not displayed, repeat steps 1–4.

6. Check the network logging facility for messages indicating whether the ATM terminal supports AKDS and that the appropriate keys have been downloaded successfully.

Downloading the Key Entry Mode

This procedure initiates the message sequence that results in downloading the key entry mode to the NCR 5XXX ATM. This procedure can take place only after the download of the encryption keys using the RSA key download has been performed. Downloading the key entry mode is necessary only when the entry mode was not set when the ATM was in supervisor mode. Refer to the *BASE24-atm NCR 5XXX Device Support Manual* for more information about downloading the key entry mode. To initiate key entry mode download processing, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter one of the following values to the right of the LOAD KEY ENTRY MODE field:
 - 1 = Key entry mode is single length without XOR.
 - 2 = Key entry mode is single length with XOR.
 - 3 = Key entry mode is double length with XOR.
 - 4 = Key entry mode is double length restricted.
4. Press the **F6** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.
6. Check the network logging facility for messages indicating that the key entry mode has been downloaded successfully.

Deleting a Public Key

For ATMs supporting NCR's Enhanced AKDS scheme, this procedure initiates the message sequence that results in deleting the Primary Public key and optionally the Root Public key from the NCR 5XXX ATM. To initiate this processing, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Enter one of the following values to the right of the DELETE PUBLIC KEY field name:
R = Delete the BASE24 Root Public key and the BASE24 Primary Public key
P = Delete only the BASE24 Primary Public key
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message "COMMAND SENT TO NETWORK" is displayed. If it is not displayed, repeat steps 1–4.

Check the network logging facility for messages indicating that the public key has been downloaded successfully.

Downloading a Primary Key

For ATMs supporting NCR's Enhanced AKDS scheme, this procedure initiates the message sequence that results in downloading the BASE24 Primary Public key to the NCR 5XXX ATM if it has been deleted. To initiate this processing, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD PRIMARY PUBLIC KEY field name.
4. Press the **F1** key to send the command to the network.

5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.

Check the network logging facility for messages indicating that the public key has been downloaded successfully.

Load Master/Com Key

For ATMs supporting NCR's Enhanced AKDS scheme, this procedure initiates the message sequence that performs the LOAD MASTER, load PIN key and load MAC key (if supported) steps and opens the ATM for transactions. The keys downloaded depend on whether the terminal supports the Automated Key Distribution System (AKDS).

For terminals that support AKDS, the Device Handler process downloads the following keys in the order shown, then opens the terminal.

1. Master key
2. PIN encryption key
3. MAC encryption key

For terminals that do not support AKDS, the Device Handler process downloads only the MAC encryption key and the PIN encryption key. To initiate this download processing, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Place the cursor to the left of the LOAD MASTER/COM KEY field name.
4. Press the **F1** key to send the command to the network.
5. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–4.

Check the network logging facility for messages indicating whether the ATM terminal supports AKDS and that the appropriate keys have been downloaded successfully.

Downloading a Customer Screen from a Customized Load Group

The LOAD CUST SCREEN command downloads a customer screen from the customized load group specified in the LOAD GROUP field. The information to be downloaded is taken from the screen values in the CNFG5070 File.

To download a specific customer screen from a customized load group, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter a valid customized load group number (1–9999) in the LOAD GROUP field.
3. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
4. Enter the number of the screen you want to download in the LOAD CUST SCREEN field.
5. Enter the number of the screen language you want to download in the LANG field.
6. While the cursor is placed in either the LOAD CUST SCREEN field or the LANG field, press the **F6** key to send the command to the network.
7. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
8. Check the network logging facility for messages indicating that the customer screen has been downloaded successfully.

Downloading a Cardholder Display Screen from a Customized Load Group

The LOAD C-SCREEN command downloads a cardholder display screen (C-screen) from the load group specified in the LOAD GROUP field. The information to be downloaded is taken from the display screen values in the CNFG5070 File.

To download a specific cardholder display screen from a customized load group, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter a valid customized load group number (1–9999) in the LOAD GROUP field.
3. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
4. Enter the number of the screen you want to download in the LOAD C-SCREEN field.
5. While the cursor is placed in the LOAD C-SCREEN field, press the **F6** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the cardholder display screen has been downloaded successfully.

Downloading a Receipt Screen from a Customized Load Group

The LOAD R-SCREEN command downloads a preprinted stationery receipt screen (R-screen) from the load group specified in the LOAD GROUP field. The information to be downloaded is taken from the receipt screen values in the CNFG5070 File.

To download a specific receipt screen from a customized load group, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter a valid customized load group number (1–9999) in the LOAD GROUP field.
3. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
4. Enter the number of the screen you want to download in the LOAD R-SCREEN field.
5. While the cursor is placed in the LOAD R-SCREEN field, press the **F6** key to send the command to the network.

6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the receipt screen has been downloaded successfully.

Downloading a State from Both Load Groups

The LOAD STATE command downloads a state from load group 0 and the customized load group specified in the LOAD GROUP field. Use caution when changing a state since changing state types changes the functionality of the screens associated with that state. The information to be downloaded is taken from the state values in the CNFG5070 File.

To download a specific state from both load groups, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter a valid customized load group number (1–9999) in the LOAD GROUP field.
3. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
4. Enter the number of the state you want to download in the LOAD STATE field.
5. While the cursor is placed in the LOAD STATE field, Press the **F6** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the state has been downloaded successfully.

Downloading a Financial Institution Table from Both Load Groups

The LOAD FIT command downloads a financial institution table (FIT) from load group 0 and the customized load group specified in the LOAD GROUP field. The information to be downloaded is taken from the FIT values in the CNFG5070 File.

To download a specific FIT from both load groups, perform the following steps:

1. Enter a valid NCR 5XXX ATM terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter a valid customized load group number (1–9999) in the LOAD GROUP field.
3. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
4. Enter the number of the FIT you want to download in the LOAD FIT field.
5. While the cursor is placed in the LOAD FIT field, Press the **F6** key to send the command to the network.
6. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–5.
7. Check the network logging facility for messages indicating that the FIT has been downloaded successfully.

Downloading Note IDs to an ATM Equipped with a BNA

This procedure initiates the message sequence that results in downloading Note IDs to an NCR 5XXX ATM equipped with a BNA (Bunch Note Acceptor) and running Wincor Nixdorf’s firmware. To initiate this processing, perform the following steps:

1. Place the cursor to the left of the LOAD NOTE IDS field name and press the **F6** key to display this screen. The message "Command sent to network" appears on the screen.
2. Review the EMS log for the EMS events which indicate the Note IDs were sent to the ATM.

This command actually takes the appropriate record from the NIDF (using the NOTE ID Profile field on the ATD to find the correct one) and sends those Note IDs down to the ATM. This enables the customer to change Note IDs from being accepted by the ATM, to being recycled by the ATM, or to being not accepted by the ATM, as often and whenever they need.

Opening a Terminal

An NCR 5XXX ATM must be opened before it will accept customer transactions.

Note: The station for the terminal must be started before the terminal can be opened.

To open an NCR 5XXX ATM, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F4** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully opened.

Closing a Terminal

Closing an NCR 5XXX ATM displays a “TEMPORARILY OUT OF ORDER” message at the terminal and prevents customers from initiating transactions using EFT cards. Transactions in progress at the time the ATM is closed are completed before the terminal is closed. To close an NCR 5XXX ATM, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F5** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully closed.

Resetting a Terminal

Resetting an NCR 5XXX ATM interrupts any current transaction or load in progress and resets the transaction status to *expected transaction*, the load in progress status to false, and the administration status to indicate that administrative process is completed.

To reset an NCR 5XXX ATM, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F7** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the terminal has been successfully reset.

Displaying Terminal Configuration Information

This procedure displays the current configuration of an NCR 5XXX ATM in a series of event messages on the network log. If the ATM is to be reconfigured, this command must be executed before the LOAD ALL command. Refer to the “Adding a Terminal” procedure provided earlier in this section for details.

To display configuration information for an NCR 5XXX ATM, perform the following steps:

1. Enter the terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F2** key to retrieve the configuration information for the ATM.
4. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages describing the current configuration of the terminal.

Displaying Supplies Counters

This procedure retrieves supplies counters from the ATM and displays the data in a series of event messages on the network logging facility.

To display supplies counters for an NCR 5XXX ATM, perform the following steps:

1. Enter the terminal identifier in the ATM TERMINAL ID field on the NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F3** key to retrieve the supplies counters for the ATM.
4. Check the screen to make sure that the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages displaying the supplies counters for the terminal.

Printing the Check Proof List File (CPLF) at a Terminal

This procedure allows you to print the Check Proof List File (CPLF) for an NCR 5XXX ATM. To print the CPLF, perform the following steps:

1. Enter a valid NCR 5XXX terminal identifier in the ATM TERMINAL ID field on NCR 5XXX Load Commands screen.
2. Enter the identifier of the financial institution owning the ATM in the FIID field, if applicable, or enter four asterisks (****).
3. Press the **F8** key to send the command to the network.
4. Check the screen to verify the message “COMMAND SENT TO NETWORK” is displayed. If it is not displayed, repeat steps 1–3.
5. Check the network logging facility for messages indicating that the CPLF has been successfully printed.

Index

A

Accessing DCT screens, [1-7](#)

ADCF

See ATM Dial-Up Command File (ADCF)

Alarm Sensors screen, [4-34](#)

ALTER ATTRIBUTE text command, [3-1](#)

ATM Balance Current Cash screen
see DCT screen 8

ATM Balance Standard Cash screen
see DCT screen 9

ATM Burroughs RT650 Commands screen
see DCT screen 43

ATM Current Cash Subtotals screen
field descriptions, [5-19](#)
screen sample, [5-18](#)

ATM Dial-Up Command File (ADCF)
Diebold 10XX terminals, [12-3](#)
NCR 5XXX terminals, [16-2](#)

ATM Diebold Commands screen
see DCT screen 39

ATM Docutel 5100 Commands screen
see DCT screen 41

ATM Fujitsu Commands screen
see DCT screen 37

ATM IBM 4730 Commands screen
see DCT screen 44

ATM NCR 5XXX Commands screen
see DCT screen 45

ATM Olivetti Commands screen
see DCT screen 32

ATM Standard Cash Subtotals screen
field descriptions, [6-14](#)
screen sample, [6-14](#)

ATM Terminal Commands screen
see DCT screen 7

ATM terminals
balancing with current cash or cash value, [5-15](#)
balancing with current non-value items, [5-15](#)
balancing with standard cash or cash value, [6-10](#)
balancing with standard non-value items, [6-10](#)
closing a terminal, [4-12](#)
displaying station status information, [4-10](#)
displaying status information for a single terminal, [4-8](#)
displaying status information for all terminals, [4-9](#)

opening a terminal, [4-11](#)

requesting the status of the Bunch Note Acceptor configuration, [4-13](#)

retrieving BNA counts, [5-17](#), [6-12](#)

starting a station, [4-10](#)

stopping a station, [4-12](#)

B

Balancing ATMs

balancing with current cash or cash value, [5-15](#)
balancing with current non-value items, [5-15](#)
balancing with standard cash or cash value, [6-10](#)
balancing with standard non-value items, [6-10](#)
decreasing cash or cash value in hoppers, [5-14](#)
decreasing the number of non-value items in hoppers, [5-14](#)
displaying hopper subtotals, [5-11](#)
displaying standard cash subtotals, [6-9](#)
increasing cash or cash value in hoppers, [5-12](#)
increasing the number of non-value items in hoppers, [5-12](#)
retrieving BNA counts, [5-17](#), [6-12](#)

BASE24 Logon screen, [1-4](#)

BASE24 Virtual Menu, [1-5](#)

Burroughs RT650/RT750 ATMs

closing, [14-6](#)
downloading a new communications key, [14-5](#)
opening, [14-6](#)
requesting hardware status, [14-7](#)
supported models, [14-1](#)

C

Cash value, definition of

Balance Current Cash screen, [5-1](#)
Balance Standard Cash screen, [6-1](#)

Change Phrase screen

function keys, [15-16](#)
screen sample and field descriptions, [15-14](#)

Closing an ATM terminal, [4-12](#)

D**DCT Menu**

- DCT screen descriptions, 1-9
- field descriptions, 1-8
- function keys, 1-12
- screen options, 1-14
- screen sample, 1-7
- using, 1-8

DCT screen 4

- function keys, 2-6
- procedures, 2-7
- screen sample and field descriptions, 2-3

DCT screen 5

- function keys, 3-6
- procedure, 3-7
- screen sample and field descriptions, 3-4

DCT screen 7

- function keys, 4-5
- function keys, detailed station status response, 4-29
- procedures, 4-8
- screen sample and field descriptions, 4-2

DCT screen 8

- function keys, 5-8
- procedures, 5-11
- screen sample and field descriptions, 5-3

DCT screen 9

- function keys, 6-7
- procedures, 6-9
- screen sample and field descriptions, 6-3

DCT screen 15

- function keys, 7-4
- procedures, 7-6
- screen sample and field descriptions, 7-2

DCT screen 32

- field descriptions, 8-2
- function keys, 8-5
- procedures, 8-6

DCT screen 37

- function keys, 9-8
- procedures, 9-10
- screen sample and field descriptions, 9-4

DCT screen 38

- function keys, 10-7
- procedures, 10-8
- screen sample and field descriptions, 10-2
- secondary screens, 10-22

DCT screen 39

- function keys, 11-8
- procedures, 11-10
- screen sample and field descriptions, 11-4

DCT screen 40

- function keys, 12-12
- procedures, 12-14
- screen sample and field descriptions, 12-4

DCT screen 41

- field descriptions, 13-3
- function keys, 13-9
- procedures, 13-11

DCT screen 43

- field descriptions, 14-2
- function keys, 14-4
- procedures, 14-5

DCT screen 44

- function keys, 15-5
- procedures, 15-6
- screen sample and field descriptions, 15-2
- secondary screens, 15-14

DCT screen 45

- function keys, 16-4
- procedures, 16-13
- screen sample and field descriptions, 16-3

Decreasing cash or cash value in hoppers, 5-14**Decreasing the number of non-value items in hoppers, 5-14****Detailed Status of a Station screen**

- function keys, 4-29
- screen sample and field descriptions, 4-21

Detailed status of NCR 5XXX terminal, 4-30**Dial-up ATMs, 4-14****Diebold 10XX ATMs**

- closing, 12-26
- copying a font to a library, 12-22
- copying all cells from one library to another, 12-23
- copying an icon to a library, 12-23
- copying specified cells from one library to another, 12-24
- downloading a new communications key, 12-19
- downloading a new MAC key, 12-16
- downloading a screen from a customized load group, 12-17
- downloading a screen from load group 0000, 12-16
- downloading a state from a customized load group, 12-18
- downloading a state from load group 0000, 12-18
- downloading all configuration data, 12-15
- downloading all information from a customized load group, 12-15
- downloading EMV-specific data, 12-21
- load groups, 12-2
- opening, 12-25
- printing the CPLF, 12-27
- resetting, 12-26
- restoring the standard graphics configuration, 12-25

Diebold 10XX/478X ATMs

- downloading a master key, 12-20
- downloading a public key, 12-20
- downloading all keys, 12-21

Diebold 10XX/478X Current Cash Subtotals**screen, 5-23****Diebold 10XX/478X Standard Cash Subtotals****screen, 6-18**

Diebold 9XX-series ATMs

- closing, [11-16](#)
- downloading a communications key, [11-14](#)
- downloading a screen from a customized load group, [11-13](#)
- downloading a screen from load group 0000, [11-11](#)
- downloading a state from a customized load group, [11-14](#)
- downloading a state from load group 0000, [11-13](#)
- downloading all configuration data, [11-10](#)
- downloading all configuration information from a customized load group, [11-11](#)
- downloading communications key, [11-12](#)
- load groups, [11-2](#)
- opening, [11-15](#)
- resetting, [11-16](#)
- supported models, [11-1](#)

Display Message screen

- field descriptions, [10-23](#)
- function keys, [10-24](#)
- screen sample, [10-22](#)

Displaying ATM terminal station status, [4-10](#)**Displaying ATM terminal status**

- all terminals, [4-9](#)
- single terminal, [4-8](#)

Docutel ETS 5100/5200 ATMs

- closing, [13-26](#)
- downloading all configuration data, [13-14](#)
- downloading all screens, [13-16](#)
- downloading dictionary table, [13-19](#)
- downloading FIIT table, [13-14](#)
- downloading HPL file, [13-35](#)
- downloading new communications key, [13-12](#)
- downloading new screen, [13-16](#)
- downloading receipt header and trailer, [13-17](#)
- downloading RPQ control table, [13-18](#)
- downloading system error table, [13-20](#)
- downloading system parameters, [13-15](#)
- downloading system timers, [13-20](#)
- downloading transaction amount table, [13-24](#)
- downloading transaction code table, [13-23](#)
- downloading transaction data table, [13-22](#)
- downloading transaction definition table, [13-22](#)
- downloading transaction description table, [13-25](#)
- downloading transaction print formats, [13-18](#)
- downloading transaction sequence table, [13-24](#)
- downloading transaction state table, [13-21](#)
- entering optional HPL file name, [13-32](#)
- host program loads, [13-28](#)
- Host-Controlled Program Load procedures, [13-32](#)
- load groups, [13-2](#)
- opening, [13-26](#)
- requesting hardware status, [13-27](#)
- resetting, [13-27](#)
- stopping an HPL file upload or download in progress, [13-33](#)
- stopping configuration file load, [13-13](#)
- supported models, [13-1](#)
- uploading HPL file and purging existing file, [13-34](#)
- uploading HPL file to BASE24-atm, [13-34](#)

E**EMT Control Commands screen**

see DCT screen 5

F**Fujitsu ATMs**

- clearing subdevice supply status, [9-18](#)
- closing, [9-16](#)
- downloading a new communications key, [9-14](#)
- downloading a new MAC key, [9-15](#)
- downloading a screen from a customized load group, [9-11](#)
- downloading a screen from load group 0000, [9-13](#)
- downloading a state from a customized load group, [9-12](#)
- downloading a state from load group 0000, [9-13](#)
- downloading all configuration data, [9-10](#)
- downloading all customized group data, [9-11](#)
- load groups, [9-2](#)
- opening, [9-16](#)
- requesting hardware status, [9-17](#)
- requesting supply status, [9-18](#)
- resetting, [9-17](#)
- supported models, [9-1](#)

H**Hardware Configuration screen, [4-32](#)****Hardware Fitness screen, [4-31](#)****Hopper contents field**

- ATM Current Cash Subtotals screen, [5-20](#)
- ATM Standard Cash Subtotals screen, [6-15](#)

Host-Controlled Program Load Commands screen

- field descriptions, [13-28](#)
- function keys, [13-30](#)

I**IBM 36XX Commands screen**

see DCT screen 38

IBM 36XX-series ATMs

- changing customized option data, [10-17](#)
- changing the display message, [10-10](#)
- closing, [10-20](#)
- deactivating an SNA session, [10-12](#)
- displaying configuration version data, [10-13](#)
- displaying customized option data, [10-13](#)
- displaying last transaction status, [10-14](#)
- displaying maintenance data, [10-14](#)
- downloading communications key, [10-9](#)
- downloading configuration information, [10-21](#)
- immediately closing an ATM, [10-12](#)
- naming a trace file, [10-17](#)
- opening, [10-20](#)
- placing an ATM in service mode, [10-16](#)
- printing a journal message, [10-11](#)
- recovering base communications key, [10-10](#)
- releasing a suspended ATM, [10-16](#)

- IBM 36XX-series ATMs *continued*
 - requesting terminal status, [10-21](#)
 - resetting SNA protocol information, [10-19](#)
 - starting the trace facility, [10-18](#)
 - stopping the trace facility, [10-18](#)
 - supported models, [10-1](#)
 - suspending operation of an ATM, [10-15](#)
- IBM 4730 ATMs
 - changing a communications key, [15-7](#)
 - changing a phrase on the ATM screen, [15-8](#)
 - closing, [15-12](#)
 - displaying module status, [15-13](#)
 - displaying the error log, [15-6](#)
 - displaying the module status, [15-7](#)
 - downloading configuration files, [15-13](#)
 - opening, [15-12](#)
 - setting the date and time, [15-9](#)
 - updating the device configuration, [15-9](#)
 - uploading from or downloading to an ATM, [15-10](#)
- Increasing cash or cash value in hoppers, [5-12](#)
- Increasing the number of non-value items in hoppers, [5-12](#)
- J**
- Journal Message screen
 - function keys, [10-26](#)
 - sample screen and field descriptions, [10-25](#)
- L**
- Logging on to BASE24, [1-4](#)
- M**
- Merchant Host Interface (MHI) process terminals
 - turning off the download flag in the BASE24-pos Terminal Data files, [7-6](#)
 - turning on the download flag in the BASE24-pos Terminal Data files, [7-6](#)
- N**
- NCR 5XXX ATMs
 - adding a new terminal, [16-14](#)
 - Alarm Sensors screen, [4-34](#)
 - closing, [16-29](#)
 - displaying status information, [4-30](#)
 - displaying supplies counters, [16-30](#)
 - displaying terminal configuration, [16-30](#)
 - downloading a cardholder display screen from a customized load group, [16-25](#)
 - downloading a customer screen from a customized load group, [16-24](#)
 - downloading a FIT from both load groups, [16-27](#)
 - downloading a master key, [16-21](#), [16-23](#)
 - downloading a new communications key, [16-19](#)
 - downloading a new MAC key, [16-18](#)
 - downloading a public key, [16-20](#), [16-22](#), [16-23](#)
 - downloading a receipt screen from a customized load group, [16-26](#)
 - downloading a state from both load groups, [16-26](#)
 - downloading all configuration information from a customized load group, [16-15](#)
 - downloading all configuration information from both load groups, [16-15](#)
 - downloading all FITS from both load groups, [16-17](#)
 - downloading all screens from both load groups, [16-16](#)
 - downloading all states from both load groups, [16-17](#)
 - downloading Note IDs to an ATM, [16-28](#)
 - downloading the current date and time, [16-18](#)
 - downloading the key entry mode, [16-21](#)
 - Hardware Configuration screen, [4-32](#)
 - Hardware Fitness screen, [4-31](#)
 - load groups, [16-2](#)
 - opening, [16-28](#)
 - printing the CPLF, [16-31](#)
 - resetting, [16-29](#)
 - Supplies Status screen, [4-33](#)
- NCR 5XXX Current Cash Subtotals screen, [5-25](#)
- NCR 5XXX Load Commands screen
 - function keys, [16-11](#)
 - procedures, [16-13](#)
 - screen sample and field descriptions, [16-5](#)
- NCR 5XXX Standard Cash Subtotals screen, [6-20](#)
- Network Control Supervisor Security File (NCSS), [1-8](#)
- Noncurrency, definition of
 - Balance Current Cash screen, [5-1](#)
 - Balance Standard Cash screen, [6-1](#)
- Nonvalue, definition of
 - Balance Current Cash screen, [5-1](#)
 - Balance Standard Cash screen, [6-1](#)
- Notation conventions, [-xxi](#)
- O**
- Olivetti ATMs
 - closing, [8-10](#)
 - downloading file to ATM, [8-8](#)
 - downloading new communications key, [8-6](#)
 - immediately closing, [8-10](#)
 - opening, [8-9](#)
 - rebooting an ATM, [8-8](#)
 - resetting, [8-11](#)
 - uploading directory from ATM, [8-7](#)
 - uploading file from ATM, [8-7](#)
- Opening an ATM terminal, [4-11](#)
- Operator Product Menu, [1-6](#)
- Option data field on DCT screen 38, [10-5](#)
- P**
- POS Merchant Host Interface Device Load Control screen
 - see* DCT screen 15

Process Control Commands screen
see DCT screen 4

Protocol state field on Detailed Status of a Station screen, [4-24](#)

R

Requesting the status of the Bunch Note Acceptor configuration, [4-13](#)

S

Security

- operator terminal access, [1-16](#)
- password access, [1-9](#)

Starting an ATM station, [4-10](#)

Status messages for EMT warmboot command, [3-5](#)

Status of All Terminals screen, [4-18](#)

Status of One Terminal screen, [4-15](#)

Status response screens

- detailed status of a station, [4-21](#)
- status of all terminals, [4-18](#)
- status of one terminal, [4-15](#)

Stopping an ATM station, [4-12](#)

Subtotals screens

- ATM current cash, [5-18](#)
- ATM standard cash, [6-13](#)

Supplies Status screen, [4-33](#)

T

Teller Terminal Control screen
see DCT screen 10, [1-10](#)

Terminal access

- by branch, [1-16](#)
- by region, [1-16](#)

U

Update Device Configuration screen

- function keys, [15-21](#)
- screen sample and field descriptions, [15-17](#)

Upload/Download screen

- function keys, [15-24](#)
- screen sample and field descriptions, [15-22](#)

W

Warmbooting a shared extended memory table, [3-7](#)

Warmbooting EMTs

- description of, [3-2](#)
- procedure for, [3-7](#)
- warmboot params, [3-2](#)

Warmbooting processes

- all BASE24-pos processes with a single file, [2-11](#)
- all processes for a single BASE24 product, [2-8](#)
- all processes for a single BASE24 product with a single IDF record, [2-8](#)
- all processes for all BASE24 products, [2-7](#)
- single BASE24-pos process with a single file, [2-11](#)
- single process, [2-9](#)
- single process with a single IDF record, [2-10](#)
- warmboot params, [2-2](#)
- warmboot types, [2-3](#)

ACI Worldwide, Inc.

Index by Field Name

Note: Unlabeled fields are not included in this index; they appear by subject in the main index.

Numerics

4730 CONSOLE ID
DCT screen 7, [4-4](#)

4730 INDICATOR
DCT screen 8, [5-6](#)
DCT screen 9, [6-6](#)

A

ACCESS CONFIGURATION FILE, [16-3](#)

ALL, [2-4](#)

ALT. NAME, [4-22](#)

ALTER ATTRIBUTE, [3-4](#)

AMOUNT

Diebold 10XX/478X Current Cash Subtotals screen, [5-24](#)
Diebold 10XX/478X Standard Cash Subtotals screen, [6-19](#)

AMT

ATM Current Cash Subtotals screen, [5-22](#)
ATM Standard Cash Subtotals screen, [6-17](#)
DCT screen 8, [5-6](#)

ATM TERMID

DCT screen 7, [4-2](#), [4-18](#)
DCT screen 8, [5-3](#)
DCT screen 9, [6-3](#)

ATM TERMINAL ID

Change Phrase screen, [15-15](#)
DCT screen 32, [8-2](#)
DCT screen 37, [9-4](#)
DCT screen 38, [10-2](#)
DCT screen 39, [11-4](#)
DCT screen 40, [12-4](#)
DCT screen 41, [13-3](#)
DCT screen 43, [14-2](#)
DCT screen 44, [15-2](#)
Display Messages screen, [10-23](#)
Host-Controlled Program Load Commands screen, [13-28](#)
Journal Message screen, [10-25](#)
NCR 5XXX Load Commands screen, [16-5](#)
Update Device Configuration screen, [15-17](#)
Upload/Download screen, [15-22](#)

ATM-ID

Status of All Terminals screen, [4-18](#)
Status of One Terminal screen, [4-15](#)

AUDIT, [4-25](#)

B

BALANCE

DCT screen 8, [5-5](#)
DCT screen 9, [6-5](#)

BEFORE USI, [4-25](#)

BRANCH

DCT screen 7, [4-3](#)
DCT screen 8, [5-4](#)
DCT screen 9, [6-4](#)
Status of All Terminals screen, [4-19](#)

BRNCH, [4-16](#)

C

CAMERA, [15-20](#)

CAPTURED CARDS

ATM Current Cash Subtotals screen, [5-22](#)
ATM Standard Cash Subtotals screen, [6-17](#)

CCODE

ATM Current Cash Subtotals screen, [5-19](#)
ATM Standard Cash Subtotals screen, [6-15](#)

CELL, copy cells, from library, [12-11](#)

CELL, copy cells, to library, [12-11](#)

CHANGE COMMUNICATION KEY, [15-3](#)

CHANGE COMMUNICATIONS KEY, [10-3](#)

CHANGE DISPLAY MESSAGE, [10-3](#)

CHANGE OPTION DATA, [10-5](#)

CHANGE PHRASE

Change Phrase Screen, [15-15](#)
DCT Screen 44, [15-4](#)

CHECK DEPOSITORY, [15-19](#)

CLOSE IMMEDIATE, [10-3](#)

COIN FEED, [15-19](#)

CONSOLE (1/2)

DCT screen 44, [15-3](#)
Update Device Configuration screen, [15-18](#)

CONTROLLER STATION, [4-27](#)

COPY CELL DATA FROM LIBRARY, [12-9](#)

COPY CELLS, [12-10](#)

COPY FONT, [12-8](#)

COPY ICON, [12-9](#)

COUNT

Detailed Status of a Station screen, [4-27](#)

Diebold 10XX/478X Current Cash Subtotals screen, [5-24](#)

Diebold 10XX/478X Standard Cash Subtotals screen, [6-19](#)

COUNTS

DCT screen 8, [5-5](#)

DCT screen 9, [6-5](#)

CURRENT, [4-22](#)

CURRENT COUNT, [4-23](#)

D

DATA FILE NAME, [15-23](#)

DATETIME, [8-4](#)

DEACTIVATE SESSION, [10-4](#)

DECR

ATM Current Cash Subtotals screen, [5-21](#)

ATM Standard Cash Subtotals screen, [6-16](#)

DELETE PUBLIC KEY

NCR 5XXX Load Commands screen, [16-9](#)

DEPOSIT BIN

Diebold 10XX/478X Current Cash Subtotals screen, [5-24](#)

Diebold 10XX/478X Standard Cash Subtotals screen, [6-19](#)

DEST NAME, [4-21](#)

DEVICE NUMBER, [4-27](#)

DEVICE STATUS, [4-17](#)

DISPLAY CUSTOMIZED OPTION, [10-4](#)

DISPLAY ERROR LOG, [15-3](#)

DISPLAY LAST TRANSACTION STATUS, [10-4](#)

DISPLAY MAINTENANCE DATA, [10-4](#)

DISPLAY MODULE STATUS, [15-3](#)

DISPLAY VERSION DATA, [10-4](#)

DOCUMENT FEED, [15-19](#)

DOWNLINE LOAD DATA, [16-3](#)

DOWNLINE PROGRAM LOAD, [13-29](#)

DOWNLOAD, [8-4](#)

E

END

ATM Current Cash Subtotals screen, [5-21](#)

ATM Standard Cash Subtotals screen, [6-16](#)

ENVELOPE DEPOSITORY, [15-18](#)

ERROR ACTION, [4-28](#)

F

FAILURES, [4-26](#)

FAULT, [4-20](#)

FI-ID, [2-5](#)

FIID

Change Phrase screen, [15-15](#)

DCT screen 7, [4-2](#)

DCT screen 8, [5-4](#)

DCT screen 9, [6-4](#)

DCT screen 15, [7-2](#)

DCT screen 32, [8-3](#)

DCT screen 37, [9-4](#)

DCT screen 38, [10-3](#)

DCT screen 39, [11-5](#)

DCT screen 40, [12-4](#)

DCT screen 41, [13-4](#)

DCT screen 43, [14-2](#)

DCT screen 44, [15-3](#)

Display Messages screen, [10-23](#)

Host-Controlled Program Load Commands screen, [13-28](#)

Journal Message screen, [10-25](#)

NCR 5XXX Load Commands screen, [16-6](#)

Update Device Configuration screen, [15-17](#)

Upload/Download screen, [15-22](#)

FROM LIBRARY, [12-11](#)

H

HOPPER NUM, [5-6](#)

HOST-CONTROLLED PROGRAM LOAD COMMANDS, [13-4](#)

HPL FILE NAME, [13-29](#)

I

INCR

ATM Current Cash Subtotals screen, [5-21](#)

ATM Standard Cash Subtotals screen, [6-16](#)

INPUT

audit, [4-25](#)

failures, [4-26](#)

messages, [4-25](#)

INTERVAL, [4-27](#)

J

JOURNAL DISK, [15-20](#)

JOURNAL PRINT, [10-3](#)

JOURNAL TEXT, [10-26](#)

L

LANG

NCR 5XXX Load Commands screen, [16-9](#)

LANGUAGE NUMBER, [15-15](#)

LINE NAME, [4-22](#)

LOAD ALL, [13-5](#)

- LOAD ALL (INCLUDING KEYS)
 - NCR 5XXX Load Commands screen, [16-6](#)
- LOAD ALL FITS
 - NCR 5XXX Load Commands screen, [16-7](#)
- LOAD ALL IN GROUP
 - NCR 5XXX Load Commands screen, [16-6](#)
- LOAD ALL KEYS
 - DCT screen 40, [12-7](#)
 - NCR 5XXX Load Commands screen, [16-7](#)
- LOAD ALL SCREENS
 - NCR 5XXX Load Commands screen, [16-6](#)
- LOAD ALL STATES
 - NCR 5XXX Load Commands screen, [16-7](#)
- LOAD C-SCREEN
 - NCR 5XXX Load Commands screen, [16-9](#)
- LOAD CUST SCREEN
 - NCR 5XXX Load Commands screen, [16-8](#)
- LOAD DATE AND TIME
 - NCR 5XXX Load Commands screen, [16-7](#)
- LOAD DICTIONARY TABLE, [13-6](#)
- LOAD EMV DATA
 - DCT screen 40, [12-7](#)
- LOAD EMV GROUP
 - NCR 5XXX Load Commands screen, [16-11](#)
- LOAD FIIT TABLE, [13-5](#)
- LOAD FILE NAME PREFIX, [8-3](#)
- LOAD FIT
 - NCR 5XXX Load Commands screen, [16-10](#)
- LOAD GROUP
 - DCT screen 37, [9-5](#)
 - DCT screen 39, [11-5](#)
 - DCT screen 40, [12-5](#)
 - NCR 5XXX Load Commands screen, [16-5](#)
- LOAD GROUP SCREEN
 - DCT screen 37, [9-5](#)
 - DCT screen 39, [11-6](#)
 - DCT screen 40, [12-5](#)
- LOAD GROUP STATE
 - DCT screen 37, [9-5](#)
 - DCT screen 39, [11-6](#)
 - DCT screen 40, [12-6](#)
- LOAD KEY
 - DCT screen 32, [8-3](#)
 - DCT Screen 37, [9-6](#)
- LOAD KEY ENTRY MODE
 - NCR 5XXX Load Commands screen, [16-7](#)
- LOAD KEY TYPE
 - NCR 5XXX Load Commands screen, [16-8](#)
- LOAD MAC KEY
 - DCT screen 37, [9-6](#)
 - DCT screen 39, [11-5](#)
 - DCT screen 40, [12-5](#)
 - NCR 5XXX Load Commands screen, [16-8](#)
- LOAD MASTER KEY
 - DCT screen 40, [12-7](#)
 - NCR 5XXX Load Commands screen, [16-6](#)
- LOAD MASTER/COM KEY
 - NCR 5XXX Load Commands screen, [16-10](#)
- LOAD NOTE IDS
 - DCT screen 40, [12-7](#)
 - NCR 5XXX Load Commands screen, [16-8](#)
- LOAD OPTION, [9-6](#)
- LOAD OR RETRIEVE, [15-24](#)
- LOAD PIN KEY, [11-7](#), [12-6](#)
- LOAD PRIMARY PUBLIC KEY
 - NCR 5XXX Load Commands screen, [16-9](#)
- LOAD PUBLIC KEY
 - DCT screen 40, [12-6](#)
 - NCR 5XXX Load Commands screen, [16-6](#)
- LOAD RECEIPT HEADER/TRAILER, [13-6](#)
- LOAD RESET
 - DCT screen 41, [13-5](#)
 - Host-Controlled Program Load Commands screen, [13-29](#)
- LOAD RPQ CONTROL TABLE, [13-6](#)
- LOAD R-SCREEN
 - NCR 5XXX Load Commands screen, [16-10](#)
- LOAD SCREEN
 - DCT screen 37, [9-5](#)
 - DCT screen 39, [11-5](#)
 - DCT screen 40, [12-5](#)
 - DCT screen 41, [13-6](#)
- LOAD SCREENS (ALL), [13-5](#)
- LOAD STATE
 - DCT screen 37, [9-6](#)
 - DCT screen 39, [11-6](#)
 - DCT screen 40, [12-6](#)
 - NCR 5XXX Load Commands screen, [16-10](#)
- LOAD SYSTEM ERROR TABLE, [13-7](#)
- LOAD SYSTEM PARAMETERS, [13-5](#)
- LOAD SYSTEM TIMERS, [13-7](#)
- LOAD TRAN AMOUNT TABLE, [13-8](#)
- LOAD TRAN CODE TABLE, [13-8](#)
- LOAD TRAN DATA TABLE, [13-7](#)
- LOAD TRAN DEFINITION TABLE, [13-7](#)
- LOAD TRAN DESCRIPTION TABLE, [13-8](#)
- LOAD TRAN PRINT FORMAT, [13-6](#)
- LOAD TRAN SEQUENCE TABLE, [13-8](#)
- LOAD TRAN STATE TABLE, [13-7](#)
- LOADKEY
 - DCT screen 32, [8-3](#)
 - DCT screen 43, [14-3](#)
- LOADKEY OPTION, [13-4](#)
- LOGICAL, [4-22](#)
- LOGICAL NET, [1-4](#)
- LOGO, [2-4](#)

M

MAXIMUM, [4-27](#)
MAXIMUM COUNT, [4-23](#)
MESSAGES, [4-25](#)
MICROCODE FILE NAME, [15-23](#)
MICROCODE PATCH FILE NAME, [15-23](#)
MSG NUMBER, [10-23](#)
MSG TEXT, [10-23](#)

N

NAME TRACE FILE, [10-5](#)
NETMODE, [4-23](#)
NEW PAGE, [1-8](#)
NO. OF ERRORS, [4-28](#)
NUM OF ENV
 ATM Current Cash Subtotals screen, [5-22](#)
 ATM Standard Cash Subtotals screen, [6-17](#)

O

OUT
 ATM Current Cash Subtotals screen, [5-21](#)
 ATM Standard Cash Subtotals screen, [6-16](#)
OUTPUT
 audit, [4-25](#)
 failures, [4-26](#)
 interval, [4-27](#)
 messages, [4-26](#)
OWNER
 Status of All Terminals screen, [4-19](#)
 Status of One Terminal screen, [4-15](#)

P

PASSWORD
 BASE24 Logon screen, [1-4](#)
 DCT Menu, [1-9](#)
PHONE-NUMBER, [4-17](#)
PHRASE, [15-15](#)
PHRASE NUMBER, [15-15](#)
POLL ADDR, [4-23](#)
PROCESS, [2-5](#)
PROCESS NAME, [2-5](#)
PRODUCT INDICATOR, [2-4](#)
PROTECTIVE DOOR, [15-20](#)
PURGE EXISTING FILES, [15-24](#)

Q

QUEUE, [4-23](#)

R

REBOOT, [8-4](#)
RECOVER BASE COMMUNICATIONS KEY, [10-3](#)
REGION
 DCT screen 7, [4-3](#)
 DCT screen 8, [5-4](#)
 DCT screen 9, [6-4](#)
 Status of All Terminals screen, [4-19](#)
REGN, [4-15](#)
REINSTATE, [4-27](#)
RELEASE, [10-5](#)
RESET, [10-6](#)
RESTORE STANDARD CONFIGURATION, [12-11](#)
RETRIES, [4-27](#)

S

SELECT ADDR, [4-23](#)
SERVICE, [10-5](#)
SET DATE & TIME, [15-4](#)
STA. NAME, [4-21](#)
START
 ATM Current Cash Subtotals screen, [5-20](#)
 ATM Standard Cash Subtotals screen, [6-15](#)
START TYPE, [4-24](#)
STAT, [4-16](#)
STATE
 Status of All Terminals screen, [4-19](#)
 Status of One Terminal screen, [4-16](#)
STATEMENT PRINTER, [15-18](#)
STATION POLLABLE, [4-23](#)
STATUS
 DCT screen 7, [4-3](#)
 DCT screen 8, [5-5](#)
 DCT screen 9, [6-5](#)
 Detailed Status of a Station screen, [4-22](#)
 Status of All Terminals screen, [4-19](#)
SUBTOTALS
 DCT screen 8, [5-5](#)
 DCT screen 9, [6-5](#)
SUSPEND, [10-4](#)

T

TERMINAL GROUP, [7-3](#)
TERMINAL ID, [7-3](#)
TERMINAL STATUS, [4-26](#)
TERMINAL TYPE, [4-26](#)
THE DATA FILE IS A, [15-23](#)

TO LIBRARY

- copy cell data, [12-10](#)
- copy cells, [12-11](#)
- copy font, [12-9](#)
- copy icon, [12-9](#)

TRACE OFF, [10-6](#)TRACE ON, [10-6](#)

TYPE

- DCT screen 4, [2-3](#)
- Status of All Terminals screen, [4-19](#)
- Status of One Terminal screen, [4-16](#)

U

UPDATE DEVICE CONFIGURATION

- DCT screen 44, [15-4](#)
- Update Device Configuration screen, [15-18](#)

UPLINE PROGRAM LOAD, [13-29](#)UPLINE PROGRAM LOAD (PURGES EXISTING
HPL FILE), [13-29](#)UPLOAD DIR, [8-4](#)UPLOAD/ DOWNLOAD, [15-4](#)UPLOAD FILE, [8-4](#)USER ID, [1-8](#)USER NAME, [1-4](#)UTILITY SESSION, [15-23](#)

ACI Worldwide, Inc.