Welcome to

JP Boomerung Complex, Noida

USER MANUAL

Prepared and Submitted on behalf of

Business Octane Solutions Private Limited

JMD Megapolis, 5th Floor, Block-C, Sector - 48, Sohna Road,
Gurgaon-122018

Index

User Manual

1-Local Meeting

2-Do's & Don'ts

3-Troubleshooting

4-Escalation Chart


Step 1 – Connect the Ipad (touch controller) in same wifi range.

Wifi name – TP-Link_AE2E


Password – 93880886

Step 2 – Open browser, e.g. Safari in Ipad (touch controller) , type the ip address http://10.254.192.59/Interface/.

Step 3 - After that , Welcome page is come, than press "Tap to Begin".

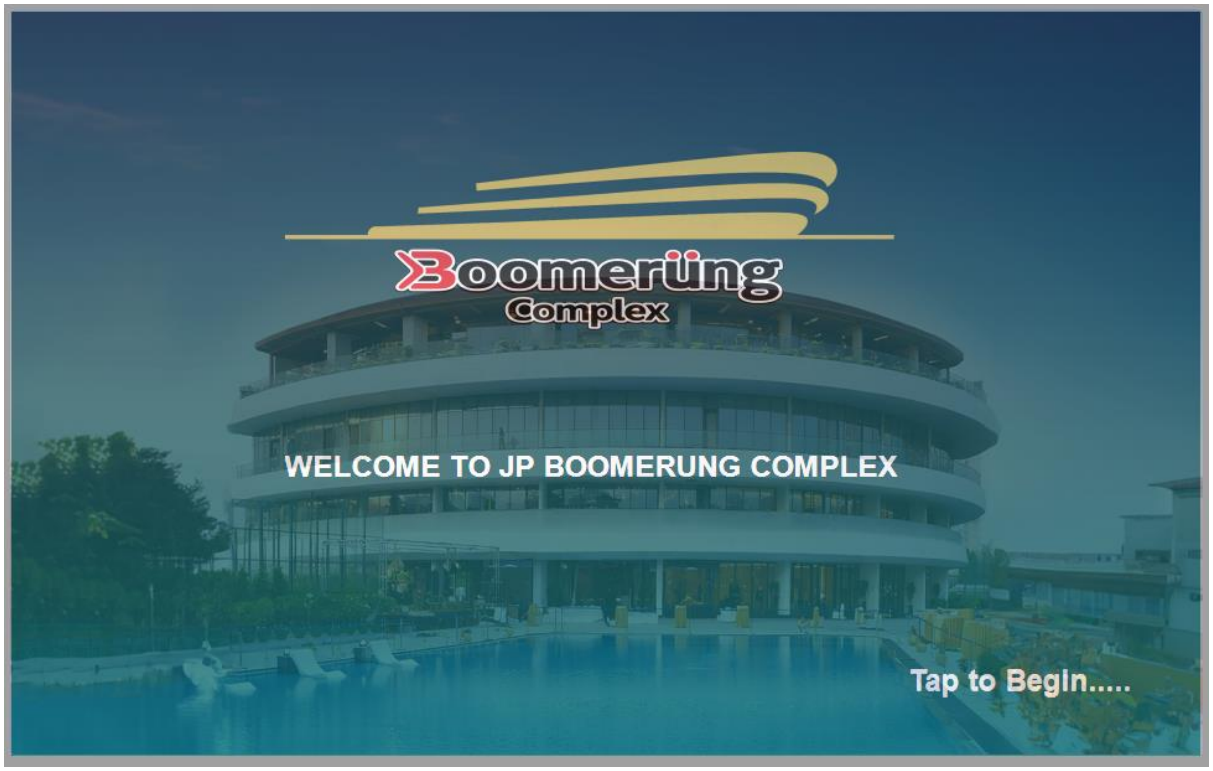

Step 4 - After that , Loading page is come, than wait for around 1 minute.

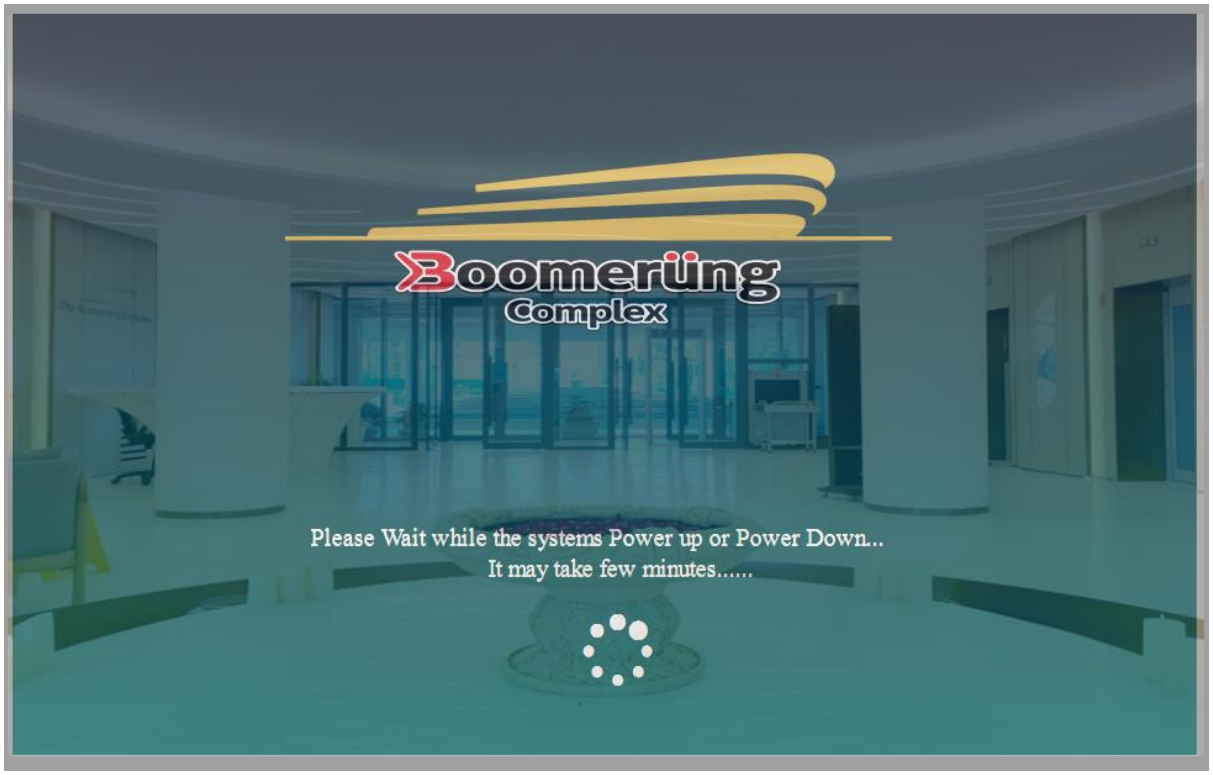

Step 5 - After that , Mainpage is come, here the features / navigation that we can perform.

- **Zoom –** During zoom meeting / video conferencing mode the task we can do like camera selection, multi-view mode selection (PIP, POP etc.), display selection for zoom and content.

- **Multiview –** Here we can select the multi-view mode selection that go to far end, like PIP, POP, Quad, single camera view.

- **Presentation –** Here we can perform the action that show locally not the far end.

- **Camera control –** In this we can control the camera like angle, preset etc.


- **HDMI Switcher –** Here we can switch the displays like in which display we want to show the camera, content or zoom pc view.

- **Home** - After click the Home button it navigate to the Mainpage.

- **Help** - After click the Help button it navigate to the help page for any support contact to the Business Octane Technical support team.

- **Shutdown –** It can shutdown the program.

- **Back -** After click the Back button it navigate to the pevious page.

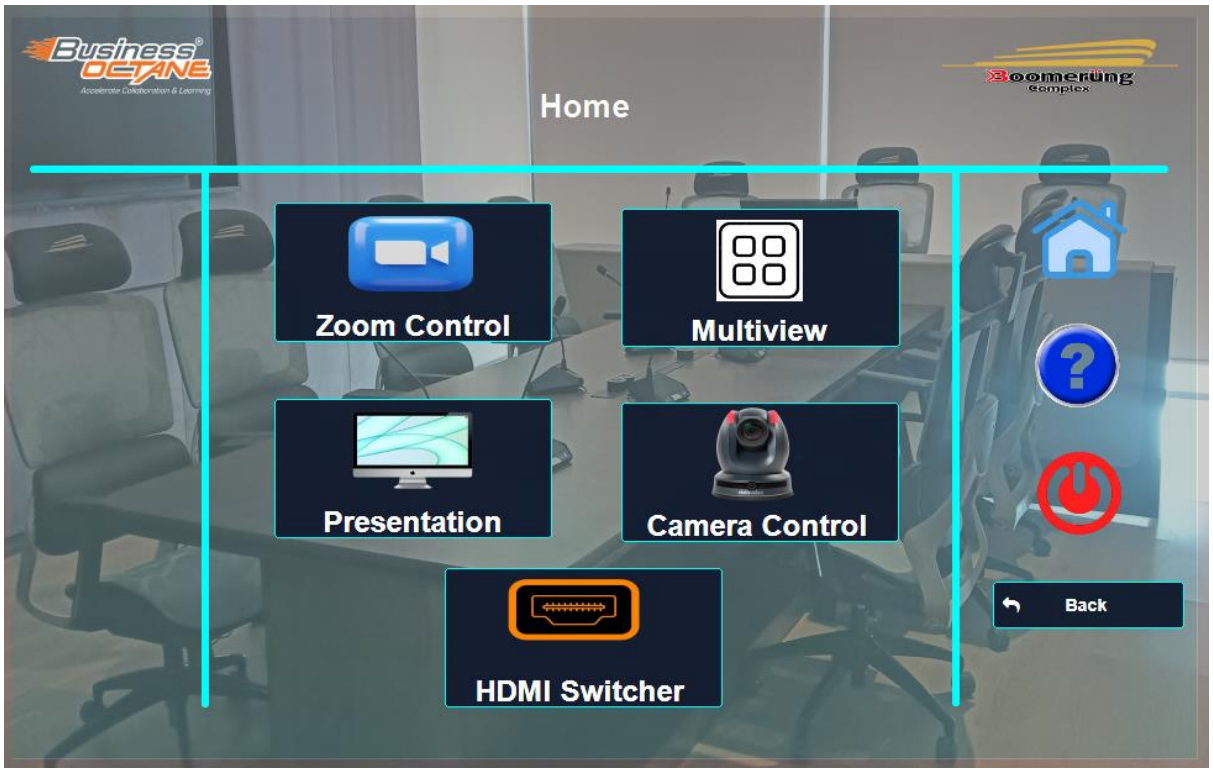


Step 6 - In VC Mode page navigation, In this we can select the window layout for VC mode like PIP (Picture-In-Picture) mode, POP (Picture-Out-Picture) mode, QUAD mode means four cameras are shows of same window layout, Full view mode means only camera with full view room goes to far end side or individual camera like Left , Right , Front camera view.


Also for Display we can select the desired input zoom pc / content pc. Zoom all / content all will display view on all display.




Step 7 - In Multi-view page navigation, In this we can select the window layout for VC mode like PIP (Picture-In-Picture) mode, POP (Picture-Out-Picture) mode, QUAD mode means four cameras are shows of same window layout, Full view mode means only camera with full view room goes to far end side or individual camera like Left , Right , Front camera view.

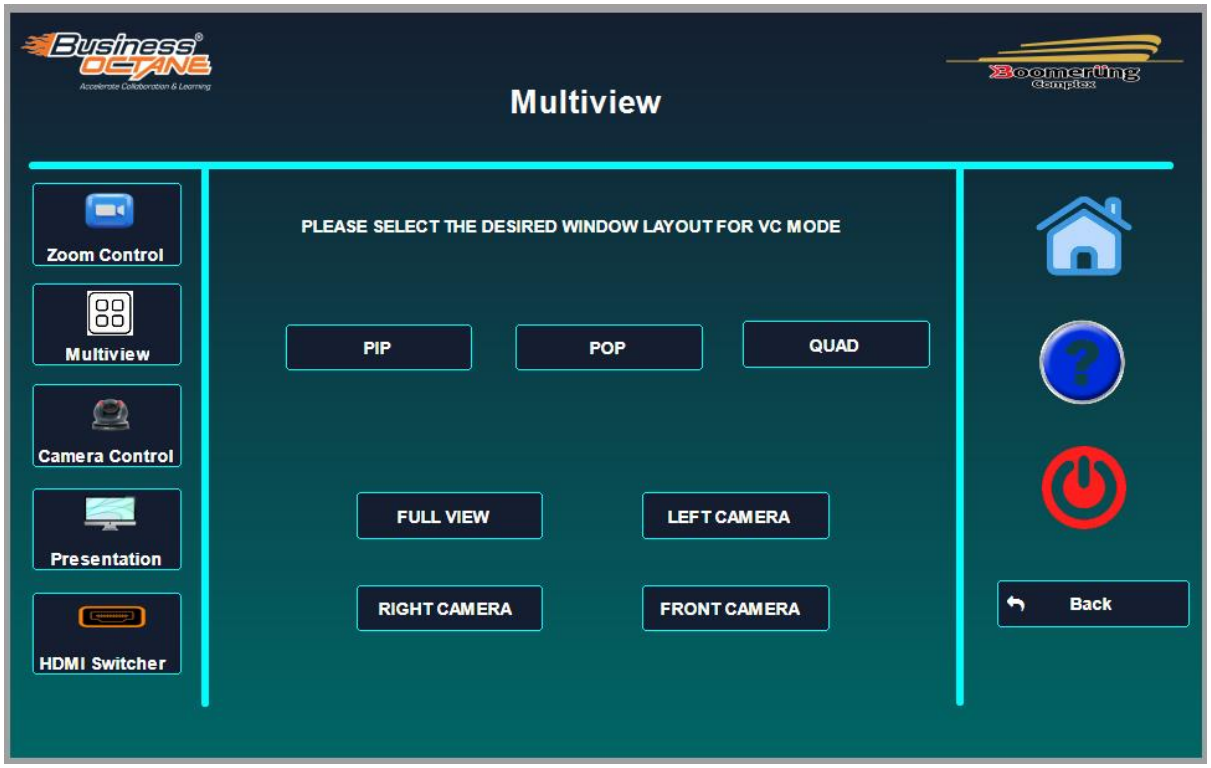



Step 8 - In Camera control mode, we can control the each camera like Left , Right , Front camera and Full view camera. We can perform camera movement, zoom in /out, create preset etc.

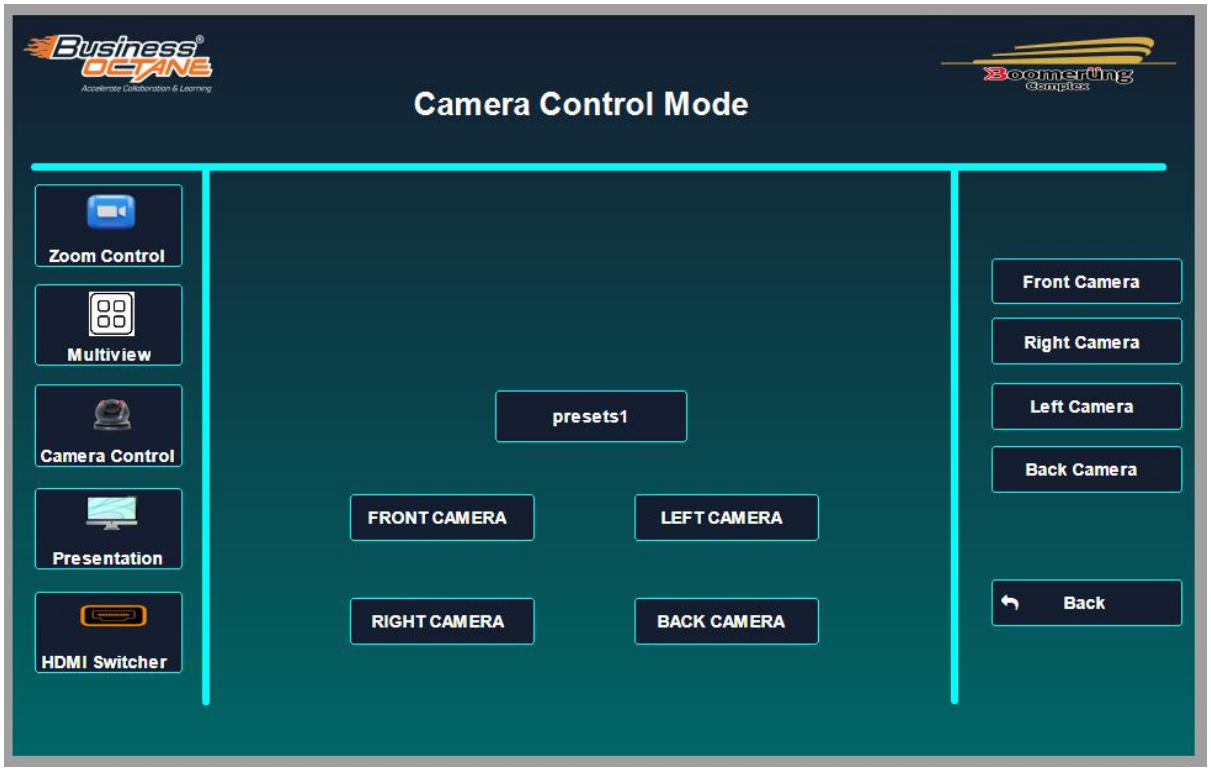



Step 9 - In Camera control mode, we can control the each camera like Left , Right , Front camera and Full view camera. We can perform camera movement, zoom in /out, create preset etc.

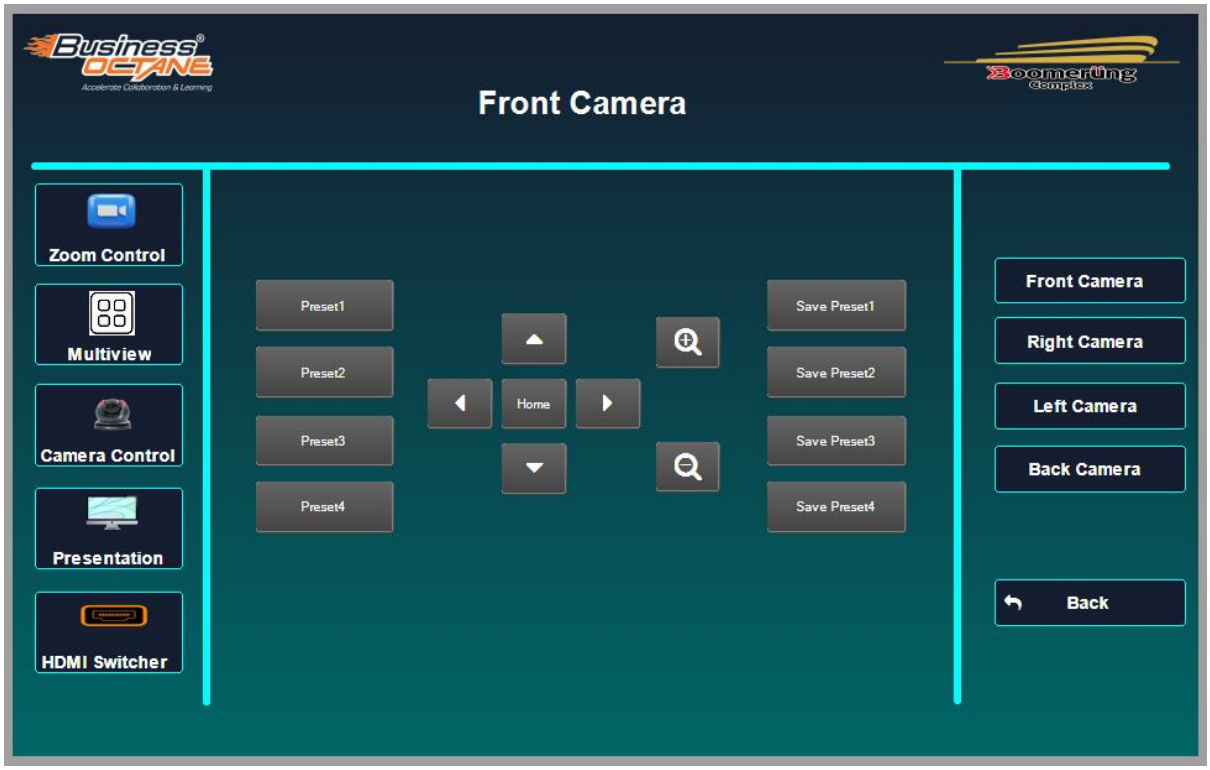

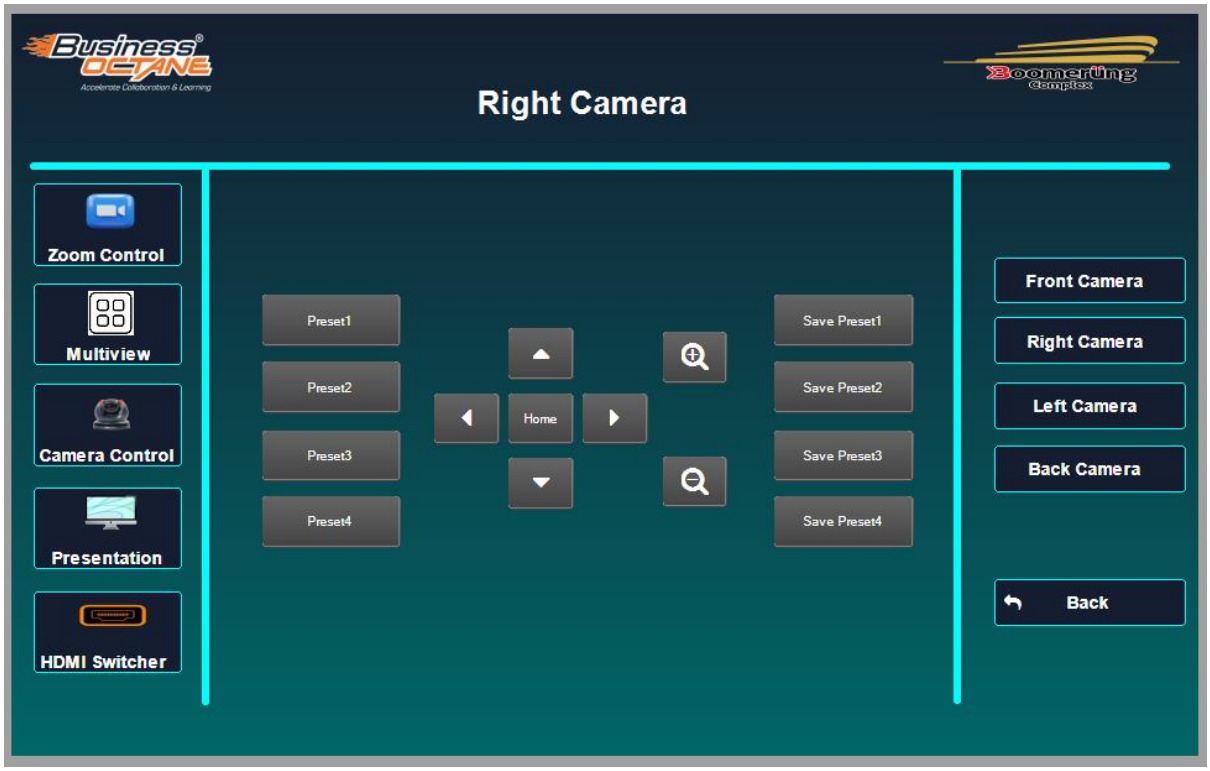
Business OCTANE
Accelerate Collaboration & Learning
Right Camera
Boomerang Complex
Zoom Control
Multiview
Camera Control
Presentation
HDMI Switcher
Preset1
Preset2
Preset3
Preset4
Home
Save Preset1
Save Preset2
Save Preset3
Save Preset4
Front Camera
Right Camera
Left Camera
Back Camera
Back

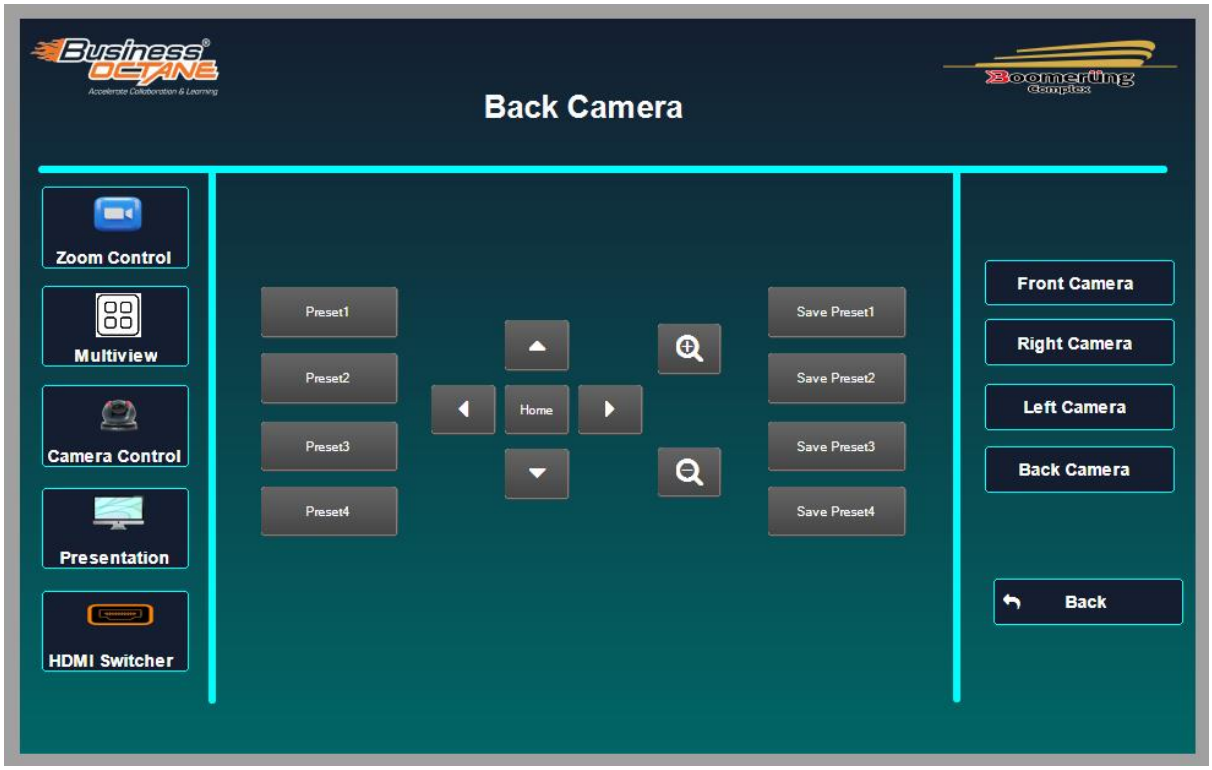

Business OCTANE
Accelerate Collaboration & Learning
Back Camera
Boomerang Complex
Zoom Control
Multiview
Camera Control
Presentation
HDMI Switcher
Preset1
Preset2
Preset3
Preset4
Home
Save Preset1
Save Preset2
Save Preset3
Save Preset4
Front Camera
Right Camera
Left Camera
Back Camera
Back

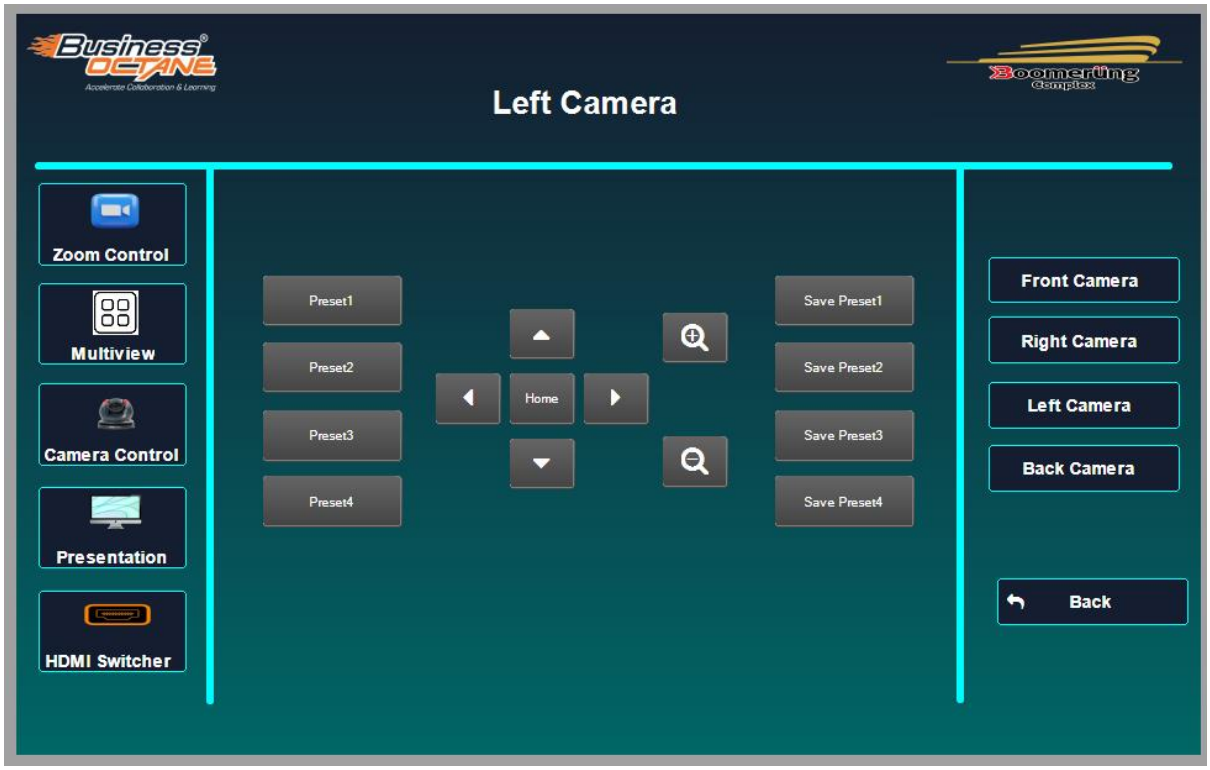

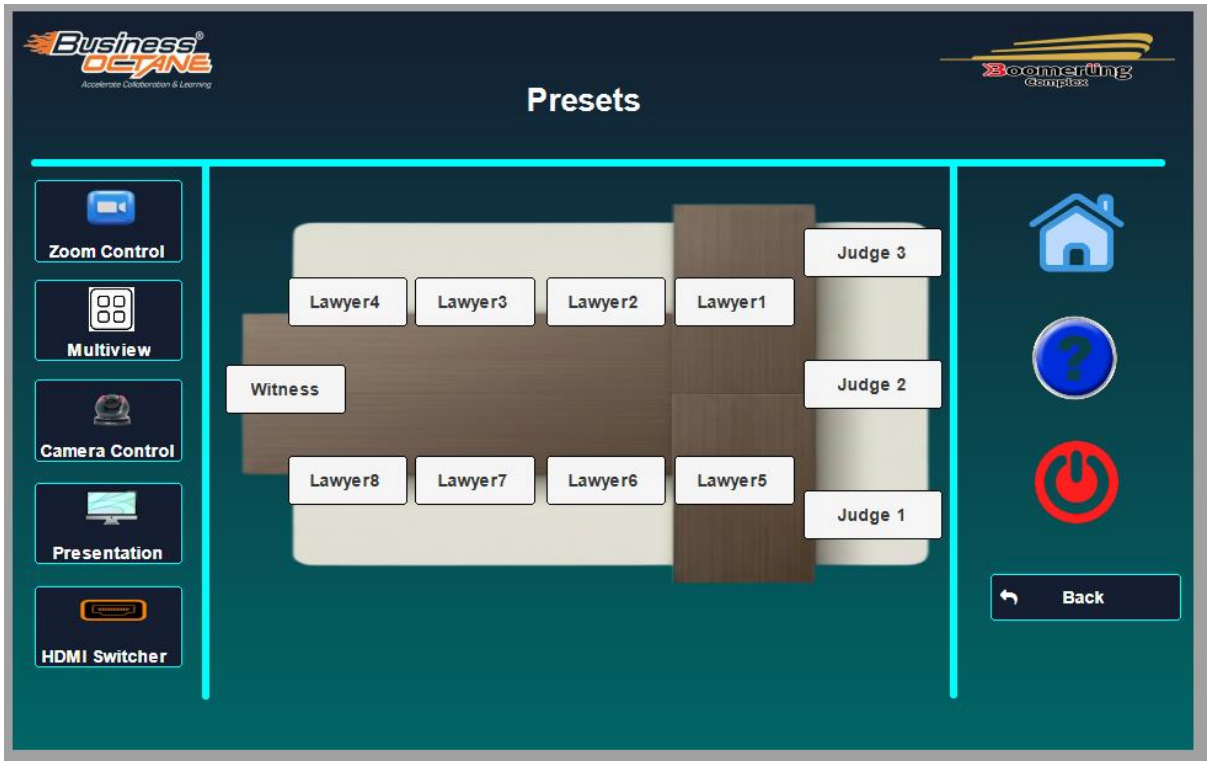


This is the overall arrangement like court room were each camera preset are save.

Step 10 - In Help navigation, for any technical support or query contact on below details.

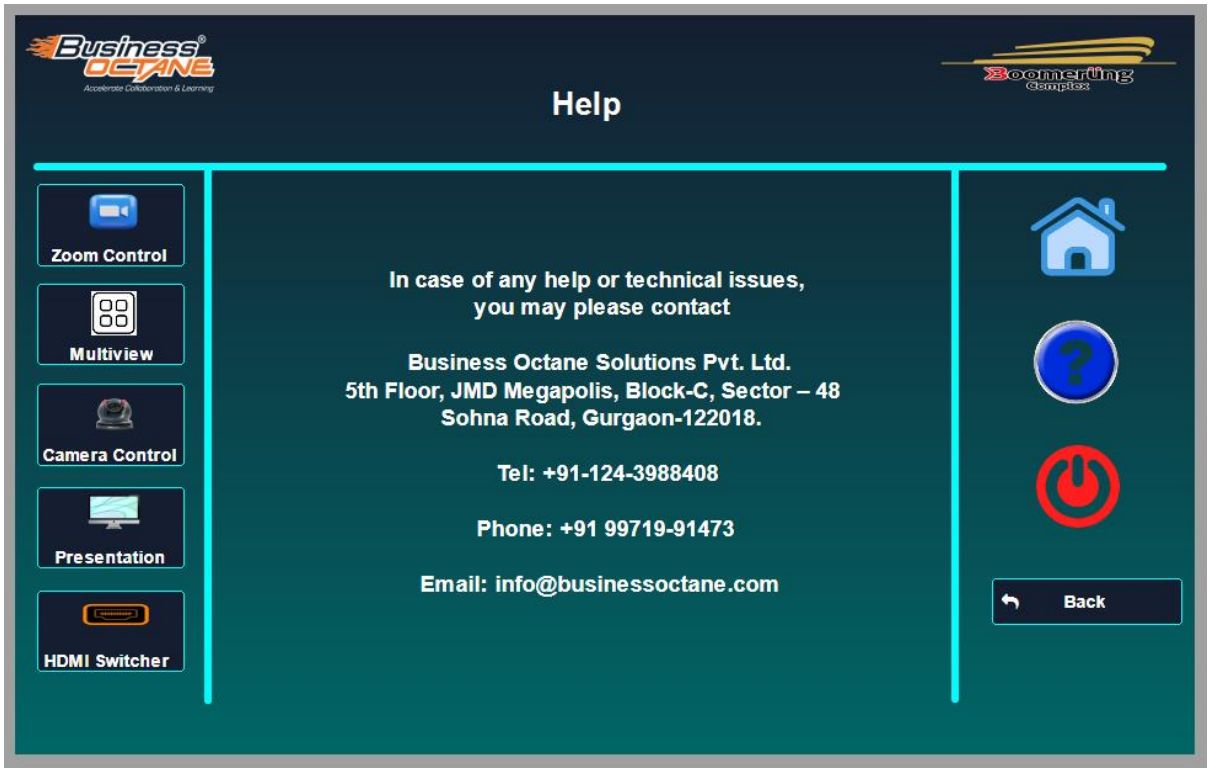

Step 11 - In Shutdown mode, we can Shutdown the all system.

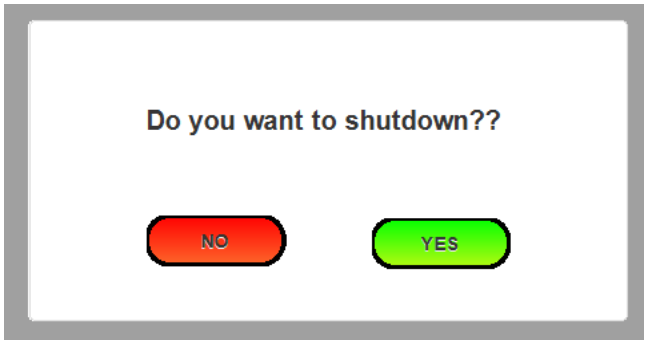

BASIC DO'S AND DON'T'S

Sr. No	DO'S	DON'T'S
1.	Kindly shutdown room from Touch Panel (IPAD on Docking Station) Wait till the shutdown process gets complete it will take 90 seconds approx.	Do not switch off your room directly from mains switch/tripper. It may cause failure of Equipment's.
2.	Ensure that AC should be ON when you are using the room.	Do not use the room in very heated environment and when AC is not working
3.	In case of problem in room Kindly log complaint on delhioperations@businessoctane.com	Do not touch any equipment or connectivity in rack,
4.	Do press button Icon in ZOOM/Local/BYOD mode for sharing your presentation using IPAD.	Do not press any buttons icon in IPAD unless it is not required.
5.	Do press the desire mode from Touch Panel/IPAD. ZOOM/Local/BYOD will get change accordingly	Do not change the lighting scene during VC/Local mode.
6.	The chairs should be arranged properly even when the session is not going on.	Please don't disturb/ touch the IPAD/Touch Panel while the session is going on and also instruct the same to the participants at your end. Unless its required.
7.	The Camera is having auto tracking feature. You don't have to move the camera manually. You can zoom on yourself by the camera when a person starts speaking.	Avoid excessive movement in front of the camera during the conference. This has a direct impact on the performance of the video quality received at the remote end.

QUICK TROUBLESHOOTING STEPS FOR MEETING ROOM

- **Connecting to Meeting room/controller is showing on APP Continuously.**

Remedy:

Please verify if Wi-Fi connected to ``dlink`` if not connects it. And if it is connected, please verify LAN on Control processor CP3 is working, still issues persist please reach out to Business Octane.

- **If touch penal is misbehaving or system not responding properly**

Remedy:

Please restart the entire system.

- **If Audio not working in video meeting?**

Remedy:

Please restart the amplifier and test the audio.

- **If Audio, touch, or system malfunctioning happened**

Remedy:

Reboot the complete system through I-PAD

NOTE: - Do not press any button on the I Pad continousl

SERVICE ESCALATION CHART

Level-1	Vikrant Sibal – Sales Coordinator E-mail: helpdesk@businessoctane.com Mobile: +91-9717997657 DID: +91 124 3077054
Level-2	Devender Singh – DGM – Pre Sales, Customer Support & Operations Email : devendra@businessoctane.com Mobile: +91-9971999838 DID: +91 1243077047
Level-3	Rakesh Kumar– GM - Operations Email: RakeshKumar@businessoctane.com Mobile: 9971998847