

SALA FREQUENCIES

Music Player


User Guide

Play music · Manage your library · Stay up to date

Firmware version **1.0.0**



Startup splash

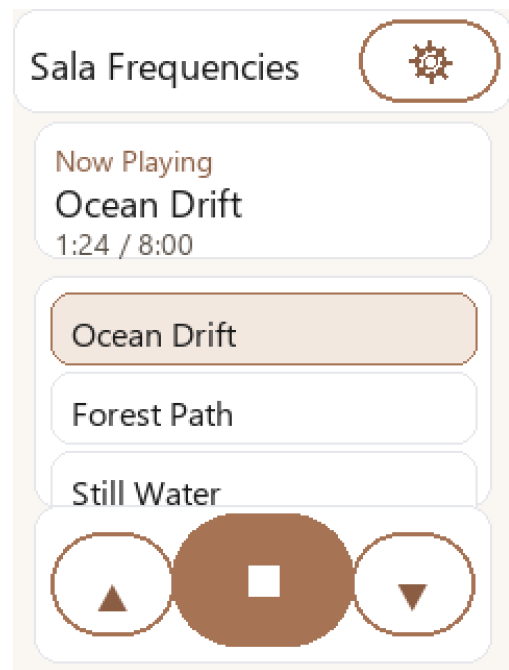

Home — Now Playing

salanewcastle.com.au · info@sala.au · Newcastle, NSW

Contents

1. Welcome & quick start
2. Playing music
3. Settings at a glance
4. Wi-Fi setup
5. Display settings
6. Music library
7. Online updates (recommended)
8. SD card updates
9. Information & Factory Reset
10. Helpful tips


Tip: Use the gear icon on the home screen to open Settings.

1. Welcome & quick start


When you switch the music player on, you will see the **Sala Frequencies** splash screen, then the home screen with **Now Playing**, your track list, and playback controls.

Quick start

1. Switch the player on and wait for the home screen.
2. Tap a track in the list to select it (highlight only).
3. Tap the large **Play** button to start.
4. Tap **Play** again to pause; tap once more to resume.
5. Use the up / down buttons to scroll through the track list.
6. Tap the **gear** icon (top right) for Settings, Wi-Fi, Library, and Updates.

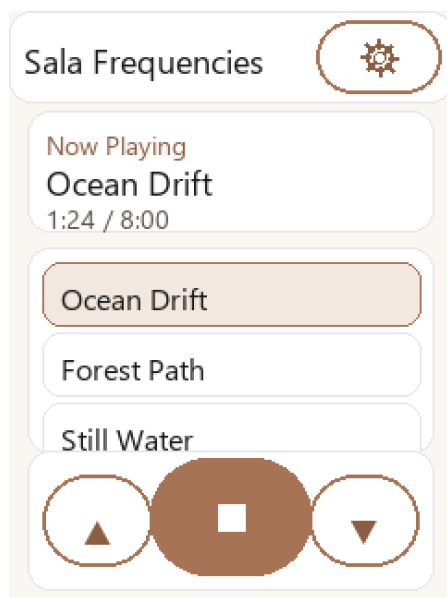

Home — Now Playing

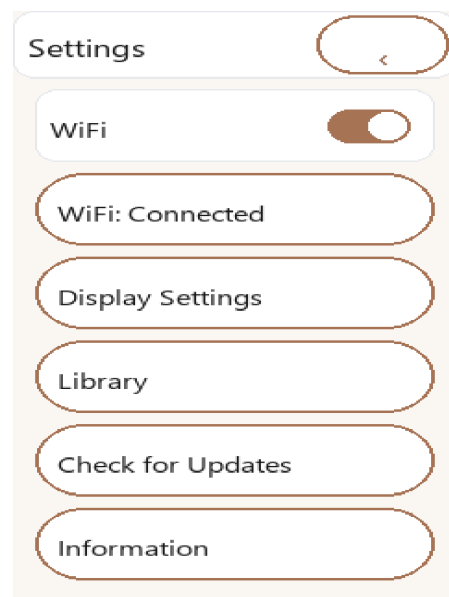

Settings menu


2. Playing music

Home screen layout

1. **Sala Frequencies** header — gear opens Settings.
2. **Now Playing** — current track name and elapsed / total time.
3. **Track list** — tap a row to select it. Selecting alone does not start playback.
4. **Controls** — up/down scroll the list; centre button plays, pauses, or switches to the selected track.

Playback tips

- Opening Settings or browsing menus does not change whether music is playing.
- To switch songs: select the new track, then press Play.
- If the list shows “Loading music...”, wait a moment for tracks to appear from the player’s storage.
- While music is playing, the centre button shows a stop square; when paused it shows play.

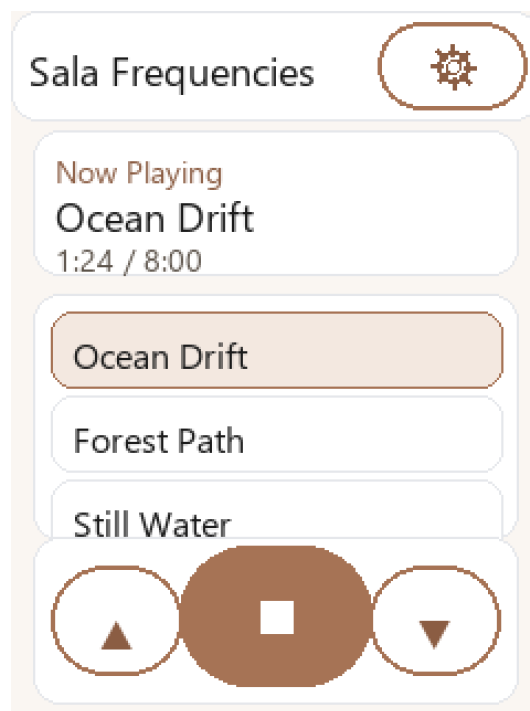


Home screen — layout matches the player display (240×320)

3. Settings at a glance

From the home screen, tap the gear icon. Settings includes:

- **WiFi** switch — turn wireless on or off
- **WiFi Settings** — scan and connect to a network
- **Display Settings** — dark mode, timeout, brightness
- **Library** — songs on this player and download new music
- **Check for Updates** — online or SD card firmware updates
- **Information** — versions and Factory Reset

Screen	What you can do
Home	See Now Playing, browse tracks, play / pause, scroll the list
Settings	WiFi, display, library, updates, information
Select Network	Turn WiFi on, scan, choose a network
WiFi Password	Enter password and Connect & Save
Display Settings	Dark Mode, screen timeout, brightness
Library	Manage songs on the player or download new ones
Updates	Upgrade Online or Upgrade Local (SD card)
Information	Version details and Factory Reset

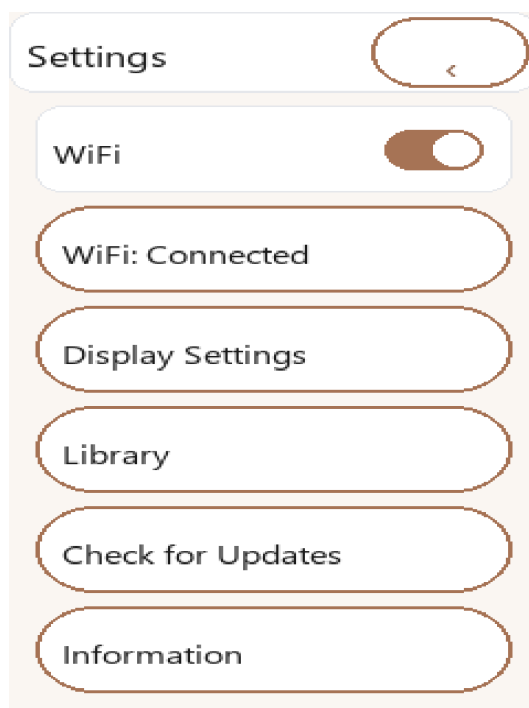

Settings — same labels and button style as on the player


Use the back arrow (top right) on any menu to return one step.

4. Wi-Fi setup

Wi-Fi is needed for **online updates** and for **Get music** downloads. You only need to set it up once; the player remembers your network.

Connect step by step

1. Open **Settings** (gear on the home screen).
2. Turn the **WiFi** switch on.
3. Tap **WiFi Settings** to open **Select Network**.
4. Tap **Scan Networks** and wait for the list.
5. Tap your network name.
6. On **WiFi Password**, type the password on the on-screen keyboard.
7. Tap **Connect & Save** (or the keyboard checkmark).
8. Wait for a status such as **Connected: your-network**.

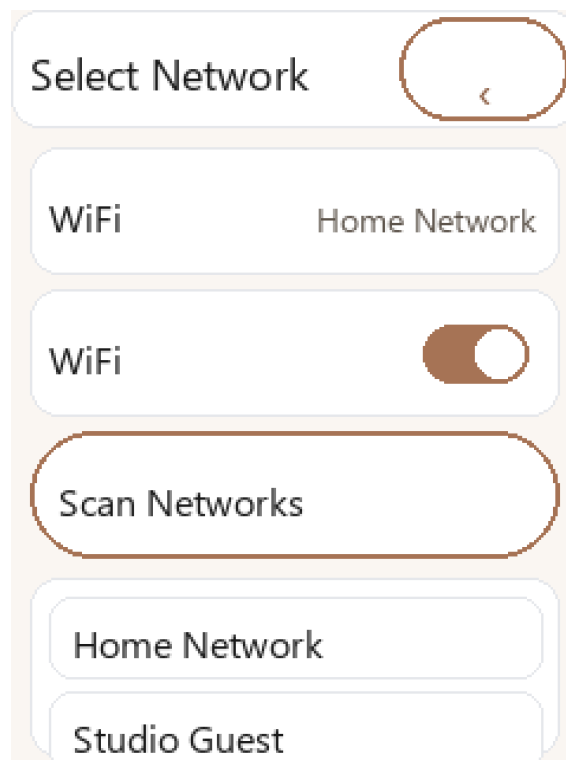

Select Network — scan and choose your Wi-Fi


If connection fails: check the password, move closer to the router, then try Scan Networks again.

The Settings row shows **WiFi: Connected**, **WiFi: Off (saved)**, or **WiFi Setup** so you can see the current state at a glance.

5. Display settings

Path: **Settings** → **Display Settings**

1. **Dark Mode** — switch between light and dark appearance.
2. **Timeout** — how long the screen stays awake after you stop touching it. Drag the slider to change.
3. **Brightness** — drag the slider; the percentage updates as you move it.

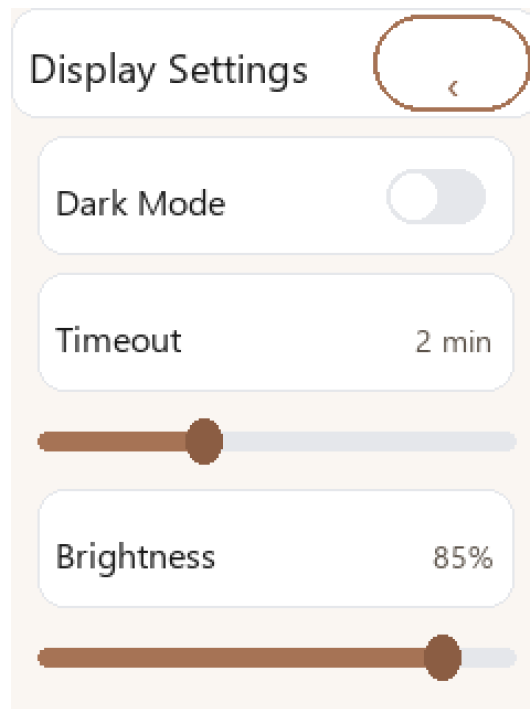


Display Settings — Dark Mode, Timeout, Brightness

Changes apply immediately and are remembered the next time you use the player.

6. Music library

Path: **Settings** → **Library**

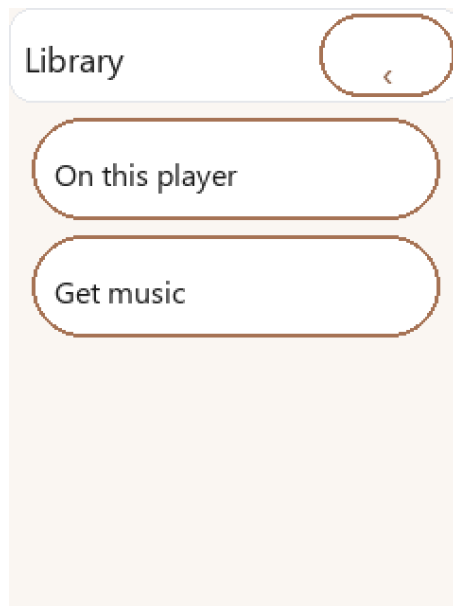

Library hub — On this player / Get music

The Library hub has two choices:

On this player

Browse songs already stored on the player. Use **Previous** / **Next** to move between tracks. Tap **Remove song** to delete the song currently shown. Removed songs disappear from the home-screen list after a short refresh.

Add music from a computer

Your songs live on the **microSD card** in the music player. You can copy **WAV** and **MP3** files from a computer using an SD card reader (or a computer with a built-in SD slot).

Always switch the music player completely off before removing or inserting the microSD card (unplug power if the unit has no separate off switch).

1. Switch the music player **completely off**.
2. Remove the **microSD card** from the player. Press the card in until it clicks, then pull it out.
3. Insert the card into an **SD card reader**, then plug the reader into your computer. If your computer has its own SD slot, you can use that instead.
4. Open the card in File Explorer (Windows) or Finder (Mac). You should see the files already on the card.
5. Copy your **.wav** and **.mp3** files onto the card. You can put them in the main area of the card, or in folders. Do **not** put music inside the **firmware** folder, and do not delete or rename that folder.
6. Wait until copying finishes.
7. Safely **eject** the card from the computer (Windows: right-click the card and choose Eject; Mac: click the eject symbol next to the disk), then unplug the reader if you used one.
8. Insert the card fully back into the music player until it clicks.

9. Switch the music player **on** and wait for the home screen. New songs appear in the track list after a short scan.

Supported files are **WAV** and **MP3** only. Other formats (for example M4A, FLAC, or AAC) will not appear in the list. If the computer asks to **format** the card, choose **Cancel** — formatting would erase your music and the player's update files. If the list shows "Loading music...", wait a moment. If songs are missing, power off and check that the card is seated.

Get music


Download new songs when Wi-Fi is connected.

1. Turn **WiFi** on and make sure you are connected.
2. Open **Library** → **Get music**.
3. Wait while the player checks for available songs.
4. Use **Previous** / **Next** to browse, then **Select** the song you want.
5. Tap **Download**.
6. On **Confirm download**, review the estimate, then tap **Start download** — or **Back** to cancel.
7. Keep power on while the **Updating** screen shows download progress. You can tap **Cancel download** if needed.

If you see "Turn WiFi on first" or "No new songs available", fix the connection or check again later.

7. Online updates (recommended)


When Wi-Fi is connected, the player can download the latest software automatically. Current package version on the official update channel: **1.0.0**.

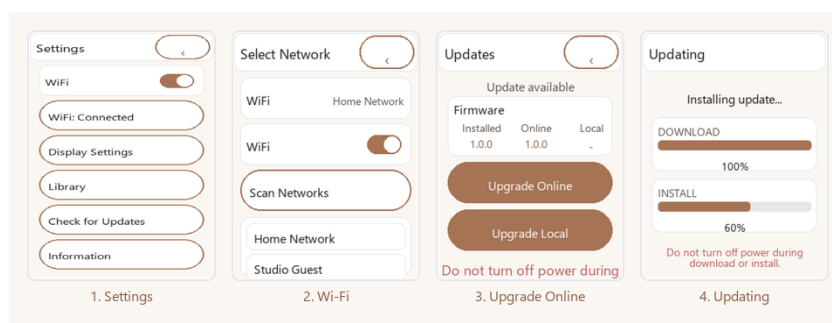

Online update path — Settings → Wi-Fi → Upgrade Online

Steps

1. Connect to Wi-Fi (see section 4).
2. Open **Settings** → **Check for Updates**.
3. Wait for **Checking for Updates**, please wait to finish.
4. Compare the **Installed**, **Online**, and **Local** version columns.
5. If an online update is available, tap **Upgrade Online**.
6. Leave the player powered on through the **Updating** screen (download, then install). The screen restarts when finished.

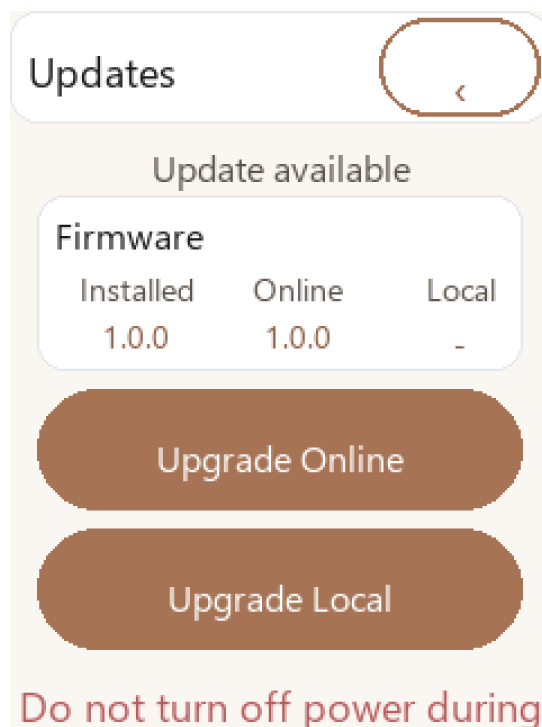

Updates screen — Upgrade Online / Upgrade Local

Do not turn off power during download or install. Keep the player plugged in until the home screen returns.

8. SD card updates

Use this when Wi-Fi is unavailable, or when you prefer to prepare the update on a computer first.

A. Download the package on a computer

Open the official firmware page and download **manifest.txt** plus every **.bin** file named in that file (same folder):

<https://github.com/Sala-Frequencies/Sound-Lounge-Firmware>

B. Copy files onto the microSD card

1. Switch the music player **completely off** before removing or inserting the microSD card.
2. Remove the card and insert it into your computer.
3. At the root of the card, create or open a folder named **firmware**.
4. Copy **manifest.txt** and all matching **.bin** files into that **firmware** folder.
5. Safely eject the card, put it back in the player, then switch the player on.

C. Install from the card

1. Open **Settings** → **Check for Updates**.
2. Wait for the version check to finish. The **Local** column should show the package version from the card.
3. Tap **Upgrade Local**.
4. Leave power on until install finishes and the screen restarts.

Always remove or insert the microSD card only while the music player is switched off. Copy the complete package — a partial copy can fail.

9. Information & Factory Reset

Path: **Settings** → **Information**

This screen shows useful status for support and updates:

- **Temperature**
- **Player ID**
- **Music Player UI** version
- **Music Player Sound** version
- **Sound Lounge** version
- **Player HW / Lounge HW** revision labels

Factory Reset

Factory Reset clears saved preferences on the display (for example Wi-Fi settings and display options). It does not remove your music library from the player's storage.

1. Open **Information**.
2. Tap **Factory Reset** once — the button changes to **Tap again to confirm**.
3. Tap again within a few seconds to confirm. The button shows **Resetting...**, then preferences are cleared.

You will need to set up Wi-Fi again after a factory reset if you use online features.

10. Helpful tips

No update offered

You may already be on the latest version, or the SD **firmware** folder may be missing or incomplete.

Online update fails

Check Wi-Fi signal and password, then try again — or use the SD card method in section 8.

Update seems stuck

Leave power connected for several minutes. If nothing changes, power-cycle once, then check **Settings** → **Information** for the installed version before trying again.

Cannot get music

Turn Wi-Fi on and confirm Connected, then open **Library** → **Get music** again. You can also copy WAV or MP3 files onto the microSD card from a computer — see section 6.

Screen went dark

Tap the screen to wake it. Adjust Timeout and Brightness under Display Settings if needed.

Need help?

SALA Frequencies — Newcastle, NSW, Australia
salanewcastle.com.au · info@sala.au

Firmware updates: <https://github.com/Sala-Frequencies/Sound-Lounge-Firmware>

© Sala Frequencies · User Guide for firmware 1.0.0