IS-1 FREE

Sampler · sequencer · KAOSS effects



User Manual · version of 31 October 2026

Contents

1 Meet the panel 3

2 The display 4

3 Modes: keys 1–5 5

4 Sound knobs 6

5 Control buttons 7

6 Banks, faders and the right column 8

7 Recording samples 9

8 Copy, paste, delete 10

9 How a pad plays: ONE / GATE / LOOP and CHOKE 11

10 Sequencer: patterns (SEQ) 12

11 Step input (STEP) 13

12 Song (SONG) and UNDO 14

13 KAOSS: effects on the whole mix 15

14 All 50 effects 17

15 The EDIT window 20

16 EXPORT: save your track 21

17 SETUP: Ableton Link and latency 22

18 Cheat sheet 23

19 IS-1 FREE and IS-1 Pro 24

Important. This manual is for the free edition, **IS-1 FREE**. It describes everything IS-1 can do; the features that are only in the full IS-1 Pro are listed in the table in section 19.

Tip. Button labels in the app are shown in **bold** in this manual, for example **PLAY** or **ERASE**.

Important. Your project (pads, patterns, song, effects) is saved automatically when you minimise or close the app.


1 Meet the panel

IS-1 is laid out like a hardware sampler: the display on the left with knobs and buttons below it, the banks and 16 pads in the middle, and the faders on the right. Hold your phone in landscape.



1. **Display** — what is selected, tempo, the waveform, parameters and hints. In KAOSS mode the effects touch pad appears here.
2. **Keys 1–5** — switch modes: PAD, SEQ, STEP, EDIT, IMPORT. In KAOSS they pick the effect sets.
3. **Sound knobs** — volume, pan, pitch, start/end, attack and release of the selected pad.
4. **Control buttons** — three rows: transport, sequencer settings, sample recording.
5. **DRY/WET** — how much of the KAOSS effect you hear (each effect remembers its own value).
6. **Banks A–D** — four banks of 16 pads = 64 sounds. In STEP they are bar pages, in KAOSS they are MOTION memories.
7. **Pads** — play sounds, pick patterns in SEQ, set steps in STEP.
8. **Faders** — MAIN, CLICK, GAIN (or LOOP), TRIM.
9. **Right column** — CHOKE, EXPORT, FULL, SETUP.

2 The display

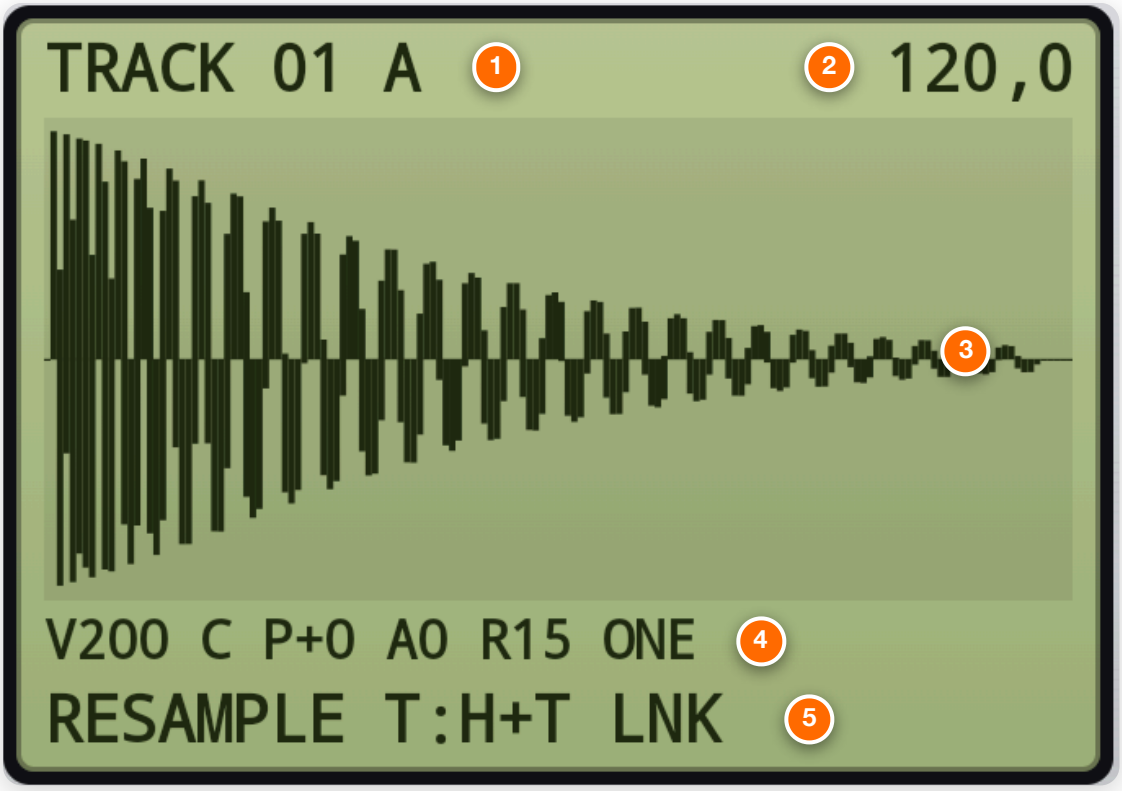

1. **Selection line** — in PAD mode: pad and bank (TRACK 01 A); in SEQ: pattern, position and bar.
2. **Tempo** — the current BPM. **Hold** the tempo digits to open a keypad for exact entry (30–300, in 0.1 steps).
3. **Waveform** — the sound of the selected pad. The parts before START and after END are dimmed.
4. **Pad parameters** — V volume, C/L/R pan, P pitch, A and R attack/release, ONE/GATE/LOOP play mode, CHK choke group.
5. **Status line** — short hints after every action, plus flags: T:H+T means T-HEAD/T-TAIL are on, LNK means Ableton Link, FXA means an effects recording exists.

Typing in the tempo



Tip. There are three ways to set the tempo: **hold** the tempo digits on the display and type a number, tap **TAP** several times in time, or turn on Ableton Link so the shared session sets it.

Tip. The bottom line of the display is your best helper: after every press it says what happened and what to do next (for example **TOUCH EMPTY PAD**).

3 Modes: keys 1–5



1. **PAD** — the pads play sounds. This is where you record, copy and delete samples.
2. **SEQ** — each pad is a pattern (A01…D16, 64 in total). A touch selects a pattern; while playing, it is queued.
3. **STEP** — 16 pads = 16 steps of the selected sound. Press key 3 again (it becomes **SOUND**) to pick the sound by touching a pad.
4. **EDIT** — opens the sample editor for the selected pad (see section 15).
5. **IMPORT** — loads an audio file (WAV, MP3, AIFF…) from the phone straight onto the selected pad. Silence at the start and end is trimmed automatically.

> **Tip.** Each mode remembers its own bank: if you were on bank B in PAD and on A in SEQ, switching modes brings the right bank back.

PAD: pads with a sound are marked




SEQ: pads = patterns A01–A16



STEP: pads = steps 1–16



4 Sound knobs

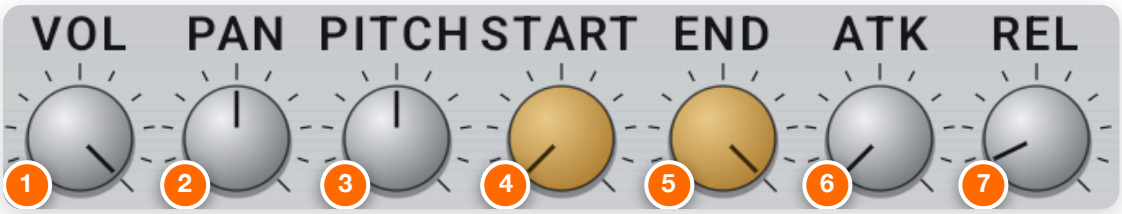

1. **VOL** — pad volume, 0–200 %.
2. **PAN** — panning: left to the left channel, right to the right channel.
3. **PITCH** — pitch in whole semitones, –12…+12. Fine-tune in cents with the DETUNE knob in the EDIT window.
4. **START** — where the sample starts playing.
5. **END** — where it stops. In LOOP mode, the loop boundary.
6. **ATK** — attack: a smooth fade-in, 0–200 ms.
7. **REL** — release after you let go, 5–2000 ms.

Turn
slide your finger up/down on the knob

Double-tap
back to the default value

In STEP
hold a step and turn: the value applies to that step only


> **Tip.** The knobs always control the **selected** pad, the one with the outline. To select another pad, just touch it in PAD mode.

5 Control buttons




1. **PLAY** — start the sequencer (pattern or song).
2. **STOP** — stop and silence all sounds.
3. **REC** — record: in PAD/STEP, live playing into the pattern; in SEQ, the song; in KAOSS, the effects.
4. **TAP** — tap in time and the tempo follows.
5. **UNDO** — undo the last action (up to 3 steps back).
6. **QUANT** — recording grid: OFF, 1/4, 1/8, 1/8T, 1/16, 1/16T, 1/32.
7. **METRO** — metronome: OFF → recording only → always.
8. **KAOSS** — open the effects screen.
9. **LEN** — pattern length: 1 → 2 → 3 → 4 bars.
10. **ONE / GATE / LOOP** — how the selected pad plays (section 9).
11. **ERASE** — delete: depends on the mode (section 8). In SEQ, **holding** it erases the song.
12. **SAMPLE** — record to a pad: press it, then hold a pad; it turns off after the take. **Hold SAMPLE** to record several pads in a row. In KAOSS this button is **RESMP**.
13. **SRC** — where to record from. The button icon shows it: microphone is MIC, cassette is the sound of other apps (INT). Screenshots show the older SRC:MI label.
14. **T-HEAD** — automatically skip silence at the start of samples.
15. **T-TAIL** — automatically cut silence at the end of samples.

6 Banks, faders and the right column

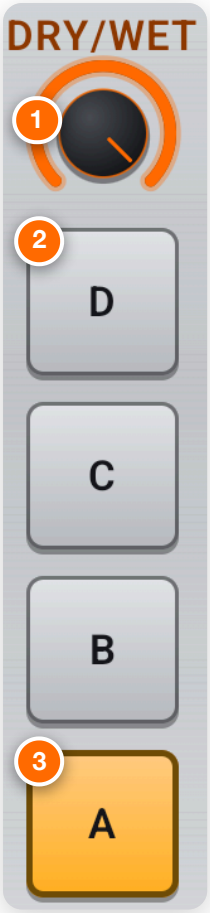

1. **DRY/WET** — how much of the KAOSS effect you hear. Each of the 50 effects has its own value. **Three quick taps** set every effect back to 100 %.
2. **A–D** — pad banks: 4 × 16 = 64 sounds. The current bank is lit.
3. **Other roles of A–D** — in STEP, the pages (bars 1–4) of a long pattern; in KAOSS, four MOTION memories.

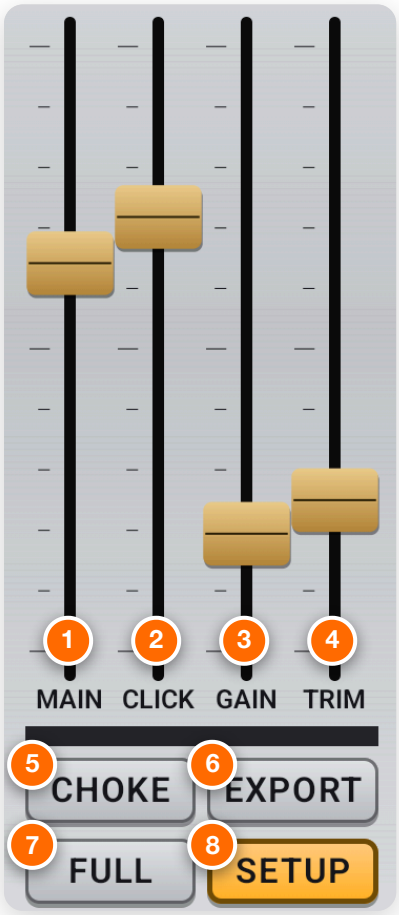

1. **MAIN** — master volume.
2. **CLICK** — metronome volume.
3. **GAIN / LOOP** — recording gain (–12…+24 dB). If the selected pad is in LOOP mode, the fader becomes **LOOP**: the loop length in tempo divisions.
4. **TRIM** — silence threshold for T-HEAD/T-TAIL and auto-trim (–72…–20 dB).
5. **CHOKE** — hold it and touch pads to assign choke groups.
6. **EXPORT** — record your track to WAV/MP3 or onto a pad.
7. **FULL** — every pad plays at full volume, however hard you touch.
8. **SETUP** — Ableton Link, latency, count-in. Lit while Link is on.

7 Recording samples

You can record straight onto a pad, from the microphone or from any app on the phone (YouTube, a player…).

1 SRC

Pick the source by its icon: microphone is **MIC**, cassette is the phone's own sound (**INT**).

→

2 SAMPLE

Press **SAMPLE** and it lights up. Display: **HOLD A PAD TO RECORD**.

→

3



Hold a pad: it records while your finger is on it. Let go: the sound is on the pad and **SAMPLE** turns off.

Auto-trimming silence



T-HEAD and T-TAIL apply right after recording. The **TRIM** fader decides where "silence" ends: the higher it is, the louder a sound can be and still count as silence.

Tip. To record other apps, Android asks for screen/audio capture permission. That is normal: IS-1 records only the sound.

Hold. Hold SAMPLE and record pads one after another. Release it to stop.


Tip. Recording level is the **GAIN** fader. You can see the level on the display while recording.

Important. Some apps block recording of their audio (DRM protection). If there are 3 seconds of silence, the editor tells you.

8 Copy, paste, delete

Copy a sound to another pad


1

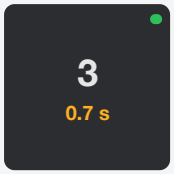

In PAD mode, **hold** a pad with a sound for about a second.

→


2



The sound is copied together with its knob settings.

→

3

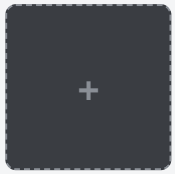

Touch an **empty** pad and the copy lands there.

Deleting: the ERASE button in each mode

Where you are	What to do	What is deleted
PAD	**ERASE**, then touch a pad	the sample on that pad
PAD	**hold ERASE** and touch pads, or swipe across them	each touched pad at once; a swipe clears a row or column
SEQ	**ERASE**, then touch a pattern	all notes of the pattern
SEQ	**hold ERASE**	the song (pattern chain)
STEP	**ERASE**	all steps of the selected sound in the pattern
STEP, holding a step	**ERASE**	only that step's parameters (volume, pitch…)
KAOSS	**ERASE**	the effects recording (FX AUTOMATION)

Tip. Made a mistake? **UNDO** brings back a deleted sample, pattern or song, up to three actions back.

9 How a pad plays: ONE / GATE / LOOP and CHOKE


The button at the right end of the second row shows the selected pad's play mode. Each press switches to the next one.

ONE




ONE SHOT: the sound plays to the end even if you let go. Good for drums.

GATE




GATE: plays while you hold the pad. Let go and it fades out (REL knob).

LOOP



LOOP: the sound repeats while you hold. The **LOOP** fader sets the loop length in tempo divisions: FREE, 1/32 … 1/4.

CHOKE: mute groups

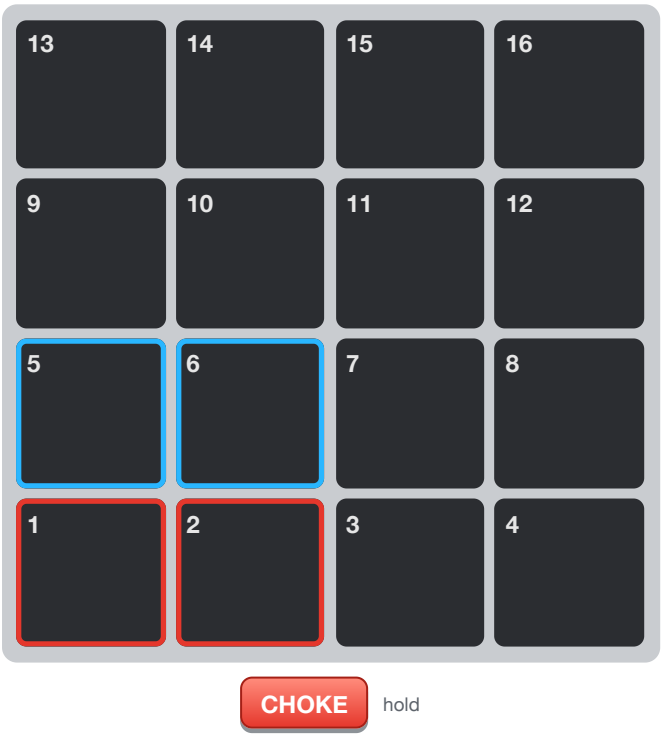


Pads in the same group **cut each other off**: a new sound stops the previous one. The classic case is open and closed hi-hats.

1. **Hold CHOKE**: pads that are already in groups light up.
2. Keep holding and touch pads: each touch changes the group **OFF** → **1** → **2** → **3** → **4** → **OFF**.
3. Let go of CHOKE.

> **Tip.** Each bank A–D has its own four groups: pads in different banks never cut each other off.

10 Sequencer: patterns (SEQ)

Key 2 SEQ: the bank's 16 patterns

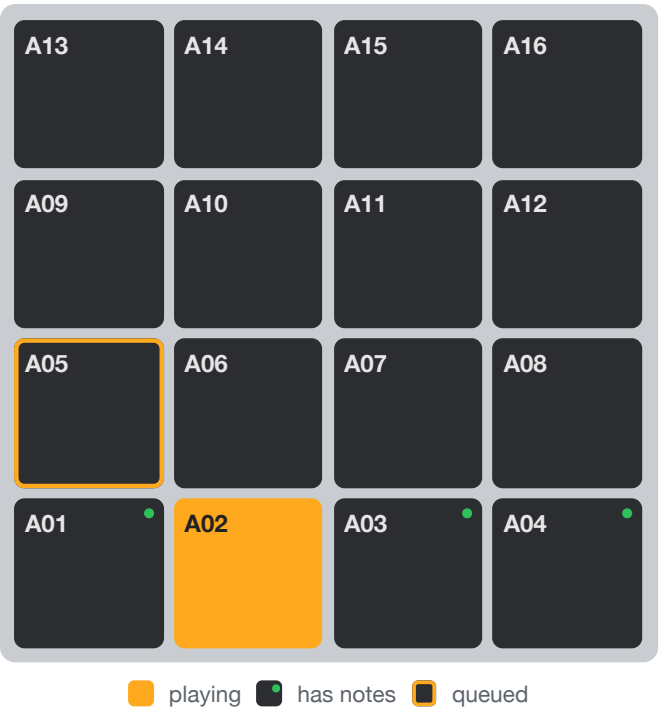


Recording a beat live

1. In **SEQ**, select a pattern by touching a pad.
2. Press **LEN** for 1–4 bars and **QUANT** for the grid.
3. Go to **PAD** and press **REC**: there is a count-in (1 bar by default), then recording starts.
4. Play the pads. The notes go into the looping pattern, so you can add layers.
5. Press **REC** again: recording stops and the pattern keeps playing.

Action	How
Select a pattern	touch a pad. While playing, the pattern starts at the end of the current cycle
Copy a pattern	**hold** the pattern pad → touch the pad to copy to
Clear a pattern	**ERASE** → touch the pattern
Length	**LEN**: 1 → 2 → 3 → 4 bars
Metronome	**METRO**: off → recording only → always; volume on the CLICK fader
Count-in before recording	in **SETUP**: off, 1, 2 or 4 bars

11 Step input (STEP)

Key 3 STEP: the 16 sixteenths of one bar

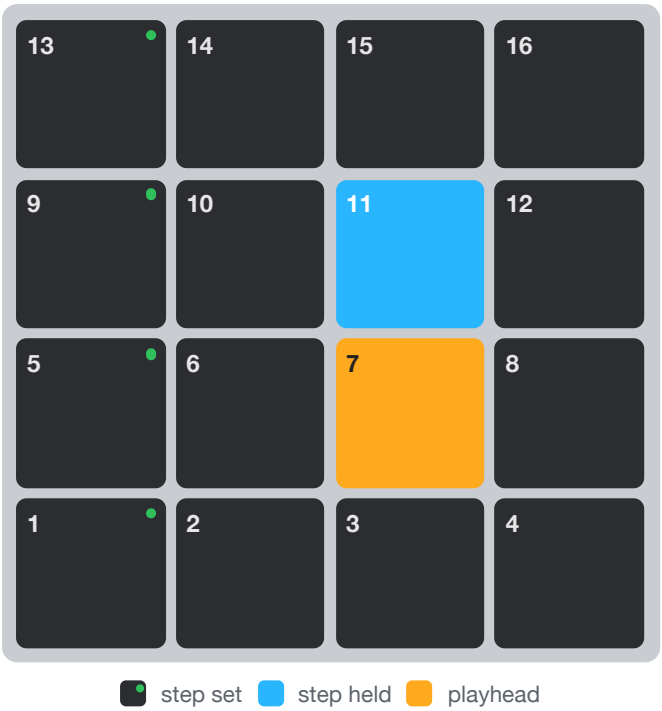

1. In **PAD** mode, touch the sound you want to program (or in STEP press **SOUND** and touch a pad).
2. Press **STEP**. Pads 1–16 are the steps of the bar.
3. Touch an empty step to add a note; touch a set step to remove it.
4. Pattern longer than a bar? Buttons **A–D** are the pages: bars 1–4.




Parameters for a single step

Hold a step and turn any knob (VOL, PAN, PITCH, START, END, ATK, REL): the value is stored **for that step only**. Use it to play a melody with one sound or to bring hi-hats to life.

Hold a step and press **ERASE** to reset that step to the pad's values. Deleting the step or the whole pattern deletes its parameters too.

12 Song (SONG) and UNDO

A song is a chain of patterns that play one after another, for example: A01 A01 A02 A03.

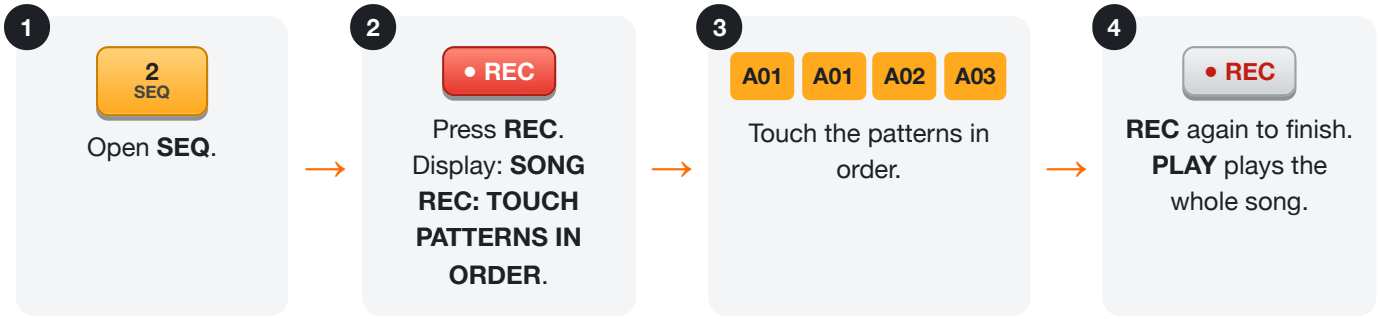

Hold. Hold ERASE in SEQ mode to erase the song; a single pattern plays again.

Tip. The song length matters: KAOSS effects recording (REC in KAOSS) and EXPORT both use it.

UNDO

UNDO reverts up to the last **three** actions: recording, deleting a sample, clearing or copying a pattern, steps, length, the song, pasting, CHOKE, play mode, effects recording. The display says what was undone, for example **UNDO: CLEAR A02**.

13 KAOSS: effects on the whole mix

Press **KAOSS** and the display turns into an effects touch pad, like a hardware X/Y pad. Touch it to switch the effect on; move your finger to change two parameters at once: horizontally (X) and vertically (Y).



1. **Set, number and code** — 3·REPEAT 8/10 R08. The status appears on the right of this line: • **FX REC 42%**, ▶ **MOTION B** or ▶ **FX AUTO**.
2. **Effect name** — in large letters.
3. **Finger** — a bright dot and crosshair; the lights around it show the intensity.
4. **Axes** — what X and Y do right now and their values 0–100.
5. **Keys 1–5** — the sets FILTER, SPACE, REPEAT, MOD, LFO. Press again to step through the set's 10 effects.
6. **RESMP** — resampling: records everything you hear (next page).
7. **KAOSS** — lit red while the effects screen is open. Press again to return to the normal display.
8. **DRY/WET** — how much of the effect you hear.
9. **A–D** — four MOTION memories.
10. **REC / ERASE** — **REC** records the effects over the song length, **ERASE** deletes that recording.

13 KAOSS: motions, effects recording, resampling

A B C D
MOTION

Motion memory. Hold one of A–D and move your finger on the pad to record the movement. Let go and it loops right away (the button lights green). A short press switches the motion on/off. Touching the pad overrides the motion.

• REC
FX REC

Recording effects over the song. In KAOSS press **REC**: the sequencer starts and everything you do with the effects (which effect, X, Y, touch) is recorded for exactly one song length (or pattern length). Progress shows on the display: **• FX REC 42%**. After that the recording always plays with the sequencer, even outside the KAOSS screen (flag **FXA**). Your finger overrides it. **ERASE** in KAOSS deletes it.

RESMP
RESAMPLE

Resampling. Press **RESMP** to record the whole IS-1 output with effects (up to 30 seconds). Press again to stop. Then **hold RESMP**: the recording is copied and the app switches to PAD. Touch any pad to put it there.

Effect tails



Effects marked tail in the table (delays, reverbs, Noise Riser…) let their repeats and reverb fade out naturally after you lift your finger. The others stop at once.

> **Tip. DRY/WET** is stored per effect. Three quick taps on the knob set every effect to 100 %.

14 All 50 effects

A code is the set letter plus a number (R08 = REPEAT, effect 8). X is your finger left/right, Y is down/up. "Tempo-synced" means the time follows the BPM.

1 · FILTER Filters (F01–F10)

#	Code	Program	X axis (left → right)	Y axis (bottom → top)
1	F01	**MORPH SWEEP**	Frequency; the shape morphs LPF → band → HPF	Resonance
2	F02	**LOWPASS**	Cutoff	Resonance
3	F03	**HIGHPASS**	Cutoff	Resonance
4	F04	**BANDPASS**	Band frequency	Dry/filter balance
5	F05	**STEEP LOWPASS**	Cutoff (very steep)	Resonance
6	F06	**DARK ECHO** tail	Delay time (tempo-synced)	LPF cutoff and resonance
7	F07	**THIN ECHO** tail	Delay time (tempo-synced)	HPF cutoff and resonance
8	F08	**BAND ECHO** tail	Delay time (tempo-synced)	Overdriven band
9	F09	**DARK HALL** tail	Reverb depth	LPF cutoff and resonance
10	F10	**AIR HALL** tail	Reverb depth	HPF cutoff and resonance

2 · SPACE Delays, reverbs and special programs

#	Code	Program	X axis (left → right)	Y axis (bottom → top)
1	S01	**SYNC DELAY** tail	Time (tempo-synced)	Depth: repeats and level
2	S02	**ECHO DROP** tail	Time (tempo-synced)	Repeats. While you hold, the dry sound is cut and only the echo plays
3	S03	**TAPE DELAY** tail	Time; changing it bends the pitch like tape	Depth
4	S04	**DUB SPACE** tail	Time (tempo-synced), long repeats	Tone of the repeats
5	S05	**PING PONG** tail	Time (tempo-synced), the echo bounces L↔R	Depth
6	S06	**PUMP VERB** tail	Reverb length	Pumping depth on every beat
7	S07	**ICE VERB** tail	Tone	Balance. While you hold, the tail freezes
8	S08	**GATED VERB** tail	Gate time	Reverb depth
9	S09	**JET SWOOSH**	Delay (manual jet flanger)	Feedback
10	S10	**GRAIN SPRAY**	Grain speed (tempo-synced)	Grain length

14 All 50 effects (continued)

3 · REPEAT Loopers (R01–R10). X is the loop length: 4 beats on the left, 1/16 on the right

#	Code	Program	X axis (left → right)	Y axis (bottom → top)
1	R01	**FLIP LOOP**	Loop length	Bottom: reversed, top: forward
2	R02	**BRAKE LOOP**	Loop length	Brake time: every pass slows down
3	R03	**MIRROR LOOP**	Loop length	HPF; the loop's mirror image is mixed in
4	R04	**HOLD LOOP**	Loop length	Live sound / loop balance
5	R05	**OCTAVE LOOP**	Loop length	Balance; the loop plays an octave up
6	R06	**SHUTTLE LOOP**	Loop length	LPF; the loop runs back and forth
7	R07	**SLICE PICK**	Slice length	Which slice of the last bar plays
8	R08	**SCRATCH LOOP**	Loop length	Scratch: move your finger up and down
9	R09	**WARM LOOP**	Loop length	LPF (open at the top)
10	R10	**VINYL LOOP**	Loop length	Speed: bottom reverse, centre stop, top ×2

4 · MOD Noise, record stops, modulation and compression

#	Code	Program	X axis (left → right)	Y axis (bottom → top)
1	M01	**NOISE RISER** tail	Noise frequency, rising to the right	Tail: how much noise goes into delay + reverb
2	M02	**RECORD STOP**	Record brake time	Scratch with finger movement
3	M03	**STOP & VERB** tail	Brake time (tempo-synced)	Scratch; plus reverb with a tail
4	M04	**METAL RING**	Modulation frequency: wobble → metal → ring	HPF cutoff and resonance
5	M05	**HAND PHASER**	Phaser frequency	Resonance
6	M06	**TALK BOX**	First formant (the vowel)	Second formant
7	M07	**ROBO TALK**	First formant	Second formant; digital sound
8	M08	**SIDE PUMP**	Sensitivity	Pumping depth from the hits
9	M09	**SQUASH**	Sensitivity (amount of squash)	Attack: at the top the hit keeps its click
10	M10	**PITCH ECHO** tail	Pitch –12…+12 semitones	Delay depth

14 All 50 effects (end)

5 · LFO Moving filters, combo effects and grit


#	Code	Program	X axis (left → right)	Y axis (bottom → top)
1	L01	**DIRTY ECHO** tail	Delay time (tempo-synced)	Band cutoff and resonance
2	L02	**WOBBLE LP**	Sweep speed (tempo-synced)	Resonance
3	L03	**CRUSH STUTTER** tail	Repeat length	Bit-crush grit and ping-pong depth
4	L04	**WOBBLE BAND**	Sweep speed	Resonance
5	L05	**SWEEP ECHO** tail	Delay time	HPF level and delay depth
6	L06	**ENDLESS RISE**	Speed of the endless rise	Resonance
7	L07	**RANDOM STEP**	Speed of the random jumps	Depth
8	L08	**RHYTHM GATE**	One of 8 gate patterns in 1/16 steps	LPF cutoff and resonance
9	L09	**BIT CRUSH**	Sample-rate reduction	Fewer bits, dirtier sound
10	L10	**DRIVE**	Drive amount (level is kept)	Tone

Tip. The loopers (REPEAT) don't repeat straight away: the first pass after you touch is recorded, then the sound loops. So touch slightly before the beat you want.

Tip. Want to repeat something that already played? **SLICE PICK** (R07) takes a slice of the last bar **before** your touch.

15 The EDIT window

Key **4 EDIT** opens the sample editor for the selected pad: recording, trimming, processing and slicing onto pads.

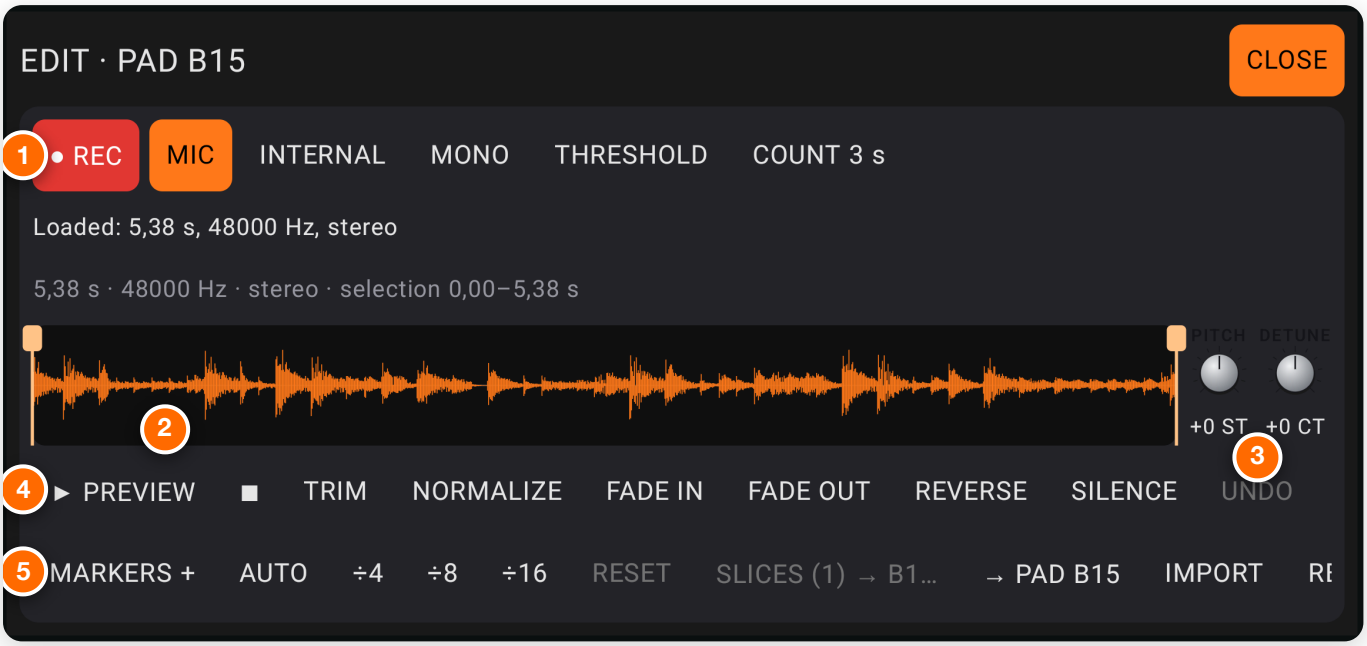


1. **Recording** — **● REC**, source MIC/INTERNAL, mono/stereo, **THRESHOLD** starts on signal, **COUNT 3 s** is a count-in.
2. **Waveform and selection** — the orange handles at the edges are the selection boundaries; drag them with your finger. Let go and the selection plays right away.
3. **PITCH and DETUNE** — the pad's pitch: ±12 semitones and ±50 cents. Let go of the knob and you hear it at once.
4. **Processing** — PREVIEW, stop, TRIM, NORMALIZE, FADE IN/OUT, REVERSE, SILENCE, UNDO; after every edit the result plays.
5. **Slicing and assigning** — MARKERS + (tap the waveform to place markers, shown as blue lines), AUTO (by hits), ÷4/÷8/÷16, RESET, SLICES → slice onto the bank's pads, → PAD puts the selection on the selected pad, IMPORT, RECORDINGS lists past recordings (the row scrolls sideways).


Important. Trimming and processing in EDIT change the copy in the editor. To change the sound on the pad, press → **PAD**. PITCH and DETUNE change the pad immediately.

16 EXPORT: save your track


EXPORT records the whole IS-1 output (every pad plus the KAOSS effects) for exactly the song length, or the current pattern if there is no song. A one-bar pattern gives a file exactly one bar long.

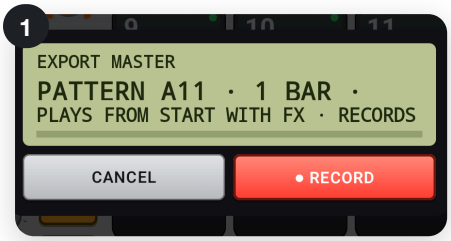

You see what will be recorded: song or pattern and how many bars. Press ● **RECORD**.

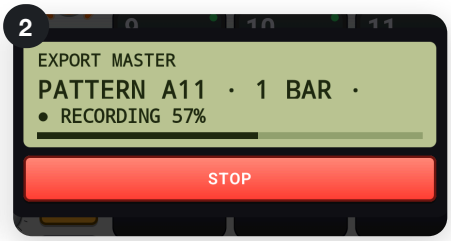

The song plays from the start in real time. The metronome is not recorded. **STOP** cancels.

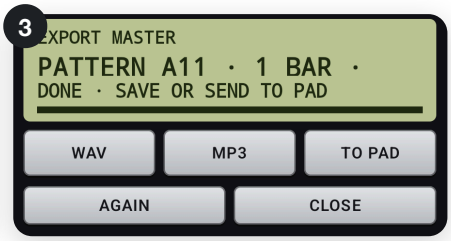


Choose where the finished recording goes.

Button	What it does
WAV	save lossless (16-bit) to the phone's **Music/IS-1** folder
MP3	save a 320 kbps MP3 to the same folder, handy for messaging apps
TO PAD	put the recording on any pad: the window closes, then touch a pad
AGAIN	record again

Tip. You can save both a WAV and an MP3 from one recording. Files are named by date: **IS-1_20261024_153012.mp3**.

Important. Exports can be up to 10 minutes long. Ableton Link sync pauses while exporting.

17 SETUP: Ableton Link and latency

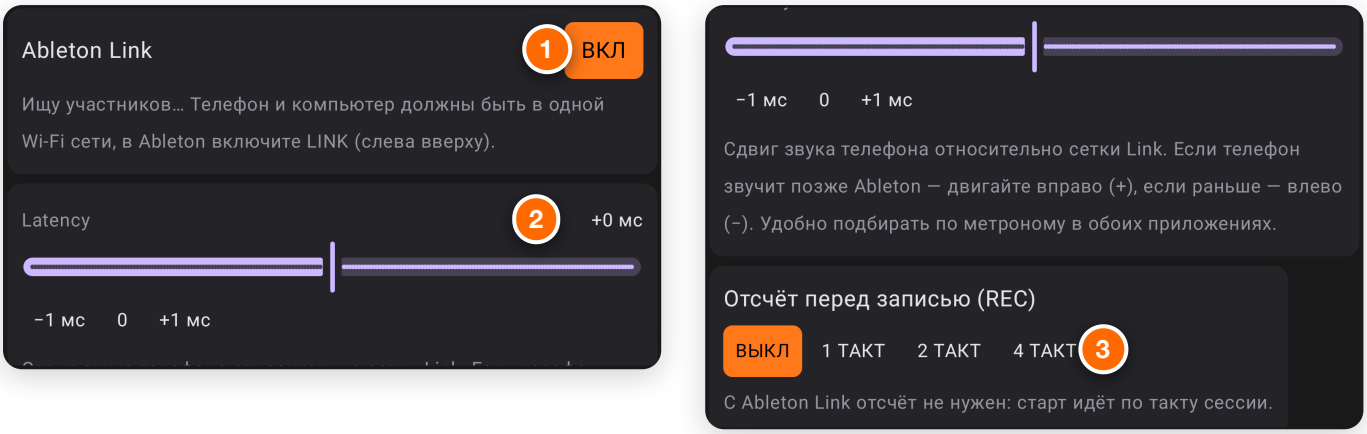

Tip. The SETUP screen is in Russian: **ВКЛ** = On, **ВЫКЛ** = Off, **ЗАКРЫТЬ** = Close, **ТАКТ** = bar, **мс** = ms, «Отсчёт перед записью» = count-in before recording.

1. **Ableton Link** — **ВКЛ/ВЫКЛ** (on/off): tempo and start sync with Ableton Live and other Link apps on the same Wi-Fi network. Below the button is the status: searching for peers, or connected with the peer count and tempo. Press PLAY in any app and everyone starts on the next bar.
2. **Latency** — shifts IS-1 against the other peers, ±100 ms; the –1 / 0 / +1 ms buttons fine-tune it. If IS-1 sounds later than the computer, move right (+); if earlier, move left (–).
3. **Count-in** — how many bars the metronome counts after REC: off, 1, 2 or 4. Not needed with Link.

Connecting to Ableton Live

1. Put the phone and the computer on the same Wi-Fi network.
2. In Ableton Live, turn on **LINK** in the top left corner.
3. In IS-1: **SETUP** → turn **Ableton Link** on. **LNK** appears on the display and the SETUP button lights up.
4. Change the tempo in either app: it is shared.
5. Adjust **Latency** by ear until the hits line up.

18 Cheat sheet

I want to…	I do
record a sound onto a pad	**SAMPLE** → hold a pad
copy a sound	in PAD hold the pad ~1 s → touch an empty pad
delete a sound	in PAD **ERASE** → touch the pad
type an exact tempo	hold the tempo digits on the display
record a beat	**REC** in PAD, play the pads
program steps	**STEP**, touch pads 1–16
make one step higher/quieter	hold the step + turn a knob
copy a pattern	in SEQ hold the pattern → touch another
build a song	in SEQ **REC** → touch patterns → **REC**
erase the song	in SEQ hold **ERASE**
make hi-hats cut each other	hold **CHOKE** + touch the pads
record effects over the song	**KAOSS** → **REC** → play the touch pad
remember a finger movement	in KAOSS hold **A–D** and move your finger
put a sound with effects on a pad	in KAOSS **RESMP** → **RESMP** → hold **RESMP** → pad
save my track	**EXPORT** → ● **RECORD** → **WAV**/**MP3**
undo a mistake	**UNDO** (up to 3 times)
reset a knob	double-tap the knob
set all effects to 100 %	three taps on DRY/WET

19 IS-1 FREE and IS-1 Pro

IS-1 comes in two editions. **IS-1 FREE** costs nothing: you can record sounds, program beats and play with effects. **IS-1** (Pro) is the full version without limits. This manual is for IS-1 FREE: it covers all of IS-1, and the table below shows what is only in Pro. Screenshots were taken in Pro.

Feature	IS-1 FREE	IS-1 Pro
Pads	1 bank (A), 16 sounds	4 banks (A–D), 64 sounds
Sample recording, EDIT, IMPORT	full	full
Sequencer, STEP, step parameters, CHOKE, UNDO	full	full
Patterns	16 (A01–A16), up to 2 bars	64, up to 4 bars
Song (SONG)	up to 4 patterns	unlimited
KAOSS effects	programs 1–5 in every set (25 effects)	all 50
KAOSS MOTION	1 memory (A)	4 memories (A–D)
KAOSS effects recording (FX REC)	—	yes
RESAMPLE	up to 10 seconds	up to 30 seconds
EXPORT	MP3 128 kbps, first minute	WAV and MP3 320 kbps, up to 10 minutes, TO PAD
PRJCT: .sal project files	— (the project is saved automatically)	save and load
SETUP: banks	IMPORT BANK into bank A	IMPORT and SAVE BANK, A–D
Ableton Link	—	yes

Tip. Locked buttons are not hidden. If you press something that is Pro-only, the display shows a hint such as **BANKS B–D · IS-1 PRO**.

Tip. FREE and Pro are separate apps: both can be installed on the same phone, each with its own pads and projects. A bank saved in Pro (SAVE BANK) can be loaded into FREE with IMPORT BANK.