



TFmini LiDAR Module

1. Product Overview

Coupled with unique optical and electrical design, the product is based upon ToF (Time of Flight) and adopts 850nm infrared light source so as to measure distance with stability, precision, high sensitivity, and high speed.

The product is built with algorithms adapted to various application environments so as to offer excellent distance measurement performances with low cost and small size. The product adopts multiple adjustable configurations for flexible use by the client, which is better to satisfy the endusers' demand.

2. Technical Specifications and Parameters

Table 1 Key Characteristic Parameters of TFmini

	Description	Parameter value		
	Operating Range(Indoor)	0.3m~12m ^①		
	Magagramont aggyragy	±4cm@ (0.3-6m) ²		
	Measurement accuracy	±6cm@ (6m-12m)		
Product	Range resolution	5mm		
performance	Frequency	100Hz		
	Default unit of distance output	cm		
	Light sensitivity	70klux		
	Operating temperature	0~60°C		
Optical	Light source	LED		
	Wavelength	850nm		
parameters	Receiving half angle	1.15°		
	Transmitting half angle	1.5°		
	Power supply voltage	5V		
	Average current	≤120mA		
Electrical parameters	Average power	≤0.6W		
•	Peak current	800mA		
	Communication level	LVTTL (3.3V)		
	Wiring length	10cm		
Others	Material of enclosure	ABS+PC		
Others	Weight	4.7g		
	Storage temperature	-20°C ~75°C		





- ① This data is based on the indoor test with the standard white board (90% reflectivity) as the detection object.
- 2 Maybe some errors of ±6cm occurs due to the switchover of different distance modes within 0.3-2m.

3. Product Appearance and Structure

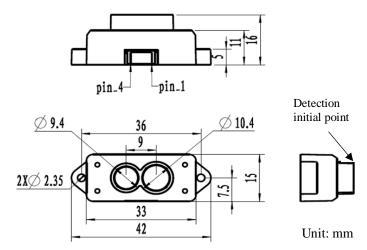


Figure 1 Dimensional Drawing of TFmini

4. Definition of Product's Connector




Figure 2 Line Sequence Diagram of TFmini

TFmini is equipped with the connector of GH1.25-4p type. The line sequence is shown in Figure

2. The positions of the product pins are shown in Figure 1.

5. Communication Protocol and Data Format

Table 2 Product Communication Protocol

Communication interface	UART			
Default baud rate	115200 (adjustable)			
Data bit	8			
Stop bit	1			
Parity check	None			

Table 3 Standard Data Code Format and Description

Byte0-1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
0x59 59	Dist_L	Dist_H	Strength_L	Strength_H	Mode	0x00	Checksum





Data code explanation					
Byte0-1	0x59 59, frame header, same for each frame				
Byte2-3	Dist represents the distance detection values, with the data format in little-endian.				
Byte4-5	Strength, signal strength at current distance ,with the data format in little-endian,				
Byte6	Mode, distance mode, represented respectively by 02 (short distance) and 07 (long distance), automatically switchable by default.				
Byte7	Spare byte, 00 by default				
Byte8	Checksum is the low 8 bits of the cumulative sum of the numbers of the first 8 bytes.				

6. Configurable Parameters

6.1 General Parameter Configuration commands

Before modifying the product configuration, input 42 57 02 00 00 00 01 02 to enter configuration mode, and then input the relevant configuration commands in Table 4. After completing the configuration, input the 42 57 02 00 00 00 00 00 02 to quit the configuration mode.

Table 4 List of General Parameter Configuration commands

Configurable items	List of commands	Description	Default
	42 57 02 00 00 00 01 06	Standard format, as shown in Table 3	\checkmark
Output data format	42 57 02 00 00 00 04 06	"Pixhawk" data format	/
Data output period	a output period 42 57 02 00 EE FF 00 07 EE FF: setting of output it must be the integral must be a constant of the integral must be		10ms/ 100Hz
Unit of distance	42 57 02 00 00 00 00 1A	Output unit of distance data is mm	/
Unit of distance	42 57 02 00 00 00 01 1A	Output unit of distance data is cm	\checkmark
D. d. D.	42 57 02 00 00 00 00 14	Automatic detection pattern	$\sqrt{}$
Detection Pattern	42 57 02 00 00 00 01 14	Fix detection pattern	
D' ()	42 57 02 00 00 00 02 11	Short distance mode, applicable for $0-5 \mathrm{m}^{\oplus}$	/
Distance mode	42 57 02 00 00 00 07 11	Long distance mode, applicable for 1-12m	
Setting of range	42 57 02 00 00 00 00 19	Range limit disabled	/
Setting of range limit	42 57 02 00 EE FF 01 19	Range limit enabled EE FF: threshold of ranging limit (mm)	Range limit 12m
lower limit of signal strength threshold	42 57 02 00 EE 00 00 20	EE: setting of the lower limit of signal strength threshold. If the real signal is lower than the set threshold, "FF FF" will be output as the distance value which means invalid.	Lower threshold 20(DEC)
upper limit of signal strength threshold 42 57 02 00 EE FF GG 21		EE FF: setting of the upper limit of signal strength threshold GG: output distance value (cm)	/

①: This command is related to the firmware version. At present, only the version before 160 is supported (that is, the





version number ends with 15X); for the 160 or later version, the command code is changed to: 42 57 02 00 00 00 01 1 (Short distance mode, 0-2m applicable); 42 57 02 00 00 00 03 11 (middle distance mode, 0.5-5m applicable).

6.2 Advanced Parameter Configuration commands

Advanced parameter configuration commands. Input 42 57 02 00 00 00 01 02 to enter the configuration mode, and then input the relative command as the Table 5.

Table 5 Special Parameter Configuration and Description

Configurable items List of commands		Description	Default
Setting of baud rate	42 57 02 00 00 00 GG 08	The baud rate corresponding to GG is shown in Table 6.	115200
Setting of trigger sources	42 57 02 00 00 00 01 40	Internal trigger, 100Hz as default	\checkmark
	42 57 02 00 00 00 00 40	External trigger	,
External trigger setting	42 57 02 00 00 00 00 41	command for one single measurement	/
Reset	42 57 02 00 FF FF FF FF	All settings are reset to the default	/

Table 6 Corresponding List of Baud Rate Settings

GG	0x00	0x01	0x02	0x03	0x04	0x05	0x06
Baud rate	9600	14400	19200	38400	56000	57600	115200
GG	0x07	0x08	0x09	0x0a	0x0b	0x0c	/
Baud rate	128000	230400	256000	460800	500000	512000	/

7. Remote Upgrade

TFmini supports remote upgrade. The user can obtain the following information by Upgrade PC software of TFmini. ① Program version No.② Product serial No.

The user is kindly required to select product program version depending upon the actual demands. For details, refer to the Product Manual of TFmini.

Product Certification





Photobiological Safety IEC 62471



Headquarter:

Tel: 0086 010-57456983

Email: bw@benewake.com

Add: No.28 Xinxi Road, Haidian

District, Beijing, China

Sales contact:

Email: sales@benewake.com

Technical support:

Email: support@benewake.com