


SETTING UP THE P/T/RH SENSOR

To successfully set up the pressure/temperature/relative humidity sensor, you will need to correctly connect the Arduino with the sensor (using the provided scheme) and run the provided code. To be faster you can do this simultaneously: a part of the group can work on setting up the hardware (keep reading), while another part sets up the software (scroll down to the 'SOFTWARE' section). Once both are done, proceed to the 'RUNNING THE CODE' section.


WIRING (HARDWARE)

This section will explain how you can connect the sensor to your Arduino. To make your life easier we have made a diagram which clearly represents how the wires should be connected. Recreate the wiring and connect the Arduino to the computer.

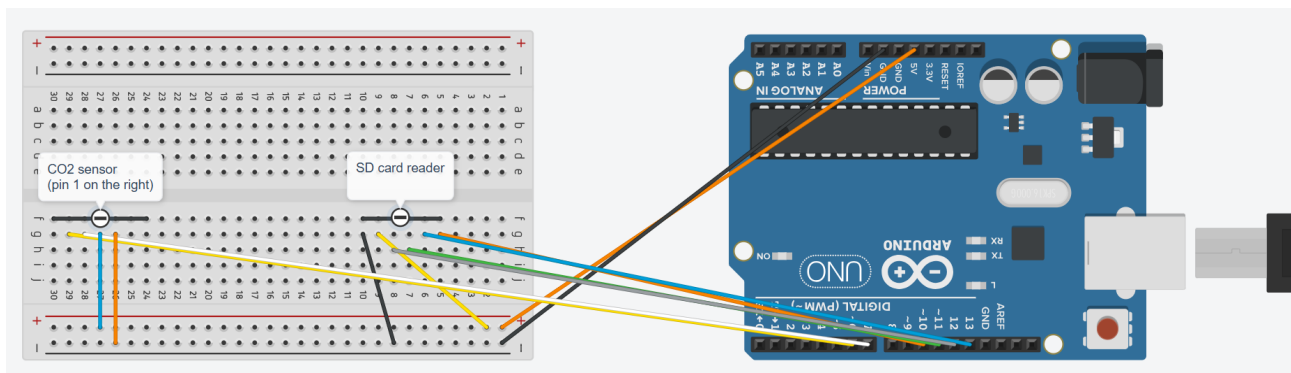

The CO2 sensor does not have labels on the attached pins but you can use the scheme below to make sure the correct sensor pins are connected to the correct Arduino pins.

Pin 1	Skip
Pin 2	Skip
Pin 3	GND
Pin 4	5v
Pin 5	Digital pin 7
Pin 6	Digital pin 6
Pin 7	Skip

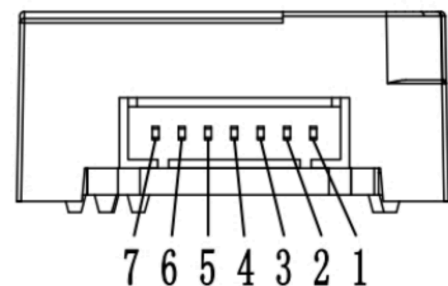

Terminal connection version

Note that the first two pins and the last pin are not used. The sensor has a cluster of cables attached to it. Make sure to keep track of which cable is attached to the first sensor pin. Attach the cluster of cables to the breadboard as depicted in the first figure (the cable attached to pin one should be on the right hand side).

Software

Running the software follows the same work flow as for the P/T/RH sensor. All codes are provided on the GitHub repository in the 'given_codes' folder. To run the code first copy it from the GitHub (click on the 'copy raw file' button on the top right corner), paste it in the Arduino IDE terminal and then follow the same instructions as in 'Getting_started' file (steps 3.2 and 3.3).

1. First you have to erase the data from the SD card. To do that download and run the code 'delete_sd.ino'.
2. Then you can run the actual code. For P/T/RH sensor run the code 'CO2_Sensor_Initail.ino'. The measurements taken will show in the terminal, every 10 seconds. They will be saved to the SD card as well, from where you can extract them later. Now perform your measurement and then proceed to step 3.