


SETTING UP THE P/T/RH SENSOR

To successfully set up the pressure/temperature/relative humidity sensor, you will need to correctly connect the Arduino with the sensor (using the provided scheme) and run the provided code. To be faster you can do this simultaneously: a part of the group can work on setting up the hardware (keep reading), while another part sets up the software (scroll down to the 'SOFTWARE' section). Once both are done, proceed to the 'RUNNING THE CODE' section.

WIRING (HARDWARE)


This section will explain how you can connect the sensor to your Arduino. To make your life easier we have made a diagram which clearly represents how the wires should be connected. Recreate the wiring and connect the Arduino to the computer.

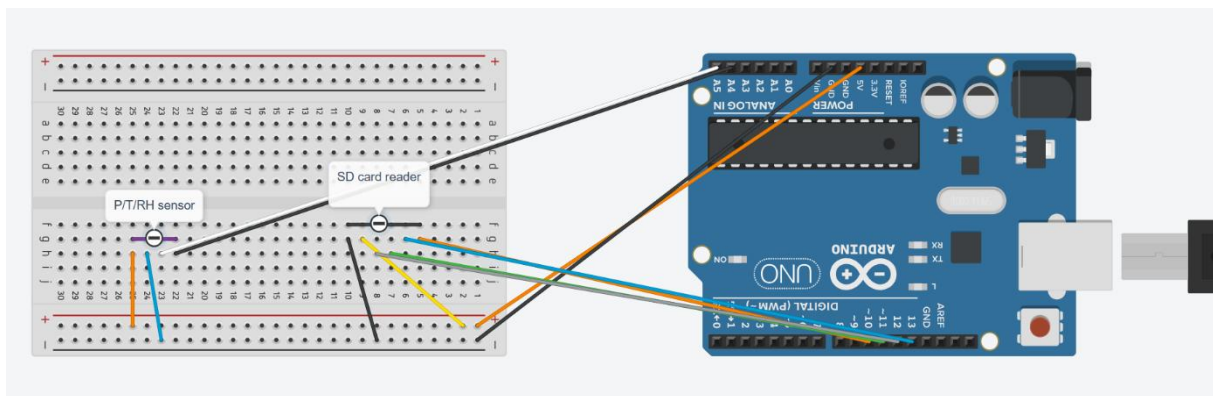


SOFTWARE

First you will have to download the library `Adafruit_BME280` in the Arduino IDE app. To do that

1. Open the Arduino IDE app
2. In the top left corner click 'Tools' -> 'Manage libraries'

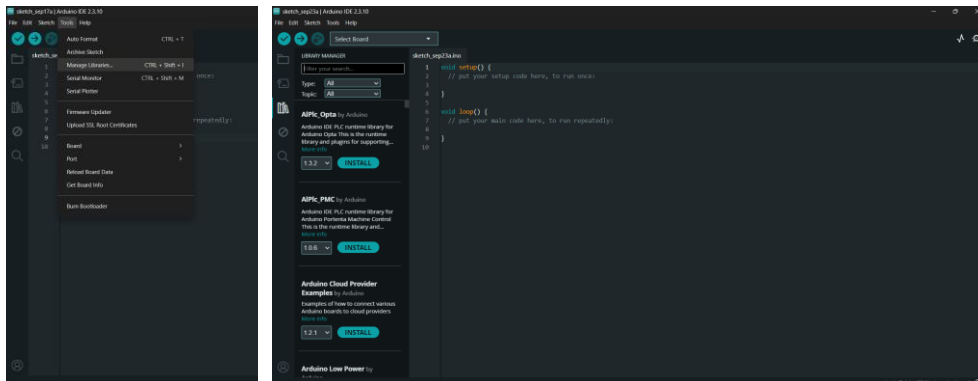


3. Search for the library '`Adafruit_BME280`' and install it (click 'install' -> 'install all')

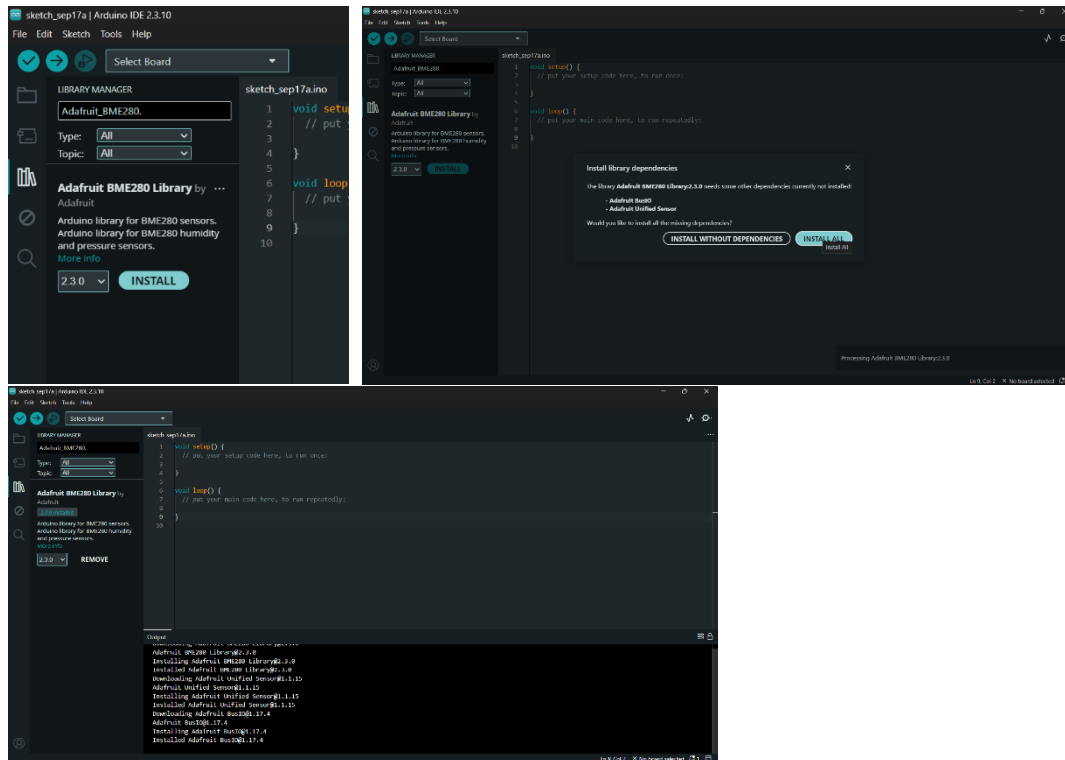

4. Your library is now installed.
5. Once the Arduino is connected to the sensor and computer, you can start running the code.

RUNNING THE CODE

All codes are provided on the GitHub repository in the *'given_codes'* folder. To run the code first copy it from the GitHub (click on the 'copy raw file' button on the top right corner), paste it in the Arduino IDE terminal and then follow the same instructions as in *'Getting_started'* file (steps 3.2 and 3.3).

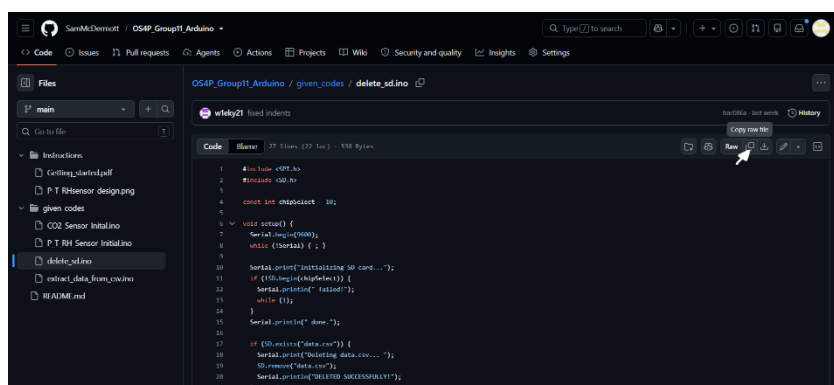

1. First you have to erase the data from the SD card. To do that download and run the code *'delete_sd.ino'*.
2. Then you can run the actual code. For P/T/RH sensor run the code *'P_T_RH_Sensor_Initial.ino'*. The measurements taken will show in the terminal, every 10 seconds. They will be saved to the SD card as well, from where you can extract them later. Now perform your measurement and then proceed to step 3.

3.