


SETTING UP THE P/T/RH SENSOR

To successfully set up the pressure/temperature/relative humidity sensor, you will need to correctly connect the Arduino with the sensor (using the provided scheme) and run the provided code. To be faster you can do this simultaneously: a part of the group can work on setting up the hardware (keep reading), while another part sets up the software (scroll down to the 'SOFTWARE' section). Once both are done, proceed to the 'RUNNING THE CODE' section.

WIRING (HARDWARE)


This section will explain how you can connect the sensor to your Arduino. To make your life easier we have made a diagram which clearly represents how the wires should be connected. Recreate the wiring and connect the Arduino to the computer.

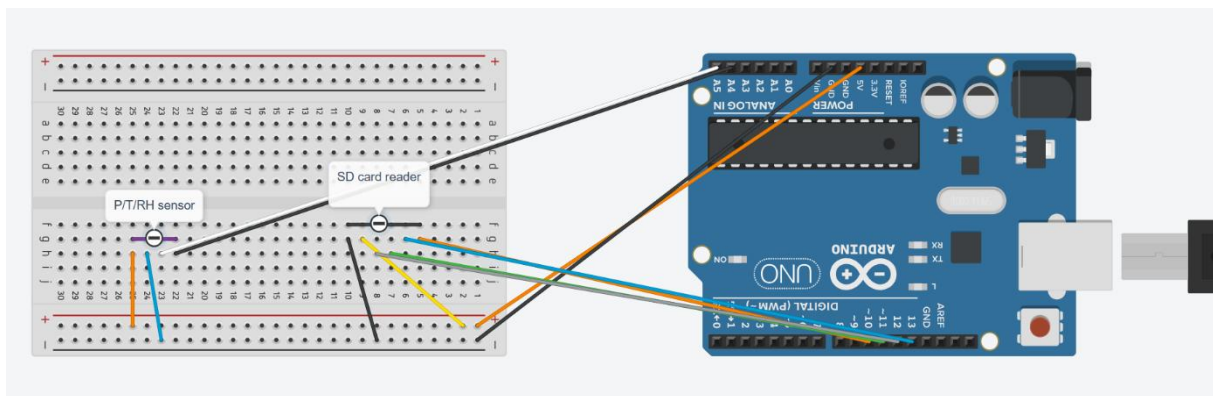


SOFTWARE

First you will have to download the library `Adafruit_BME280` in the Arduino IDE app. To do that

1. Open the Arduino IDE app
2. In the top left corner click 'Tools' -> 'Manage libraries'

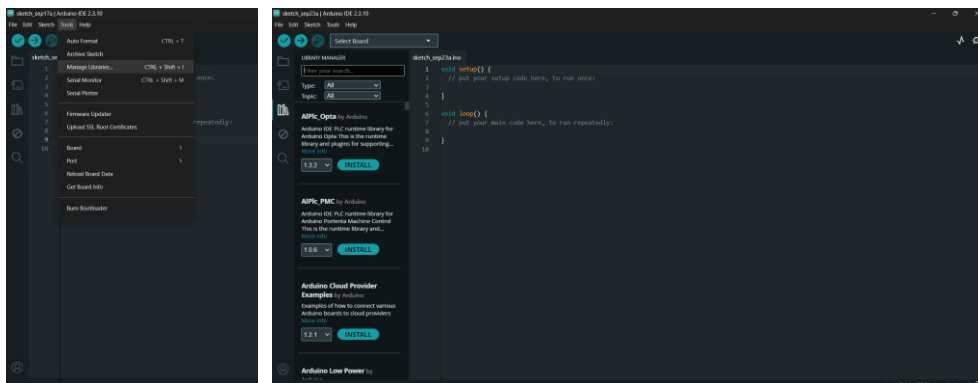

3. Search for the library '`Adafruit_BME280`' and install it (click 'install' -> 'install all')

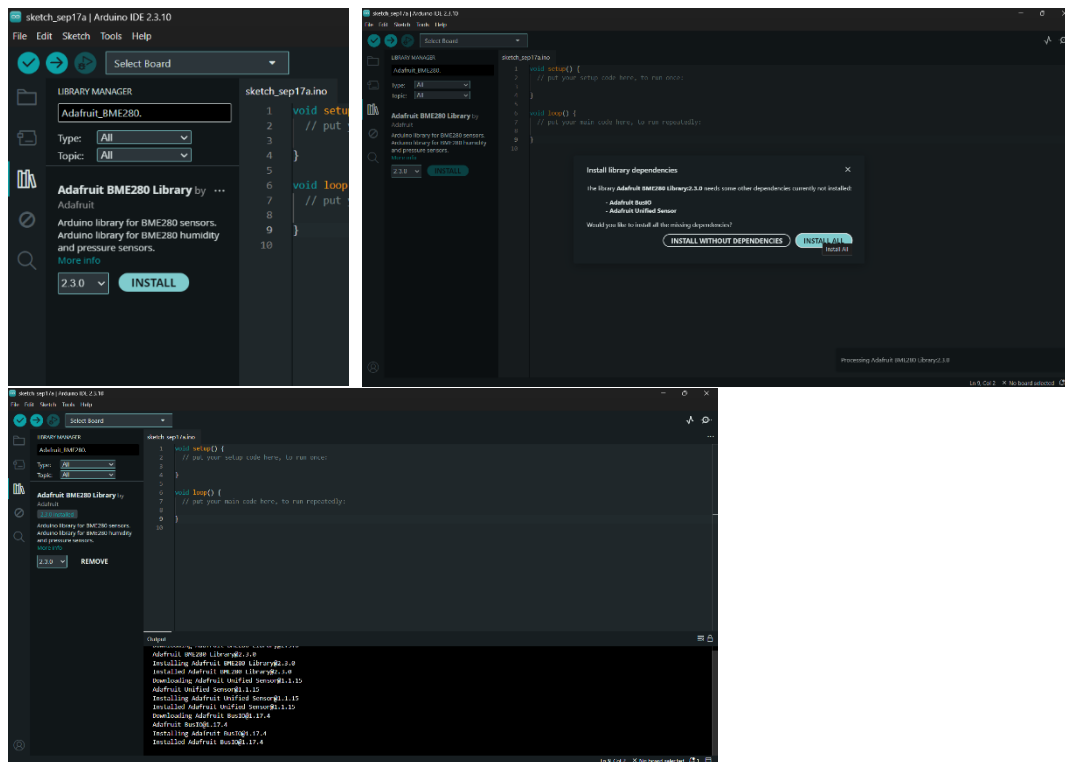

4. Your library is now installed.
5. Once the Arduino is connected to the sensor and computer, you can start running the code.