
7.1 HSG - TROUBLESHOOTING

Haas Surface Grinder (HSG) - Troubleshooting Guide

Components

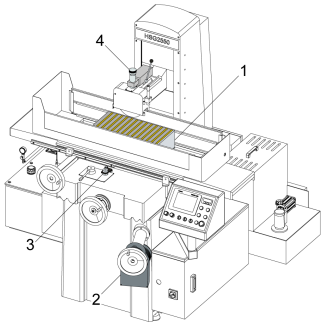

Haas Surface Grinder :


1. Magnetic chuck
2. Z-axis motor
3. X-axis switch
4. Dresser

Grinding Troubleshooting

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
Chatter	Wheel out of balance	Re-balance wheel on mounting. Re-balance wheel after truing. Run wheel without coolant to remove excess water. After removing wheel from machine, store on side to prevent water from settling at lower edge of wheel
	Wheel out of round	True before and after balancing. True sides to face.
	Grinding wheel is blunt	Dress the wheel again
	Dresser alignment	Refer to the **Dresser Alignment** section below
	Oil shortage on ways	Inspect lubrication tank oil level / adjust oiling cycle timing
	Wrong abrasive used	Change wheel abrasive
Accuracy errors	Machine leveling	Re-level the machine and tighten locking nuts
	Feed and speed are too high or low	Adjust feeds and speeds through the control
	Magnetic chuck surface	Grind the magnetic chuck surface

Spindle does not run	Electromagnetic chuck is not on	Inspect magnetic chuck control in the electrical panel and verify functionality. Inspect control panel switch is connected and functional.
	Wheel guard is not closed properly	Close the wheel guard properly and tighten the thumb screw.
	Hydraulic pump is not on	Verify oil level and retry. Inspect and reset electric panel breakers. Verify incoming voltage to the hydraulic pump motor and panel button.
X-axis does not actuate	Incorrect phasing	Refer to the Electrical Installation section in the 4.1 Installation chapter in this manual.
Y-axis does not move automatically but moves when commanded manually	Proximity sensor not triggereing	Inspect the proximity sensor is triggereing and is set at the correct distance to the direction switch. The proximity switch can be accessed from underneath the top saddle of the machine after joggign the Y-axis towards the front of the machine.

Dresser Alignment

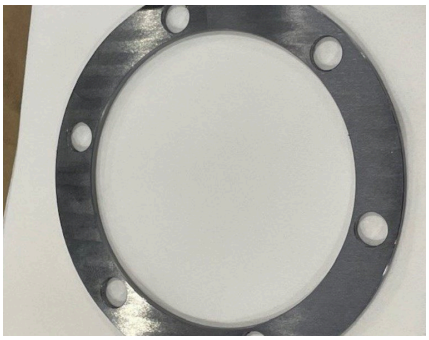

This pattern is due to the dresser not being square with the grinding wheel. When the grinding wheel is dressed it becomes tapered which causes uneven contact to the work piece.

Note : The video below demonstrates how to adjust the dresser.