5.1 HAB MAINTENANCE

HAAS Automatic Band Saw - Maintenance Schedule

Revision B - 10/2025

Maintenance

Regular maintenance is essential for the Haas Automatic Band Saw. This page provides the recommended maintenance intervals along with the corresponding instructions.

MAINTENANCE ITEM	INTERVAL
Wire Brush Positioning.	As needed.
Hydraulic Oil Gauge Level.	As needed.
Gearbox Oil Gauge Level.	As needed.
Grease The Main Pillar.	Every Month.
Grease Guide Arm Bearings.	Every Month.
Grease Feed Rollers.	Every Month.
Inspect the coolant level.	Weekly
Inspect the coolant concentration.	Weekly
Completely clean the coolant tank. Replace the coolant.	Six Months.

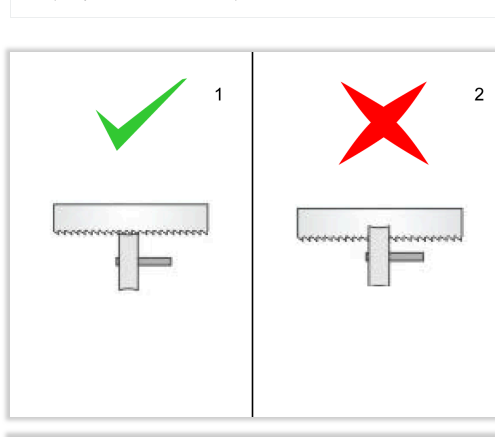

1

Wire Brush Positioning

Position the wire brush correctly in relation to the saw blade.

Note: Refer to the illustration to find the proper location of the wire brush.

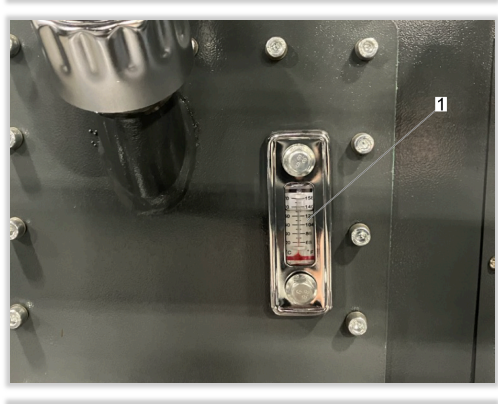

2

Hydraulic Oil Guage Level

Check the hydraulic oil level on the gauge. If the level is below ¾ full, you will need to add more hydraulic oil.

Turn **OFF** the band saw.

Remove oil tank cap and fill with **ISO 46 / ISO 32 oil.**

Note: Band saw will require 16 gallons of oil before any kind of startup.

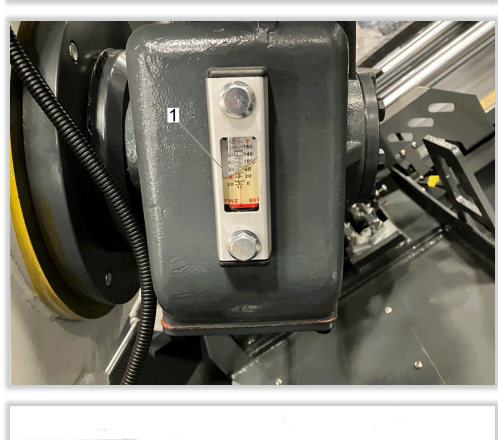

3

Gearbox Oil Guage Level

Check the oil level on the gearbox gauge located behind the drive wheel.

The quantity of gearbox lubricating oil must remain above the red mark.

Note: Machine requires the addition of **#220 Gear Oil.**

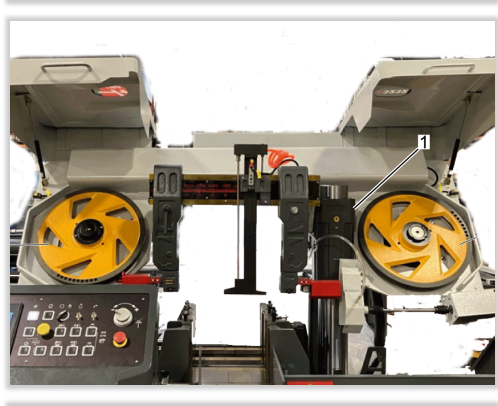

4

Grease Main Pillar

Use the zerk fitting located at [1] to inject grease onto the main pillar.

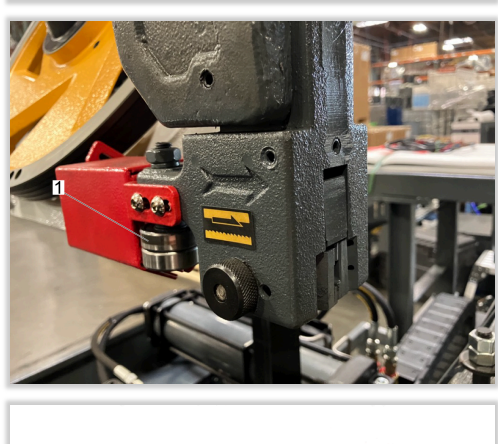

5

Grease Guide Arm Bearings

Apply grease to the guide arm bearings [1].

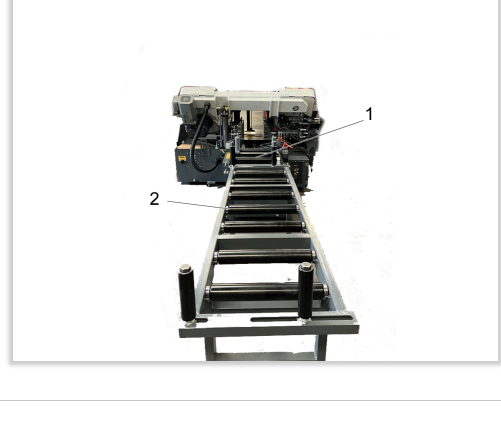

6

Grease Stock Rollers

Manually apply grease to the stock rollers on the machine [1] and on the extended bed [2].

5.2 HAB - SOFTWARE UPDATE

HAB 3232 - Software Update

Revision D - 9/2026

The following chapter provides a step-by-step guide for correctly updating the control software and the control panel software on the HAB3232.

Note: This procedure does not apply to CE bandsaws.

Warning: Do not install HAB v.1 software on a v.2 saw.

Warning: When updating the bandsaw software, PLC software should also be updated. **See 5.3 HAB PLC SOFTWARE UPDATE** for procedure. Incompatible control software and PLC software will cause errors.

HAB - Control Software Download

1

Contact the Haas Service Department for the latest compatible software to your machine. Include your machine serial number and any issues you may have been experiencing.

Warning: Software should only be updated at the instruction of the Haas Service Department. **Uploading the incorrect software can cause errors and unecessary downtime.**

HAB - HMI Software Installation

NOTE: Follow this procedure to install your HMI software patch. The machine must have its parameters initialized and AI module recalibrated after installing the software.

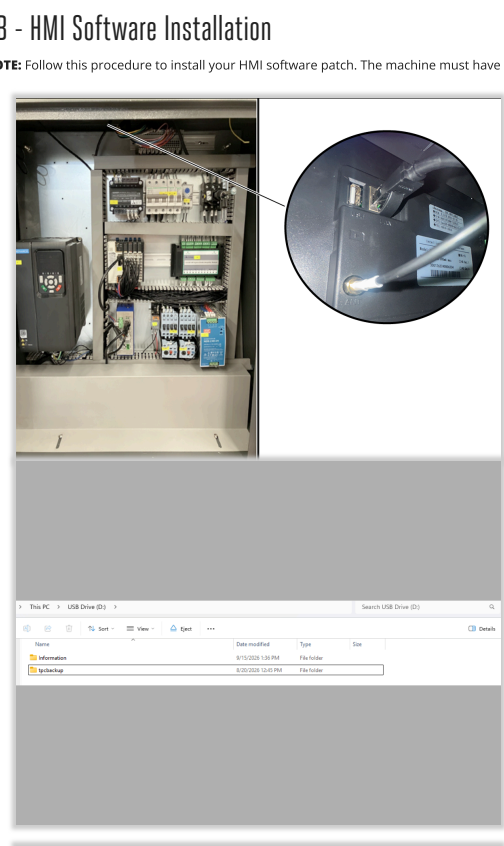

1

Extract the folder named **HAB - Control Panel Software**. Inside, you'll find another folder called **tpcbackup.**

Drag and drop the folder titled **tpcbackup** onto the **USB 2.0 Flash Drive.**

IMPORTANT: The **TPCBACKUP** file must be in the root directory of the 2.0 USB

Connect the USB 2.0 flash drive containing the folder named **tpcbackup** to the USB port located on the back of the control panel.

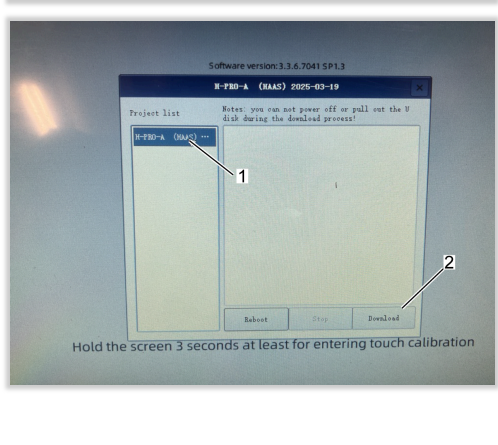

Hold the screen 3 seconds at least for entering touch calibration

2

Warning: Do not install HAB v.1 software on a v.2 saw.

Follow the on-screen instructions to proceed with the download.

Before downloading the new software, make sure the correct files are selected **[1]**.

Select **Download [2].**

When the download has completed the machine will automatically reboot.

Note: When the machine reboots, it may start up in a different language. Refer to the HAB TROUBLESHOOTING GUIDE for instructions on how to change the language correctly.

HAB - Controller Software Installation

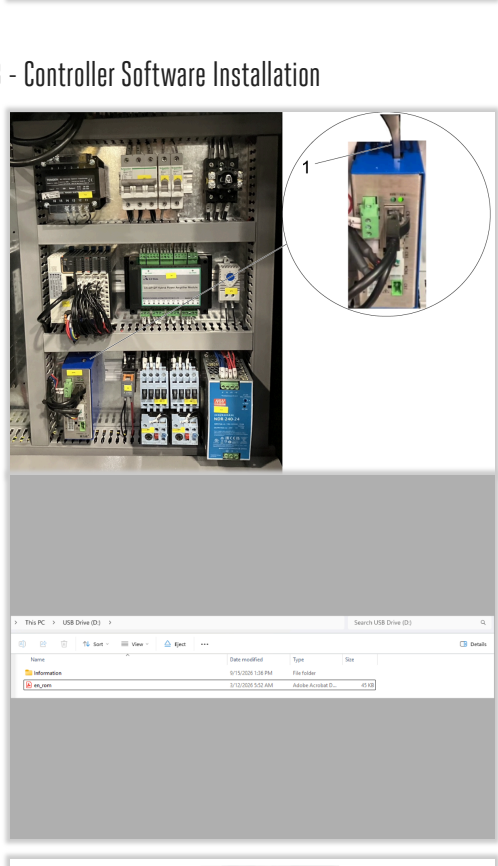

1

Locate the interface drive found near the bottom of the control cabinet.

The port for the USB 2.0 flash drive can be found at the top of the drive **[1].**

Drag and drop the file titled **en_rom.bin** into the **USB 2.0 Flash Drive.**

IMPORTANT: The **en_rom** file must be in the root directory of the 2.0 USB

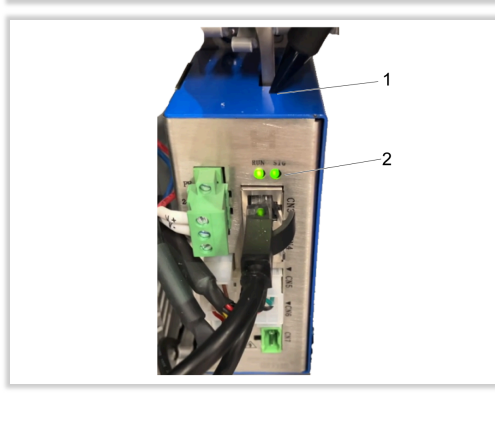

2

With the USB plugged into the drive, press and hold the Upgrade Button found on the top **[1].**

Hold the button until both lights glow green, then release.

Note: When the upgrade is completed, the two lights will resume flashing alternately.

Note: To confirm the update was successful, go back to the **Advanced Functions**, navigate to **Machine Information**, and check the intelligent version. The intelligent version should be updated for the procedure to be considered successful.

HAB - Parameter Initialization

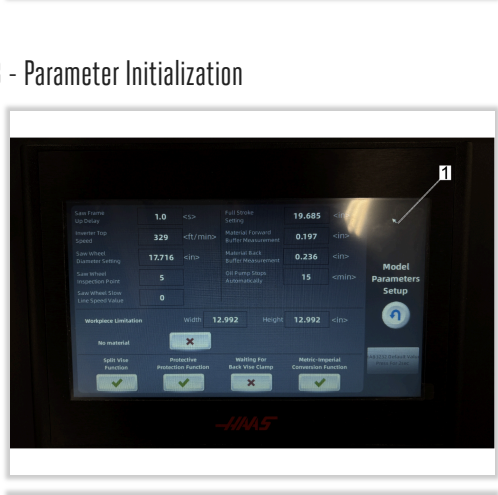

1

After the interface drive has been updated, the new parameters must be initialized on the control panel.

Select **Advanced Functions**

Navigate to **Type Parameter** and enter the password **123.**

Once inside the Type Parameters page press and hold the blank space **[1]** for 5 seconds until a hidden interface page will appear.

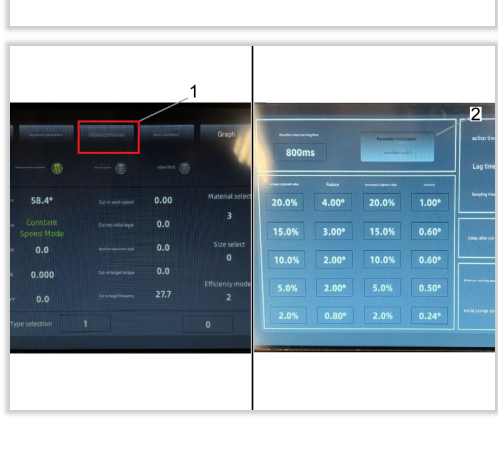

2

After navigating to the hidden interface page:

Select **Process Parameters [1].**

Select and hold **Parameter Initialization [2].**

HAB - A.I. Calibration Procedure

Important: After updating the software on the machine, the saw will need to be recalibrated. Refer to the 5.4 HAB - FEED RATE CALIBRATION for more details.

5.3 HAB - PLC SOFTWARE UPDATE

HAB 3232 - PLC Software Update

Revision C- 05/2026

The following chapter provides a step-by-step guide for correctly updating the control software on the PLC for the HAB-3232.

Note: Contact the Haas Service department for the latest PLC software.

Warning: PLC Software should only be updated along with a HAB-3232 software update or at the instruction of the Haas Service Department. **Uploading the incorrect PLC software or changing PLC settings can cause errors and damage to the machine.**

Connect to PLC

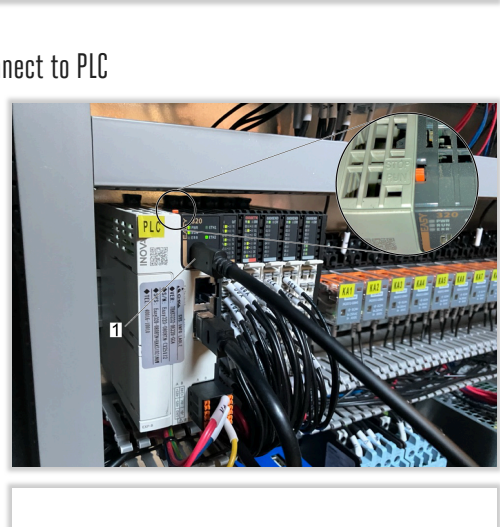

1

Connect computer to the PLC via a USB to USB-C cable [1].

Verify that the orange switch on top of the PLC is set to **'RUN'.**

Open the AutoShop app on computer.

To download AutoShop, please visit the LINK to download and install **AutoShop version V4.11.0.5.**

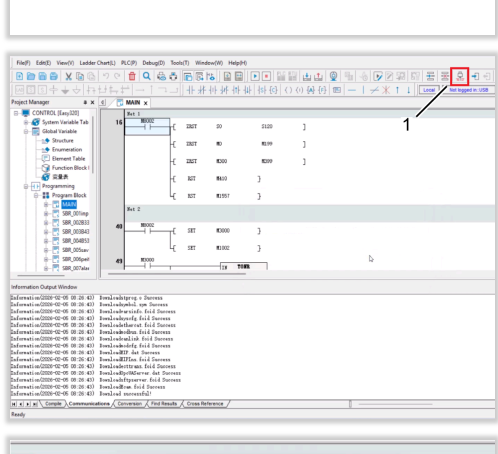

2

Click 'Test' button in toolbar [1].

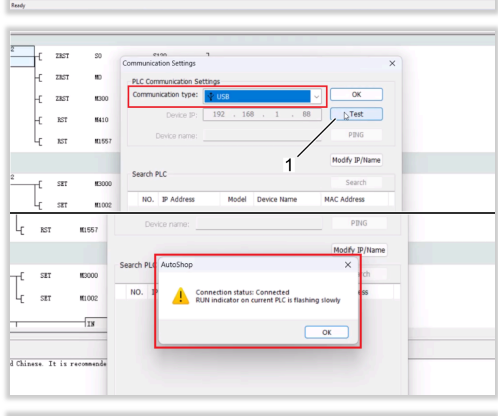

3

Set the 'Communication Type' to USB and press 'Test' [1]. A pop-up confirms that the USB is connected correctly.

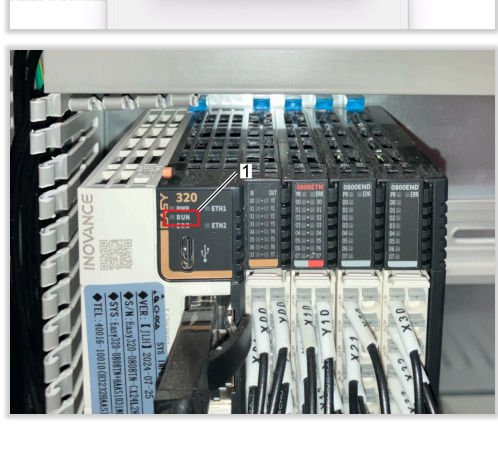

4

The 'RUN' indicator [1] on the front face of the PLC will flash slowly, indicating that it is connected correctly.

Load New Software

1

Contact the Haas Service Department for the latest PLC software.

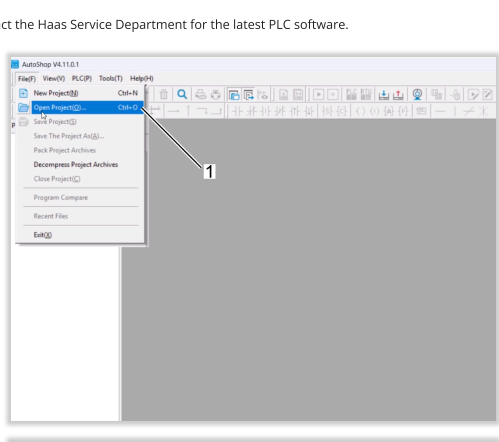

2

In the AutoShop app, navigate to File>Open Project [1]. Open the Auto-Shop File downloaded from HBC.

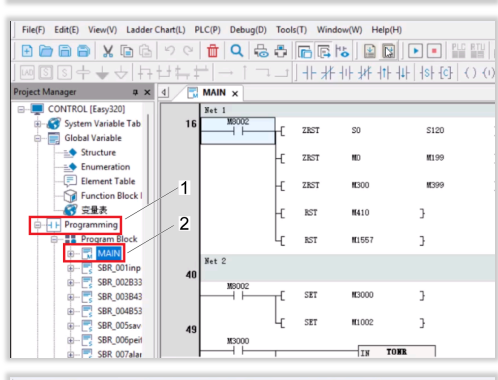

3

In the 'Project Manager' tree, expand the 'Programming' menu [1] and double click on 'MAIN' [2].

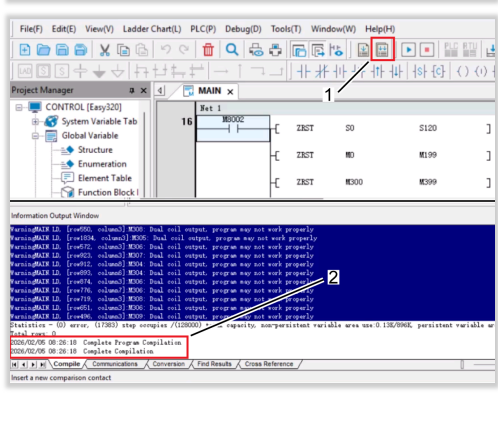

4

In the toolbar, click the 'Compile All' symbol [1] to begin compiling the program.

When compiling is complete, a 'Complete Compilation' notification [2] will be displayed in the Information Output Window.

Update PLC Software

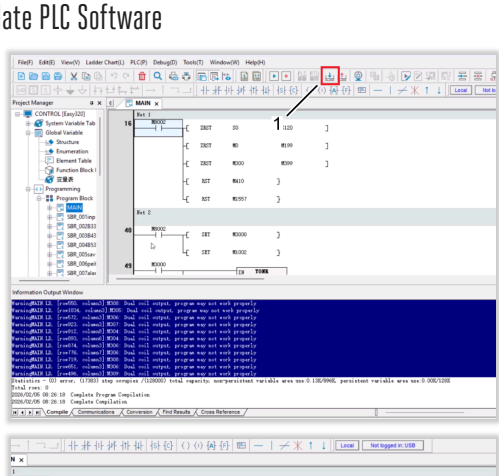

1

At the end of compilation, press the 'Download' [1] button to begin downloading the PLC software.

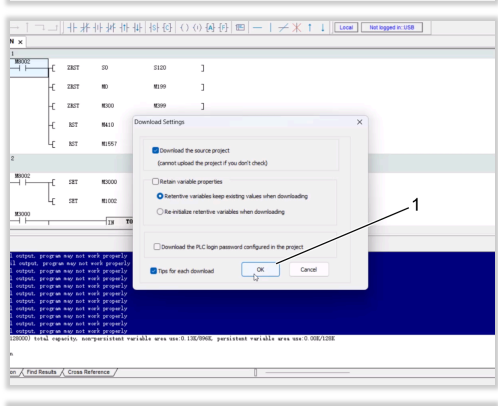

2

Press 'OK' [1] in the pop-up menu.

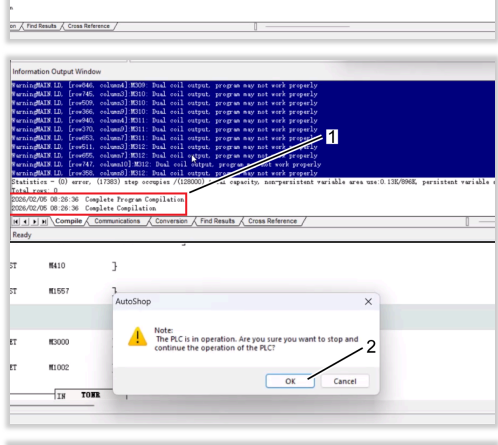

3

The file will load, and a 'Complete Program Compilation' notification [1] will be displayed in the Information Output Window.

A pop-up will appear after upload is complete, asking to stop and continue the operation of the PLC. Press 'OK' [2].

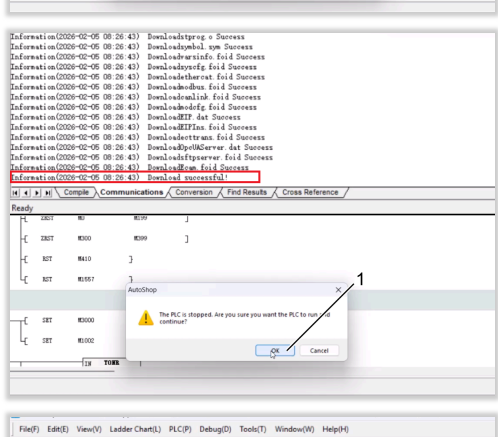

4

The new software will begin downloading. At the end of the download, a 'Download Successful' notification will be displayed in the Information Output Window.

A pop-up will appear on screen, asking to run the PLC and continue. Press 'OK' [1].

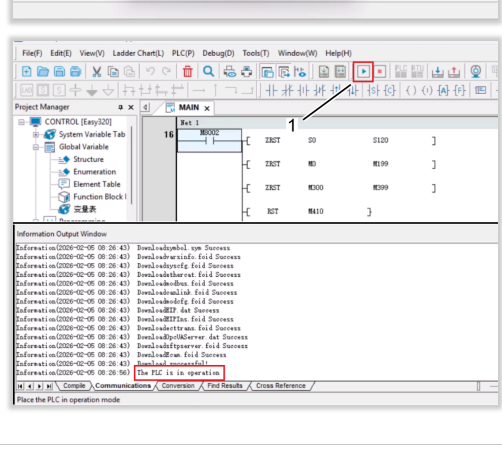

5

In the toolbar, click the 'Run' symbol [1]. A notification will be displayed in the Information Output Window that 'The PLC is in Operation'.

The PLC software is successfully updated. The computer can be disconnected from the PLC. Test the operation of the bandsaw to ensure that any issues have been remedied.

5.4 HAB - FEED RATE CALIBRATION

HAAS Automatic Band Saw - Feed Rate Calibration

Revision B - 01/2026

Introduction

The HAB-3232 had a variable down feed that must be calibrated to be accurate. This procedure will affect the accuracy of manual feed rate adjustments and AI mode cuts.

The system works by using a motor to control the opening of a variable orifice. The degrees that the motor rotates varies the opening of an orifice, which limits the flow of hydraulic fluid, which controls the rate that the saw frame feeds downwards.

This procedure will tune the feed rate with respect to the degrees of turn at the motor.

Feed Rate Calibration

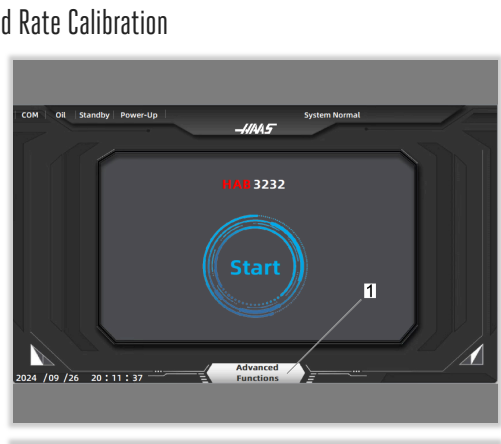

1

Power on the band saw and switch into manual mode.

Select **Advance Functions** button found at the bottom of the display page.

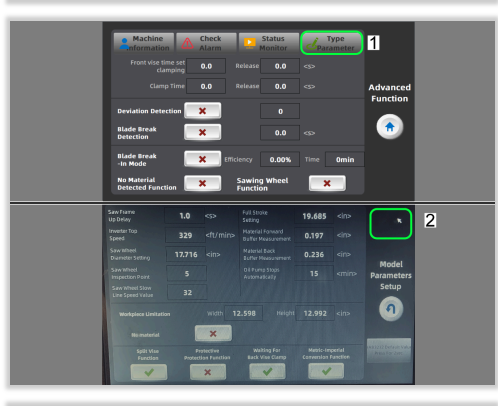

2

Navigate to Type Parameter **[1]** and enter the password **123.**

Once inside the parameters page press and hold the blank space **[2]** for 5 seconds until the hidden interface will appear.

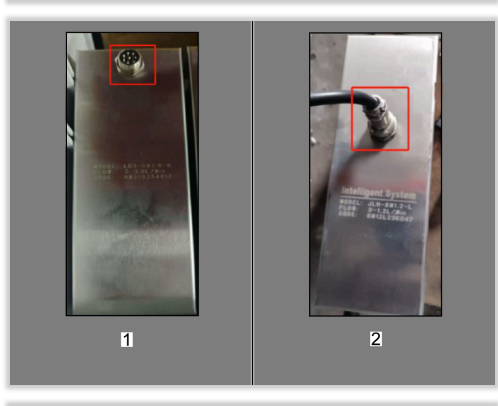

3

Before proceeding, it is important to verify which transmission module is found in the band saw.

Located in cabinet on the left side of the machine.

Important:

[1] 1st generation

[2] 2nd generation.

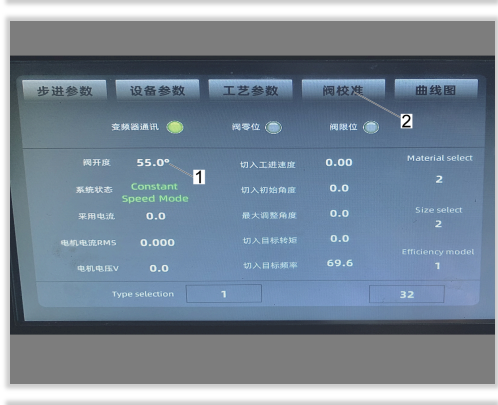

4

Set the angle of the motor shaft **[1]** indicated in the photo to 55 degrees using the hand wheel.

Note: You will have to be in manual mode and have wheel speed adjust selected to do this.

Navigate to the valve calibration tab found **[2].**

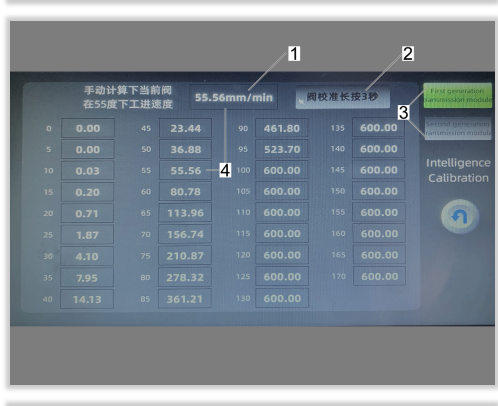

5

Select which generation transmission module **[3]** the bandsaw uses. Reference step 3

Note the initial value **[1]** at the top of the page.

Select and hold the Valve Calibration button **[2]** for 3 seconds .

Note: The machine will establish the set feed rate **[1]** as the correct rate for 55 degrees **[4]** of motor rotation. When the valve calibration button is pressed it will repopulate the table using these values as its point of reference.

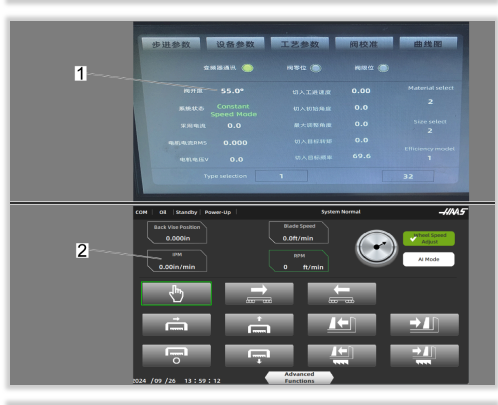

6

After calibration, return to the hidden parameters page and readjust the valve to **55 degrees** if necessary. See step 4.

Note the feed rate on the HMI. This is the rate that we will be cross referencing the measured rate with.

Then proceed to the next step.

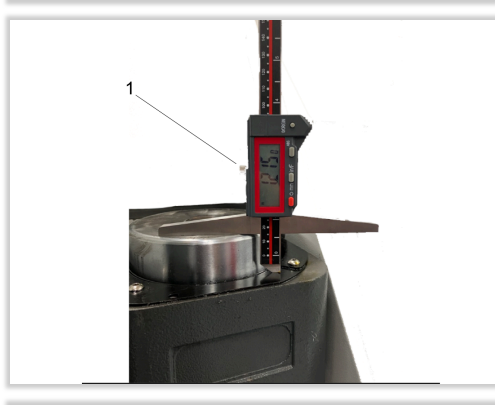

7

Raise the saw frame to its highest point..

Using a depth gage, measure the distance between the top of the cylinder to the oil seal ring **[1].**

Record this height. It will be the same each time the saw is at its maximum position.

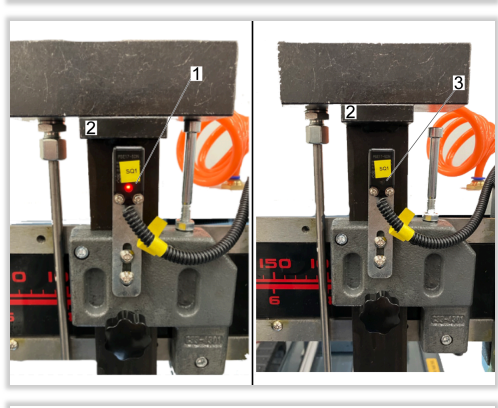

8

Lift the quick drop lever up **[2]** and secure it with the set screw, ensuring that the sensor does not detect it.

This disables the saws rapid motion and engages the feed rate set on the HMI. (red light off **[3]**)

Note: When sensor is triggered, the sensor's light will glow red **[1].**

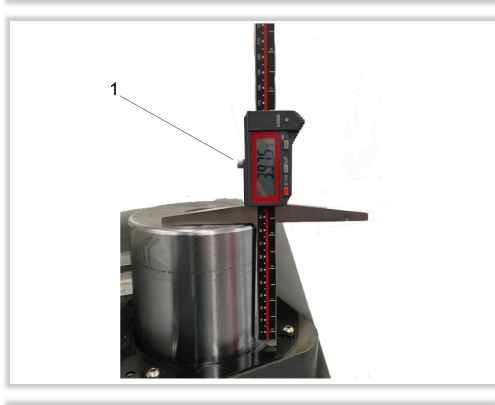

9

Cycle start the machine and set a timer for 1 minute.

When the timer has reached 1 minute, stop cutting by pressing the e-stop or the cycle stop button.

Measure the distance the saw frame dropped from its initial position **[1]**. This is the value we will use to calibrate the saw.

Compare this distance to the feed rate on the HMI. If it is within **+/- 0.10 in/min** it is within tolerance.

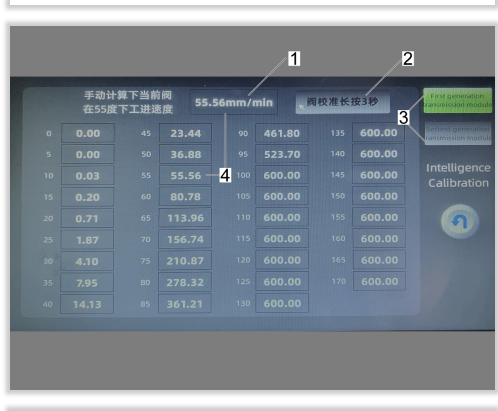

10

In this step we are correlating a measured value of feed rate to 55 degrees of the hydraulic orifices opening which we previously set.

The new value for calibration **[1]** is the measured rate from the test in the last step in units of **mm/min.**

Inches to mm conversion: 1.0 in = 25.4 mm

X.xxx **in/min** * (**25.4**) = X.xxx **mm/min**

Once that new value **[1]** has been entered. Select and hold the Valve Calibration button **[2]** for 3 seconds.

Important: When the machine repopulates the table using the new input value from the test, go back and verify that the hand dial is set to **55 degrees like in step 4 BEFORE the feed rate is tested again.**

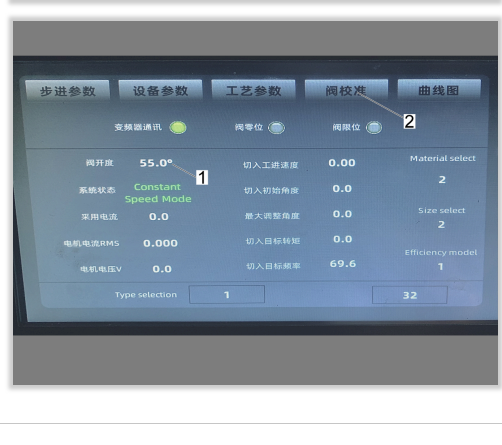

11

Important: Before proceeding to test the new value, reverify that the valve is at **55 degrees [1].** See step **4.**

Repeat steps 7-9 with the new calibration. Verify if the measured value is within **+/- 0.10 in/min.** of the value displayed on the HMI.

If the values are within tolerance then the procedure is completed.

5.4 HAB SERVICE PARTS LIST

HAAS Automatic Band Saw - Service Parts List

Revision G - 07/2026

Service Parts List

MACHINE	PART NUMBER	DESCRIPTION
HAB-3232 V1/V2/CE	93-4857	POWER ON/OFF SWITCH HAB-3232 HVS-1
	93-5045	VFD PROGRAMMED REPLACEMENT KIT HAB-3232
	93-5085	ROUND HYD PRESS GAUGE HAB-3232
	93-5212	CONVEYOR TABLE HAB-3232
	93-5208	STOP TOOL ROLL OFF PLATE ROD HAB-3232
	93-5207	GLASS COOLANT LEVEL INDICATOR HAB-3232
	93-5272	HYD PUMP FAN HAB-3232
	93-5178	OIL TANK CAP HAB-3232
	93-5173	WHEEL BRUSH MOTOR HAB-3232
	93-5306	HYDRAULIC POWER UNIT HAB-3232
	93-5297	POWER AMPLIFICATION MODULE HAB3232
	93-5298	POWER SUPPLY HAB-3232 V1/V2
	93-5311	MAIN HYDRAULIC PRESSURE SEAL B HAB-3232
	93-5314	MAIN HYDRAULIC PRESSURE SEAL A HAB-3232
	93-5310	HYDRAULIC CYLINDER SEAL MAIN HAB-3232
	93-5302	HYDRAULIC BLADE TENSION ACTUATOR HAB3232
	93-5299	TRANSFORMER HAB-3232
	93-5554	YELLOW SAW HEAD HEIGHT BUTTON HAB-3232
	93-5555	PLC HAB-3232
	93-5556	VARIABLE FREQUENCY DRIVE CE HAB3232
	93-5557	MAGNETIC SCALE X-AXIS HAB-3232
	93-5588	BROKEN BLADE DETECT PROX SWITCH HAB-3232
	93-5589	VISE CRASH DETECT PROX SWITCH HAB-3232
	93-5602	SHCS M12X20 HAB-3232
	93-5603	M12 SPLIT WASHER HAB-3232
	93-5644	PROX SWITCH HAB-3232
	93-5657	TOUCH SCREEN HAB-3232
	93-5658	CONTROL DIAL HAB-3232
	93-5672	COMPUTER CONTROLLER HAB-3232
	93-5961	VISE PRESSURE VALVE FRONT HAB-3232
	93-5904	COOLANT PUMP HAB-3232
	93-5665	AC CONTACTOR HAB-3232
	93-5654	BLADE COVER LEFT RED HAB-3232
	93-5655	BLADE FEED BALL BEARING SEALED HAB-3232
	93-5615	PROX SENSOR HAB3232
	93-5271	RIGHT BLADE GUIDE HEAD HAB3232
	93-5270	LEFT BLADE GUIDE HEAD HAB3232
	93-5213	BLADE TENSION SEAL RING HAB-3232
	93-5691	CHECK VALVE HAB-3232
	93-5692	THERMAL RELAY, OIL PUMP HAB-3232
	93-5693	THERMAL RELAY, WATER PUMP HAB-3232
	93-5723	SAW BLADE MOTOR FAN HAB-3232
	93-5724	COMMUNICATION CABLE HAB-3232
	93-5725	OIL PUMP HAB-3232
	93-5726	OIL PUMP MOTOR HAB-3232
	93-5773	HMI SCREEN SHIELD HAB-3232
	93-5764	FITTING M18 X 1.5 HPU HAB-3232
	93-5765	FITTING M22 X 1.5 HPU HAB-3232
	93-5816	FITG JIC1/4M X M14 MALE HAB-3232
	93-5817	DOOR LATCH HAB-3232
	93-5819	LEVELING FEET HAB-3232
	93-5821	REAR VISE MICROSWITCH HAB-3232
	93-5824	VISE JAWS HAB-3232
	93-5825	VISE JAWS FRONT RIGHT HAB-3232
	93-5827	BREAKER CABLE HAB-3232
	09-0680	BS BLADE M42 34x1.1x4115mm 3/4 PITCH
	09-0681	BS BLADE M42 34x1.1x4115mm 4/6 PITCH
	09-0682	BS BLADE M42 34x1.1x4115mm 5/8 PITCH
	09-0683	BS BLADE M42 34x1.1x4115mm 6/10 PITCH
	09-0852	BANDSAW, STEEL WIRE BRUSH
	09-0853	BANDSAW, OIL TANK FILTER SCREEN
	93-6128	BLADE COVER RIGHT RED HAB3232
	93-6074	GUIDE ARM THUMBSCREW HAB3232
	93-6129	SPACER CONVEYOR TABLE HAB3232
	93-6075	THUMBSCREW SHAFT HAB3232
	93-6052	REAR CARBIDE LFT GUIDE ARM HAB-3232
	93-6054	FRONT CARBIDE LFT GUIDE ARM HAB-3232
	93-6149	CONVEYOR TABLE SPACER KIT HAB-3232
	93-6333	WIRE BRUSH MOTOR COVER HAB3232
	93-6461	SOLENOID DIRECTIONAL VALVE HAB-3232
	93-6464	GASKET CHIP CONVEYOR HAB-3232
	93-6582	BEARING IDLE PULLEY HAB-3232
HAB-3232 V1 ONLY	93-5086	GUARD RIGHT SIDE HAB-3232 V1
	93-5087	GUARD LEFT SIDE HAB-3232 V1
	93-5591	E-STOP BUTTON HAB-3232 V1
	93-5592	MODE SELECT SWITCH HAB-3232 V1
	93-5595	TOGGLE SWITCH HAB-3232 V1
	93-5596	CONVEYOR TABLE SPEED BUTTON HAB-3232 V1
	93-5659	SQUARE BUTTONS HAB-3232 V1
	93-5670	POWER ON IDICATOR SQUARE HAB-3232 V1
	93-5712	SAW BLADE MOTOR HAB-3232 V1
	93-5834	WARNING DECAL SET HAB-3232 V1
HAB-3232 V2 ONLY	93-5668	GUARD LEFT SIDE HAB-3232 V2
	93-5669	GUARD RIGHT SIDE HAB-3232 V2
	93-5772	PRESSURE GAUGES HAB-3232 V2
	93-5774	CHIP AUGER CONNECTOR HAB-3232 V2
	93-5778	CONTROL PANEL FACE HAB-3232 V2
	93-5911	MAGNETIC SCALE HAB-3232 V2
	93-5932	MAGNETIC READ HEAD HAB-3232 V2
	93-6019	FRONT VISE PROX SWITCH HAB-3232 V2
	93-6066	LEGS EXTENDED BED HAB3232 V2
	93-6347	LEVELING FEET EXTENDED HAB-3232
HAB-3232 CE ONLY	93-5597	HEAD HEIGHT BUTTON CE HAB3232
	93-5598	RESET BUTTON HAB-3232 CE
	93-5599	KEY AND LOCK SWITCH HAB-3232 CE
	93-5558	POWER SUPPLY HAB-3232 CE
	93-5559	TRANSFORMER CE HAB-3232
HAB-3232 V1 OR HAB-3232 CE	93-5593	E-STOP BUTTON HAB-3232 CE/V2
HAB-3232 V2 OR HAB-3232 CE	93-5594	MODE SELECT SWITCH HAB-3232 CE/V2 HVS-1
	93-5600	BLACK PUSH BUTTON HAB-3232 V2/CE HVS-1
	93-5601	GREEN PUSH BUTTON HAB-3232 V2/CE
	93-5666	SQUARE RELAY HAB-3232 V2/CE
	93-5671	POWER ON INDICATOR HAB-3232 V2/CE HVS-1
	93-6465	SAFETY SWITCH ADJUSTING SHIM HAB-3232-CE

5.5 HAB HYDRAULIC MOTOR REPLACEMENT

HAAS Automatic Band Saw - Hydraulic Motor Replacement

Revision B - 10/2025

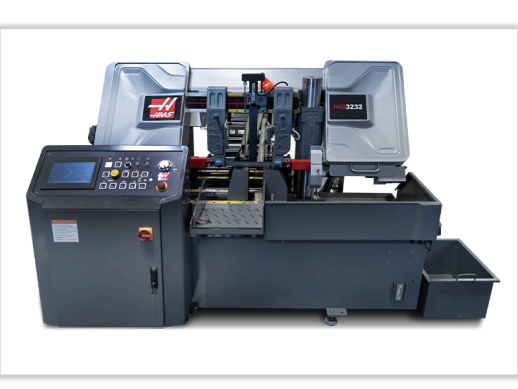

The following chapter offers a guide to replacing the Hydraulic Motor found inside the HAB-3232.

Hydraulic Motor Removal

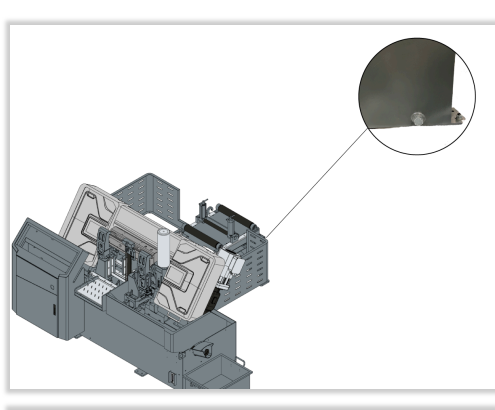

1

Note: Before removing the hydraulic motor and pump assembly from the internal cabinet of the bandsaw, the bandsaw must have its oil drained.

Locate the drain plug found in the rear machine as shown in the image.

Use a large container to temporarily hold the oil during the installation.

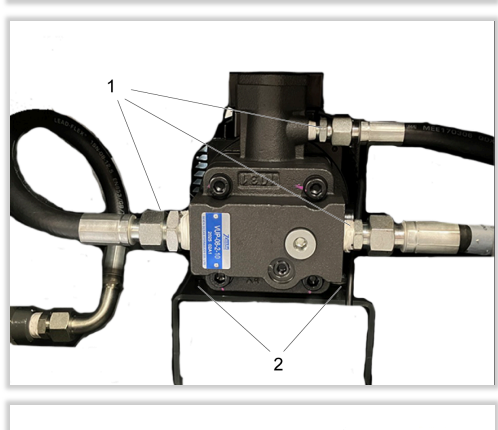

2

Remove each of the three fluid lines **[1]** that are attached to the hydraulic pump.

Note: Cover the open fluid lines to block each line from contamination.

Using a 7mm wrench, unbolt the hydraulic motor from the mount **[2].**

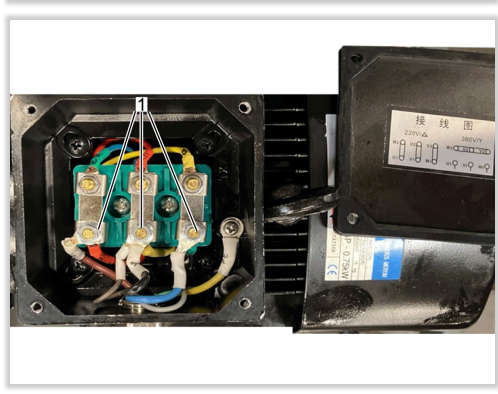

3

Disconnect the incoming power cables from inside the motor junction box **[1].**

Note: Be sure to note the correct location of each wire, as this information will be necessary for the installation.

Hydraulic Motor Installation

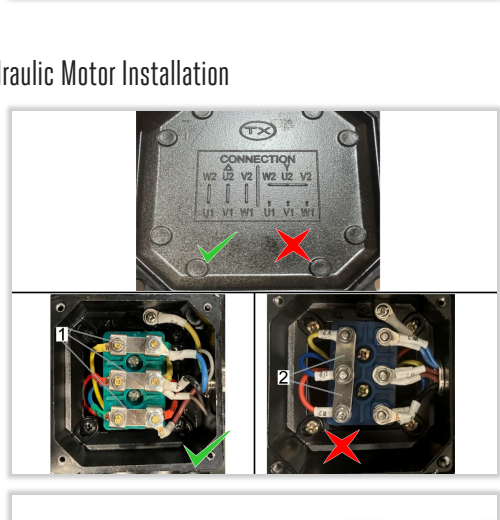

1

Before connecting the motor to the power cable, remove the J-box cover and verify that the motor windings are configured correctly.

On the J-Box cover, there is a diagram showing the Wye and Delta configurations for the motor.

Verify that the motor is setup in the Delta Configuration, with the terminals bridged straight across [1].

Note: If the motor is in a Wye configuration [2], reconfigure it so that the windings are bridged straight across as shown by [1] in the image.

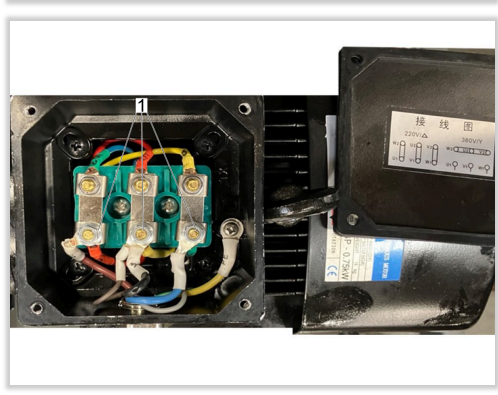

2

Reconnect the incoming power cables from inside the motor junction box **[1].**

Note: Use the chart below to match the incoming cables to their respective phase.

W2	U2	V2
U3	V3	W3
U1	V1	W1

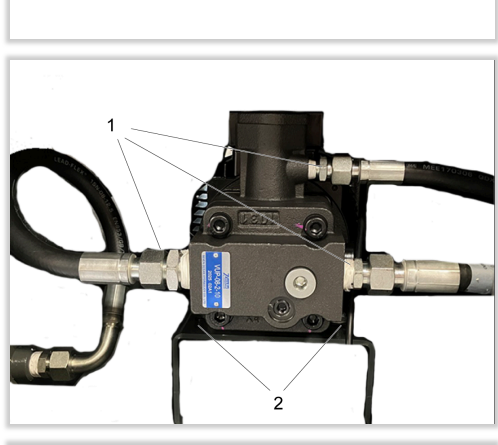

3

Reinstall the three fluid lines **[1]** that should be attached to the hydraulic pump.

Reinstall the removed hardware **[2]** to mount the motor on the motor bracket.

Refill the band saw with the oil that was removed.

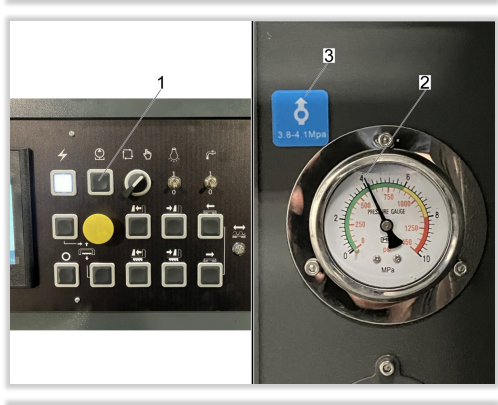

4

After oil is added back into the saw, power on the saw so that you can turn on the pump with the push button **[1].**

Start by turning the pump **[ON]** for 3 seconds then turning it **[OFF]**. Repeat this cycle a few times to ensure the pump is able to circulate fluid through the system.

Note: You should start to see pressure build on the main pressure gauge **[2].**

Check to see if the pressure shown on the main gauge is within the correct operating range. The operating range is **3.8 - 4.1MPA** as shown on the decal **[3].** The next step shows how to adjust the pressure of the pump.

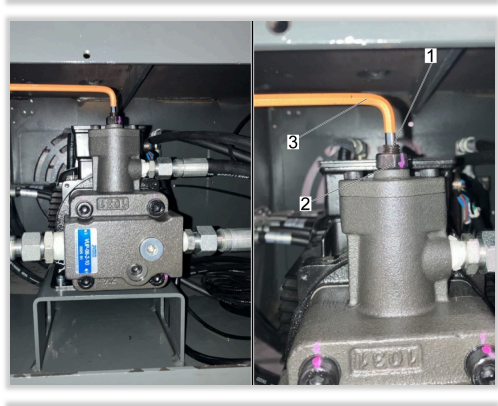

5

To adjust the pressure, tighten/loosen the pressure relief set screw **[1]** until the operating pressure is between **3.8 - 4.1 MPA.**

Break loose the locknut **[2]** so that the set screw can be adjusted.

To increase the operating pressure, tighten the set screw **[1]** with an 5mm Allen key **[3]**. To decrease the operating pressure, loosen the set screw.

Note: Make small adjustments and give a few seconds in between each adjustment so that the system has time to build to the new operating pressure.

Once you have the operating pressure in the correct range, turn off the pump and allow it to sit for 30-60 seconds. Then power the pump back up to verify that the pressure builds to the same MPA it was set at.

Tighten the locknut **[2]** to hold the set screw in position.

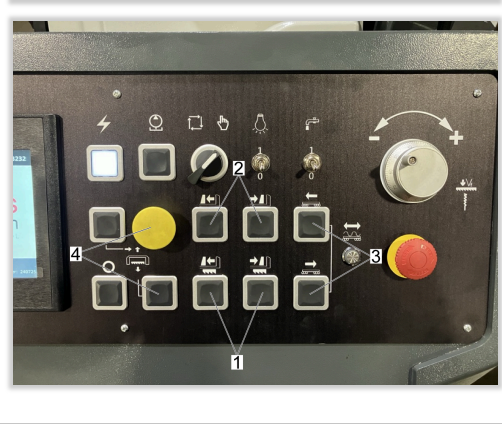

6

Once the pressure is set, switch to manual mode and incrementally exercise all the hydraulic cylinders. This includes the:

1. Front Vise
2. Back Vise
3. Shuttle Material
4. Saw Frame Raise

Note: While exercising these cylinders, the pump may make irregular noises. When it does this, allow the pump to sit for a few seconds, then continue exercising the cylinder.

5.6 HAB V1 SERVICE PARTS LIST

HAB Version 1 - Service Parts List

Under Construction

Revision A - 2/2026

Electrical Cabinet Service Parts

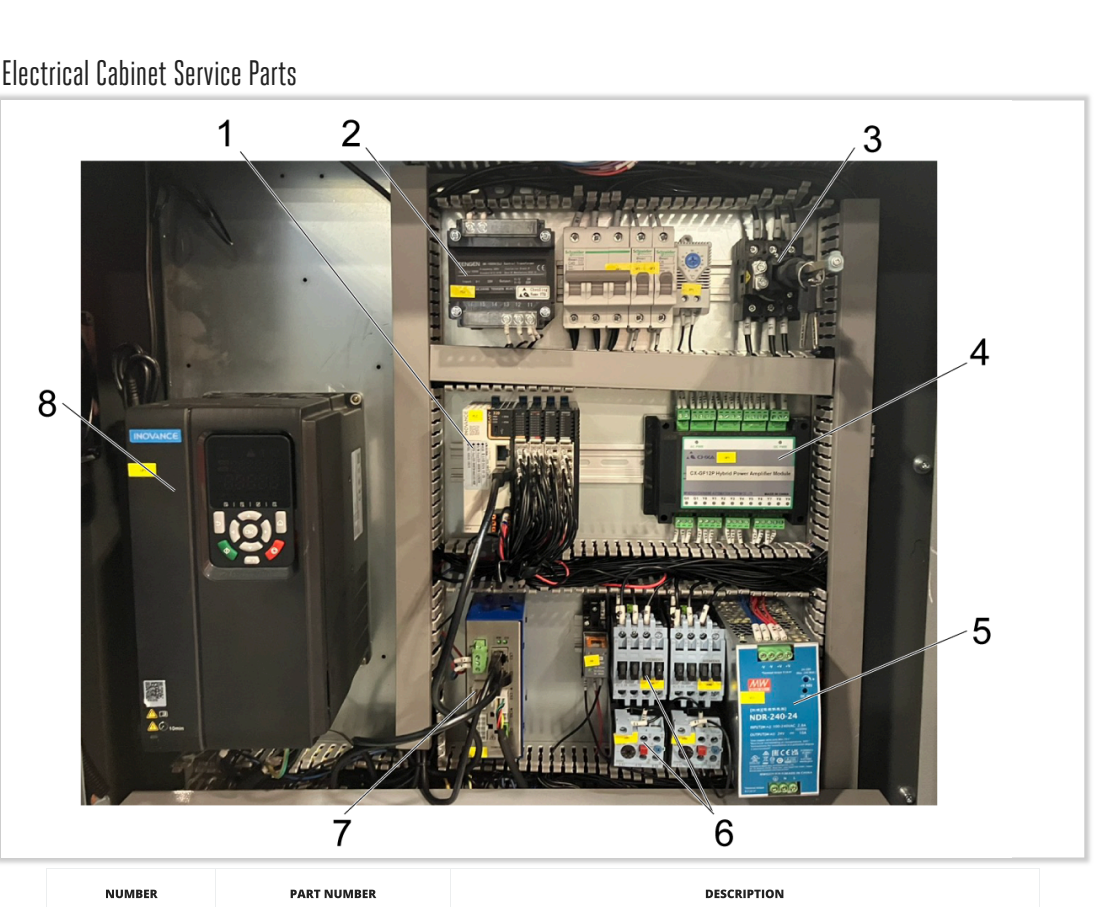

NUMBER	PART NUMBER	DESCRIPTION
1	93-5555	PLC HAB-3232
2	93-5299	TRANSFORMER HAB-3232
3	93-4857	POWER ON/OFF SWITCH HAB-3232
4	93-5297	POWER AMPLIFICATION MODULE HAB 3232
5	93-5298	POWER SUPPLY HAB-3232 V1/V2
6	93-5692	THERMAL RELAY, OIL PUMP HAB-3232
7	93-5672	COMPUTER CONTROLLER HAB-3232
8	93-5045	VFD PROGRAMMED REPLACEMENT KIT HAB-3232