STATION 3 (PRESENTATION) MANUAL

Software/Devices:

1. Projectors
2. TVs
3. XPS CPU (the computer itself)
4. Crestron
5. PowerPoint
6. Announcement
7. ProPresenter

Station Definition

This Station oversees in-house streaming items. The following are list of things we do:

Announcements (editing), Sermon Presentations, video presentations, music, screen switches (Crestron most important). The list of software/devices listed above is organized as they are to be worked upon.

TVs

Minus the TVs in the newly constructed rooms, there are 3 TVs (4 once the Technical Department station has been enclosed) in the main auditorium technical location. The 2 side audience screen, the Stage screen (mainly used by the choir) and the Screen by the streaming station. The Stage Screen will be discussed separately.

Projector (Main Screen)


Projector/TV (Stage Screen)

XPS CPU (the computer itself)


This is the main Powerhouse for the Station; we have a problem when this computer is not functioning as it should. Follow the steps for running the computer.


1. Turn on the computer using the power button. Never use the power button to shut down the computer unless forced to reset (especially when frozen).

2. There is a 4-digit PIN required to sign in to the church's profile. If you do not know the PIN by now, please reach out to Peace (403-891-5626) or TL Dami (587-998-0147) via text or WhatsApp.
3. Once the system is loaded, you'll need to open both Google Chrome and Propresenter. They are the 2 most frequently used software, for now.
4. Google Chrome:- With Chrome, you'll need to open the following 3 tabs: Gmail, Google Drive, and Youtube.
    a. Gmail: This is where you'll need to get the updated announcements (that need to be edited and presented during service), list of Songs (table of order) and sometimes the sermon or links to a video (that needs to be played during or before the sermon).
    b. Google Drive: We have multiple 'Shared Files' on the Drive where we can get documents as needed. I.e., Tech Protocols, Church Sermons, Choir and Video documents etc. Church sermon is where you'd find most of the sermons for the minister who's preaching on said giving day. Here, you'll also find another document called 'Sermon Template', the template is fixed to fit the main screen projector (as perfectly as possible). *** **Do Not Tamper With The Template, Instead Download The Template And Edit From There** *** The most important documents have been Starred, so look for the document called Starred, as shown in the image.

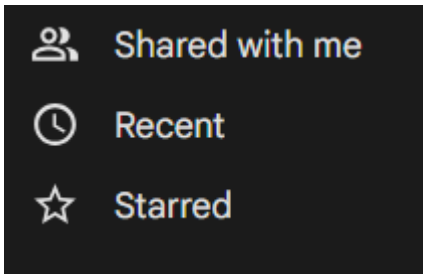



    c. Youtube: Once the Sermon has been Downloaded and it's ready to be uploaded on the propresenter, you can work on making the Thumbnail for the day. Once that's completed, you'll go on YouTube, click on +Create, and then click on Go Live. Click on the Edit button, and you'll update the Title, Descriptions and Upload the Thumbnail. The Steps are as follows:

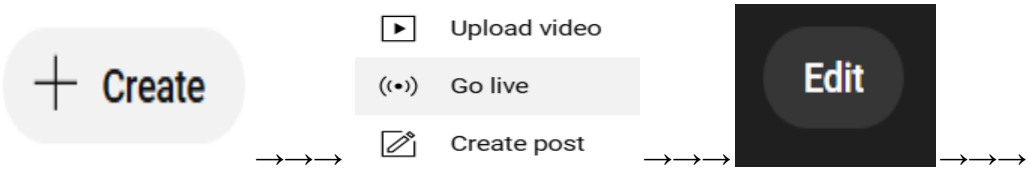


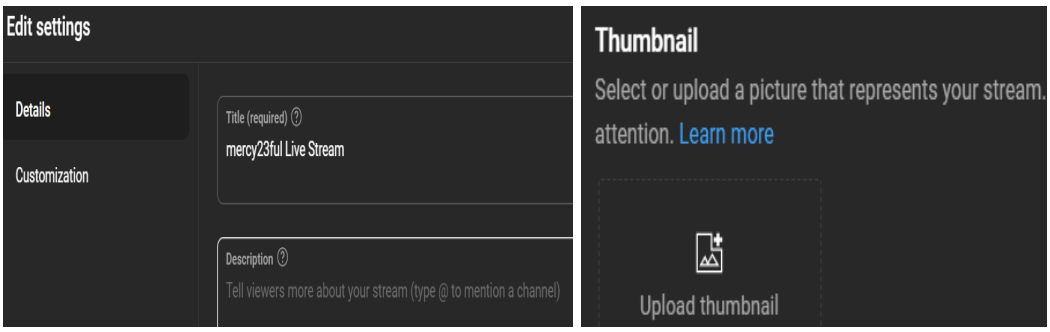

5. Audio Troubleshooting:- While YouTube is open, it is a best practice to test the Audio coming from the computer. Search for music to play (as the Holy Spirit Leads you), check the computer and make sure you're not muted as well as on the sound mixer, then go ahead with playing the music. Sometimes, you'll notice that the sound is not working. Do Not Panic (not yet, at least) just follow the next steps in fixing the issue.
    a. Go to the Start button (Windows Picture)
    b. Search for **Device Manager** (control panel) and click on it
    c. Scroll down till you find the option '**Sound, video and game controllers**,' and click on the arrow
    d. Locate the **Realtek(R) Audio** Option, double click on it
    e. Go to the Driver page
    f. Click on Update Driver. This is to see if the Driver is updated.
    g. If the Driver is up-to-date, click on '**Roll Back Driver**'
    h. Once the previous step is done, Restart the Computer
    i. Open YouTube and test the Audio again.
    j. if the audio still isn't working, **repeat steps A - F** (and update the driver)
    k. Then **repeat steps H & I**, the Audio should be working again
    l. When all fails, contact Peace or Dami.
    The steps in images are as follows:

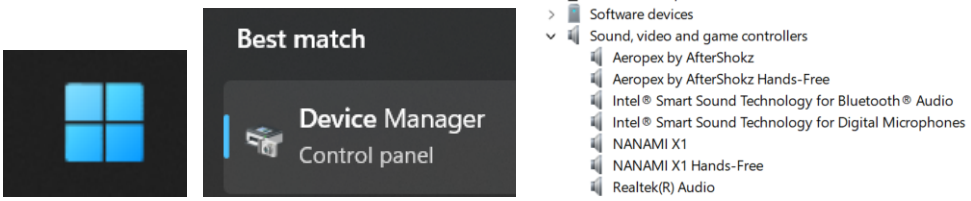

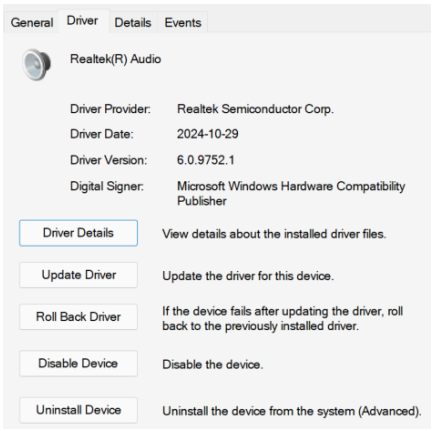

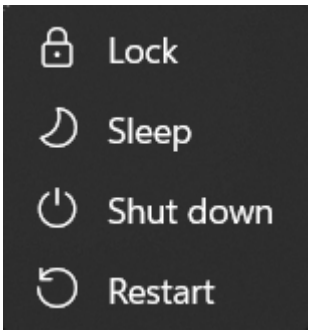

6. Display Settings Troubleshooting

XPS CPU Display Troubleshooting Guide

If you routed the Crestron switch correctly but a screen is black, frozen, displaying the wrong resolution, or missing a signal, follow these steps in order.

Step 1: Quick Keyboard Fixes (Try These First)

1. **Restart Windows Graphics Driver (Fastest Fix)**
    - Press **Win** + **Ctrl** + **Shift** + **B** on the keyboard.
    - *What happens:* The screen will flicker, you will hear a short beep, and Windows will reload the graphics driver. This re-forces the video signal to the Crestron matrix.
2. **Verify Windows Display Mode**
    - Press **Win** + **P**.
    - Ensure **Extend** is selected in the side menu (never select "Duplicate" or "PC screen only").

Step 2: Re-Detect Displays in Windows Settings

If Windows "lost connection" to one of the Crestron input ports:

1. Right-click anywhere on the Windows Desktop and select **Display Settings**.
2. Look at the display diagram at the top. If a screen is missing:
    - Scroll down to **Multiple displays** and click **Detect**.
3. **Check Display Resolutions:**
    - Select the missing display box in the diagram.
    - Ensure **Display resolution** is set to **1920 x 1080** and the refresh rate is **60 Hz**.
    - *Note: The Crestron DM-MD6X6 matrix can lose signal if the computer sends non-standard resolutions or refresh rates (like 59Hz or 4K).*

Step 3: Check ProPresenter Screen Assignments

If Windows sees the display, but ProPresenter isn't sending slides/announcements:


1. **Check Output Toggle:**
    - Look at the top-right corner of ProPresenter. Ensure the **Screens** icon is toggled **ON** (Green light).
2. **Re-assign Target Screens:**
    - Click **Screens** in the menu bar $\rightarrow$ **Configure Screens...**
    - Check **Input #1 (Announcements)** and **Input #2 (Presentation)**.
    - Make sure each target is mapped to the correct physical display output (hover over the display box to identify which monitor matches which Crestron input).

Step 4: Physical Connection & Cable Check

If the software checks fail:

1. Check the back of the **XPS CPU tower**.
2. Gently push in all display cables (HDMI or DisplayPort adapters) connected to the graphics card.

3. If using USB-C / DisplayPort adapters on the back of the PC, **unplug the adapter for 5 seconds and plug it back in** to force a fresh connection ("handshake") with the Crestron switcher.

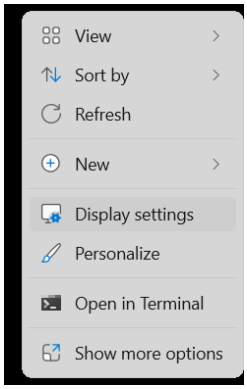

7. We will talk about **CRESTRON** and **PROPRESENTER** in detail Later.

Crestron

Video System Routing Manual: Crestron DM-MD6X6

System Overview

Our video system uses a Crestron matrix switcher to route video signals from our computers (ProPresenter and the ATEM stream) to our three main screens in the room. Even though the device can handle up to six inputs and outputs, we currently use three of each.

1. Connection Map

If you need to verify cables or understand where a feed is coming from, reference this map.

Inputs (Where the video comes FROM):

Input Port	Source	Description
Input 1	ProPresenter	Announcement Destination Target

Input 2	ProPresenter	Presentation Destination Target
Input 3	Streaming Computer	ATEM Mini Extreme ISO

Outputs (Where the video goes TO):

Output Port	Destination
Output 2	Middle Screen (Projector)
Output 3	Right TV Screen
Output 6	Left TV Screen

2. Sunday Service Run Sheet

Use this routing guide to ensure the correct visuals are on the correct screens during each segment of the Sunday main service.

Service Segment	Middle Projector (Out 2)	Left TV (Out 6)	Right TV (Out 3)
Praise & Worship	**Input 2** *(ProP Presentation)*	**Input 3** *(ATEM Stream)*	**Input 3** *(ATEM Stream)*

Announcements	**Input 2** *(Welcome Logo)*	**Input 1** *(ProP Announcements)*	**Input 1** *(ProP Announcements)*
Sermon (Standard)	**Input 2** *(ProP Presentation)*	**Input 3** *(ATEM Camera Feed)*	**Input 3** *(ATEM Camera Feed)*
Sermon (Split Option)	**Input 2** *(ProP Presentation)*	**Input 1** *(ProP Thumbnail)*	**Input 3** *(ATEM Camera Feed)*


3. Troubleshooting Blank Screens

If you have routed the inputs correctly but one or more screens are blank or not working, the issue is likely with the computer sending the signal rather than the Crestron matrix itself.

- **Fix:** You will need to check the computer display settings.
- **Reference:** Please view the section on the **XPS CPU for Display Troubleshooting** in your technical documentation to reset or detect the displays.

PowerPoint

Most sermons or main presentations are through Microsoft PowerPoint on Station #3. You'll notice that when you go to other stations and try to use Microsoft PowerPoint, it doesn't work. Due to obstruction from the recent Vent completed, we would have to Adapt the PowerPoint Presentation accordingly or until the Projector is moved forward. The following image below is the Slide template custom size for each presentation; you can download the template from Sermon Template located in Church Sermons on Google Drive.

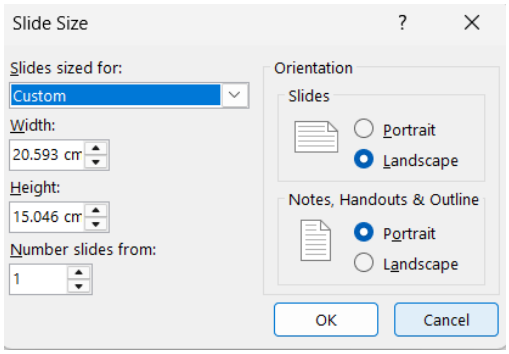


NOTE**** To show presentations on the main screen in the middle, you'd have to go to Input 2 → Output 2 on Crestron (View Crestron Tab for further information).

Once the Slides have been downloaded and formatted accordingly, follow the steps to prepare for church service.

1. Create a Thumbnail from the PowerPoint to use on our YouTube Streaming Page for said Service Streaming. If you require help with creating a thumbnail, do not hesitate to ask for assistance.
2. Edit the presentation accordingly. Check with the Minister preaching for the said day before saving the edited copy; some ministers prefer their presentations not to be tampered with.
    a. Clean up the slides and try to make them readable for the congregations. This is part of the editing process. For example, the slide below can be split into 2 different slides, and the text font size increased.




3. Once editing is completed, the next step is to verify (with TL Dami or Peace) that it's ready to be uploaded. We need to confirm it fits the standard we are looking for (or even surpasses it).
4. Now you're ready to upload your hard work on propresenter. Follow these steps listed via images:

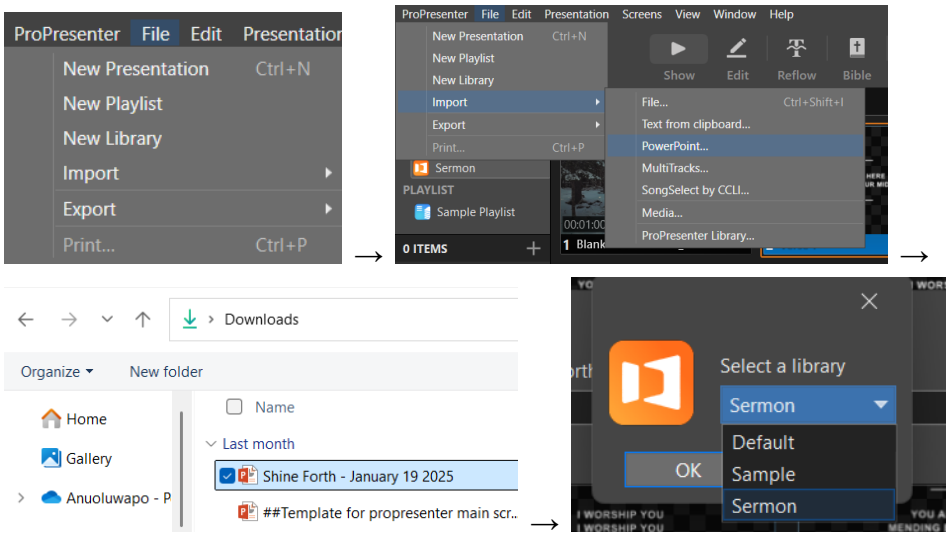


5. Always download each presentation to its appropriate library folder.
6. Once that is completed
    a. locate the imported document
    b. right-click on the document
    c. click on ‘add to’
    d. choose the appropriate Playlist for the day
    e. thereafter, organize said playlist to your liking.
7. For further explanation with regards to utilizing ProPresenter, view the appropriate ‘TAB’


Announcement


ProPresenter

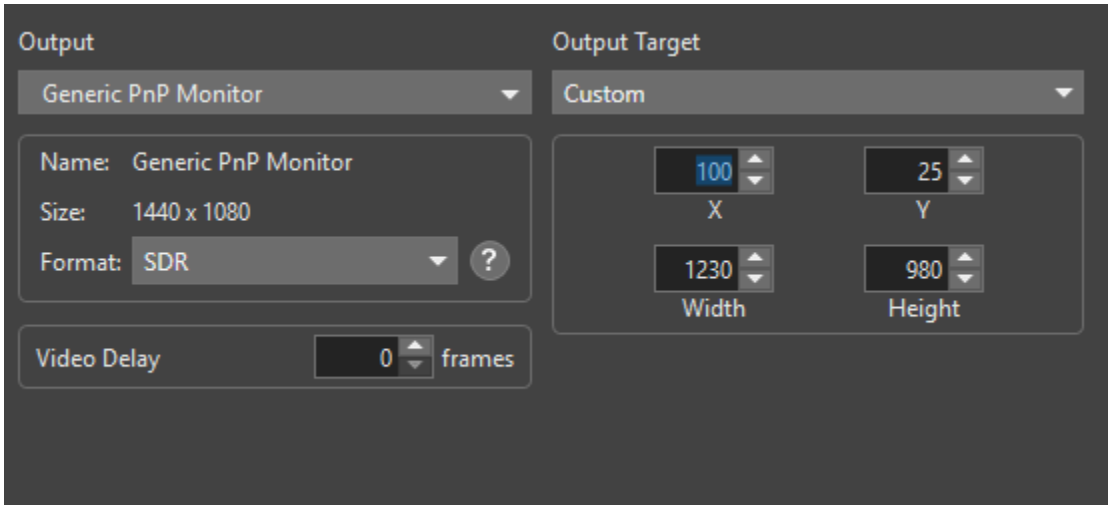


or

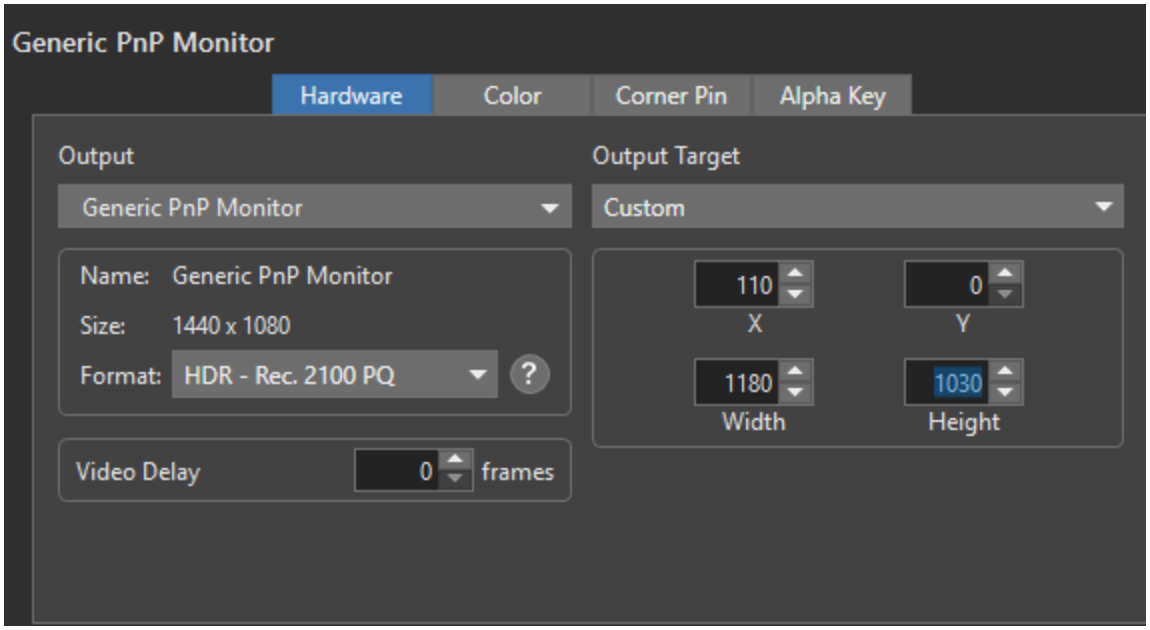
Generic PnP Monitor
Hardware
Color
Corner Pin
Alpha Key
Output
Generic PnP Monitor
Name: Generic PnP Monitor
Size: 1440 x 1080
Format: HDR - Rec. 2100 PQ
Video Delay
0
frames
Output Target
Custom
110
X
0
Y
1180
Width
1030
Height

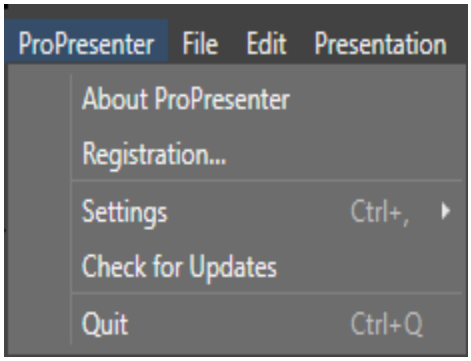
ProPresenter
File
Edit
Presentation
About ProPresenter
Registration...
Settings
Ctrl+,
Check for Updates
Quit
Ctrl+Q

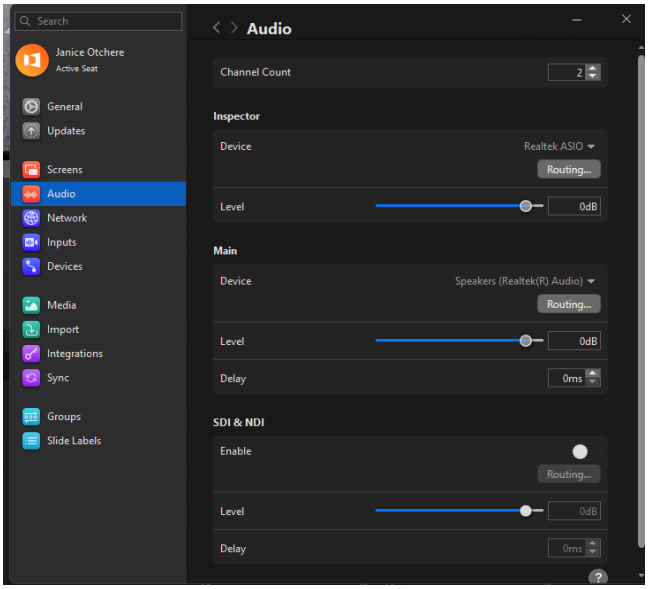
Search
Janice Otchere
Active Seat
General
Updates
Screens
Audio
Network
Inputs
Devices
Media
Import
Integrations
Sync
Groups
Slide Labels
Audio
Channel Count
Inspector
Device
Realtek ASIO
Routing...
Level
0dB
Main
Device
Speakers (Realtek(R) Audio)
Routing...
Level
0dB
Delay
0ms
SDI & NDI
Enable
Routing...
Level
0dB
Delay
0ms

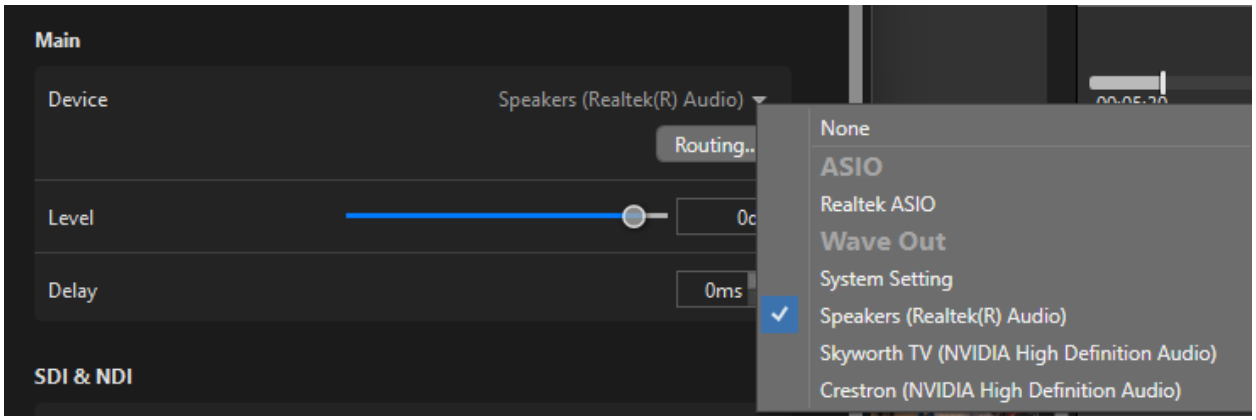
Main
Device
Speakers (Realtek(R) Audio)
Routing...
Level
Delay
0ms
SDI & NDI
None
ASIO
Realtek ASIO
Wave Out
System Setting
Speakers (Realtek(R) Audio)
Skyworth TV (NVIDIA High Definition Audio)
Crestron (NVIDIA High Definition Audio)

Adding Video camera to propresenter through NDI

To add NDI video in ProPresenter 7, you must first download and install the NDI Tools from NewTek on your system, as NDI is a software-based technology. Then, within ProPresenter's preferences, go to the Screen Configuration and add a new screen output as an NDI output. Next, in the Media Bin, click the "Add" button and choose "Video Input," then select your NDI source from the device dropdown to display it as a live camera feed within ProPresenter.

Step-by-Step Guide

1. **Install NDI Tools**: Download and install the latest NDI Tools from the NewTek website. This suite includes utilities like NDI Scan Converter and Studio Monitor, which are essential for NDI functionality.
2. **Open ProPresenter Preferences**: Launch ProPresenter 7 and open its Preferences or Settings menu.
3. **Go to Screen Configuration**: Navigate to the "Screens" or "Screen Configuration" section.
4. **Add a New Output**: Click the "+" button to add a new screen or output and select NDI as the type of output.
5. **Configure NDI Output**: Give your NDI output a name, set the desired resolution (e.g., 1080p 30), and click "OK" to save it. This will make the content you display in ProPresenter available as an NDI stream on your network.
6. **Add NDI as Video Input**: In the ProPresenter Media Bin (the bottom-left section), click the + button under the "Video" tab to create a new video input.
7. **Select Your NDI Device**: A device dropdown will appear. Select the NDI input source you created in the previous steps from the list. You will see a preview of the input.
8. **Place NDI Input on Output**: Once selected, the NDI video source will appear in your ProPresenter output, ready to be used.

Important Considerations

Network Connectivity:

Ensure both the computer running ProPresenter and the NDI source are on the same local area network for NDI to work.

Alpha Key Settings:

If you are sending graphics from ProPresenter into another application (like OBS) via NDI, you may need to enable the alpha key setting in the NDI output configuration for transparency.

CCL

username: mizmaryyusuf@gmail.com

pa: Peaches1