Rotary Drum Dryer User Manual

Model: GDZ10-103H
GDZ08-102H
GDZ06-101H
GDZ05-100H

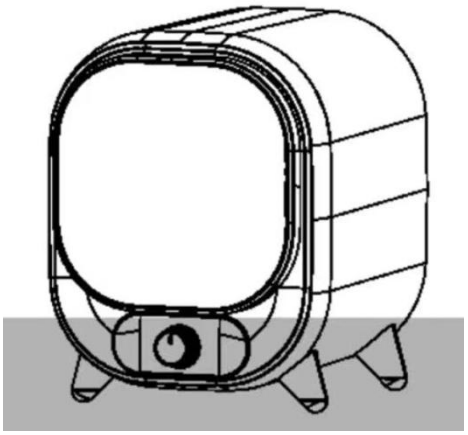


Table of Contents

Precautions before Use----------1
Routine Maintenance----------2
Common Troubleshooting----------4

Thank you very much for choosing our rotary drum dryer. Please read and understand your appliance carefully before use, so that it can serve you attentively and durably.

Precautions before Use (Very Important)

Electrical Safety

1. Please plug the power cord into a dedicated socket with a 220V AC power supply and a current of 10A or above. The grounding wire of the socket must be reliably grounded. It is recommended to use a residual current device.
2. Before use, remove the fixed cotton inside the drum.
3. Do not place flammable and volatile substances such as gasoline or alcohol near the dryer during operation to prevent fire.
4. Do not install the dryer in a damp or rain-prone area like the bathroom to avoid electrical accidents such as electric shock or short circuit.
5. When the dryer is in normal use, the power cord plug should be easily inserted and removed. When there is a power outage, moving, not in use, or cleaning, always unplug the power cord plug. Do not plug or unplug the plug with wet hands.
6. If the power cord is damaged, to avoid danger, it must be replaced by a professional from the manufacturer, authorized repair department, or similar entity.
7. It is strictly prohibited to operate the dryer on packaging foam. This may cause fire due to poor heat dissipation or other external factors.
8. When the drum interior or the exterior of the dryer is dirty, wipe it with a soft damp cloth. Do not directly rinse with water or use volatile substances such as alcohol or gasoline to wipe.
9. The drum dryer cannot be used if chemical agents are used to clean clothes.
10. Do not stack cotton or any materials around the drum dryer. Sufficient ventilation must be provided to prevent the flow of gas emitted from the appliance into the surrounding area, including open flames.
12. It is prohibited to exhaust air into the flue of an appliance used for burning gas or other materials.
13. Do not cover the air outlet with towels, clothes, etc. Be careful as it may be hot.

Requirements for Use

1. Clothes must be thoroughly dehydrated before being placed in the dryer. (Clothes that are hand wrung may still have a significant amount of water, which can cause leakage and increase drying time. It should be avoided.)
2. Before drying, carefully check the pockets of clothes for flammable items such as lighters or matches, as well as sharp metal objects like coins, hairpins, paperclips, or keys.
3. Fasten zippers, buttons, etc., and turn clothes inside out before drying. (This reduces collisions with the drum and minimizes noise.)
4. Clothes labeled with "dry clean only" or "do not wash" should not be dried in the dryer.
5. Do not use the dryer for drying wool fabrics, woolen sweaters, or leather materials, as they may be damaged or shrink.
6. After each use, clean the lint filter on the air intake and the lint on the air outlet filter cotton.
7. It is best to dry clothes of similar or the same fabric together.
8. Do not dry the following types of clothes: those that cannot be tumble dried, those that should be hung or drip-dried, those that should be laid flat to dry, or those that should be dried in the shade.
9. This product is specifically designed for underwear.


Routine Maintenance

1. Air Intake Filter

1) Push up the middle of the outer side of the air intake filter cover and remove it by pulling it out.

2) Use a soft brush or vacuum cleaner to clean off any dust or debris attached to the filter. It is recommended to clean the filter once a month.

3) Reinstall the filter back onto the appliance.

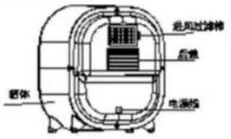


2. Cleaning the Appliance

Use a damp, soft cloth to wipe clean the interior of the drum and the exterior of the dryer, including the air outlet. If there are stubborn stains or dirt, you can use a small amount of kitchen cleaner to wipe it off and then wipe it clean with a dry cloth.

Note:

Do not use diluents, gasoline, or alcohol to clean the appliance.

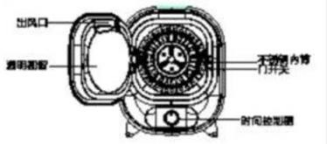


The names and contents of hazardous substances in the product.

Component name	Harmful substances					
	Lead (Pb)	Mercury (Hg)	radiation (Od)	Hexavalent Chromium (Or(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Enclosure internal components	O	O	O	O	O	O
Electrical components	X	O	X	O	O	O
Power cord and connecting cables	O	O	O	O	O	O
This table is prepared in accordance with the requirements of SJ/T 11364. O: Indicates that the content of the hazardous substance in all homogeneous materials of the component complies with the limits specified in GB/T 26572. X: Indicates that the content of the hazardous substance exceeds the limits specified in GB/T 26572 in at least one homogeneous material of the component. All components marked with "X" comply with the EU RoHS Directive, as it is currently not feasible to replace the hazardous substances due to limitations in global technological development.						

The "environmental use period" of this product is 15 years, which is determined by our company based on the product design characteristics. The "environmental use period" is only valid when this product is used under normal conditions as described in the product instruction manual.

Control Panel Instructions

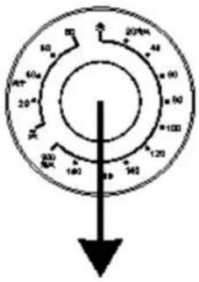


Drying Program Selection

There are 5 drying programs available: Cool Air, Wrinkle Removal, Warm Air, Hot Air, and Air Dry.

Air Dry: When this function is activated, cool air is primarily used to remove odors from the clothes, such as those caused by prolonged storage.

Off: When the knob pointer is set to "Off," the power to the dryer is turned off. Once the pointer is set to the desired drying program, the dryer will start operating.

Off: When the knob pointer is set to "Off," the power to the dryer is turned off. Once the pointer is set to the desired drying program, the dryer will start operating.

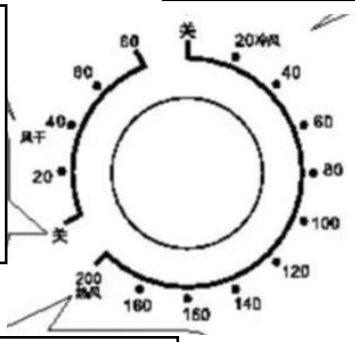

Cool Air: This function is used in the last 20 minutes of the drying program. It uses cool air instead of hot air to cool down the freshly dried clothes, making it easier for the user to remove them.

Hot Air: For fabrics like shirts and linen, the recommended drying time is usually 60-90 minutes. After the dryer stops running, the clothes may still be slightly damp, making it easier for ironing. If the clothes are made of cotton and there is a large quantity, it is recommended to select 180-200 minutes.

Common Troubleshooting

If your dryer experiences a malfunction, please disconnect the power cord from the power source before conducting any inspections. In some cases, the following situations may not be a malfunction. Before seeking repairs, please double-check. If it is indeed a malfunction, please contact our company's nationwide service hotline or our after-sales service department. Do not attempt to repair it yourself.

Abnormal Phenomenon	Causes of the Abnormality	Methods of Handling
Dryer doesn't start	● Is there a power outage or circuit breaker tripped? ● Is the power supply connection securely fastened? ● Is the load of drying clothes exceeding the limit? ● Is the temperature controller disconnected?	● Use the dryer after power is restored. ● Check the power supply connection to ensure it is securely fastened. ● Clothes must be properly dehydrated before loading, and if there are too many clothes, please dry them in batches. ● Please have a technician replace the temperature controller.
Dryer feels hot on the outside or emits a burning smell	● The filter screen of the air inlet is clogged with lint. ● The air outlet or exhaust duct is blocked.	● Clean the lint filter screen before and after each use. ● Clear any blockages.
Clothes are not drying	● Clothes are packed too tightly inside the machine. ● The filter is clogged, affecting airflow. ● Clothes are too tangled and tightly packed. ● The machine is installed in a narrow and poorly ventilated area.	● Dry clothes in multiple cycles. ● Regularly clean the air inlet and outlet filters. ● Shake and separate the clothes before drying them again. ● Reposition the machine in a better location.
Excessive wrinkles on clothes	● Clothes are packed too tightly inside the machine. ● Clothes are not promptly removed after the cycle ends. ● Clothes are not sorted properly. ● Temperature is set too high.	● Avoid overpacking clothes. ● Remove clothes promptly after the cycle ends. ● Dry clothes after sorting them properly. ● Follow the maintenance instructions on the clothing labels.

Clothing shrinkage	● Over-drying	● Follow the maintenance label instructions on the clothing. If the clothing is prone to shrinkage, check it frequently during drying. Remove the clothing when it is still slightly damp to avoid over-drying, and then hang or lay it flat to fully dry.

Rated Input Power	450W	Rated Drying Capacity	0.8kg
Rated Voltage	220V~	Rated Frequency	50Hz

"Rated Input Power: 450W
Rated Drying Capacity: 0.8kg
Rated Voltage: 220V~
Rated Frequency: 50Hz"

Circuit diagram

1: Power switch
2: Timer
3: Temperature controller
4: Capacitor
5: Heating element
6: Motor
7: Transformer circuit
8: Fan
9: Blue light

