

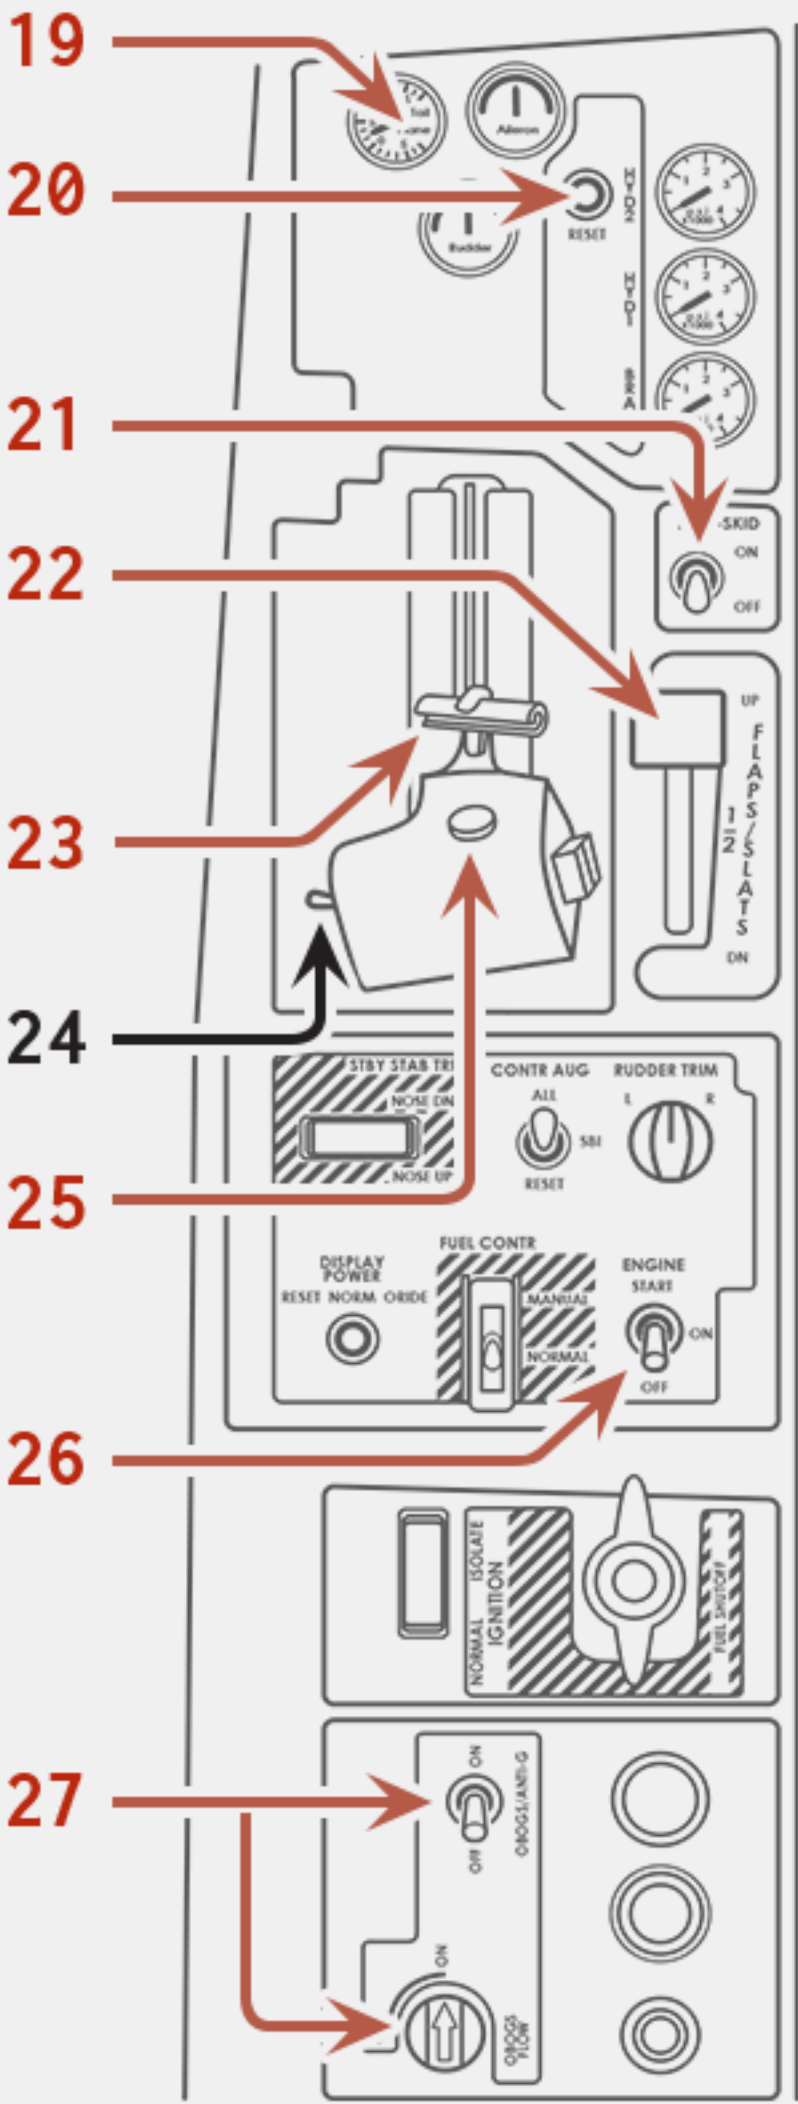


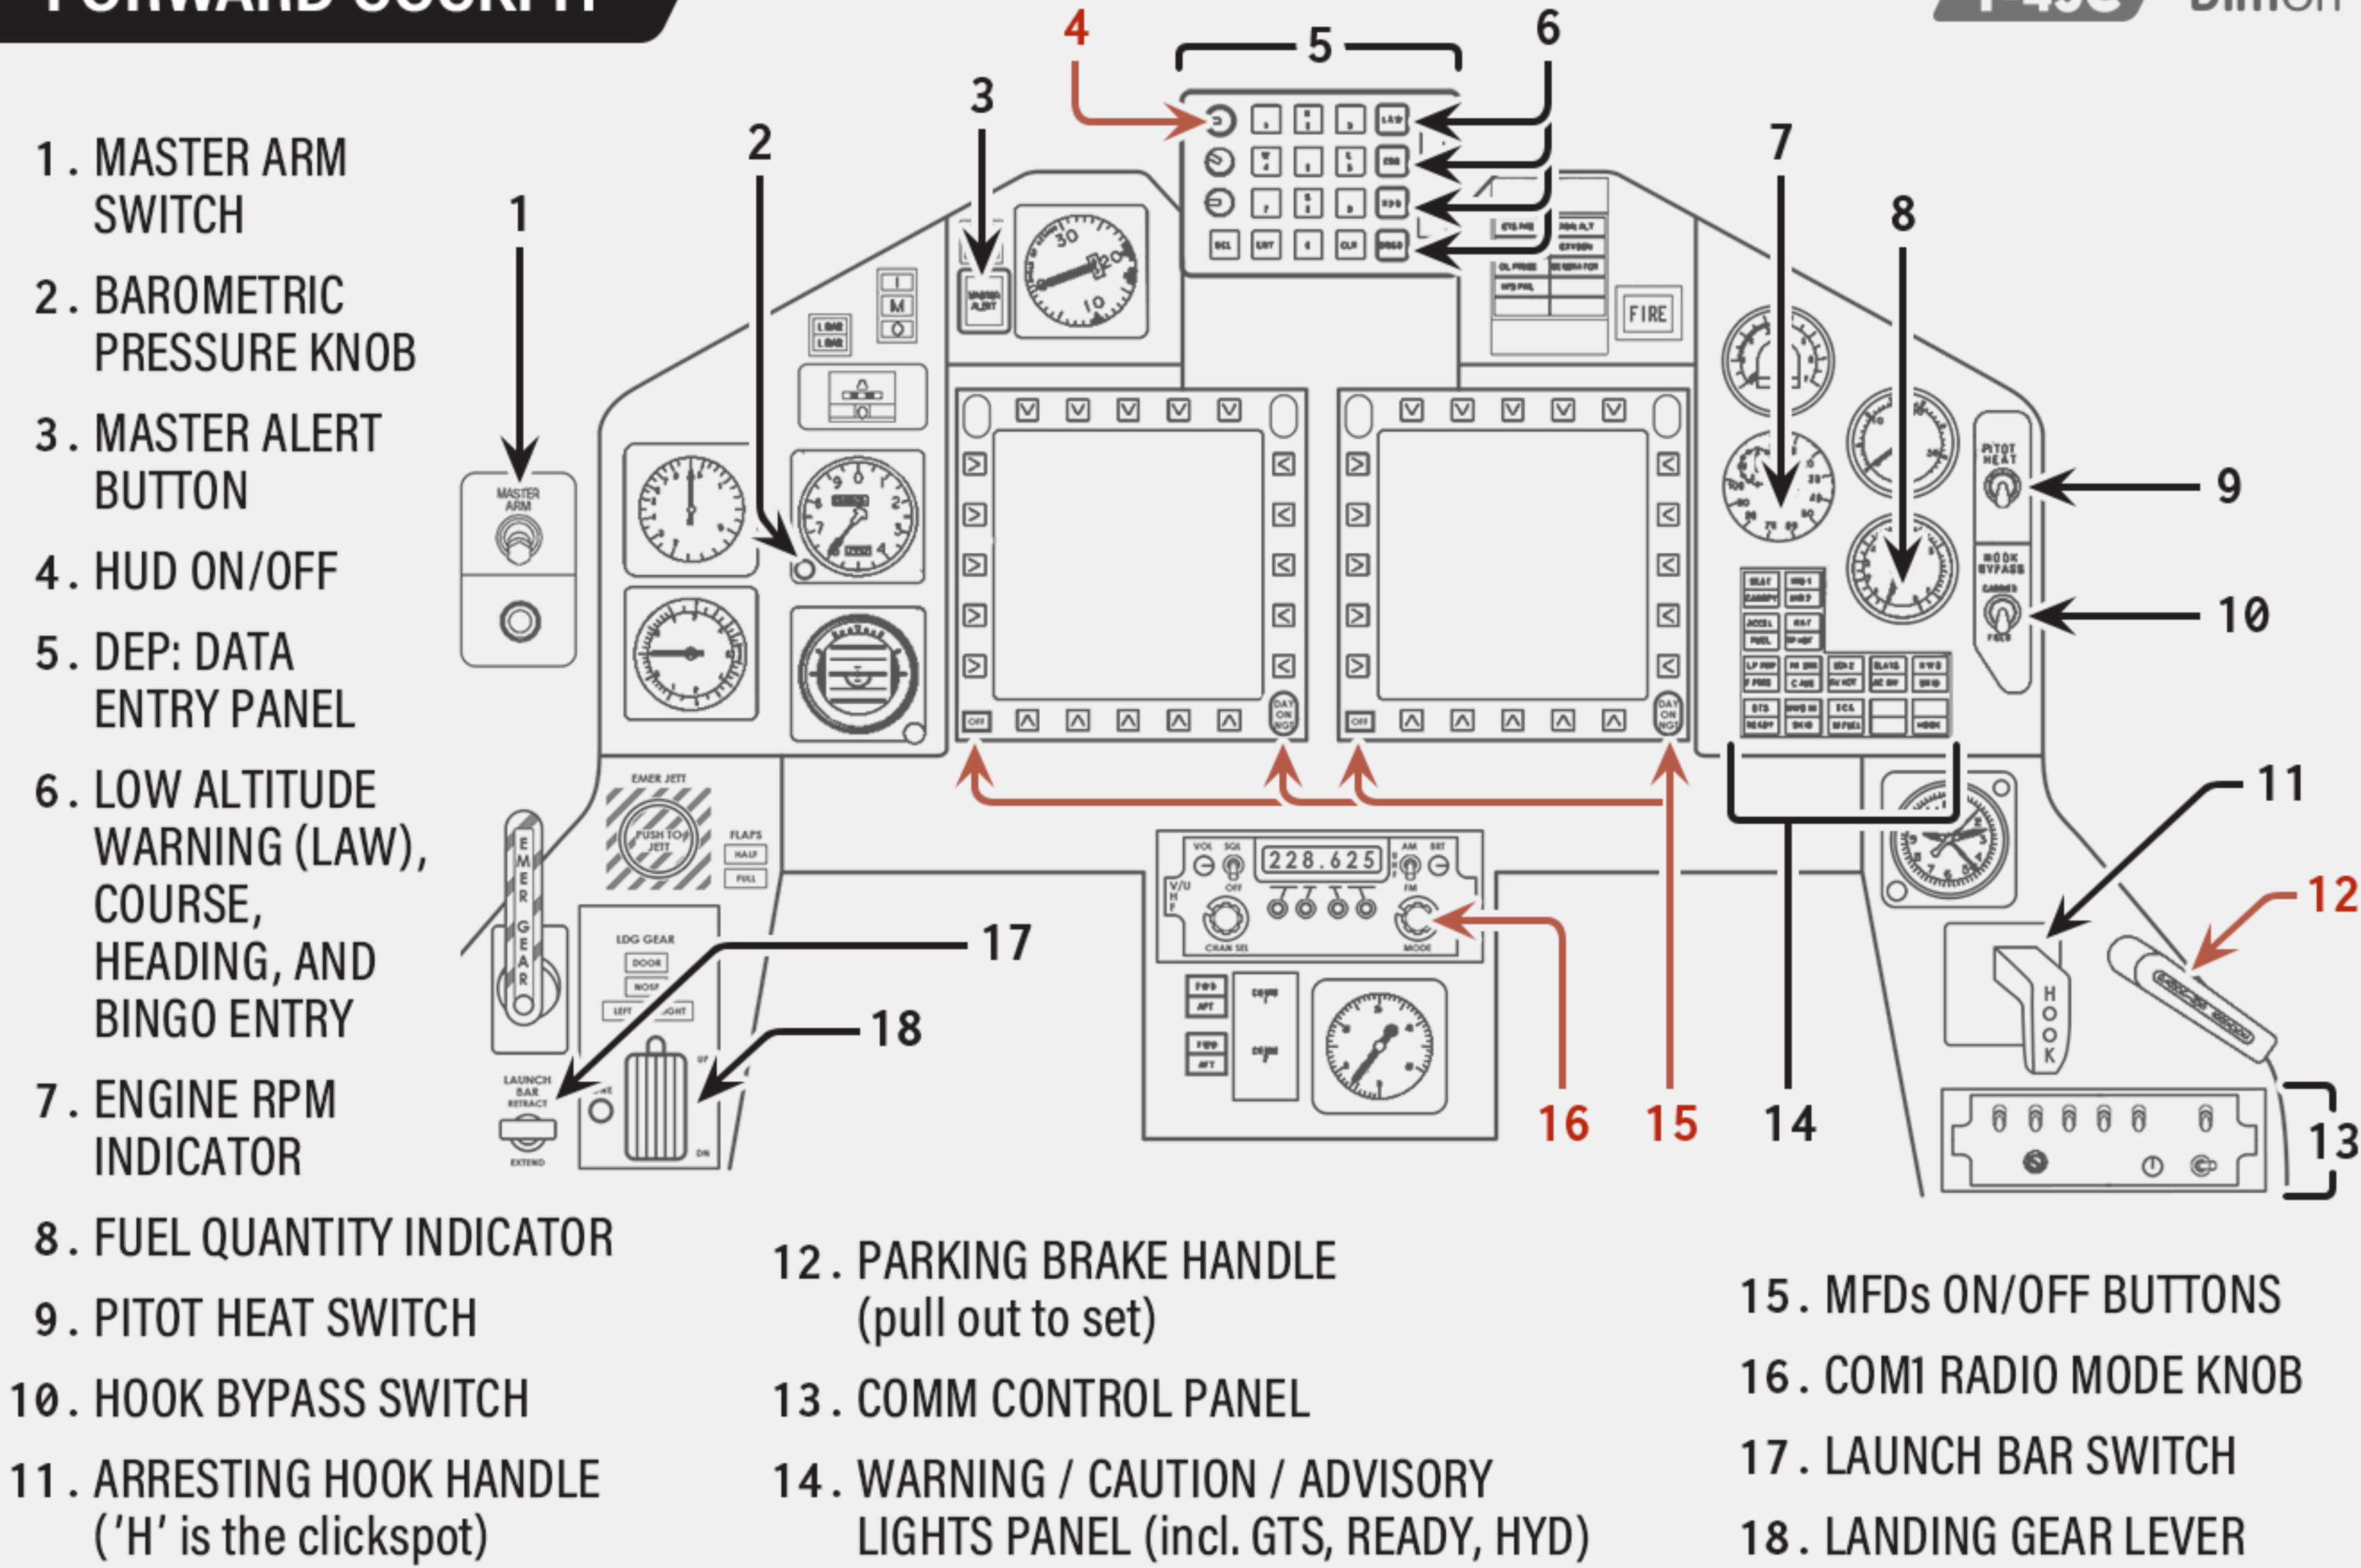

- LEFT CONSOLE**
- 19. STABILATOR POSITION INDICATOR (for pitch trim)
 - 20. HYD 2 RESET BUTTON
 - 21. ANTI-SKID SWITCH
 - 22. FLAP LEVER
 - 23. THROTTLE FINGER LIFT
 - 24. EXTERIOR LIGHTS MASTER SWITCH
 - 25. GTS START BUTTON
 - 26. ENGINE SWITCH
 - 27. OBOGS/ANTI-G SWITCH, OBOGS FLOW KNOB

- RIGHT CONSOLE**
- 28. VOR/ILS CONTROL PANEL
 - 29. EJECTION SEAT ARM
 - 30. TACAN CONTROL PANEL
 - 31. COM2 RADIO (not functional)
 - 32. BATT 1 AND BATT 2 SWITCHES
 - 33. GEN SWITCH
 - 34. INTERIOR LIGHTS PANEL
 - 35. EXTERIOR LIGHTS PANEL

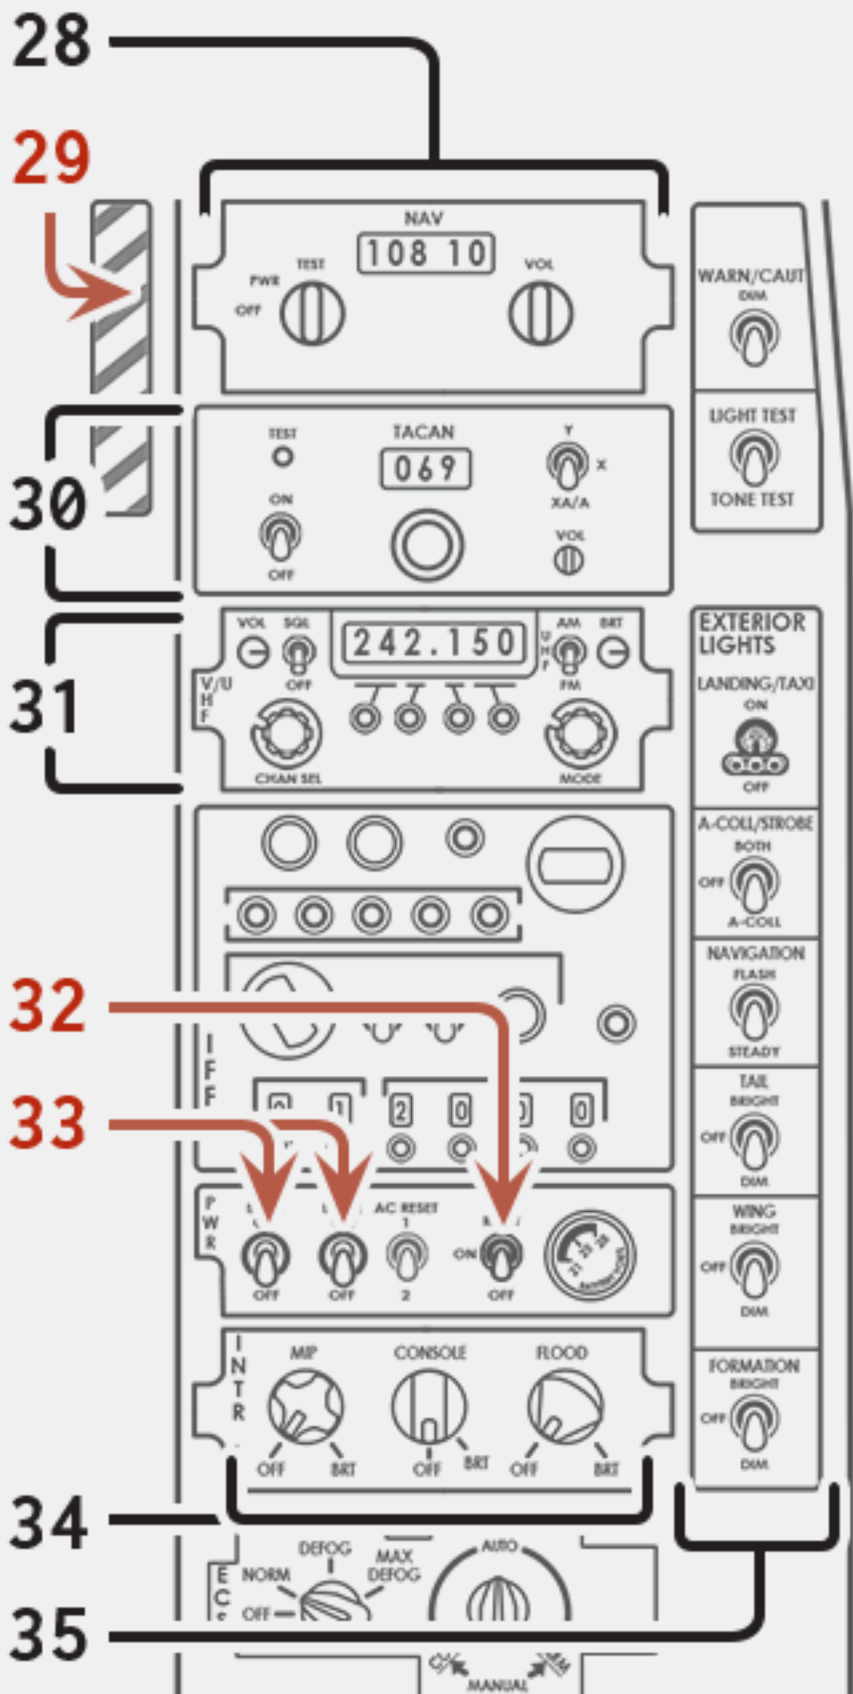

QUICKSTART

- | | | |
|-------------------------------------|--|---|
| 12 P. BRAKE - SET | 26 ENGINE - HOLD IN START POSITION FOR 5 SEC | 19 PITCH TRIM: CV - 3.5° UP
FIELD - 2 to 3° UP |
| 26 ENGINE - ON | 23 FINGER LIFT - PRESS | 22 FLAPS: CV - FULL
FIELD - 1/2 |
| 21 ANTI-SKID: CV - OFF / FIELD - ON | 4 HUD - ON | • CANOPY (LCtrl+C) |
| 32 GEN - ON | 15 MFD - ON | 29 SEAT - ARM |
| 33 BATT 1 & 2 - ON | 16 COM 1 MODE - T/R&G | 12 P. BRAKE |
| 25 GTS - PRESS | 27 OBOGS & FLOW - ON | |
| ! WAIT 15 SEC | 20 HYD 2 RESET - PRESS | |