BRIEF MANUAL

ABUS Radio Remote Control

ABURemote Button



AT A GLANCE:

Switching on and logging in: Page 3

Direct access buttons: Page 6

Operating a crane with two trolleys: Page 8

Operating cranes in tandem operation: Page 10

Setting the language: Page 13

AN 120205EN002
2024-01-05

ABUS


HEED THE PRODUCT MANUAL



HEED THE PRODUCT MANUAL!
The product manual “ABUS radio remote control ABURemote Button contains numerous important safety and operating instructions for the ABURemote. Always read the product manual through and heed it carefully. This brief manual is not a replacement for the product manual.

SWITCHING ON AND LOGGING IN

SWITCHING ON

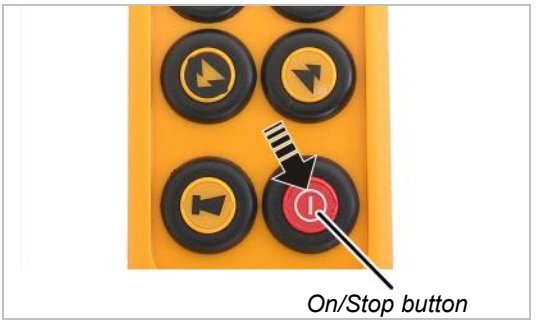

➔ If necessary: Switch on the entire crane using the mains switch.

➔ Fully press down the On/Stop button and hold it.

- The display shows “Stop check”.

➔ Release the On/Stop button.


- The transmitter automatically searches for a free radio channel, and occupies it.

➔ When the transmitter is within range of the receiver, the receiver connects with the transmitter.

- The transmitter automatically logs back in to same the receiver it was logged in to when it was switched off.

In some situations, the transmitter does not automatically log back in to the receiver:


- The transmitter was not logged in at the time of being switched off.
- The crane is not within range of the transmitter.
- The crane was switched off in the meantime.
- The crane was switched off and on again in the meantime.

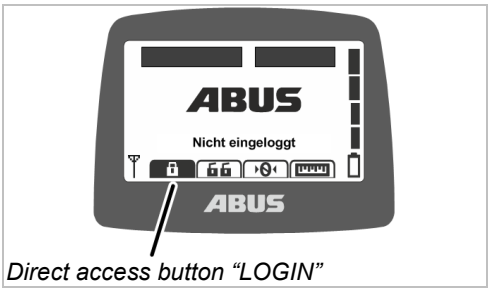

Direct access button “LOGIN”

➔ Press the direct access button “LOGIN”.

- The transmitter logs in to the receiver.

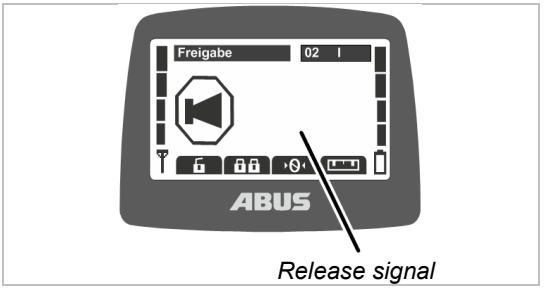

- The display shows “Release”.

➔ Press the HORN button and let it go.

- The sound of the horn can be heard at the transmitter and at the crane.
- The crane is ready for use.

DIRECT ACCESS BUTTONS

The four arrow buttons under the display can be allocated functions as direct access buttons in ‘Normal’ operating mode (e.g. Tare, Super-precision lifting). This makes these functions quick and easy to operate.

The allocation of the four direct access buttons appears at the lower edge of the display.

MEANING OF THE SYMBOLS

- Symbol with black backlighting: The function is available and can be selected.
- Symbol with white backlighting: The function is currently unavailable.
- Symbol completely white: No function has been selected for this direct access button.


Available functions:

Symbol	Description	Function
	Open padlock	“LOGOUT” Crane is logged in. Press “Log out”.
	Closed padlock	“LOGIN” Crane is logged out. Press “Log in”.
	Light bulb	“LIGHTING”
	Zero with two arrows	“TARE”

Symbol	Description	Function
	Open double padlock	“TANDEM LOGOUT” Crane is logged in in tandem operation. Press “Tandem logout”.
	Closed double padlock	“TANDEM LOGIN“ Crane is not logged in in tandem operation. Press “Tandem login”.
	Ruler with detailed scale	“SUP.PRE.LIFT ON” Super-precision lifting is switched off. Press to switch on.
	Ruler with coarse scale	“SUP.PRE.LIFT OFF” Super-precision lifting is switched on. Press to switch off.
	Arrow with hash key	“FREQ. CHANGE”
	'O' with numbers 1 to 6	“OPTION” 1 to 6
	Suspended load at rest with two arrows	“SWAY CONTROL ON” Sway control is switched off. Press to switch on.
	Swaying load	“SWAY CONTROL OFF” Sway control is switched on. Press to switch off.
	Line with two arrows	“POSITIONING”
	'T' with arrow	“TEACH-IN”
	Hatched wall with arrow	“LIMIT SWITCH”

OPERATING A CRANE WITH TWO TROLLEYS


OPERATING THE TROLLEYS AND DISPLAYING THE LOAD

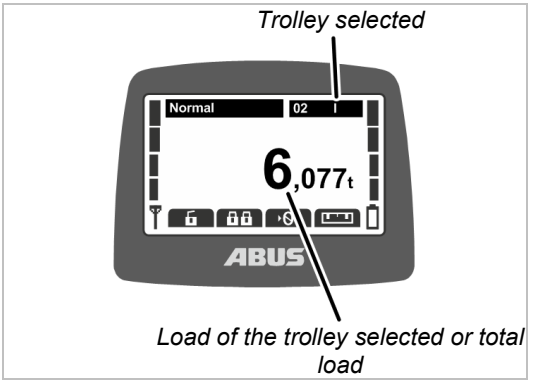

- The display indicates which trolley is currently selected.
- The load of the trolley selected or the total load is indicated on the display.

➔ Press the buttons to operate the trolley selected or both trolleys in joint operation at the same time.

SELECTING A TROLLEY

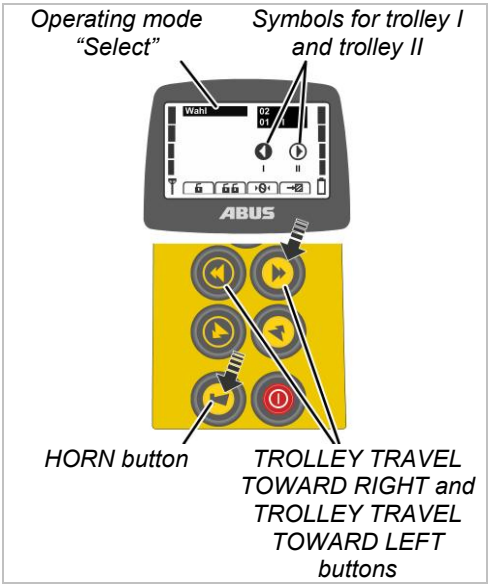

➔ Press the HORN button halfway and hold it.

- The transmitter switches to the “Select” operating mode.

➔ Press the TROLLEY TRAVEL button to select the required trolley:

– TROLLEY TRAVEL TOWARD LEFT button for trolley I.
– TROLLEY TRAVEL TOWARD RIGHT button for trolley II.
– TROLLEY TRAVEL TOWARD LEFT and TROLLEY TRAVEL TOWARD RIGHT for both trolleys in joint operation.

➔ Release the HORN button.


OPERATING CRANES IN TANDEM OPERATION

ACTIVATING TANDEM OPERATION

To allow cranes to be operated in tandem operation:

- The transmitter must be logged in to the crane.
- A transmitter may not be logged in to the second crane being operated in tandem operation.

LOGGING IN TO THE SECOND CRANE

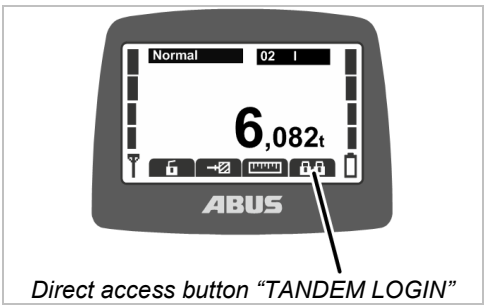


Direct access button “TANDEM LOGIN”

➔ Press the direct access button “TANDEM LOGIN”.

- The display shows “Release”.


➔ Press the HORN button and let it go.

OPERATING THE CRANES AND DISPLAYING THE LOAD

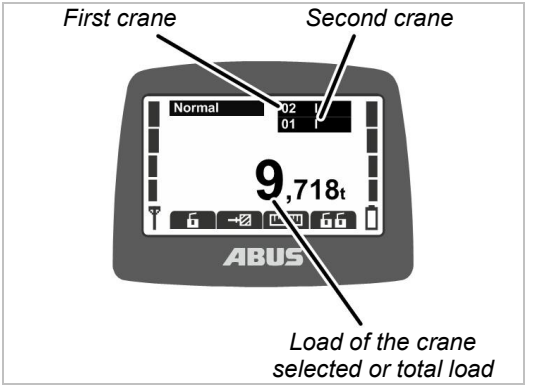

- The crane currently selected is highlighted black on the display.
- The load of the crane selected or the total load is indicated on the display.

➔ Press the buttons to operate the crane selected or both cranes in tandem operation at the same time.

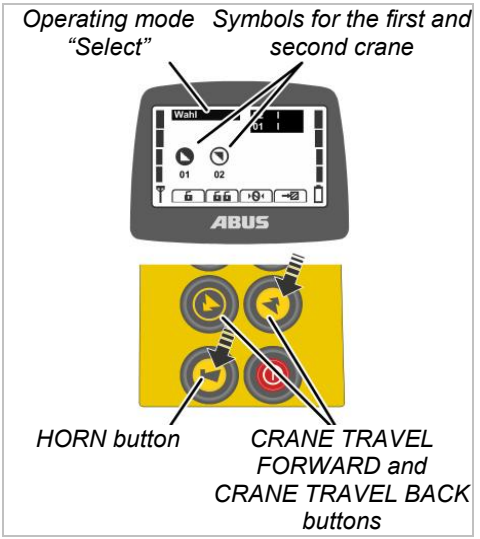

➔ Press the HORN button halfway and hold it.

- The transmitter switches to the “Select” operating mode.

➔ Press the CRANE TRAVEL button to select the required crane.

– CRANE TRAVEL FORWARD button for crane I.


– CRANE TRAVEL BACK button for crane II.

– CRANE TRAVEL FORWARD and BACK buttons for both cranes for tandem operation.


➔ Release the HORN button.

SETTING THE LANGUAGE

- Press MENU (“M” button).
- Select the menu item “Transmit options” using the arrow buttons UP and DOWN.
- Press ENTER (button with angled arrow).
- The code query appears on the display.

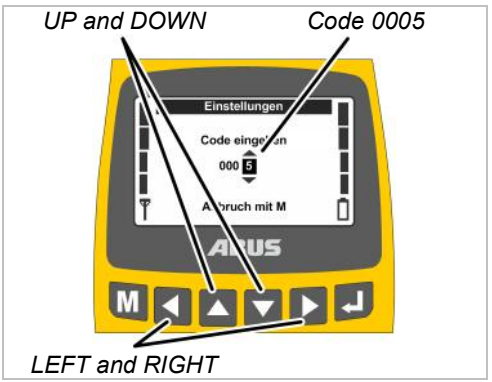


- Select the digit to be set using the arrow buttons LEFT and RIGHT.
- Set the digit using the arrow buttons UP and DOWN.
- Set the code “0005” for the “Transmit options” menu this way.
- Press ENTER.

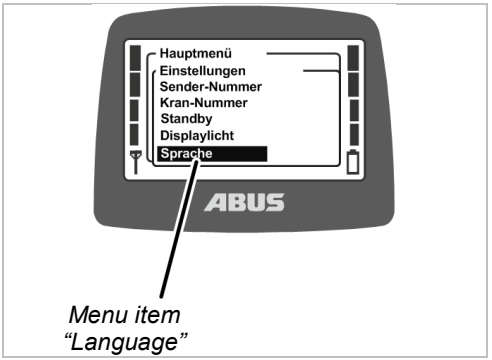

Menu item “Language”

➔ Select the menu item “Language” using the arrow buttons UP and DOWN.

➔ Press ENTER.

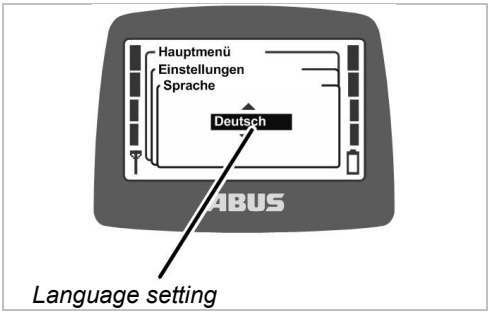

Language setting

➔ Select the language required using the arrow buttons UP and DOWN.

➔ Confirm using ENTER.

ABUS Kransysteme GmbH
Sonnenweg 1
51647 Gummersbach Germany
Tel. 0049 – 2261 – 37-0
Fax. 0049 – 2261 – 37-247
info@abus-kransysteme.de

Distribution or reproduction of this document, or the utilisation and disclosure of its contents without explicit approval is prohibited. Violations will result in liability for damages. All rights are reserved in regard to patent issue or registered designs.

AN 120205EN002
2024-01-05