

Technical requirements for E620-LJ electric meters

Historical versions

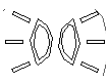
serial number	Date of revision	Reviser	Reasons and contents of the revision	The version number	Remarks
1	2018-12-27	Yang Hao	Modification of the protocol based on E620-LJLD-B; Bus transmission rate: 250kbps; Fill Format: Intel; BYTE starts at 0	V1.0	Original version

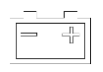
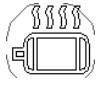
First, the rendering:



Second, the indication function:

icon	Instructions	Signal Format	Signal source	Reference standards	Function description
	Left turn indicator (green).	High level	Combination switch	GB4094	Turn on the left turn and this light is lit

	Right turn indicator (green).	High level	Combination switch	GB4094	Turn on the right turn and this light is lit
	Position light (green)	High level	Combination switch	GB4094	Turn on the beacon light switch and the light is lit.
	High beam indication (blue).	High level	Combination switch	GB4094	Turn on the high beam and this light is lit
	READY LED	Inside the gauge		GB4094	When there is no fault or speed, IT IST;
	Low beam indication (green).	High level	Combination switch	GB4094	Turn on the low beam and this light is lit
	Brake failure (red)	Low/meter self-test	Combination switch	GB4094	1、 The instrument is turned on, and this lamp requires self-test (2-3S); 2、 When a low level signal is detected, the light is lit.
	Rear fog light indication (yellow)	High level	Combination switch	GB4094	Turn on the rear fog light, this light is lit;
	EPS indication	Low level	Combination switch	GB4094	1、 The instrument is turned on, and this lamp requires self-test (2-3S); 2、 When a low level signal is detected, the light is lit.
	Parking brake indication (red).	Low level	Combination switch	GB4094	1、 Pull up the handbrake and this light is lit; 2、 After pulling up the handbrake, when there is D/R, the light flashes, and the buzzer rings, and the ring interval time is 0.5S;
	Door indicator (red).	Low level	Combination switch	GB4094	The door is not closed, this light is lit;

	Seat belt indication (red).	Low level	Combination switch	GB4094	The seat belt is not fastened, this light is lit;
	Charging status (red, yellow, green)	Independent power supply	Charger	GB4094.2	When the charger is charging, it is lit separately;
D	Forward indicator (LCD).	CAN	controller	GB4094	ID: 0x4D2—BYTE6: 0x00-N 档; 0x01-D 档; 0x02-R 档
N	Neutral indication (LCD).		controller	GB4094	
R	Reversing indication (LCD).		controller	GB4094	
	Undervoltage indication (red).	CAN	controller	GB4094	Battery voltage is less than 10.5V, light this lamp;
	System failure (red)	CAN	controller	GB4094	As long as there is a fault code this light is lit and the buzzer is chirping; Until the fault is resolved;
	Motor overheating indication (red)	CAN	controller	GB4094	Not displayed
	obligate				

Third, the instrument function:

1、Speed display:

Speed ID: 0x4D2--BYTE0/BYTE1; Scale factor: 0.1kph/bit, offset 0

2、Current display:

Acquisition controller data: 0x 4D3—byte1/byte2; Scale factor: 32A/bit, offset: 0; (Bit15 is 0, showing positive values; bit15 is 1, showing a negative value), there is no need to show negative current;

3、Battery display: The last two bars need to flash.

Acquisition controller data: 0x 4D2—byte5; Scale factor: 1%/bit; Offset 0

4、Voltage display:

Acquisition of controller data: 0x 4D3—byte0; Scale factor: 1V/bit, offset 0

5、Small/Total Mileage: Calculated internally by the meter, it can be switched by pressing the buttons.

Voltage display / fault code display: switch display when there is a fault code;

Fault Code: Format: OXX;

ID: 0x4D2--byte7; 0x01~0xff corresponding fault code: 001~255;

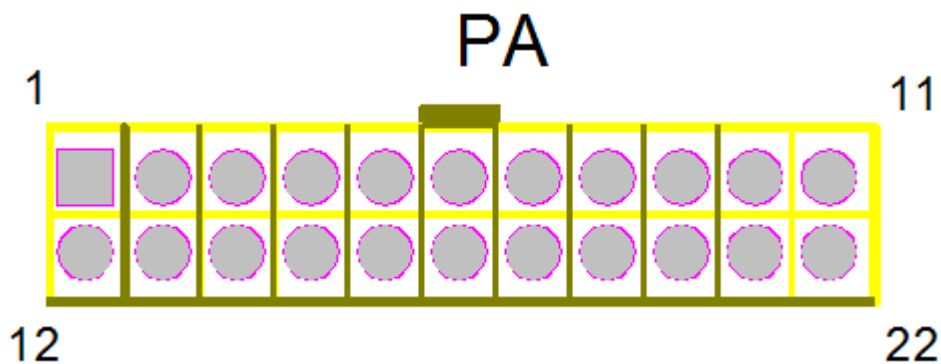
6、Key function:

- ① Small/Total Mileage Switching Display;
- ② Subtotal clear zero;
- ③ Instrument rear door parameter adjustment.

7、Buzzer alarm function: (using 12V active buzzer)

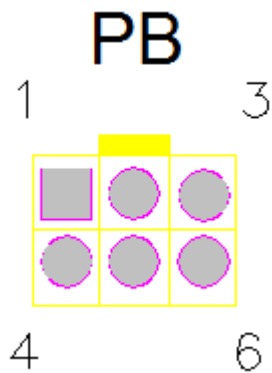
BMS fault and controller fault (except for undervoltage indication) alarm mode: 5 sounds per tweet (interval time is 1S), and then wait for 5S to sound again, and then cycle alarm. The alarm is not stopped until the fault is lifted. After pulling up the handbrake, when there is D/R, this light flashes, and the buzzer chimes, and the ring interval time is 0.5S;

Fourth, the instrument wiring diagram:



The port sequence number	Port definition	The port sequence number	Port definition
A1	CANL	A12	SOUP
A2	Charging status (independently)	A13	Key electricity (12V+)
A3	Position Light (12V+)	A14	Instrument ground
A4	empty	A15	Left Turn Indicator (12V+)
A5	empty	A16	Parking brake (12V-)
A6	empty	A17	Rear fog light indication (12V+)
A7	Brake failure (12V-)	A18	High beam indication (12V+)

A8	empty	A19	Right Turn Indicator (12V+)
A9	empty	A20	Charge status green light (independent power supply 12V+)
A10	empty	A21	Charging status yellow light (independent power supply 12V+)
A11	empty	A22	Charging status red light (independent power supply 12V+)



The port sequence number	Port definition	The port sequence number	Port definition
B1	Low beam indication (12V+).	B4	EPS (12V-)
B2	Door indication (12V-)	B5	empty
B3	Seat belt indication (12V-)	B6	empty