

Changing the Termination Resistor Setting

Modified on Fri, 17 Jul at 7:07 PM

Introduction



Difficulty	Very Easy
Steps	2
Time Required	<5 minutes

This guide shows how to disable the termination resistor in a DeepSea product using SeaSense Commands. The termination resistor is valuable when creating a network of separately addressed RS-485 enabled devices. This guides shows examples using RealTerm but any serial terminal emulator can be used.


Tools

- PC with Serial Terminal Emulator (ex. RealTerm, Putty, TeraTerm, etc)
- USB to RS-485 Converter
- USB Isolator
- Power Supply
- Testing Whip or Breakout Cable

Materials


- DeepSea Product Configured for RS-485

Step 1 Establish Serial Comms

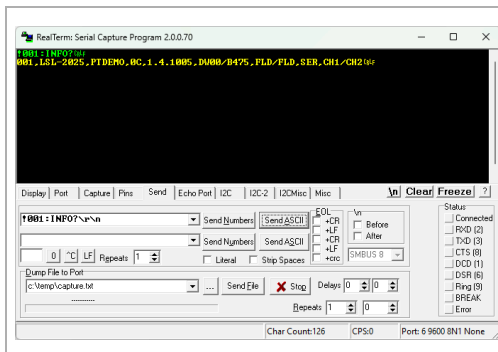


- Follow the Establishing Communication via Serial Pins Guide found here, for comprehensive instructions on sending SeaSense commands to your device.


Step 2 Send Commands

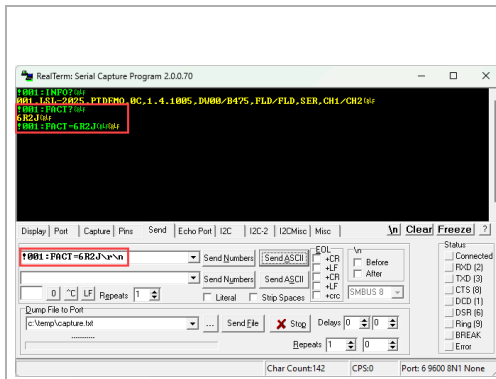

- Unlock the factory settings by sending the FACT query (**Ex:** !001:FACT?\r\n). The device will respond with a 4-character code. Then send FACT as a write command using the code (**Ex:** !001:FACT=XXXX\r\n, where XXXX is the code)

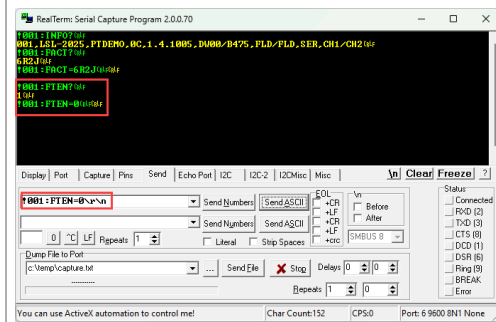

- Send the termination resistor command (FTEN) as a read command, the device will respond with either 0 (disabled) or 1 (enabled).
- Then send the FTEN command as a write command to either enable or disable the termination resistor (**Ex:** !001:FTEN=0\r\n or !001:FTEN=1\r\n)

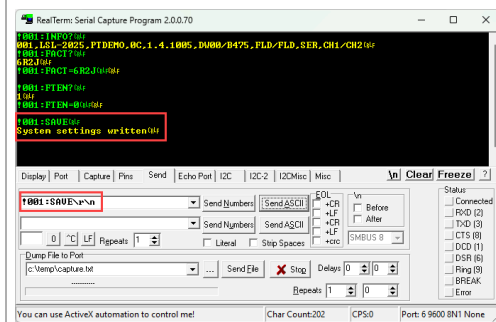

- Use the Save Settings command to verify that the new Termination Resistor settings is appropriately saved. (Ex: !001:SAVE?\r\n)



- Congratulations! You have now successfully changed the Termination Resistor setting in your DeepSea product. You can now power the device down, or feel free to go ahead and change it's Node Address setting to something other than the default to use it in a network of devices.

Note: If you ever need technical support, please feel free to reach out by creating a support ticket [here](#) or just email Support@deepsea.com. Make sure to include your device's serial number in any support communications.

