

MNemo V2 — User Manual

Firmware v3.4.0 — frozen 2026-09-11

Table of contents:

Version

Change Log Firmware

- v3.4.0
- v3.3.1
- v3.1.0
- v3.0.0
- v2.6.9
- v2.6.8
- v2.6.7
- v2.6.5
- v2.6.2
- v2.6.1
- v2.6.0
- v2.5.4
- v2.4.12
- v2.4.9
- v2.4.0
- v2.3.0
- v2.2.18
- v2.2.16
- v2.2.14
- v2.2.13
- v2.2.12

Device description

- 1 - Slider Control
- 2 - Pressure Plate lever
- 3 - Line Slot
- 4 - Display
- 5 - USB Port

Switching Mnemo ON

Menu Navigation

Menus Overview

- Main Menu Structure

Main Menu

Calibrating the unit

Setting the Unit System

Calibrating the distance measurement

- Manual Calibration
- Automatic Calibration

Calibrating the compass

- Fast Calibration
- 3-Plane Calibration
 - How it works
 - Plane sequence
 - Completion
- Understanding the calibration results

Survey Operations

Survey Flow

- BASIC Mode
- Verbose Mode
- Color Reference

BASIC Mode (Recommended)

- BASIC Mode Overview

BASIC Mode Click Commands

ECO Mode (Long Dives)

- What it looks like
- ECO sections are named E##
- ECO runs the battery all the way down
- If the power dies mid-survey, your shots survive
- When to use which mode

Verbose Mode (legacy)

- Starting a survey
- Surveying a shot
- Cancelling / Retaking a measure

Recording the surface pressure

LRUD (Cave Profile description)

Interference Marker

About Stabilization

Surveying - The big picture -

Survey History and Direct View

- 2D / 3D Map View
 - 3D Map
- Web Interface
 - 2D survey map

- [Interactive 3D viewer \(v3.1.0+\)](#)
- [Recovered surveys \(v3.4.0+\)](#)

Memory management

- [Erasing from the web interface \(v3.4.0+\)](#)
- [If the device loses power mid-survey \(v3.4.0+\)](#)

Setting the water type

Device Settings

- [Screen Orientation](#)
- [Display Contrast](#)
- [Language](#)

Language

Date and Time Synchronization

- [How to Synchronize the Date and Time](#)
 - [From the web interface \(recommended\)](#)
 - [Over the USB serial console \(advanced\)](#)
- [Checking the Current Date and Time](#)
- [Potential Issues When the Date Has Not Been Synchronized](#)

Battery

- [Making the charge last \(v3.4.0+\)](#)
- [Low battery](#)

Tools

- [Magneto](#)

MnemoLink - Data Transfer

- [Connection](#)
- [Launch MNemoLink](#)
- [Converting a DMP to Excel](#)

Serial Command Line Interface

- [Connecting](#)
- [Data transfer](#)
- [Help & discovery](#)
- [Device identity & firmware](#)
- [WiFi network management](#)
- [Click / button tuning](#)
- [Compass & stabilization](#)
- [Display colors](#)
- [Settings & reset](#)
- [Runtime statistics](#)
- [Over-the-air update](#)

- [Low-level / factory — \[DO NOT USE\]](#)

[Wireless Data Transfer](#)

- [Local Network](#)
 - [Adding networks](#)
 - [Connecting](#)
- [WiFi at Start](#)
 - [Not underwater \(v3.4.0+\)](#)
- [WiFi QR onboarding \(v3.1.0+\)](#)
 - [Local network \(WIFI ON/OFF\)](#)
 - [Access Point \(WIFI AP\)](#)
- [The Mnemo as Wireless Access Point](#)
- [Network Scan and Data Download with MNemoLink](#)
- [Erasing the memory from the web page \(v3.4.0+\)](#)

[DMP File Format](#)

- [1. File encoding](#)
- [2. Overall structure](#)
- [3. Section header \(13 bytes\)](#)
- [4. Shot record \(35 bytes\)](#)
- [5. LRUD and marker semantics](#)
- [6. Shot types and the EOC record](#)
- [7. Parsing rules](#)
- [8. Worked example](#)
- [9. Older format versions](#)

[Firmware Update](#)

- [Update over WiFi \(over-the-air\)](#)
- [What's New screen](#)
- [Automatic update](#)
- [Manual update](#)

[Maintenance](#)

[Tips and Tricks](#)

[Report a Hardware or Software Issue](#)

- [What to report](#)
- [How to submit](#)
- [Tips for a useful report](#)

Version

This user manual applies to firmware v3.0.0 and higher.

This firmware requires MNemoLink 1.5.0 / Ariane 25.1.1 or higher.

the latest firmware is available [here](#) and the upgrade procedure is explained [here](#)

If you wish to contribute to this user manual, it can be done on its public repository on [GitHub](#).

The documentation is written in [Markdown](#) language.

Change Log Firmware

v3.4.0

A battery and data-safety release: a new low-power survey mode, less power drawn everywhere else, and nothing lost when the power goes.

- **ECO survey mode:** a third survey mode next to BASIC and Verbose, selected from `OPTIONS > SETTINGS > SURVEY`. It runs exactly like BASIC — same clicks, same wheel, same readings — but shows the survey phase as a single small coloured dot on a black screen instead of filling the display with colour, refreshed half as often. About **27 mA while surveying against BASIC's 55-57 mA**. Your contrast setting is left alone in ECO. ECO sections are named `E##` instead of `B##` so you can tell them apart later. See [ECO Mode](#).
- **ECO runs the pack flat on purpose:** the low-battery cutoff that stops BASIC and Verbose leaves usable capacity unspent. In ECO the low-battery icon appears in the top-right corner as a *warning* and the survey carries on until the battery is genuinely empty.
- **Recovery after a power cut mid-survey:** if the device loses power in the middle of a section, the next power-on closes that section, reports **Survey recovered**, and the shots already taken are kept. Previously such a section was discarded entirely as soon as a new survey was started after it.
- **The processor rests between jobs:** the main loop now halts the CPU on any pass with nothing to do instead of spinning at full clock for the whole dive. Nothing changes on screen; the battery simply lasts longer.
- **WiFi OFF really powers the radio down:** switching WiFi off used to leave the radio associated and powered, holding the device at about **80 mA instead of its 28 mA idle**. The radio is now taken out of the power budget.
- **WiFi At Start is a surface feature:** the access point started by *WiFi At Start* is held off when the device is switched on underwater, and shut down within about 5 s if the device goes under while it is up. WiFi you switched on yourself from the menu is **never** turned off automatically.
- **Erase memory from the web interface:** a confirmation page that first shows how many surveys and how much memory are stored and offers a DMP or CSV download, then erases only after you type `ERASE` and submit. See [Memory management](#).

- **Storage problems are reported instead of guessed:** a shot the memory refused is no longer counted (you get a warning and can re-shoot the leg), **MEMORY FULL** and **MEMORY ERROR** appear where a write cannot proceed, a download that could not be completed fails instead of arriving as a short but valid-looking file, and a compass calibration that could not be read at boot is no longer silently replaced by a blank one.
- **Shot counts agree everywhere:** the last leg of a section is counted on the map as well as in the history row and the web list, a corrupt record now costs one section instead of every section after it, and the history menu can no longer open a survey that is not listed.
- **Clock sync reports what happened:** synchronising the clock from the browser now confirms success — or says plainly that it failed. Before, a refused sync looked exactly like a successful one. See [Date and Time Synchronization](#).
- **The WIFI_AP menu row is never blank:** while connected to a local network the row now reads **WIFI_AP (SWITCH)**, since selecting it there swaps the device over to its own access point rather than adding one alongside.
- **The update check runs once per power-on,** not on every WiFi connection. Switching WiFi off and on again no longer re-shows the *checking for updates* banner and the *update available* prompt each time. See [Firmware Update](#).
- **The Access Point QR code dismisses itself on later sessions too.** It used to close correctly only on the first connection after power-on; on a reconnect the page was served from the phone's cache, so the device never saw it load and the QR stayed on screen.
- **Memory usage never reads 0% when data is stored.** The figure on the main menu status line — and on the new web erase page — used to round down, so roughly the first 19 shots recorded still showed 0%.
- **A settings reset no longer changes which hardware the firmware talks to.** *Reset Settings* used to overwrite the stored choice of real-time clock, pressure sensor and compass, which on some devices left the clock or the depth reading not working, with no way to fix it from the device. Those three selections are now left alone, and a pressure-sensor selection naming a sensor that is not fitted is corrected automatically at the next power-on.

Coming from **v3.3.1**, this update arrives over WiFi as usual. Coming from **v3.1.1 or older**, the one-time USB update described in [Firmware Update](#) is still needed before over-the-air updates work at all.

v3.3.1

First public release since v3.1 — it bundles all of the over-the-air work and the multilingual update.

- **Over-the-air (OTA) updates:** the MNemo can now update its firmware over WiFi — both the main firmware and the WiFi radio — with no cable, and it works on battery. Start it from `OPTIONS > SETTINGS > SYSTEM > OTA UPDATE`, or accept the *update available* prompt shown when WiFi turns on. A one-time USB update is needed first to switch a device over — see [Firmware Update](#).
- **Chinese over the air:** Simplified (简体中文) and Traditional (繁體中文) Chinese are included in the over-the-air image — restored after the first slim OTA builds had to leave them out for size. The Chinese menu wording was also reviewed and refined by a native speaker.
- **"What's New" screen:** after every update the device shows the release's headline features once, on the first boot; read them again any time from `OPTIONS > SETTINGS > SYSTEM > WHAT'S NEW`.
- **WiFi radio compatibility:** the WiFi (NINA) radio firmware and its on-device driver were brought in line for the over-the-air radio update.
- **Robustness:** assorted fixes to the over-the-air update process.

v3.1.0

- **WiFi QR onboarding:** when WiFi is turned on the OLED shows a QR code so a phone can join the network and open the web page without typing the SSID, password or IP address. Works in both Access Point (two QR codes: join then open-page) and local-network (single open-page QR) modes. The QR dismisses itself once the web page actually loads, or with **NEXT / SELECT**.
- **Interactive 3D survey view on the web interface:** the 2D View map now has a **View in 3D** button that opens a full-screen 3D viewer. Orbit (left-drag / one-finger), dolly (right-drag), zoom (wheel / pinch) and click a station to re-centre on it. A base-plane grid and a compass-rose East/North/Up widget help with orientation.
- **Depth-coloured survey paths:** the path on the web 2D map is now drawn as per-segment lines coloured by depth (**blue = deepest, red = highest**) instead of a near-invisible flat line. The on-device OLED depth gradient is reversed to match, so the on-device and web views share a single colour convention.

- **Cleaner WiFi signal-strength icons:** the four RSSI icons on the OLED are now visibly distinct (regenerated at 16×16).
- **USB serial reliability:** a long-standing freeze caused by intermittent USB pogo-contact blips while the device was moved is fixed; the serial port stays stable when the device is jostled while connected, and `syncdatetime` no longer hangs if the host disconnects mid-transfer.

v3.0.0

- **Multilingual UI:** on-device menus and messages are now available in English, Spanish, French, German, Simplified Chinese and Traditional Chinese. Language can be changed at any time in OPTIONS > SETTINGS > DEVICE SETTINGS > LANGUAGE.
- **3D map view:** when viewing a survey map (from History or BASIC mode shortcut), press the select button to cycle between 2D map, 3D perspective view and statistics. In 3D mode the device orientation controls the camera angle.
- **WiFi at Start:** new option (OPTIONS > WIFI > WIFI ON AT START) to automatically start the device's WiFi access point on every power-on. The access point turns off automatically after 30 seconds if unused.
- **Web interface network management:** WiFi networks can now be added and removed directly from the device's built-in web page, without MNemoLink.
- **Menu reorganisation:** Settings is now split into *Device Settings* (display, units, language) and *System* (update, reset). The Extras menu is renamed to Tools and WiFi has its own dedicated submenu under Options.
- **Button auto-calibration:** performing 4 consecutive clicks on either side of the slider automatically calibrates the button press-force threshold.

v2.6.9

- Added check to avoid memory overflow in history build on startup
- Avg and Max depth display values were swapped
- Fixed marker counter initialisation bug
- Added button threshold auto-calibration (4 consecutive clicks on either side)
- Settings are now saved when modified from the web interface

v2.6.8

- Fixed bug that had date reset on each startup since 1/1/25

v2.6.7

- Display the angle difference in imprecision warning
- In Basic mode when LRUD is activated in settings, it will be displayed at the end of each station
- The section name in Verbose mode is checked for uniqueness
- Change distance display format when distance >100ft or m
- Using MNemo given name instead of fixed SSID for Wifi(AP) name
- Text display optimization
- Fixed bug in Map display mode that could lead to device lock.

v2.6.5

- Completed settings available on the webpage of the MNemo. Date/Time can now be synchronized through a web browser.
- Units get displayed for depth length and azimuth readings
- Added moving arrow progress indicator option instead of blinking background. Option available in Setting menu.
- Improvement of UI display, flickering and dirty pixels removed.
- Optional address parameter for command "getdata" allowing to read MNemos memory after reset.
- LRUD for survey OUT is now recorded at WHITE phase of station IN

v2.6.2

- Added icon  to signal the depth variation is bigger than length of line.

v2.6.1

- Support for MNemoLink network scan

v2.6.0

- Added 2 new **click sequences**, active during "Stand By", to set survey direction in BASIC mode. LEFT-LEFT-LEFT-LEFT for IN survey and RIGHT-RIGHT-RIGHT-RIGHT for OUT survey.
- During the **Stand By** screen a index of the click combination is displayed.
- In basic mode Naming of section is now incremental (B01,B02 etc), counter gets reset when memory is.
- The name of the section as well as the direction get displayed beneath the shot counter

v2.5.4

- Add a marker with a unique ID to a station in basic mode by using a combination of clicks: LEFT-LEFT-LEFT-RIGHT
- Marker number gets displayed on live and history map
- Live survey map can be displayed in BASIC mode using a combination of clicks: LEFT-RIGHT-LEFT-RIGHT
- You can access the LRUD entry mode in BASIC mode using a combination of clicks: RIGHT-RIGHT-RIGHT-LEFT
- Added statistics page in history section after displaying the map
- In settings there's a new option to use Icons instead of text for BASIC survey indications
- In settings there's a new option to adjust the contrast of the display.
- Menu simplified for water type, unit and survey mode settings. All testing and debugging mode are now regrouped in Test Mode.
- Bold font used in BASIC mode to increase readability.
- BASIC mode input progress bar optimized to show smoother progress.
- Bug Fix: the device would enter sleep mode in Verbose survey, this could lead to DMP corruption (*no data loss*)
- Bug Fix: Update was missing from Menu

v2.4.12

- Battery voltage display has been replaced by a percentage of charge available.
- On the main menu voltage gets displayed in red when < 20% (+/- 40 min of survey left)
- During survey an icon is displayed in BASIC and VERBOSE survey mode indicating low battery (< 20%)
- When battery reaches 0% the device is safely shutdown avoiding memory corruption that could occur if this happened during the survey phase.
- Improvement in the Extra>Test mode, more data displayed and possibility to adjust parameter live with CLI in this mode.

v2.4.9

Feature update:

- Changed doze and sleep time to 5 min and 20 min
- Double Tap sensitivity can now be adjusted
- Support for HW variant with RV-3028-C7 RTC
- Improved accuracy of slider button
- Randomize position of screen saver image

Bug Fixes:

- Fix issue where double tap light threshold was reset
- Pressure sensor change gets now saved after change
- Fixed display pixelization on startup
- When last shot is erased in Verbose mode it gets now also erased from current map
- Allow lower values of click threshold than 20
- Progress bar no longer erases shot number in verbose mode

v2.4.0

- Added interface to save values for LRUD (Left-Right-Up-Down) profile measured or estimated values. This feature is available in Verbose survey mode only for the moment.
- Fixed issue in Double Tap activated map display.

- When in and out azimuth difference is bigger than 5deg an icon will indicate it.
- Added display of Wi-Fi connection quality on main screen. Wi-Fi auto turn off after 5 min of inactivity.
- Added Setting page to webserver allowing to adjust most MNemo settings through the Wi-Fi interface.
- Text display uses now anti antialiased fonts.

v2.3.0

- Added Warning icon on display when magnetic interference detected
- Record temperature and time at each station.
- Increased size of font in the menu of the Verbose survey mode
- Added CSV file download to the webserver
- Added individual Section CSV download link on the main webpage
- Check for valid date at start
- When wheel mode (WM) is different than 0, reverse direction functionality is disabled
- Fixed bug in display when depth >100

v2.2.18

- Added MN logo to flash screen instead of white background
- Added reset default settings to menu.
- When compass calibration is finished progress bar turns from red to yellow
- Added command to adjust pic switch on threshold. New firmware for PIC

v2.2.16

- Replaced blinking led in Doze mode by blinking screen
- Changed OLED refresh rate

v2.2.14

- Added white blinking led in Doze Mode

- Fixed bug with surface pressure setting getting corrupted

v2.2.13


- Added CLI command to activate/deactivate the requirement to move the cursor right to turn on the MNemo: `activatesafeon / deactivatesafeon`
- Added message indicating that parameters have been updated with the firmware

v2.2.12

- Changed BASIC mode display, added display of station number and color change on whole screen.
- Added setting to deactivate double tap map display. Accessible through CLI: `activatedoubletap/deactivatedoubletap`
- Added setting to control length of click in BASIC mode. Accessible through CLI: `setBMclickfactor factor` (factor between 20% and 150%).
- Support for BNO085 as secondary compass.
- Fixed bug when SSID or wifi password contain whitespace character.
- Fixed bug in month settings

Device description

Thank you for your interest in the [MNemo](#)! We will start with a short description of the components of the device

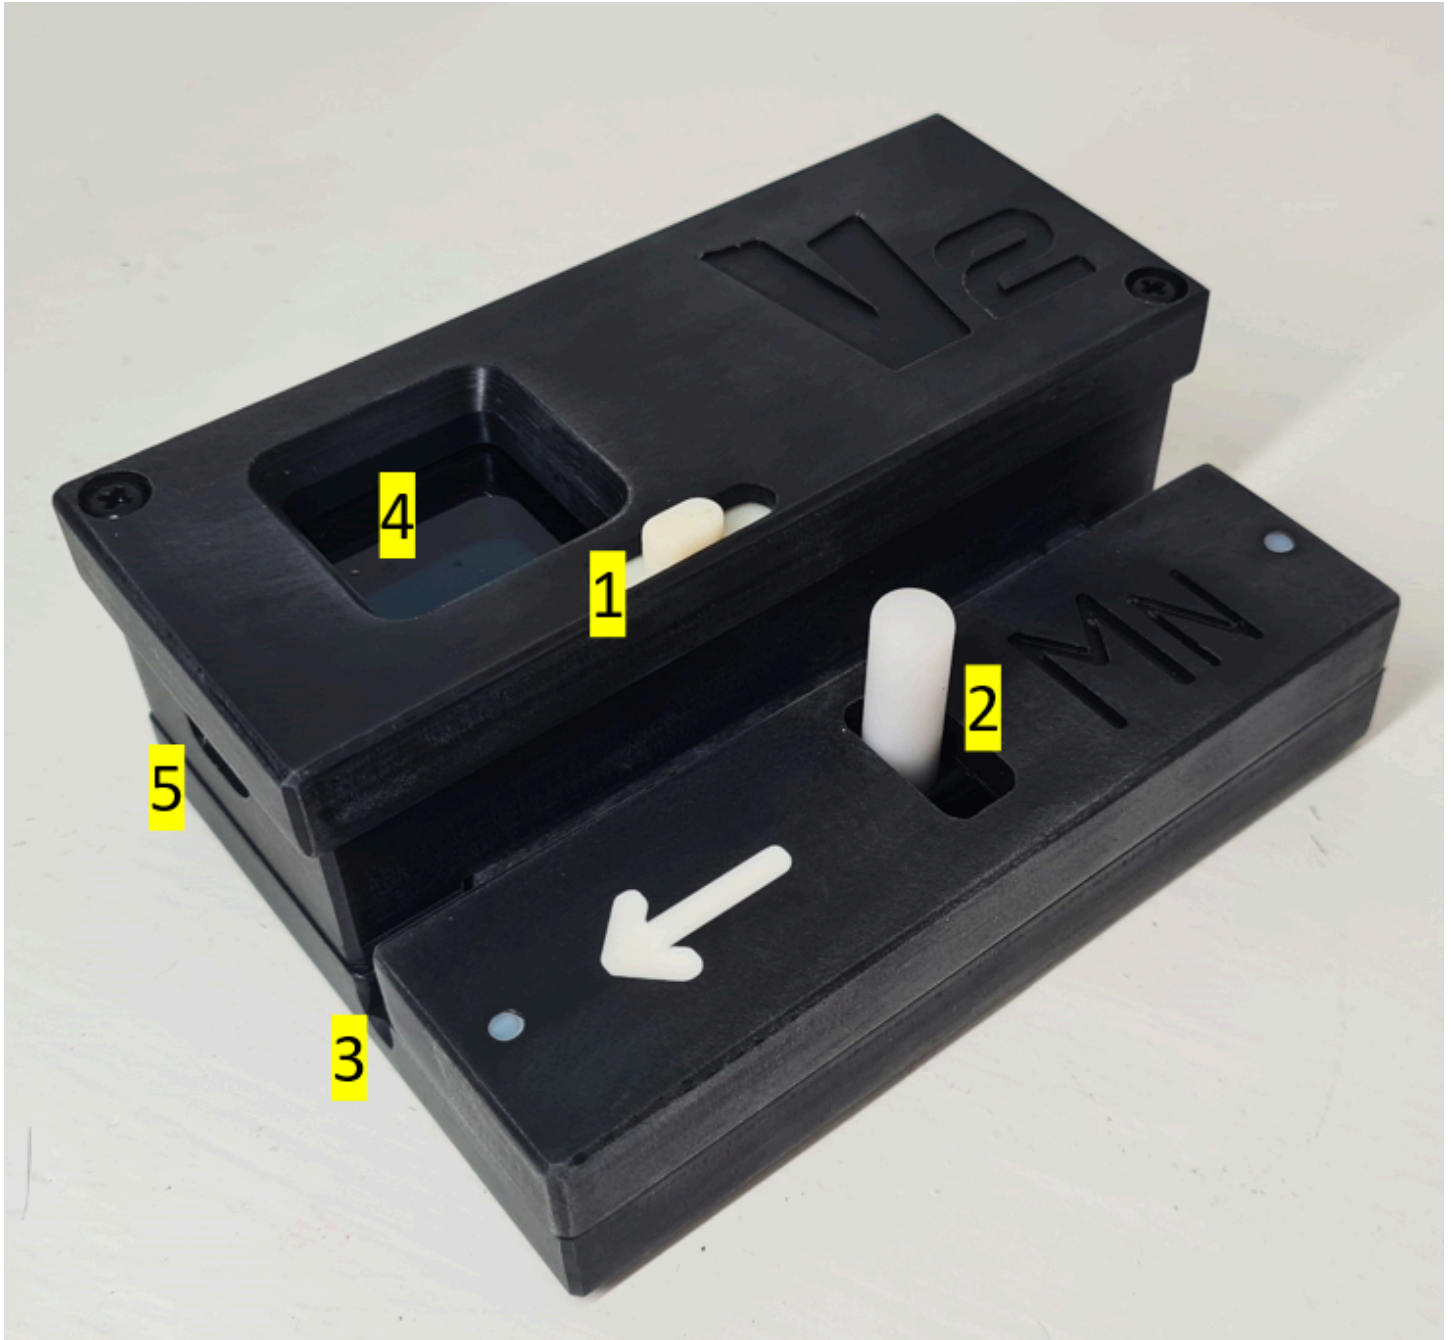

1 - Slider Control

It's through this slider that you're gonna interact with the MNemo.

- Moving the slider **Left** is the equivalent of an *Enter* or *Select* order.

- Moving the slider **Right** is the equivalent of a *Next* or *Scroll* order.

2 - Pressure Plate lever

This is the part you will have to pull back to open the device and lock the cave line in it.

Tip: When pulling the plate back apply the pressure at the bottom of the lever

3 - Line Slot

This is where the cave line will slide through the device after opening and releasing the pressure plate lever.

The device will fit line up to 6mm diameter

4 - Display

The device has an OLED graphical color display. The text, icon and background colors will guide you through the survey process.

5 - USB Port

This is the port used to connect your device to your computer to adjust settings or download data

The recommended way to download data is through wifi either by connecting your device to the local network or activating it as Wifi Access Point

It is also the port used for charging the device. Any 5V USB charger or computer USB port can be used to recharge the MNemo.

Switching Mnemo ON

There's no **ON/OFF** switch on the device. You'll switch the device ON using the slider control described in the previous section.

- Move the slider control to the **left** and hold it there until a led turns on, on the right side of the screen. At that moment move the slider to the right and the device will turn on displaying info about the firmware and the serial number of the device.


Tip: If you can't see the led just count to 6 before moving the slider to the right.

- When this appears, it means MNemo has booted properly, and all the sensors are working. Move again the slider to the left and you'll be in the main menu.

Tip: You can deactivate the requirement to move the cursor to the right with the *SwitchONSafety* setting.

Menu Navigation

Each menu will have an active or selected item that will be surrounded by >....< or **highlighted**.

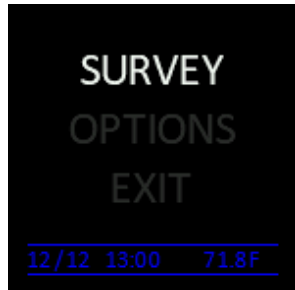


Moving the slider to the **right** is shifting the selected item to the next one (Either on the right or beneath).


Moving the slider to the **left** is equivalent to the “Enter” key of your keyboard. It selects the current item or starts the action highlighted or selected.

Menus Overview

This document provides a visual representation of the MNemo menu structure.

Main Menu Structure

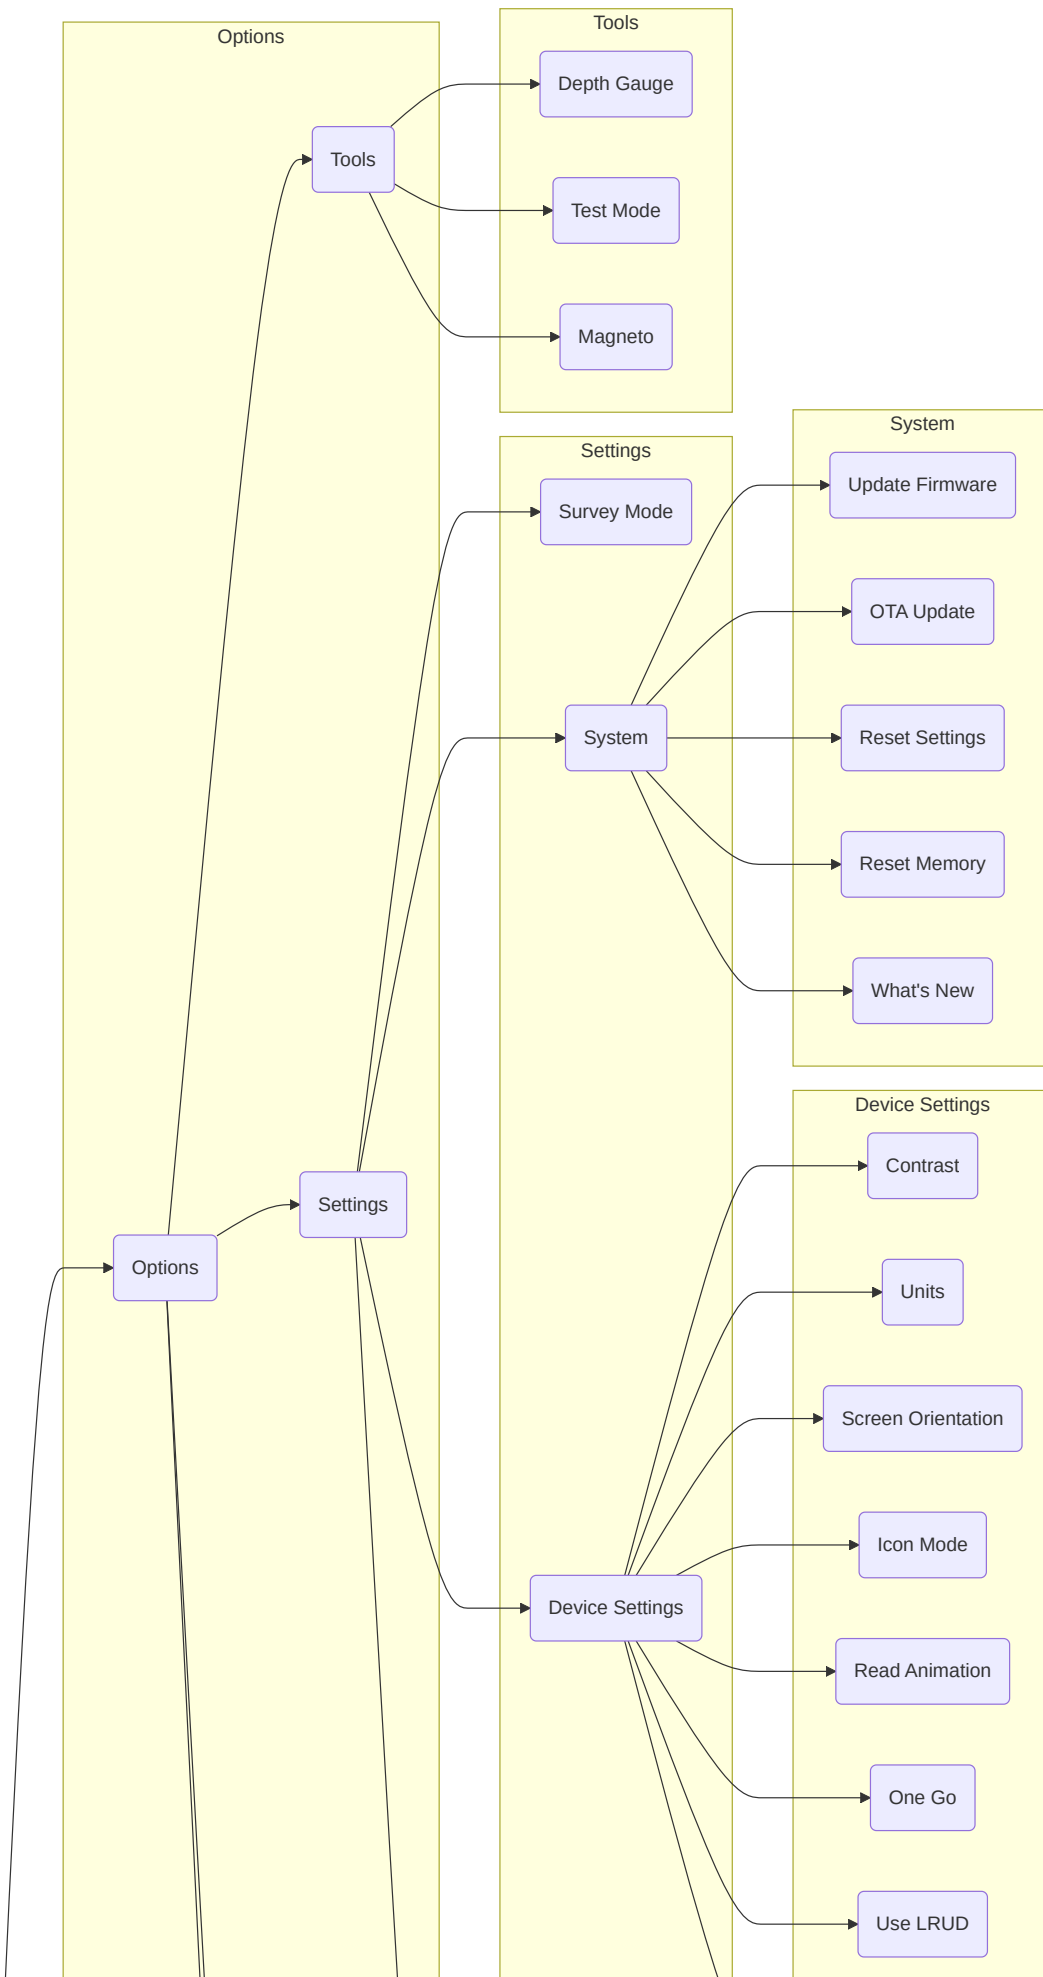

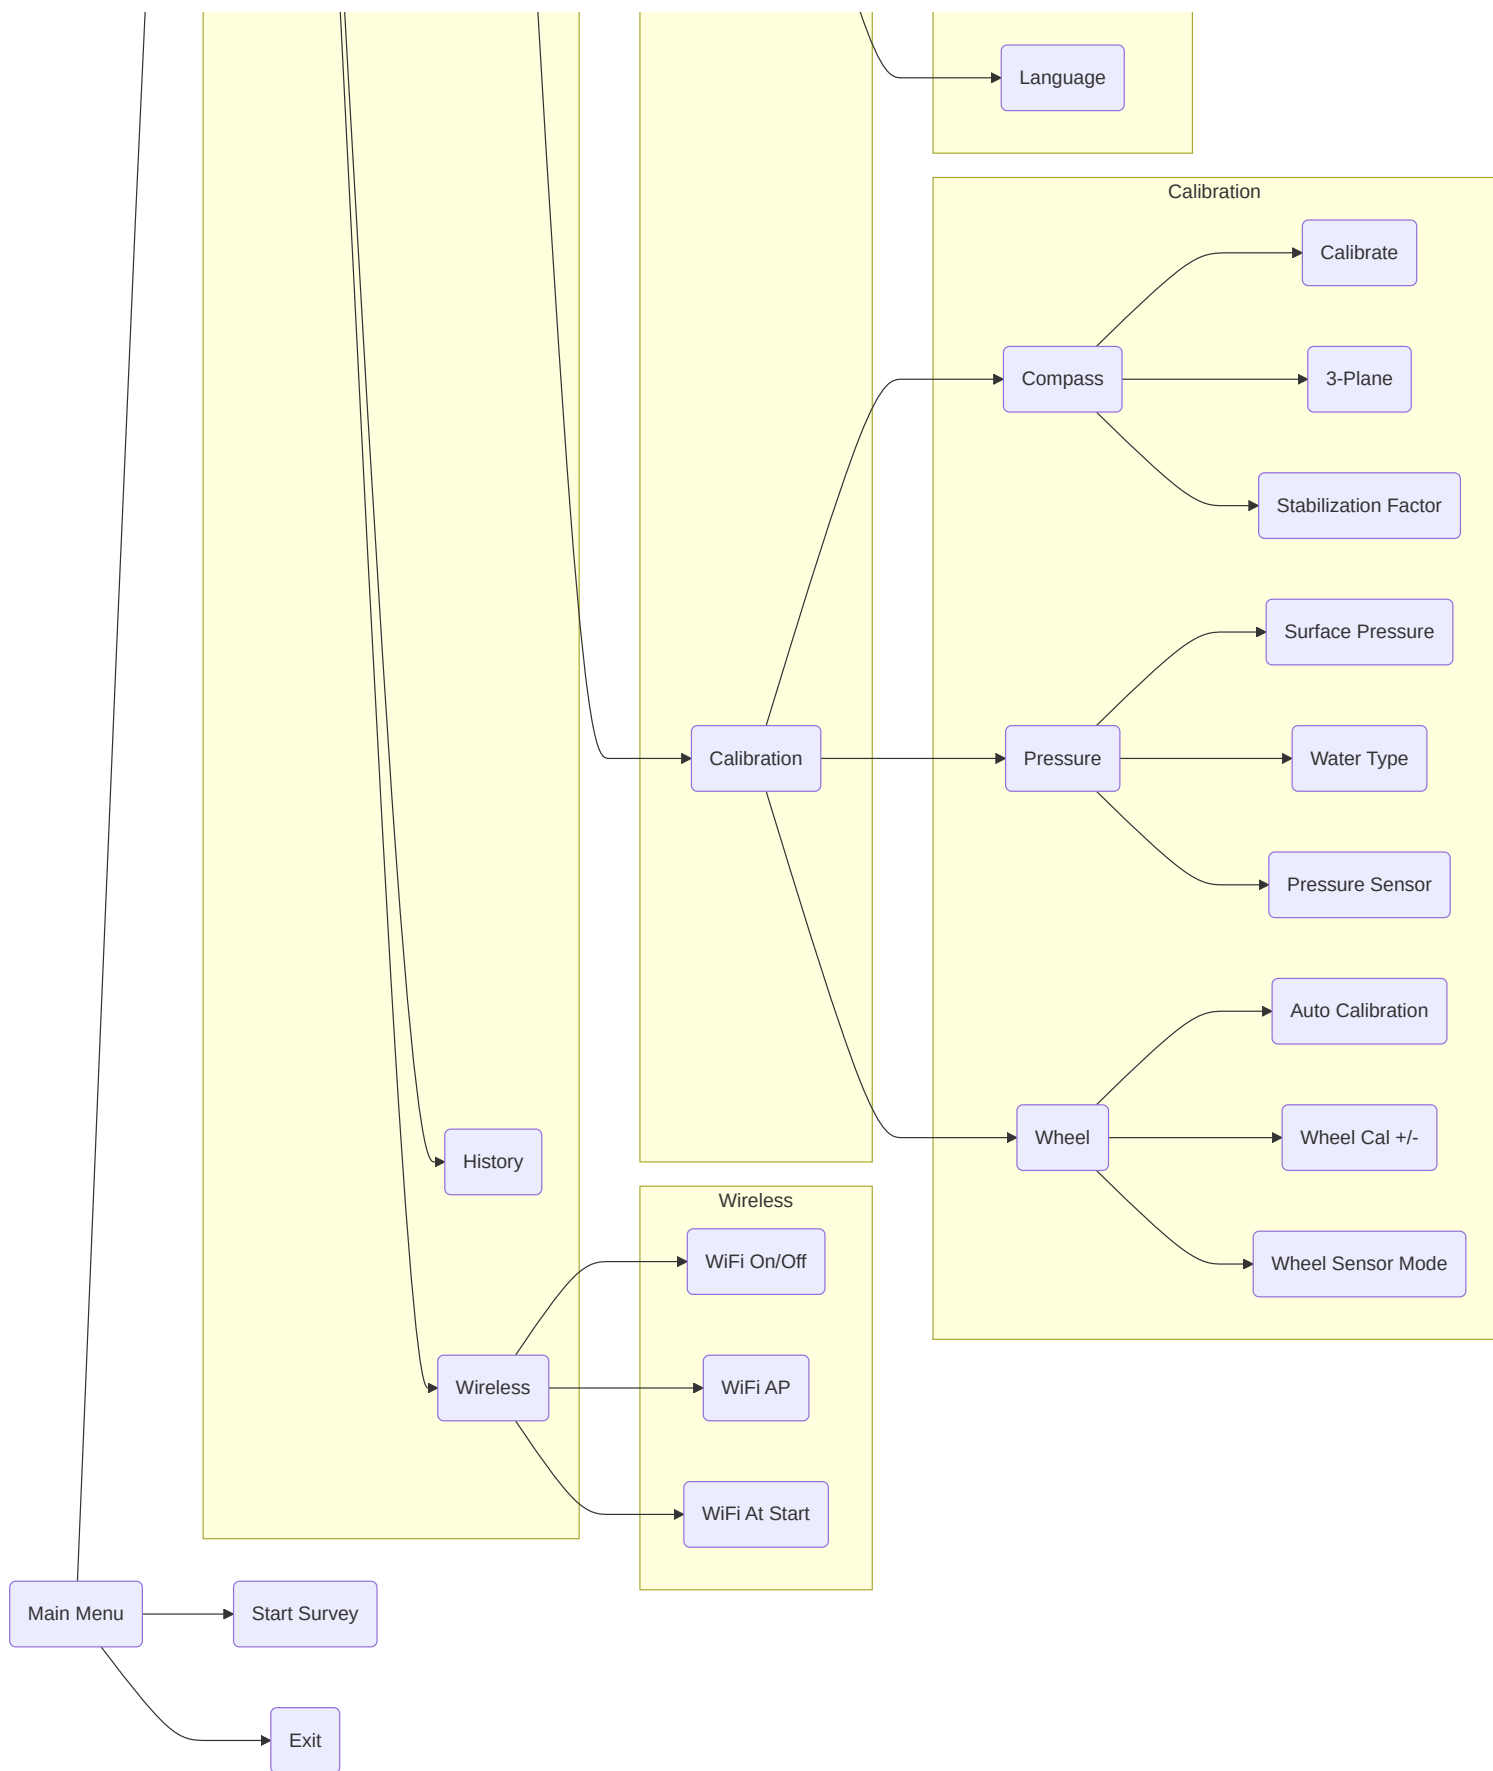

Main Menu

You will notice that the bottom line of the menu is displaying a stream of information:

Display	Description
26/03 11:26 27.6°C	<i>Day/Month Hour:Minute Water Temperature</i>
84% (FW)(m) M:0%	<i>Battery Charge % - Type of water - Unit - Memory usage</i>

Both the date/time itself and its display format (Day/Month or Month/Day) can be set from the device's built-in web page over WiFi. See [Date and Time Synchronization](#) for the full procedure and details on the consequences of skipping it.

Tip: If the date is not set or set incorrectly it will be adjusted to a default date. You'll get a **DATE RESET** message when you turn the Mnemo on.

Calibrating the unit

Before starting a survey MNemo's sensors need to be calibrated and certain parameters need to be adjusted

- Setting the units used by MNemo (Meter or feet)
- Selecting the type of water you are diving in (Fresh or Salt)
- Adjusting the surface pressure
- Adjusting the line measurement factor
- Calibrating the Compass

All the settings and calibration are kept in memory when you turn MNemo off.

This is a major difference with Mnemo v1 that required calibration of the compass for each session.

Setting the Unit System

You can select either the metric system (using meter and °C) or the imperial system (using feet and °F) to be displayed on the MNemo. In the menu navigate to :

OPTIONS > SETTINGS > DEVICE SETTINGS > UNITS (*m or ft*) to select the active unit system.

The unit system used on the device can be different from the one used in your mapping software

Calibrating the distance measurement

Manual Calibration

In the menu navigate to :

OPTIONS > SETTINGS > SENSORS > DISTANCE

and adjust the factor by small changes using the + and - menu entries. After each change take a length measurement of a line with a known length and compare the result. If the measurement is too short increase the factor otherwise decrease it.

This is not the recommended way to calibrate the length. The Auto mode described below is recommended.

Automatic Calibration

- Put in place a line with markers separated by 5m precisely if the unit is set to METER, or 15 ft if set to IMPERIAL.
- Select **OPTIONS > SETTINGS > SENSORS > DISTANCE > AUTO**
- Take a measure between those two markers as if they were two stations(tie-offs) in a cave.
 - The Standard survey process is explained [here](#)
- Once done you'll get a message Adjustment : X , X being the adjustment factor (*How much the factor needs to be changed to have a good measure*).
- Repeat that operation until you get an adjustment factor of **0** or **1**.

Tip: If at any point during a survey dive you realize that the line measurement is not working anymore, change the parameter WM to the value 1 or 2 instead of 0. Try both setting to find the one that is still working.

Calibrating the compass

This is by far the most important calibration of the MNemo.

- To have a precise and correct calibration it is CRUCIAL to be far away from any magnetic or electromagnetic disturbance, in particular : Scooters, steel tanks, compasses, dive computers, dive light canisters.
- Avoid also: Electric line, cars, any electric motor, metallic structure, reinforced concrete walls etc ...

From the main menu select


OPTIONS > SETTINGS > SENSORS > COMPASS

This opens the compass calibration menu with two calibration methods: **CALIBRATE** and **3-PLANE**, as well as the stabilization factor setting.


Fast Calibration

Select **CALIBRATE** from the compass menu.

You must rotate slowly (as in one full rotation per 4s) randomly the Mnemo on all of its 3 axis in order to perform the calibration.

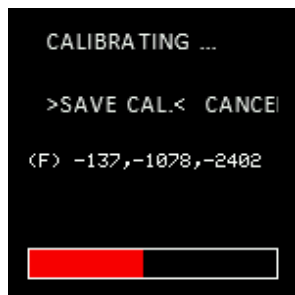

The display will show a red progress bar indicating the advance or the calibration process.

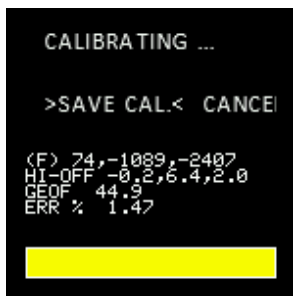

Once the calibration is complete the progress bar will turn yellow and you'll have more information displayed on the screen.

3-Plane Calibration

The 3-Plane calibration is an **optional** advanced method that collects measurements on three specific tilt planes: **horizontal (0°)**, **30° nose-up**, and **30° nose-down**. It is **not required** — the standard calibration described above is sufficient for most users and conditions.

The 3-Plane calibration can be beneficial when:

- You are surveying passages with consistent upward or downward slopes (around 30°) and want the best possible accuracy at those tilt angles.
- You want to ensure that the calibration is specifically optimized for the range of orientations typically encountered during cave surveying.

Because it concentrates measurements on the tilt angles you actually use in the field, the 3-Plane calibration minimizes heading inaccuracy in those orientations. However, if your standard calibration already shows a low ERR% and you are satisfied with the survey accuracy, there is no need to perform a 3-Plane calibration.

Prerequisite: A valid Fast Calibration must have been performed and saved before using the 3-Plane method. If no prior calibration exists, the screen will display "CALIBRATE FIRST" and return to the menu.

Select **3-PLANE** from the compass menu.

How it works

The calibration proceeds through 3 planes in sequence. For each plane:

1. An instruction screen appears showing the current plane number (1/3, 2/3, 3/3) and the required tilt angle.
2. The live calibration screen displays:
 - **Tilt indicator:** Your current tilt angle and the target. The text turns **green** when you are within $\pm 5^\circ$ of the target, **yellow** within $\pm 20^\circ$, and **red** otherwise. A horizontal bar also shows your tilt position relative to the target.
 - **Azimuth coverage:** A row of 12 blocks representing 30° sectors of a full 360° rotation. Each block turns **green** when that compass direction has been covered. A white marker shows your current heading.
 - **Calibration data:** Magnetometer readings, hard-iron offset (HI-OFF), geomagnetic field strength (GEOF), and fit error percentage (ERR%) appear as enough data is collected.
 - **Progress bar:** At the bottom, three segments show the overall progress across all three planes.
3. **Data is only recorded when your tilt is within $\pm 5^\circ$ of the target angle.** If you are outside this tolerance, measurements are paused and the azimuth sectors will not fill.
4. Once all 12 azimuth sectors are filled (a full 360° rotation at the correct tilt), the device **automatically advances** to the next plane.

Plane sequence

Plane	Target tilt	Instruction
1/3	0° (horizontal)	HOLD HORIZONTAL
2/3	+30° (nose up)	TILT 30 UP
3/3	-30° (nose down)	TILT 30 DOWN

Completion

After the third plane is complete, the calibration is **automatically saved** and a summary screen is displayed for 5 seconds showing:

- HI-OFF (hard-iron offset vector)
- GEOF (geomagnetic field strength)
- ERR% (fit error percentage)
- Total number of measurements collected

The device then returns to the main menu.

Understanding the calibration results

The relevant information is the amount after ERR% which indicates how close the calibration brought the compass to the theoretical model (uniform magnetic field in any orientation). This value should be smaller than 1%.

GEOF is the approximation of the magnetic field at that location. The compass of the Mnemo is not calibrated to give precise absolute magnetic measurements, nevertheless that gives you an indication of the strength of the magnetic field at your location and should be close to the theoretical value ([NCEI Geomagnetic Calculators](#))

After a firmware update is generally recommended to redo a calibration of the compass but it is important to turn the device completely off before doing the calibration or you'll get incoherent measurements

Important: A precise and correct compass calibration is essential for obtaining accurate survey data. The average calibration time is around 1 minute for the Fast Calibration. The 3-Plane calibration typically takes 2-3 minutes. If the calibration is not finished after 10min, turn MNemo off and on again and restart the calibration.

Survey Operations

The Mnemo has three survey modes. You can select which one you prefer to use in


OPTIONS > SETTINGS > SURVEY (BASIC *or* Verbose *or* ECO)


Selecting that menu row cycles through the modes — **BASIC** → **Verbose** → **ECO** → **BASIC** — and the row always shows the one currently selected.

- **BASIC** : This is the recommended survey mode. It does not require from you to read the display, just recognise the background color.
- **ECO** (*new in v3.4.0*) : The same survey as BASIC, drawn as a single small coloured dot on a black screen. It uses about **half the power**, and it deliberately keeps surveying past the low-battery cutoff instead of shutting down — for long dives.
- **Verbose** (*legacy - it will be removed in future versions of the firmware*) This one is easier to start with and offers some options not available in BASIC mode. It requires to have the ability to read the text on the LCD.


Survey Flow


BASIC Mode

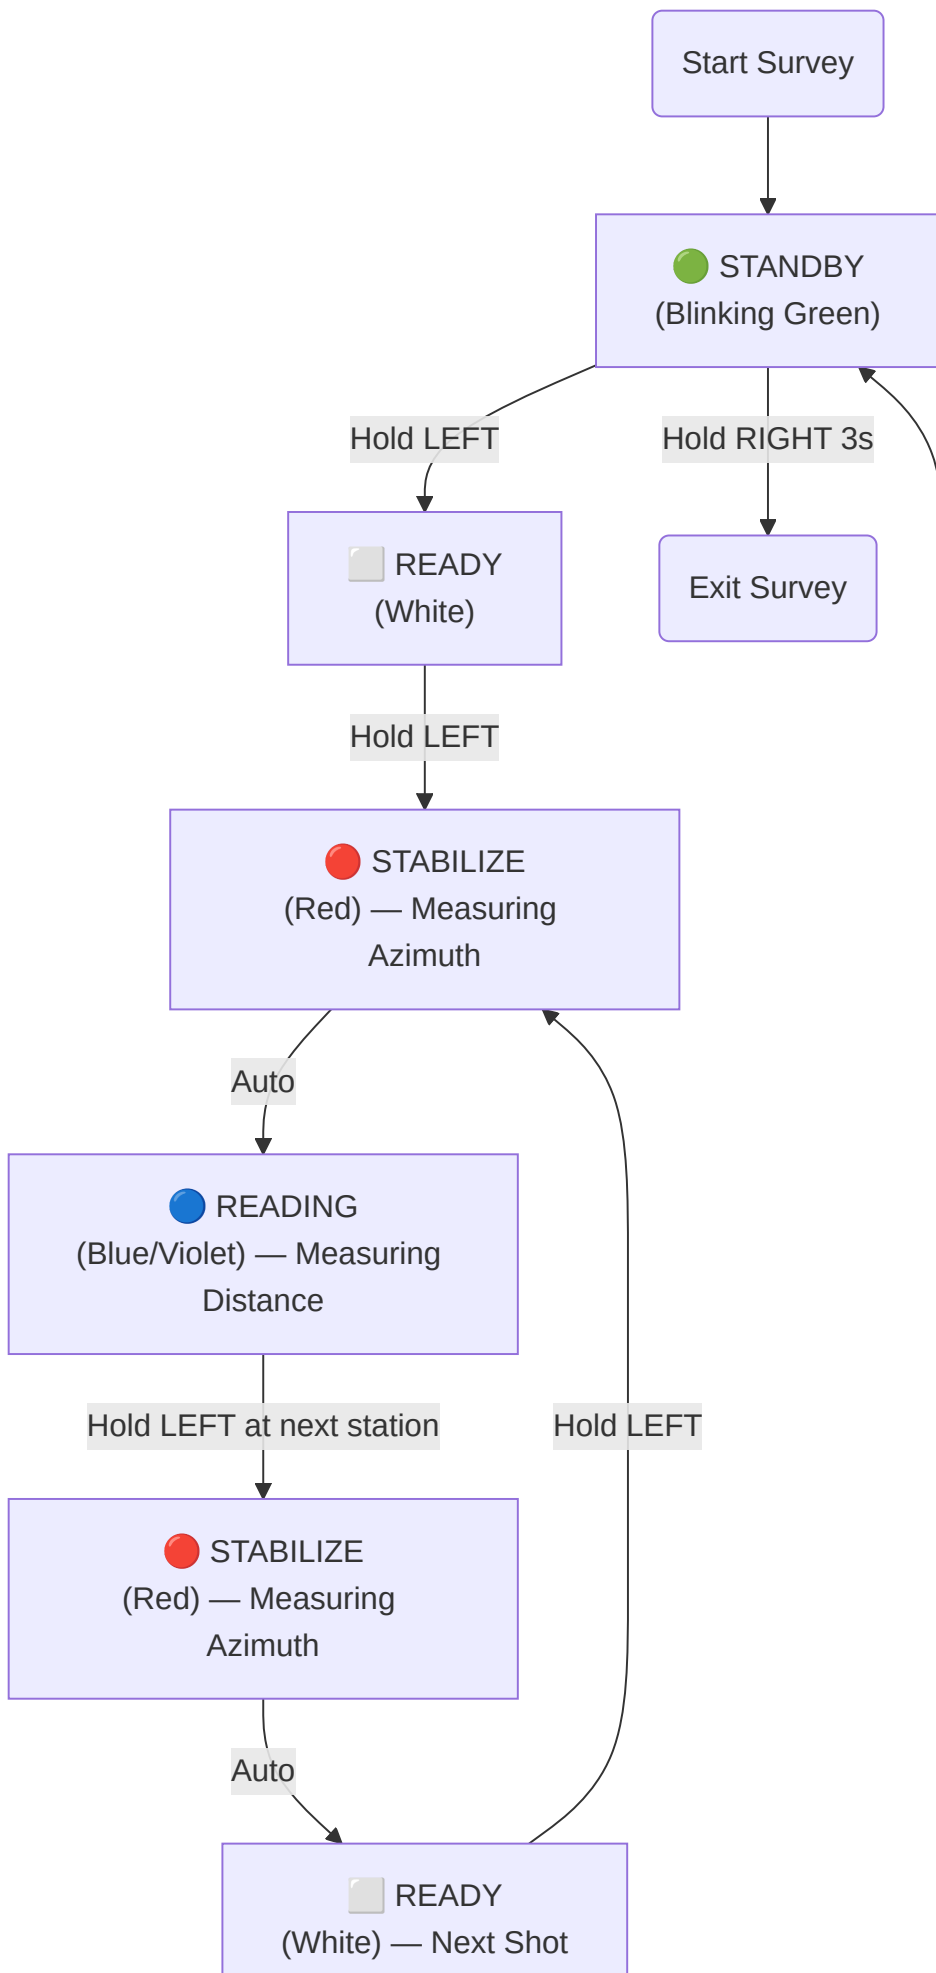

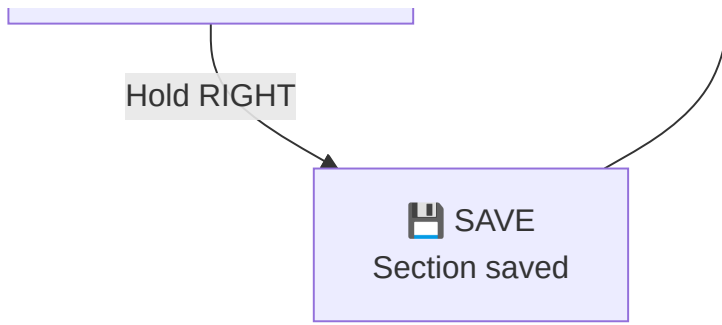

Verbose Mode

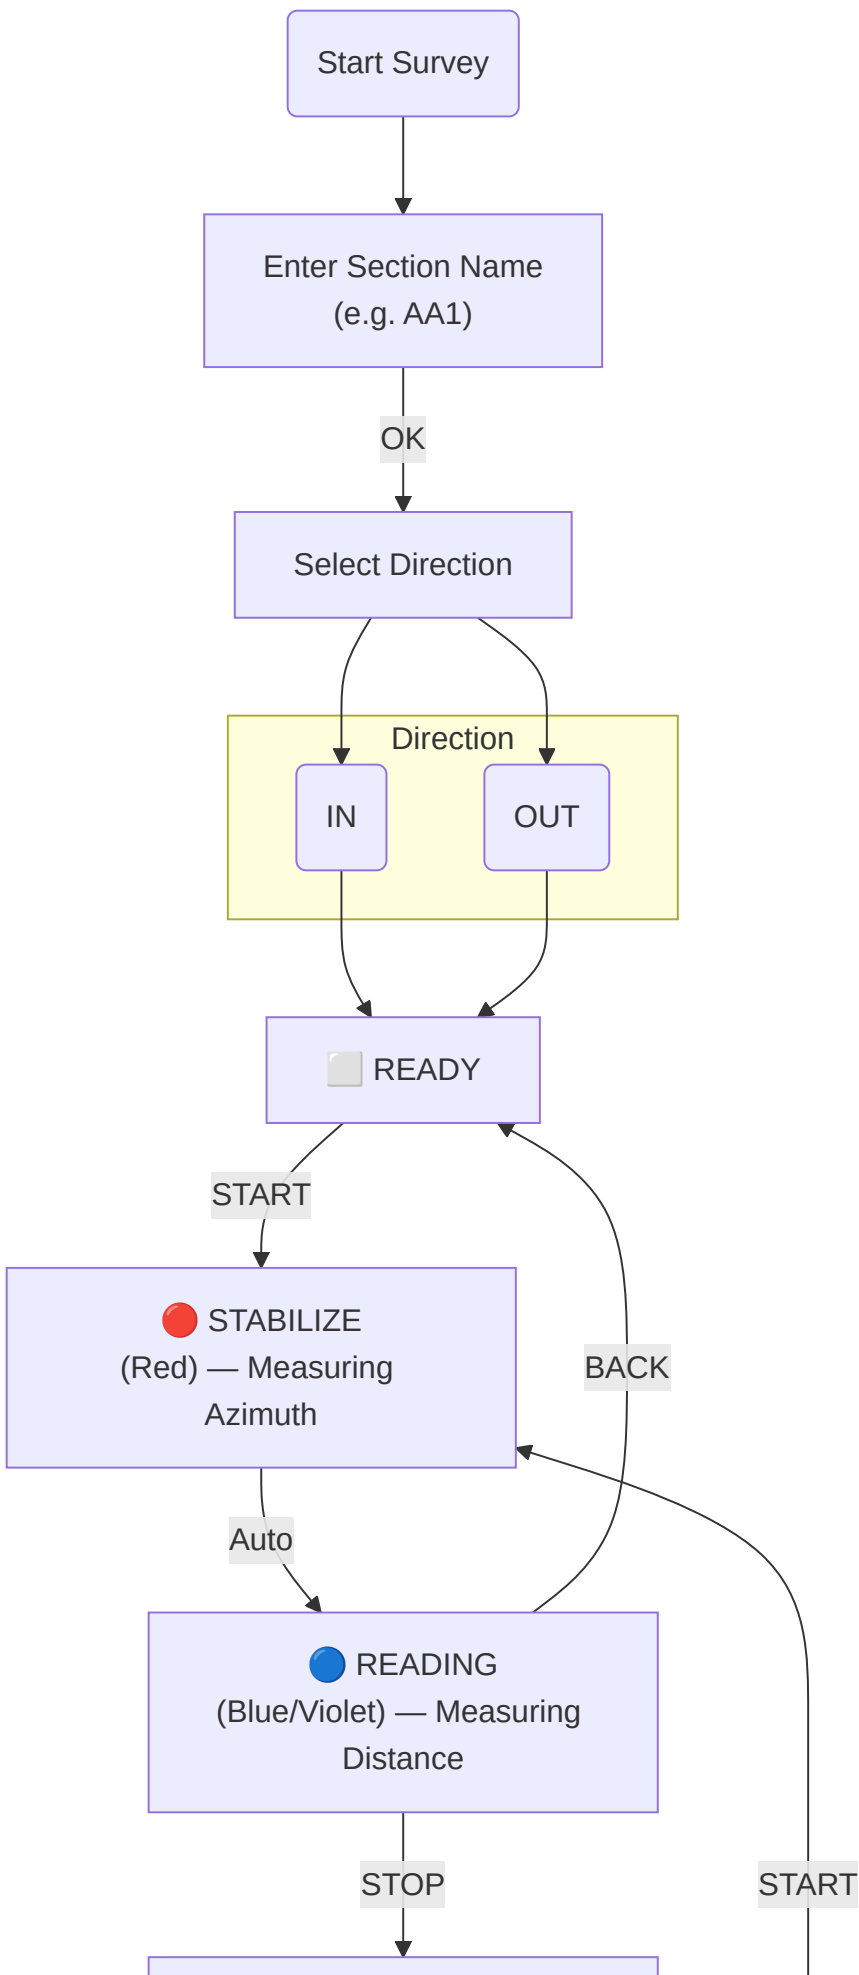

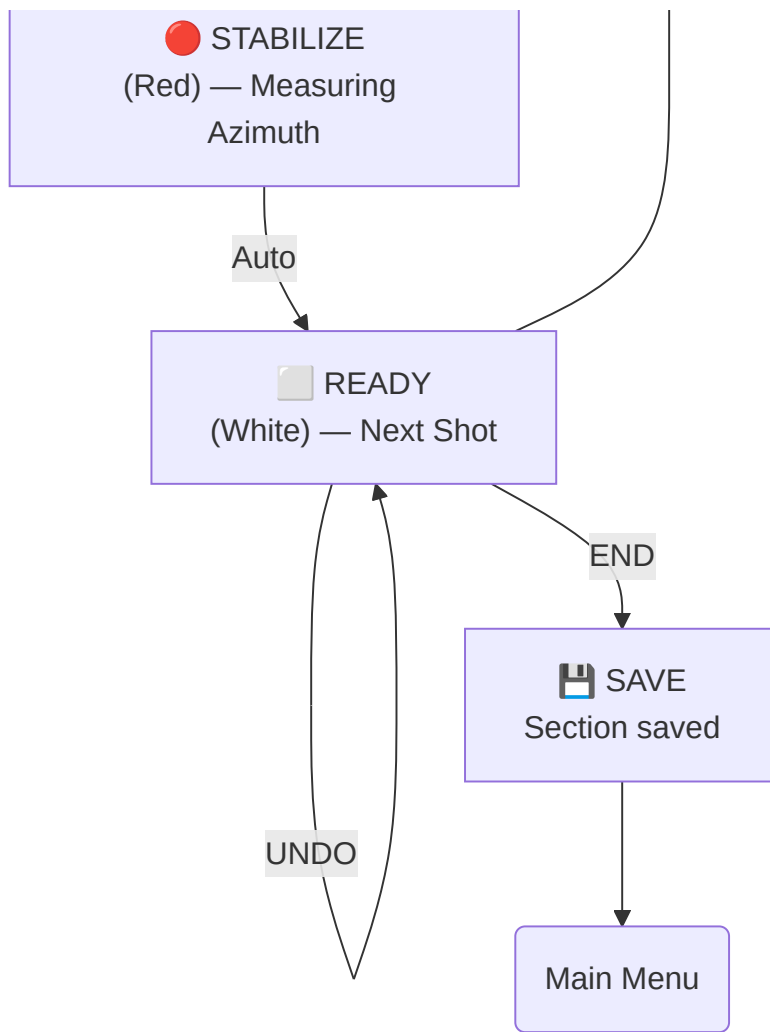

Color Reference

Color	Phase	Description
 Green (blinking)	Standby	Waiting to start a section
 White	Ready	Ready to begin a shot
 Red	Stabilize	Compass is measuring the azimuth — keep the device still
 Blue / Violet	Reading	Wheel is measuring the distance — move along the line

BASIC Mode (Recommended)

From the main menu select **SURVEY**

NOTE: The KNOT mode of Mnemo v1 has been removed

You'll notice a flashing **green** screen displaying STANDBY or an icon as well as the direction selected for the survey (IN is default but it can be changed using a [click command](#))



You can select in **OPTIONS > SETTINGS > UI(ICON or TEXT)** if you wish to have the text or the icon displayed in each phase of the survey


From now on you don't need to be able to read what's displayed on the screen. The color alone will give you information on which phase of the survey you are in.

In BASIC mode the slider button doesn't work by impulses, you'll have to hold the slider during a certain amount of time (more or less 2s) to give and validate a SELECT or NEXT command. A red progress bar on the top screen will show the progress, the command only gets validated once the progress bar is complete.



You can adjust the amount of time required to validate a command in the Setting section of MnemoLink

- From STANDBY mode, to start a section hold the slider left the screen turns WHITE, this indicates READY mode.

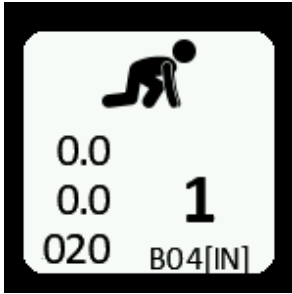

By default, in any BASIC survey mode all surveys are recorded IN and are named "BAS". You can then later sort out the data on your favorite survey software.

- Clip the device on the line at the beginning of the first shot.
- Hold the slider left the background turns RED, you are in STABILIZE mode (same as in Verbose survey mode).



- Once stabilized, the device goes in READING mode, you can now move along the line, you'll recognize the flickering BLUE/VIOLET square you already had in Verbose survey mode indicating the wheel is measuring the line



- Once you reach the end of the shot hold the slider left again, the background turns RED, you are in STABILIZE mode.



- Once stabilized the background becomes white again, you are back in READY mode.



- You can repeat the operation for the following shots.



The curve icon you can see in the last picture indicates that the measurement of the azimuth at the start and the end of the shot has a difference of more than 5 degrees. The exact difference is displayed over the curve (In the example we have 7deg of difference)




You might also find this icon which signals the change in depth is bigger than the length of the line. This usually happens on very steep shots.

Once you have finished the section, when you are in READY mode, to save the section move the cursor to the right. This will save the data and put the device back in STANDBY mode (Blinking GREEN).

To exit BASIC survey mode, from the STANDBY mode, hold the cursor to the right during 3s.

On a long dive, see ECO Mode (v3.4.0+) — the same survey, the same clicks, drawn as a single small coloured dot on a black screen for about half the battery draw.

BASIC Mode Overview

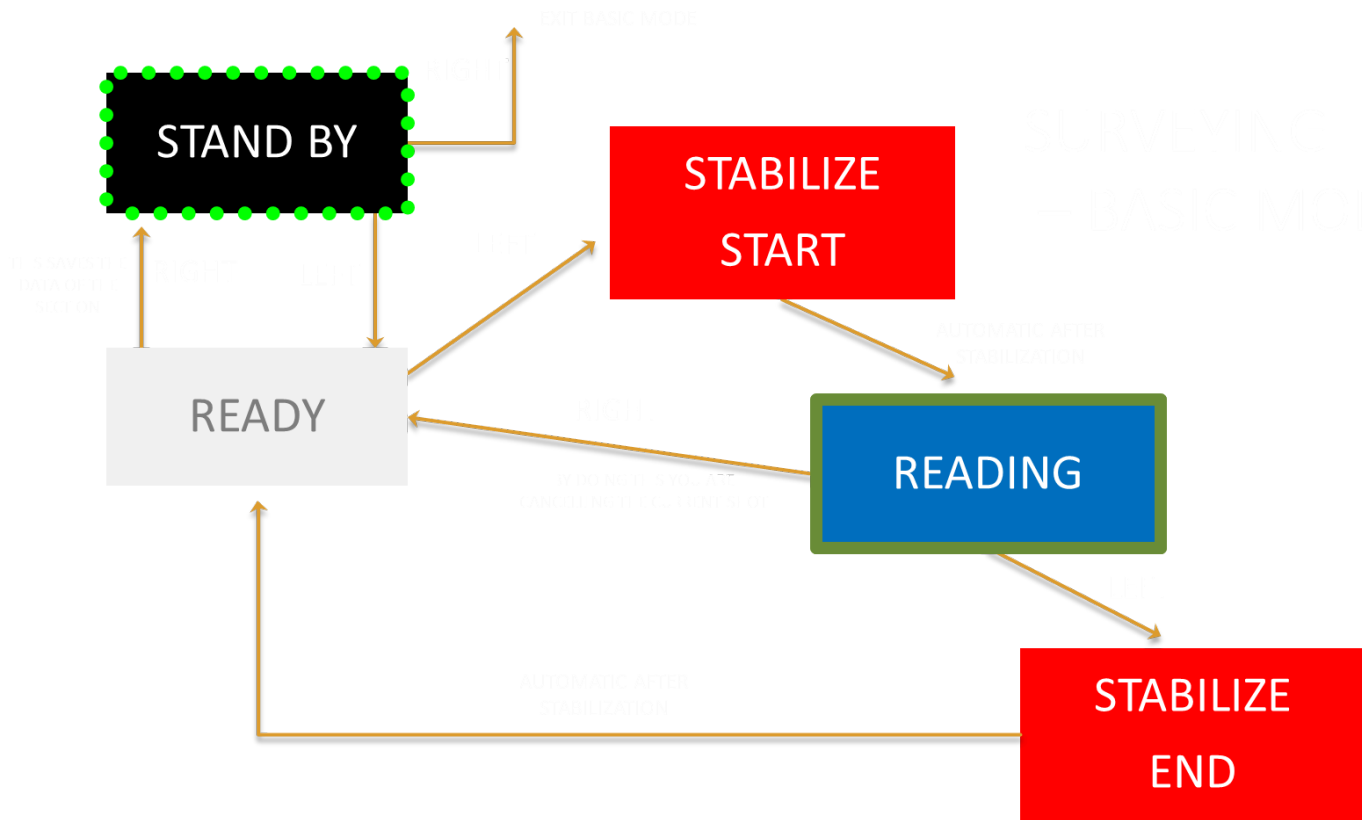

BASIC Mode Click Commands

This is a new feature introduced in v2.5.4

Whereas the BASIC mode uses long clicks to validate the main commands you can use shorter click combinations for auxiliary actions in BASIC mode:



- You can **add a marker**  with a unique ID to a station:

LEFT-LEFT-LEFT-RIGHT

Markers will appear on the live map with their unique ID

- You can display the live **survey map**:

LEFT-RIGHT-LEFT-RIGHT

- You can access the **LRUD** entry mode:

RIGHT-RIGHT-RIGHT-LEFT

- You can select the *survey direction* as **IN** :


LEFT-LEFT-LEFT-LEFT

- You can select the *survey direction* as **OUT** :

RIGHT-RIGHT-RIGHT-RIGHT

Changing the survey direction can only be done while in Stand By (Green) mode

In Basic mode when you do short clicks you'll notice dots appearing at the top of the screen, RED for left clicks and GREEN for right, they are here to help you enter click commands

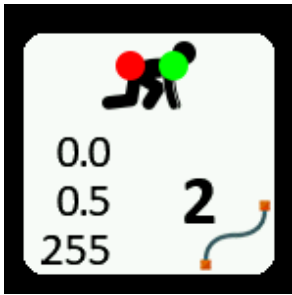

ECO Mode (Long Dives)

Introduced in v3.4.0.

ECO is a third survey mode, alongside **BASIC** and **Verbose**. Select it in:

OPTIONS > SETTINGS > SURVEY (BASIC *or* Verbose *or* ECO)

Each time you select that menu row the mode cycles **BASIC → Verbose → ECO → BASIC**. The row always shows the mode currently selected, and the choice is saved immediately.

It is built for one thing: **getting the longest possible survey out of one battery charge**. Everything you do is identical to BASIC — the same slider holds, the same **click commands**, the same wheel, the same readings. Only the screen changes, and the screen is where most of the power was going.

What it looks like

Instead of filling the whole display with the phase colour, ECO leaves the screen black and shows the survey phase as **one small coloured disc near the top of the screen**. The colours are exactly the ones you already know from BASIC:

Disc colour	Phase
Blinking green	STANDBY
White	READY
Red	STABILIZE
Flickering blue / violet	READING (the wheel is measuring)

(These are the default colours. If you changed them in MnemoLink, ECO uses your colours too.)

The screen is also refreshed **twice a second instead of five times a second**. Together these bring the device down to **about 27 mA while surveying, against 55-57 mA in BASIC** — better than half the power for the same survey.

Your contrast setting is left alone in ECO. An early version of the mode dimmed the panel as well, but ECO lights so few pixels that dimming them further saved very little — and it cost readability underwater, which is exactly where the mode is meant to be used.

The click-code reminder is still shown in ECO. Dropping it would have saved about 1.5 mA, which is not worth losing the reference underwater.

ECO sections are named E##

A survey shot in BASIC is stored as `B01`, `B02`... A survey shot in ECO is stored as `E01`, `E02`..., so you can always tell afterwards — in the [history list](#), in the web page and in the exported file — which surveys were shot in ECO, and therefore which ones may have ended in a flat battery. The two modes share one counter, so the numbers never collide.

ECO runs the battery all the way down

This is the part to understand before you use it.

In BASIC and Verbose the MNemo shuts itself down cleanly when the pack reaches the low-battery cutoff (7.0 V). That cutoff leaves a real amount of usable capacity unspent — sensible on a normal dive, wasteful on a long one.

In ECO the MNemo does not stop. The low-battery icon appears in the **top-right corner** of the screen — clear of the state disc and of the readings — as a *warning*, and the survey carries on until the pack is genuinely empty and the device dies.

That is the intended behaviour, not a fault. It is also why the next section matters.

If the power dies mid-survey, your shots survive

Because ECO is designed to end in a power loss, the firmware now expects it.

If the MNemo loses power in the middle of a section — flat battery, flooded compartment, anything — the section is left without its end marker. On the **next power-on** the device closes that section for you, before it scans the memory, and displays:

Survey recovered

The shots you had already taken are all there: in the history, on the map, and in your download, as an ordinary finished section.

This used to lose data. Before v3.4.0 a section cut short like that survived only as long as it was the last thing in memory. As soon as you started your next survey on top of it, **the whole dangling section was discarded.** That is fixed.

When to use which mode


	Use
BASIC	Normal dives. The recommended everyday mode — full-screen colour, easiest to read at a glance.
ECO	Long dives, or any dive where running out of battery is a real possibility.
Verbose	When you need the options only Verbose offers, and you can read the screen. <i>(legacy)</i>

You can switch modes at any time from the menu between surveys.

Verbose Mode (legacy)

Starting a survey

From the main menu select **SURVEY** The screen will display options similar to:

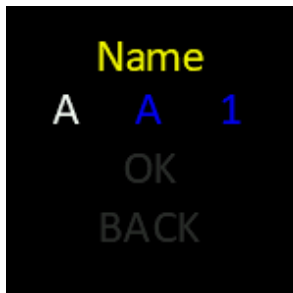


In this menu you can choose the name of the section you are surveying.

Section in this case means the section of the survey which can differ from the section of the cave you are working in.

In our example the section is called AA1. You can navigate from one letter to the other moving the slider to the *right* and change the current letter by moving the slider to the *left*. Once done select OK.

The menu will give you the choice of the direction you are surveying, IN or OUT.

- **IN** means you are going from already surveyed stations to new ones
- **OUT** means you are coming from new stations going towards already known ones.

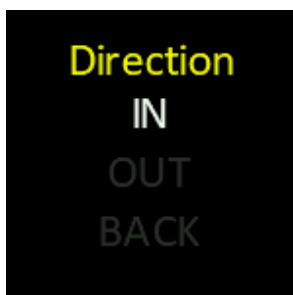

NOTE : The reference shot that you had in Mnemo v1 are no longer used in v2

Surveying a shot

To survey a shot:

- pull the pressure plate lever
- insert the line into the slot
- release the lever
- make sure the line is not trapped
- slide the device to the beginning of the shot (Entry Station)

Select **START**



The display will show a *RED* square:



At that point the device is waiting to be stabilized to measure the azimuth.

THE ONE THING TO REMEMBER FROM THIS USER MANUAL: Don't hold the device in your hand, rather support it from beneath so it can use the tension in the line to self align and take the most accurate measurement possible.

The display shows a *BLUE* or *PURPLE* square with a dot in it when the compass has measured the first azimuth.



You can now move the device along the line all the way to the next station. The display will be flickering that BLUE/PURPLE square indicating that the wheel is spinning and measuring the length of the line. The device measures the line in both direction allowing you to compensate for big diameter tie-offs. *If the line is too loose the length reading will be incorrect.*

You can use Mnemo v2 in reverse direction of the engraved arrow, the device will automatically reverse the azimuth

If the device is flickering BLUE/RED that means it has been dragged along the line before the stabilization phase was over, you should start the survey of that shot again.

When you reach the next station, select **STOP**

The display turns red waiting to stabilize and measure the second azimuth.

Repeat the operation ...

Once you reached the last shot of your section select **END**

This will save the section. You are back to the main menu ready to survey the next section !

Cancelling / Retaking a measure

If you want to retake a measure, there are two possibilities:

- Either you are still in reading mode (BLUE/PURPLE background), in this case just select BACK and you can retake the measure you were taking.
- You finished the measure (WHITE background waiting for next measure), in this case you can select UNDO to erase the last saved measure and take it again.

Recording the surface pressure

The device calculates the depth by measuring the variation of pressure between the surface and where it is located under water. Therefore it needs to have a reference measurement of the surface pressure. This can be done by navigating to :

OPTIONS > SENSORS > DEPTH > SURFACE

Once you get the *CALIBRATED* message on the screen that means the device recorded the current atmospheric pressure as reference.

This needs to be recalibrated mainly when diving at altitude or diving during extreme weather conditions


Obviously ... ***DO NOT ADJUST SURFACE PRESSURE IN THE WATER***

LRUD (Cave Profile description)

You can enter LRUD (Left-Right-Up-Down) measurement (or estimation) values to describe the corridor section of the cave at each station.

- This is done by going to


OPTIONS > SETTINGS > LRUD(LIST or INC)

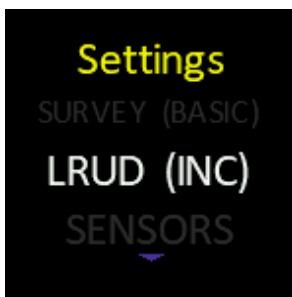


- **INC** : In this mode the numerical value will increase gradually. It is the slowest of the two modes but allows to enter precise values
 - **LIST** : In this mode the numerical value will increase according to a predetermined set of lengths. It's the fastest mode and typically the one used when value are estimated rather than measured.
- In BASIC Mode, you can also enter the LRUD menu for chosen stations when you are on the READY screen (the one with WHITE background) with a click combination:

RIGHT-RIGHT-RIGHT-LEFT

Once you are on the LRUD entry screen you increase the value moving the cursor left and go to the next value moving it right.

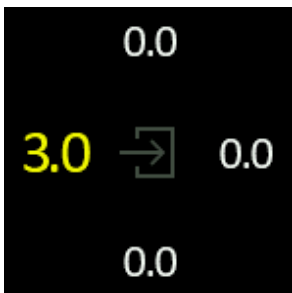

Finally you exit the screen by selecting the button in the middle :

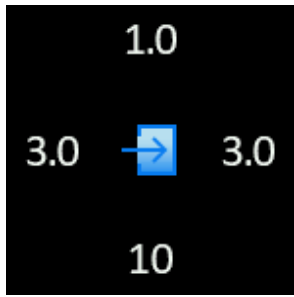

Interference Marker

During your survey, if you see an icon of a magnet flashing on your screen, that means the device has detected a magnetic interference.



That flashing will only last for 5s, when it stops it doesn't mean the problem is gone, just that you were warned. In such a case make sure that no part of your equipment has magnets or other elements that could strongly interfere with the compass.

About Stabilization

In which ever survey mode you use the Mnemo the **stabilization** phase is indicated by **RED background color**.

If during stabilization the red background starts flashing, that means the device is not flat enough (ie. rolling too much on one side or the other). In this case rotate the device around the line until the blinking stops, then stay stable and the measure will be taken.

The rotation tolerance is quite large (about 30° on each side of the line) so this should not be a major issue.

Surveying - The big picture

■

An important thing to remember is that once you are using MNemo it is not necessary to read the display for each operation. The color will indicate the operational phase. Familiarity with MNemo allows your focus to be on the safety of your dive and a global cave/environment awareness. BASIC mode makes it even easier, we recommend that mode for all your surveys.

With a bit of practice you can survey at the same speed you'd normally swim in a cave (15-20m/min).


Survey History and Direct View

You can access the history of your surveys on the device in the Menu at:


OPTIONS > HISTORY

It will display a list of all the surveys on your device. By selecting one of those surveys you'll get access to a map of that survey as well as some basic statistics.

Survey names. Surveys shot in BASIC mode are named B01, B02... and, *since v3.4.0*, surveys shot in ECO mode are named E01, E02... so you can tell afterwards which ones were shot in ECO — and therefore which ones may have ended on a flat battery. Both modes share a single counter, so the numbers never repeat. A survey named by hand in Verbose mode keeps the name you gave it.

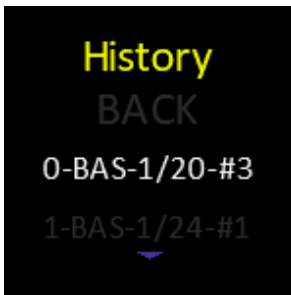

At any time, you can access the latest survey — or the survey currently being done — by double tapping the back of your Mnemo. It will display a map that orientates according to the orientation of the device if you are in survey mode, otherwise oriented north.

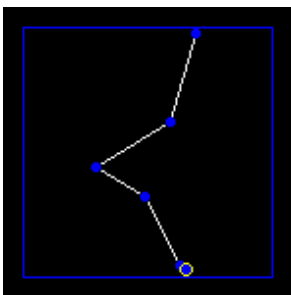

Give an impulse left to the slider button and you will have a screen displaying info on the current survey.

```
Date:      13:10:27
Start:     10:00:00
End:       10:00:49
Shots:     5
Distance:  6.4 m
Max Depth: -0.0 m
Min Depth: -0.1 m
Avg Depth: -0.0 m
```

One more slide and you are back where you started from. This feature can be deactivated and its sensitivity adjusted with the "Double Tap" setting in MNemoLink.

In BASIC mode, you can also access the current survey map and info by using clicks (details [here](#))

2D / 3D Map View

When a map is displayed — whether from History or from the BASIC mode shortcut — pressing the **select button** cycles through three views:

```
2D Map → 3D Map → Statistics → exit
      [select]   [select]       [select]
```

3D Map

The 3D view renders the survey in perspective with depth-based colour: **blue = deepest, red = highest** (since v3.1.0; the on-device gradient now matches the web view's). Three reference axes are shown at the origin:

- **Yellow** arrow — vertical (UP)
- **Red** arrow — North
- **Blue** arrow — East

The camera angle is controlled by the **IMU** — simply tilt and rotate the device to change the viewing direction. The camera framing adjusts automatically to fit the entire survey in view.

Web Interface

When connected over WiFi (see [Wireless Data Transfer](#)), every recorded survey can be viewed in your browser as well as on the OLED.

2D survey map

From the device's main web page, clicking a survey opens the `/View` page: a top-down SVG map of the survey path. (v3.1.0+) The path is drawn as per-segment lines coloured by depth — **blue = deepest, red = highest** — so it stands out clearly against the dark background. Stations are marked with circles (yellow at the start, red elsewhere).

Interactive 3D viewer (v3.1.0+)

On the 2D map page a ► **View in 3D** button opens `/View3D`, a full-screen interactive 3D viewer of the same survey. Controls:

Action	Mouse	Touch
Orbit	Left-drag	One-finger drag
Dolly (camera distance)	Right-drag up/down	—
Zoom	Scroll wheel	Pinch
Re-centre on a station	Click the station	Tap the station

A base-plane grid is drawn at the deepest survey point, and a small compass-rose axes widget (East / North / Up) sits in the lower-left corner. Use the ← **2D** link at the top-left to return to the 2D map.

Recovered surveys (v3.4.0+)

If the device lost power in the middle of a section, the section is closed at the next power-on — the device shows **Survey recovered** — and it then appears in this list like any other finished survey, with the shots that were already recorded. See [Memory management](#).

Memory management

Mnemo can save around 5000 measures. You can see the amount of memory used on the bottom bar in the main menu.

You can erase the memory by going to: **OPTIONS > SETTINGS > SYSTEM > RESET MEMORY**

We recommend downloading the data from the MNemo after each survey session, backing up the data as DMP and erasing the data from the device in order to start next session with an empty memory.

A DMP you have backed up can be turned into a spreadsheet at any time — drop it on converter.arianesline.com. See [MnemoLink - Data Transfer](#).

Erasing from the web interface (v3.4.0+)

The memory can also be erased from the device's built-in web page, without going through the device menu. On the main page, the **Erase memory** button opens a confirmation page which first shows you what you are about to lose:

- the number of **surveys** and **shots** currently stored, and the **percentage of memory in use**;
- a **Download DMP** and a **Full CSV** link, so you can save the data before erasing it.

The erase only happens once you type **ERASE** in the confirmation box and submit the form. Reloading or bookmarking the page cannot wipe your data.

The page refuses the erase while the device is busy — mid-survey, calibrating, or in depth-gauge, test or Mr Magneto mode. Finish or leave what the device is doing and try again.

Device settings and stored WiFi networks are not affected; only survey data, the marker counter and the section counters are cleared.

If the device loses power mid-survey (v3.4.0+)

A section interrupted by a power loss — a flat battery in **ECO mode**, a flood, anything — is closed automatically at the next power-on. The device shows **Survey recovered** and the shots already recorded appear in the history, on the map and in your download as an ordinary finished section.

Before v3.4.0 such a section survived only while it was the last thing in memory; starting a new survey on top of it discarded it entirely.

Setting the water type

You have the choice between fresh and salt water and you can access the option by navigating in the menu to :

OPTIONS > SENSORS > DEPTH > WATER (*fresh or salt*)

Device Settings

Display and device preferences are grouped under:

OPTIONS > SETTINGS > DEVICE SETTINGS

Screen Orientation

Navigate to **OPTIONS > SETTINGS > DEVICE SETTINGS > LCD ORIENT.(X)**

Each time you click on the menu entry the screen rotates 90 degrees.

Display Contrast

Navigate to **OPTIONS > SETTINGS > DEVICE SETTINGS > CONTRAST**

The contrast value goes from 2 to 16, with 16 being the brightest.

Language

Navigate to **OPTIONS > SETTINGS > DEVICE SETTINGS > LANGUAGE**

The on-device interface is available in six languages:

- **ENGLISH**
- **ESPANOL**
- **FRANCAIS**
- **DEUTSCH**
- **ZH (SIMP)** — Simplified Chinese (Mainland)
- **ZH (TRAD)** — Traditional Chinese (Taiwan)

The currently active language is marked with a  arrow next to it. Select a different entry to switch languages immediately. The setting is saved to device memory and persists across power cycles.

Language

The MNemo on-device interface is available in six languages. Navigate to:

OPTIONS > SETTINGS > DEVICE SETTINGS > LANGUAGE

You will see the list of available languages:

- **ENGLISH**
- **ESPANOL**
- **FRANCAIS**
- **DEUTSCH**
- 简体中文 — Simplified Chinese (Mainland)
- 繁體中文 — Traditional Chinese (Taiwan)

The currently active language is marked with a  arrow. Select a different entry to switch immediately — all on-device menus, prompts and feedback messages update at once.

The language setting is saved to device memory and persists across power cycles. It is independent of the unit system or any other setting.

Date and Time Synchronization

The MNemo v2 stores the date and time of each survey. It is important to ensure the device's clock is correctly set before going on a dive, as an incorrect date/time will affect the timestamps recorded in your survey files.

How to Synchronize the Date and Time

From the web interface (recommended)

The easiest way to set the clock is from the device's built-in web page over WiFi — no extra software beyond a browser once WiFi is available.

1. Turn WiFi on (see [Wireless Data Transfer](#)) and open the Mnemo's page in your browser.
(v3.1.0+: scan the QR code shown on the OLED.)
2. Open the **Settings** page from the top menu.
3. Under **Time & Format** → **Date & time**, tap **Synchronize date & time**.

The device clock is set to the **current date and time of the browser** (i.e. your phone or computer). Two taps and you're done.

(v3.4.0+) The page now **tells you the result**: it confirms that the device clock was synchronized, or says plainly that the write failed or that the request was rejected. Before v3.4.0 a sync that did not take looked exactly like one that succeeded — if it reports a failure, try again, and check the clock on the Main Menu status line before diving.

Tip: Make it a habit to open the Mnemo page and tap the sync button at the start of every dive trip.

Over the USB serial console (advanced)

Power users can also sync the clock over USB by sending the `syncdatetime` command on the device's serial port (57600 baud) followed by 5 bytes (year minus 2000, month, day, hour, minute). This is the protocol that desktop helper tools use under the hood.

Checking the Current Date and Time

You can verify the current date and time directly on the device from the **Main Menu**. The bottom status line shows:

Display	Description
26/03 11:26 27.6°C	<i>Day/Month Hour:Minute Water Temperature</i>

The Day/Month order can be swapped to Month/Day on the web Settings page (**Time & Format** → **Date format**).

If the date and time look incorrect, follow the steps above to resynchronize.

Potential Issues When the Date Has Not Been Synchronized

If the device's clock has not been synchronized, the following issues can arise:

- **Incorrect survey timestamps:** each survey is recorded with a date and time. If the clock is wrong, it will be difficult to match a survey to the date of the actual dive.
- **Default date fallback:** if the internal clock has lost its settings (for example after a fully depleted battery), the device falls back to a default date. A **DATE RESET** warning is shown for a few seconds when the Mnemo is turned on to alert you.
- **Data-management confusion:** when reviewing surveys in your cave-survey software, incorrect dates make it harder to organise and identify dives, especially when multiple surveys are stored on the device.

Important: if you see the **DATE RESET** warning when turning on your MNemo, resynchronize the clock from the web interface before your next dive.

Battery

- The Mnemo contains a 2S - 450 mAh sealed lipo battery.
- The Mnemo can be recharged using either the USB port of your computer or a dedicated charger. It requires no more than 150mA charging current.
- The red LED indicates that the charge is in progress. It will turn off when the charge is complete.





It is recommended to have the Mnemo turned OFF before connecting for a charge.

Note that if the device is ON and connected to a charger, it will not turn off when you select EXIT in the main menu but simply go into Energy Saver mode (Blinking Battery on the screen)

Making the charge last (v3.4.0+)

Three changes in v3.4.0 stretch a single charge, two of them without you doing anything:

- **The processor rests between jobs.** The MNemo used to run at full clock for an entire dive even when there was nothing to do. It now halts between scheduled jobs and wakes on the next one — or immediately on a wheel tick or a button press. Nothing looks different; the battery simply lasts longer.
- **WIFI OFF really turns the radio off.** Switching WiFi off used to leave the radio powered and still associated, holding the device at roughly **80 mA instead of its 28 mA idle**. The radio is now genuinely powered down.
- **ECO survey mode** more than halves the current drawn while you survey — about **27 mA against BASIC's 55-57 mA** — by replacing the full-screen colour with a single small coloured dot on a black screen.

Low battery

When the pack runs low, a **low-battery icon** appears on the screen and the display is dimmed.

- In **BASIC** and **Verbose** the MNemo then shuts itself down cleanly at the cutoff, ending the current section first.
- In **ECO** it does **not** — the icon is a warning, and the survey deliberately continues until the pack is empty. If the device dies mid-section, the next power-on reports **Survey recovered** and your shots are kept. See [ECO Mode](#).

Tools

Navigate to: **OPTIONS > TOOLS**

You'll find a list of diagnostic and analysis tools:

- **Depth Gauge:** A depth gauge indicating depth and absolute pressure
- **Test Mode:** A mode to test the reading of all sensors — pressure, magnetometer, inclinometer, etc.
- **ONE-GO(OFF):** *NOT DOCUMENTED, leave on OFF*
- **MAGNETO:** Magnetic analysis tool

WiFi Access Point mode has moved to **OPTIONS > WIFI > WIFI AP**. See [Wireless Data Transfer](#) for details.

Magneto

You can use the Magneto feature to analyse how strongly your dive equipment affects magnetic readings.

The earth magnetic field ranges from 25 μT to 65 μT depending on your location.

By moving the Mnemo closer to or further from your equipment you'll get a reading of the strength of the magnetic field created by that equipment.

- Here you can see that the magnetic field is between 32.92 and 33.44 when the device is left without any outside disturbance



- When we move a dive light around the Mnemo the magnetic field is this time fluctuating between 30.55 and 37.49 — a huge difference!



Magnetometer

>RESET< EXIT

Bc= -17.58,-17.50,-26.31

Gp= -0.02,0.00,-1.01

delGp= 0,1,-1

30.55<uT= 36.16<37.43

avg: 33.96 #165

V2



MN

MnemoLink - Data Transfer

The Mnemo v2 is supported on Microsoft Windows(>7), Apple Mac OSX (>10.6) and Linux (Kernel >5.0.0)


Currently there's no driver installation required for the Mnemo v2 on any of the supported operating system.

MNemoLink is the software that interfaces your Mnemo v2 with your computer, allows the download of the data as well as the visualization of the survey. It also allows to adjust certain settings that are not available on the Mnemo menu.

You can download the software [here](#)

Connection

Connect the USB cable to the device as shown on the picture and then to your computer. The order is important.

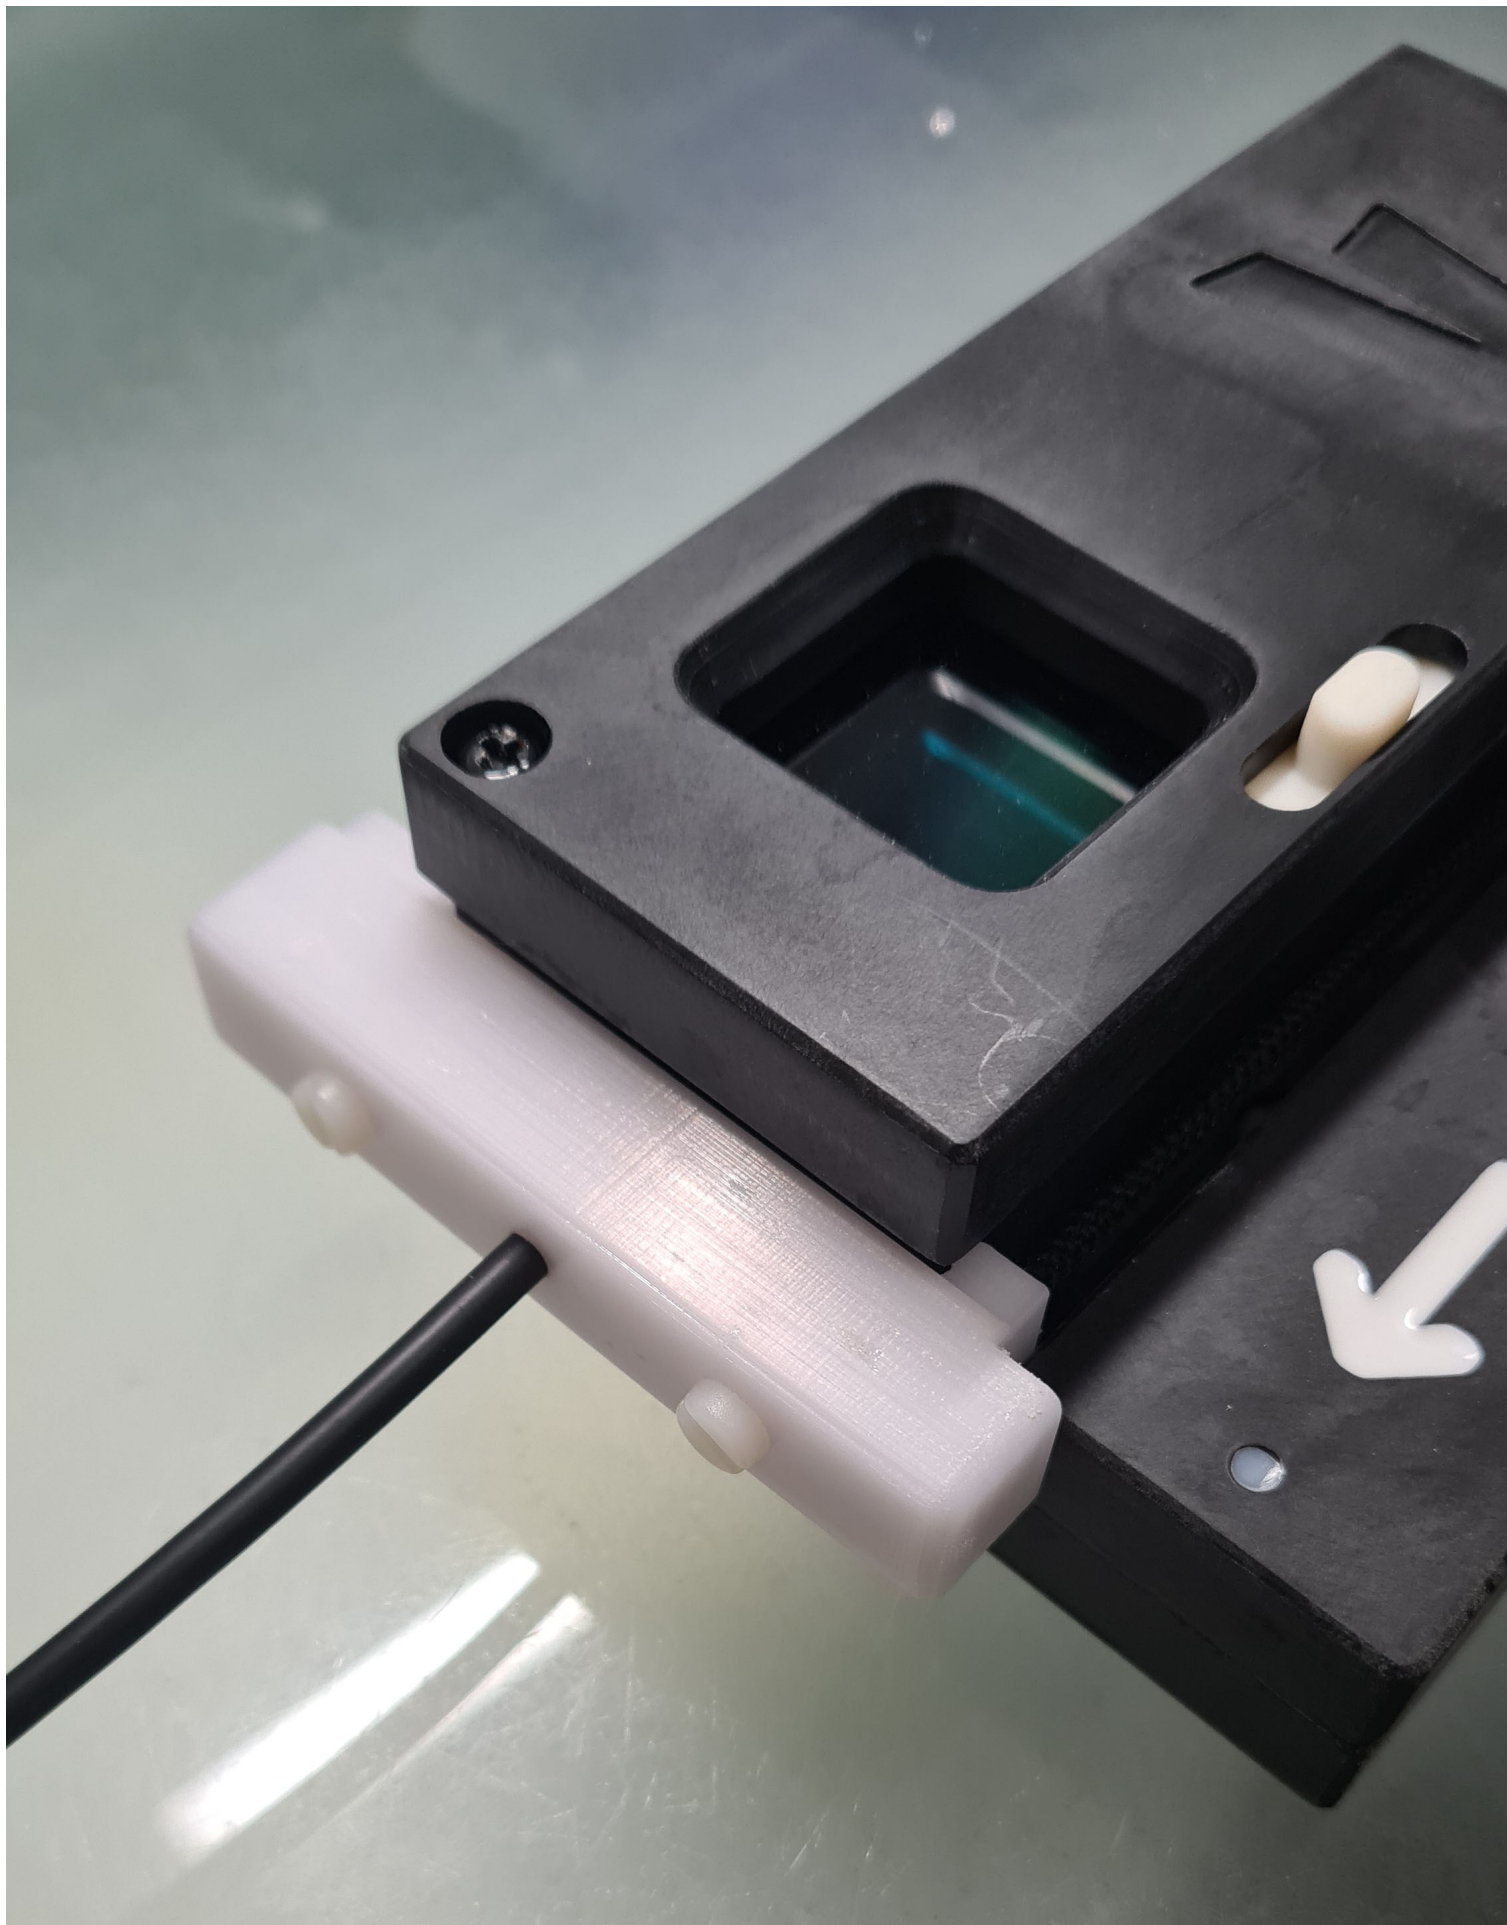

The blue led indicates that the connection to the computer/charger was successful.





Turn on MNemo. At that point your computer should have recognized the device.

Launch MNemoLink

You can now launch MnemoLink application on your computer.

If “Mnemo not detected” appears in the right corner, make sure the connector is properly placed on the Mnemo and the device is turned ON than press the refresh button in the middle of MNemoLink's window.

If the connection is successful, you should have the serial number of your device displayed in the upper right corner.

The **Data** tab will give you options to *download* and *save the survey data contained* on the MNemo as DMP and various other formats that you can use in your favorite survey software.

The **Setting** tab will give you access to different settings of the Mnemo that are not accessible through the settings Menu. Most of those are self explanatory. The ones locked are factory settings that should not be modified. MNemoLink will save the data on the device in an Excel sheet. You can then copy-paste it in your favorite mapping software.

The **CLI** tab is for advanced command line based interaction with the MNemo.

Converting a DMP to Excel

If you already have a DMP file — saved from MNemoLink, or downloaded straight from the device over WiFi — you can turn it into a spreadsheet without installing anything:

converter.arianesline.com

Drop the `.dmp` on the page and you get back an Excel workbook with a summary of the survey, one sheet containing every shot, and one sheet per section. CSV and JSON are available too. The file is converted on the spot and is never stored.

Serial Command Line Interface

The Mnemo exposes a **serial command-line interface (CLI)** over its USB connection. It lets you read data, change settings, and run diagnostics from a computer — including several settings that are not available from the on-device menu.

Most users will never need this: the [MNemoLink](#) desktop software drives these same commands behind a friendly interface. The CLI is documented here for advanced users and troubleshooting.

Connecting

1. Connect the Mnemo to your computer with the USB cable (see [MnemoLink – Data Transfer](#) for cabling).
2. Open any serial terminal program and connect to the Mnemo's serial port at **57600 baud**.
3. Type a command name, optionally followed by arguments, and press **Enter**.

Commands that produce a serial response finish it with an end-of-transmission marker, so host software knows when the response is complete. A few commands that only change a setting or update the display return without emitting a marker.



TIP

Not sure what's available? Type `help` to list every command with its description, or `help <command>` for a single one. `listcommands` prints just the command names.



DANGER

Commands marked **[DO NOT USE]** are low-level factory, hardware, and debug operations. They can corrupt device settings, survey data, or the hardware itself. Leave them alone during normal use.

Data transfer

Command	Arguments	Description
<code>getdata</code>	<code>[address(>800)]</code>	Reads all survey data from the device, or reads until the optional memory address is reached.
<code>syncdatetime</code>	—	Synchronizes the device date/time with the computer's.

Help & discovery

Command	Arguments	Description
<code>help</code>	<code>[command]</code>	Shows help for all commands, or for a single named command.
<code>listcommands</code>	—	Lists the names of all available commands.

Device identity & firmware

Command	Arguments	Description
<code>setname</code>	<code>name</code>	Sets the custom (friendly) name of the device.
<code>getname</code>	—	Gets the custom name of the device.
<code>getfirmwareversion</code>	—	Gets the firmware version installed on the Mnemo.
<code>getwififirmwareversion</code>	—	Gets the firmware version installed on the WiFi (NINA) module.

WiFi network management

Command	Arguments	Description
<code>addwifinet</code>	<code>NetworkName Password</code>	Adds a WiFi network to the device.
<code>removewifinet</code>	<code>NetworkName Password</code>	Removes a WiFi network from the device.
<code>clearwifinet</code>	—	Clears the entire list of saved networks.
<code>listwifinet</code>	—	Reads the list of saved networks.

Click / button tuning

Command	Arguments	Description
<code>getclickthreshold</code>	—	Gets the click threshold percentage.
<code>setclickthreshold</code>	<code>level</code>	Sets the click threshold percentage.
<code>getunclickdelta</code>	—	Gets the unclick threshold percentage.
<code>setunclickdelta</code>	<code>level</code>	Sets the unclick threshold percentage.
<code>getBMclickfactor</code>	—	Gets the Basic Mode click time factor (in %).
<code>setBMclickfactor</code>	<code>factor</code>	Sets the Basic Mode click time factor (in %).
<code>activatedoubletap</code>	—	Activates the double-tap gesture to display the survey (restart required).
<code>deactivatedoubletap</code>	—	Deactivates the double-tap gesture (restart required).
<code>activatesafeon</code>	—	Activates the safety-to-turn-on feature.

Command	Arguments	Description
<code>deactivatesafeon</code>	—	Deactivates the safety-to-turn-on feature.

Compass & stabilization

Command	Arguments	Description
<code>getstabilizationfactor</code>	—	Gets the stabilization factor.
<code>setstabilizationfactor</code>	<code>factor</code>	Sets the stabilization factor.
<code>getmagneticinterferencethreshold</code>	—	Gets the tolerated magnetic-interference threshold (in %).
<code>setmagneticinterferencethreshold</code>	<code>value</code>	Sets the tolerated magnetic-interference threshold (in %).

Display colors

Command	Arguments	Description
<code>getcolor</code>	<code>state</code>	Gets the color of a state (<code>standby</code> , <code>readinga</code> , <code>readingb</code> , <code>stabilize</code> , <code>ready</code>).
<code>setcolor</code>	<code>state</code> <code>color24b</code>	Sets the color of a state to a 24-bit hex color (e.g. <code>setcolor ready 354250</code>).
<code>defaultcolorscheme</code>	—	Restores the default color scheme.

Settings & reset

Command	Arguments	Description
<code>defaultsettings</code>	—	Restores all default settings and erases the memory .
<code>testmode</code>	—	Puts the device into Test mode.

Runtime statistics

Command	Arguments	Description
<code>gettimeon</code>	—	Gets the time (in minutes) the device has been switched ON.
<code>gettimesurvey</code>	—	Gets the time (in minutes) the device has been surveying.

Over-the-air update

Available on firmware built with OTA support.

Command	Arguments	Description
<code>otaupdate</code>	<code>url</code>	Downloads an application <code>.bin</code> from an <code>http://</code> / <code>https://</code> URL and self-applies it (reboots; WiFi must be connected).
<code>otaupdatenina</code>	<code>url</code>	Flashes the NINA radio firmware from a <code>nina.bin</code> URL (releases WiFi, then flashes — takes several minutes).

See [Firmware Upgrade](#) for the recommended update procedure.

Low-level / factory — [DO NOT USE]

Command	Arguments	Description
<code>picbootmode</code>	—	Prepares the device for PIC reprogramming.
<code>getpicinfo</code>	—	Gets PIC hardware/firmware information.
<code>picprog</code>	<code>[INIT]</code>	Uploads the in-memory firmware onto the PIC. Pass <code>INIT</code> for the initialization variant.
<code>getpicswitchonthreshold</code>	—	Gets the PIC switch-on threshold.
<code>setpicswitchonthreshold</code>	<code>value</code>	Sets the PIC switch-on threshold to the given numeric value.
<code>eeepromwrite</code>	<code>address</code> <code>byte</code>	Writes a byte to a specific EEPROM address.
<code>eeepromread</code>	<code>address</code>	Reads a byte from a specific EEPROM address.
<code>readfile</code>	<code>filename</code>	Reads a file stored on Flash memory.
<code>erasefile</code>	<code>filename</code>	Erases a file stored on Flash memory.

UI-test builds add extra commands (`screencap`, `inject`, `gotomain`) used only for automated interface testing; they are not present in production firmware.

Wireless Data Transfer

WiFi settings are now grouped in their own submenu at **OPTIONS > WIFI**, which contains:

- **WIFI ON/OFF** – connect to a known network
- **WIFI AP** – start a local Access Point hosted by the device
- **WIFI ON AT START** – auto-connect on every power-on
- **Back**

Each row shows the state it will put the device in. (*v3.4.0+*) While you are connected to a local network the AP row reads **WIFI_AP (SWITCH)** rather than **(OFF)** — selecting it there does not add an access point alongside the network, it drops the network connection and switches the device over to its own AP.

WIFI OFF really powers the radio down (*v3.4.0+*). Until v3.3.1 switching WiFi off left the radio powered and still associated, quietly holding the device at about **80 mA instead of its 28 mA idle**. Turning WiFi off now takes the radio out of the power budget; the next WiFi command brings it back up on its own. See [Battery](#).


Local Network

Adding networks

Networks can be added in two ways:

Via MNemoLink:

- Connect your Mnemo to your computer and open MNemoLink.
- In the Settings Tab you can manage the known wireless networks.
- Click *Get Current* to retrieve the list of stored networks. (This list is empty when you buy the device.)
- Enter the network name and password, then press *Add New*.

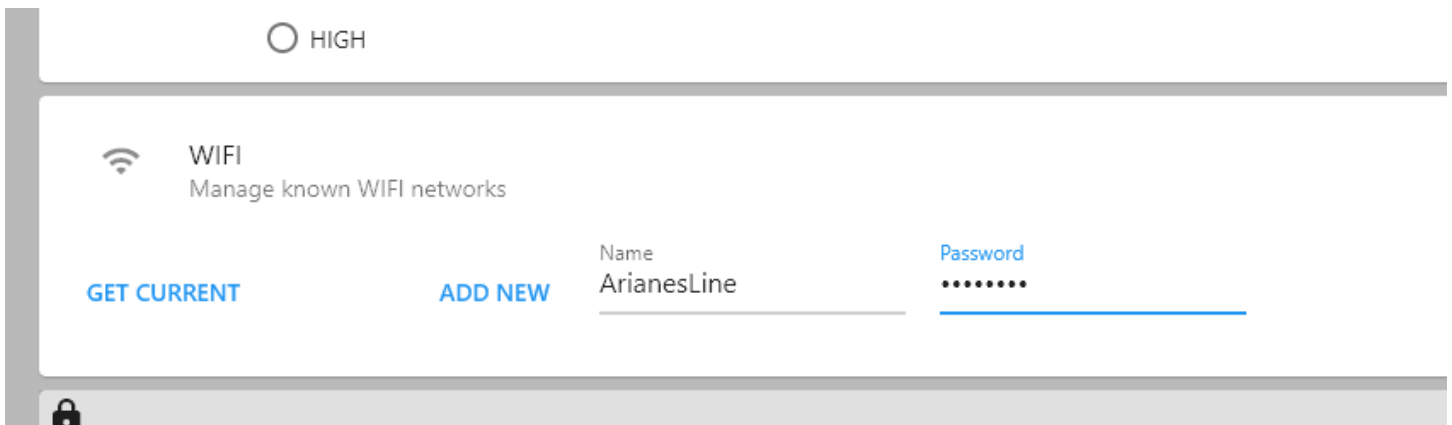


Via the device's web page (v3.0.0+):

- Connect the Mnemo to WiFi (see below), then navigate to its IP address in a browser.
- Use the network management section of the web page to add or remove networks directly — no MNemoLink required.


Network names and passwords must not contain spaces and the network must operate on 2.4 GHz.

Connecting

On your Mnemo navigate to **OPTIONS > WIFI > WIFI ON/OFF**:

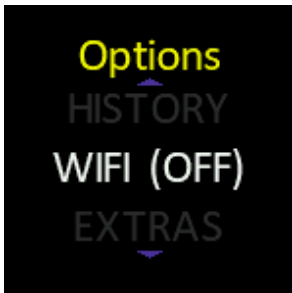


The Mnemo will try to connect to its known networks. If successful it returns to the main menu and **displays the IP address of the device**.

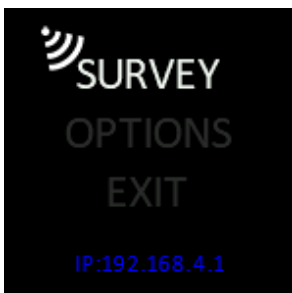

The icon in the top left corner indicates the strength of the wireless connection between the router and the MNemo.

Open a browser and navigate to the displayed IP address to preview surveys or download your data.

The DMP you download here can be converted to Excel at converter.arianesline.com — no software to install. See [MnemoLink - Data Transfer](#).



MNemo

SN: 009315501C759D60

[Download DMP](#)


[0-BAS-0/8-#2](#)

[1-BAS-0/8-#5](#)

MNemo

SN: 009315501C759D60

1-BAS-0/8-#5

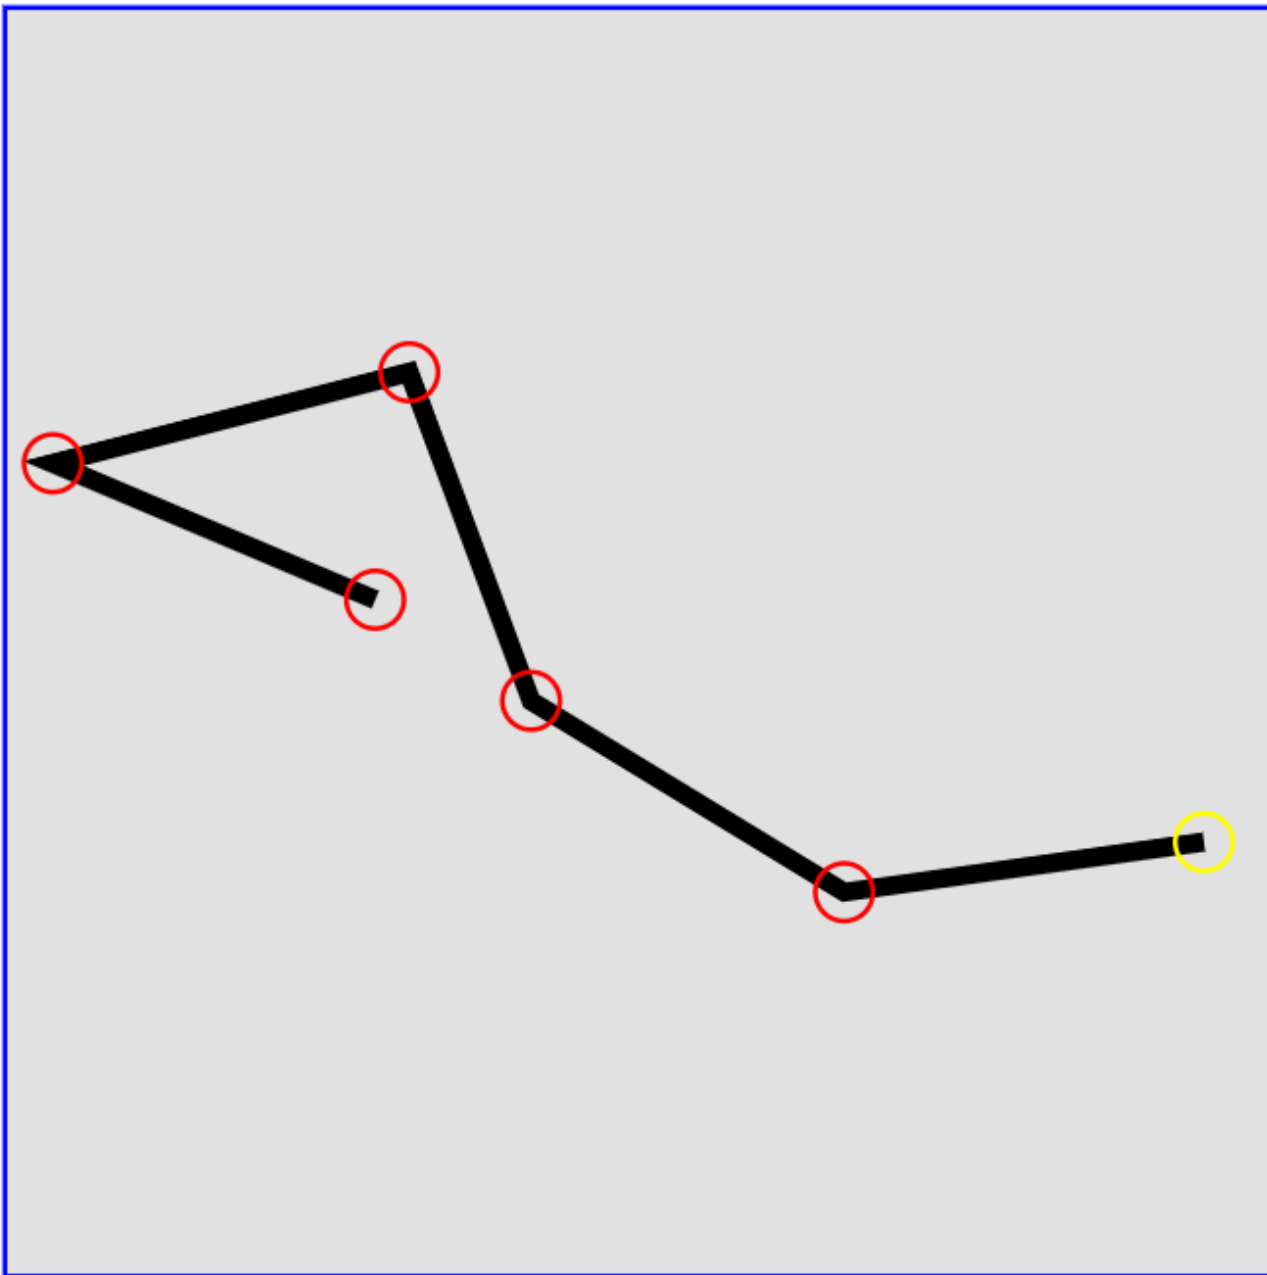

WiFi at Start

Navigate to **OPTIONS > WIFI > WIFI ON AT START** and toggle the option on.

When enabled, the device automatically starts its **WiFi Access Point** every time it powers on. The Access Point shuts itself off after **30 seconds** if no one connects to it, so it doesn't drain the battery when unused.

Combined with the QR onboarding below, this makes opening the Mnemo's web page on your phone right after switching the device on a two-scan operation.

Not underwater (v3.4.0+)

WiFi does not travel through water, so an access point started underwater can only drain the battery. From v3.4.0 the device therefore:

- **skips** the automatic access point when it is switched on while submerged, and
- **shuts it down** within about 5 seconds if the device goes underwater while the automatic access point is up.

This applies **only** to the access point started automatically by *WiFi At Start*. WiFi that you switched on yourself from the menu is never turned off for you — dive or no dive.

WiFi QR onboarding (v3.1.0+)

When you turn WiFi on, the Mnemo shows a **QR code** on the OLED so you don't have to type the network name, password or IP address on your phone.

Local network (WIFI ON/OFF)

Once the Mnemo connects to your network it shows a QR code containing the page address (`http://<device-ip>`). Open your phone or computer camera app, point it at the screen, and tap the prompt to open the Mnemo's web page directly.

Access Point (WIFI AP)

In AP mode the onboarding happens in two stages:

1. **Join QR** — encodes the AP credentials (SSID: Mnemo, Password: password). Point your phone's camera at it and tap the prompt to join the Mnemo's network — no typing.
2. **Open-page QR** — appears automatically once your phone associates with the AP. Scan it to open the Mnemo's page in the browser. The QR dismisses itself the moment the page actually loads, returning the OLED to its normal screen.

You can dismiss either QR at any time with the device's **NEXT** or **SELECT** buttons.

The Mnemo as Wireless Access Point


If your local network is not accessible you can configure the MNemo as a Wireless Access Point.

Navigate to **OPTIONS > WIFI > WIFI AP** and select the entry.

You can then connect your computer (or phone) to the wireless network created (SSID: **Mnemo**, Password: **password**) and navigate to the displayed IP address as you would on a local network.

Network Scan and Data Download with MNemoLink

You can use MNemoLink to scan your network and find your MNemo.

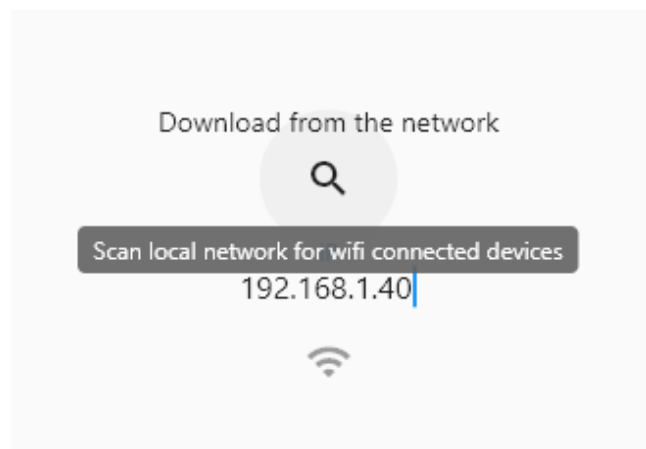

Once found, you can download the data through WiFi.



Erasing the memory from the web page (v3.4.0+)

All recorded surveys can be erased from the web interface, after a confirmation page that shows what is stored and offers a download first. See [Memory management](#).

DMP File Format

Format version 5 — specification for third-party software

This page describes the content of `.dmp` files produced by the MNemo cave surveying instrument, so that survey applications can import them. It is self-contained: no access to the device or its firmware is required.

A DMP file is the MNemo's lossless export format. It contains every survey *section* recorded since the device memory was last erased, each section holding a sequence of fixed-size *shot* records. Files are obtained from the device's [WiFi download page](#) or through [MNemoLink](#), and are named `MNEMOYYMMDDHHMMSS.dmp` (two digits per date/time component, date of the download).

1. File encoding

A DMP file is plain ASCII text: a single line of decimal integers separated by semicolons `;`, with a trailing `;` after the last value and no line breaks.

Each value represents **one byte** of an underlying binary stream, rendered as a **signed** 8-bit integer ($-128\dots127$). To recover the unsigned byte:

```
byte = value < 0 ? value + 256 : value           // i.e. value & 0xFF
```

Multi-byte fields are 16-bit **big-endian** integers spanning two consecutive byte values:

```
u16 = (byte[0] << 8) | byte[1]
s16 = u16 reinterpreted as two's-complement signed
```

Example: `4; -46;` → bytes `4, 210` → `(4 << 8) | 210` = **1234**. `-1; -42;` → bytes `255, 214` → `65494` → **-42** as a signed 16-bit value.

Parsers should tolerate surrounding whitespace and a missing trailing semicolon. All structure descriptions below refer to the decoded byte stream; offsets are in bytes.

2. Overall structure

```
DMP      := Section*
Section := SectionHeader ShotRecord* EOCRecord
```

There is no file-level header or trailer. Sections appear in recording order. A section is normally closed by an end-of-cave (EOC) record; a section interrupted by power loss may lack it (see §7).

3. Section header (13 bytes)

Offset	Size	Field	Value / meaning
0	1	Format version	5
1	3	Signature	68, 89, 101
4	1	Year	Two-digit year; add 2000 (e.g. 26 = 2026)
5	1	Month	1-12
6	1	Day	1-31
7	1	Hour	0-23 (time the section was started)
8	1	Minute	0-59
9	3	Section name	3 ASCII characters from A-Z, 0-9
12	1	Direction	0 = IN survey, 1 = OUT survey

The 4-byte sequence 5, 68, 89, 101 is the **section signature** — the only synchronization point in the stream. Parsers locate sections by scanning for it (see §7).

Direction records which way the surveyor was traveling: IN = entering the cave, OUT = exiting. It also determines which station the LRUD values describe (§5).

4. Shot record (35 bytes)

One record per survey shot (one leg between two stations). All 16-bit fields are big-endian; signedness as listed.

Offset	Size	Field	Type	Unit / meaning
0	3	Start code	—	57, 67, 77
3	1	Shot type	u8	0 = CSA, 1 = CSB, 2 = STD, 3 = EOC (see §6)
4	2	headingIn	u16	Compass heading at the start of the shot, 1/10 degree (0–3599)
6	2	headingOut	u16	Compass heading at the end of the shot, 1/10 degree (0–3599)
8	2	length	u16	Distance traveled along the line, cm
10	2	depthIn	s16	Depth at the start of the shot, cm
12	2	depthOut	s16	Depth at the end of the shot, cm
14	2	pitchIn	s16	Vertical angle at the start of the shot, 1/10 degree (–1799...+1799)
16	2	pitchOut	s16	Vertical angle at the end of the shot, 1/10 degree
18	2	left	u16	Passage dimension to the left, cm (see §5)
20	2	right	u16	Passage dimension to the right, cm
22	2	up	u16	Passage dimension upward, cm
24	2	down	u16	Passage dimension downward, cm
26	2	temperature	s16	Water temperature, 1/10 °C

Offset	Size	Field	Type	Unit / meaning
28	1	hour	u8	Time of day the shot was completed
29	1	minute	u8	
30	1	second	u8	
31	1	marker	u8	0 = no marker; N = user-set station marker number (see §5)
32	3	End code	—	95, 25, 35

Angles are stored in tenths of a degree (1234 = 123.4°), distances and depths in centimeters, temperature in tenths of a degree Celsius.

5. LRUD and marker semantics

LRUD (left/right/up/down) values, when present, describe the passage cross-section at the station where the surveyor entered them:

- On **IN** sections, they belong to the station the shot *arrives* at (the shot's "out" end).
- On **OUT** sections, they belong to the station the shot *departs* from (the shot's "in" end).

Zero in all four fields means no LRUD was entered for that shot.

Marker numbers are assigned from a device-wide counter when the user tags a station during the survey. They generally increase in recording order, but the counter can be reset by the user, so numbers may repeat across sections. 0 means the shot carries no marker.

6. Shot types and the EOC record

Value	Name	Meaning
0	CSA	Legacy type from older devices; not produced by current devices

Value	Name	Meaning
1	CSB	Legacy type from older devices; not produced by current devices
2	STD	Standard measured shot — the only data-carrying type in current files
3	EOC	End-of-cave: terminates the section

Importers must accept all four values, and should treat any type byte greater than 3 as EOC.

A section is closed by a full 35-byte record of type EOC whose data fields are **all zero**:

```
57;67;77;3;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;0;95;25;35;
```

The EOC record carries no measurement data and should not be imported as a shot.

7. Parsing rules

- Locate a section:** scan the byte stream for the signature 5, 68, 89, 101. Bytes before a signature are garbage (e.g. remnants of an interrupted recording) and must be skipped.
- Read the header:** consume the 9 remaining header bytes (date, name, direction) immediately after the signature.
- Read records:** each must begin with 57, 67, 77 and end with 95, 25, 35. On any mismatch, abandon the current section and resume signature scanning at the byte after the last valid position.
- End of section:** a record of type 3 (EOC) closes the section. A section may also end implicitly at end-of-file (unclosed section) or at a validation failure; shots already read remain valid.
- Empty sections** (a header followed immediately by an EOC record) may occur and can be ignored.
- The start/end codes make accidental matches unlikely, but the format has no escaping: parse structurally (fixed 35-byte records) once inside a section, and only fall back to signature scanning after a validation failure.

8. Worked example

Two sections recorded the same day: an IN section `AB1` with two shots, then an OUT section `AB2` with one shot. A machine-readable copy of this example is available for download — [dmp_file_format_sample.dmp](#) — a useful first test case for an importer. Annotated (line breaks and comments added for readability — a real file is a single unbroken line):

```
5;68;89;101;      section 1 signature (version 5)
26;8;25;14;30;    2026-08-25 14:30
65;66;49;         name "AB1" (ASCII)
0;                direction IN

57;67;77;         shot 1 start code
2;                type STD
4;-46;            headingIn  = 1234 → 123.4°
4;-30;            headingOut = 1250 → 125.0°
2;20;            length     = 532 → 5.32 m
4;-35;            depthIn   = 1245 → 12.45 m
5;30;            depthOut   = 1310 → 13.10 m
-1;-42;           pitchIn   = -42 → -4.2°
-1;-39;           pitchOut  = -39 → -3.9°
0;120;            left      = 120 → 1.20 m
0;-6;             right     = 250 → 2.50 m
0;80;             up        = 80 → 0.80 m
0;-106;           down      = 150 → 1.50 m
0;-111;           temperature = 145 → 14.5 °C
14;32;5;          shot time 14:32:05
0;                no marker
95;25;35;         shot end code

57;67;77;         shot 2 start code
2;                type STD
8;52;            headingIn  = 2100 → 210.0°
8;37;            headingOut = 2085 → 208.5°
2;-58;           length     = 710 → 7.10 m
5;30;            depthIn   = 1310 → 13.10 m (continues shot 1)
5;-76;           depthOut   = 1460 → 14.60 m
-1;-60;          pitchIn   = -60 → -6.0°
-1;-55;          pitchOut  = -55 → -5.5°
0;90;            left      = 90 → 0.90 m
0;-116;          right     = 140 → 1.40 m
0;60;            up        = 60 → 0.60 m
0;-36;           down      = 220 → 2.20 m
```

[illegible]

9. Older format versions

This specification covers format version 5, the version produced by current MNemo devices. Files from older firmware used lower version numbers with different, smaller record layouts and are not covered here. A version-5 parser identifies its sections by the exact signature 5, 68,

89, 101 and should report — not misparse — files whose sections carry a different version byte.

Firmware Update

The MNemo can update its firmware **over WiFi (over-the-air)** or **over USB**. Over-the-air is the easiest once a device has been set up for it; the USB methods below always work and are needed for the one-time switch-over.

Update over WiFi (over-the-air)

From **v3.2.0**, the MNemo can download and install new firmware by itself, over WiFi — no cable. It updates both the **main firmware** and the **WiFi radio**, and it works **on battery**.

- Turn WiFi on. If a newer version is available, an **update available** prompt appears — accept it. You can also start an update at any time from **OPTIONS > SETTINGS > SYSTEM > OTA UPDATE**.
(v3.4.0+) The check runs on the **first WiFi connection after each power-on**, so switching WiFi off and on again in the same session does not re-check. If you dismissed the prompt and want it back, either power-cycle the device or use **OTA UPDATE** from the menu.
- The MNemo connects to a saved WiFi network, downloads the update, and asks you to **confirm**.
- When prompted, **hold SELECT** to restart and apply. On battery, keeping SELECT held keeps the device powered across the restart.
- After it restarts, the **What's New** screen shows what changed.

One-time USB setup. A device that has never used over-the-air updates (anything before **v3.2.0**), or one still on the older 1 MB update area, must first be flashed **once over USB** with a current version (see *Manual update* below). That installs the updated bootloader. After that single USB update, every future update — including the larger builds with Chinese fonts — arrives over WiFi.


What's New screen

After every update — over WiFi or over USB — the MNemo shows a short **What's New** page on the first boot, listing the release's headline features. Press **SELECT** to page through it. You only

see it **once per update**, and you can read it again any time from **OPTIONS > SETTINGS > SYSTEM > WHAT'S NEW**.

Automatic update

With the introduction of **MNemoLink v1.4.0**, the firmware process has been simplified. When you connect the device to the computer and open MNemoLink, the application will look if a new version of the firmware is available.

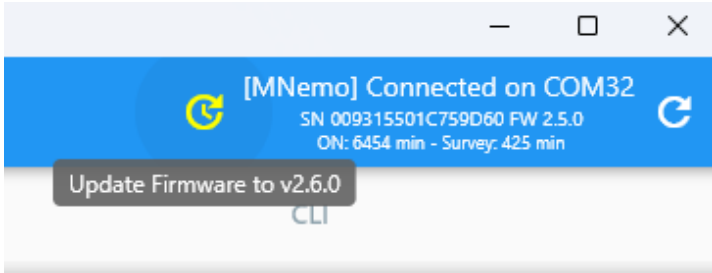

If so, it will allow you to update the firmware automatically to the latest version by pressing the yellow update button.

Manual update

- Download the **latest firmware** on Github (It's a file with a .UF2 extension)
- Connect the device to your computer and go to:

OPTIONS > SETTINGS > SYSTEM > UPDATE

The device should appear in your file explorer as a USB Memory stick would.

- Simply copy the firmware file you downloaded there. That should trigger a reboot of the Mnemo and install the new firmware.
- After updating the firmware, disconnect from the computer and turn off the MNemo.

The next time you turn the Mnemo on the new firmware will be fully functional.

Maintenance

- Do not let the battery drain completely. Put it on charge (leave connected to your computer or other USB charger) once per month even if you don't use the device.
- After each use thoroughly rinse MNemo with fresh water, do not use any other chemical product. Ideally have MNemo clipped on a piece of line and move it forward and backward so that the wheel gets cleaned everywhere as well. Also move the pressure plate lever while washing.
- If you have the feeling there still is sediment trapped in the base of the device or in the screen cover, you can unscrew both parts to clean them directly.

Tips and Tricks

- **Force Rebooting** : You can force the device to reboot by applying a small magnet on the back side of the device at the level of the display. This will turn the device off.





- **Wheel jamming** : This is of course always a possibility with old/dirty line and the main contributing factor will be the lack or little tension of that line. If you notice the wheel is not spinning first check if the line has enough tension and if possible, adding an extra wrap on a tie off to increase the tension often solves the problem. Otherwise, a way of unblocking the wheel is to hold the line in a hand, increase the tension and then swiftly roll back and forth the mnemo to clean the wheel, that should do the trick probably in 90% of the cases. Of course, after that you'll have to resurvey that shot.
- **Obstacles on the line** :It is important to know that the device measures distance whether you move it forward or backward. This is done intentionally. In case you have an obstacle on the line (thick knot, arrow etc ..) , roll the mnemo all the way to the obstacle, then back the length of the obstacle plus the size of the Mnemo. Unclip it from the line (do not stop the survey or add a station) and clip it on again after the obstacle. Resume rolling the device until you reached the next station.  Like this there is no loss of time to rearrange the line.
- **Compensation for thick tie wraps**: You can compensate the loss in measurement of the round part of a large tie wrap by rolling back the device the estimated distance that is missing.
- **Display or not display** :We recommend all user of Mnemo to get familiar enough with the device to use only the colors of the screen and not read the menu at each station. This will increase the smoothness of the process and allows them to focus on stabilizing and clipping on and off the device.
- **Opening the pressure plate (gate)** : If you have difficulty manipulating the pressure plate, brute force won'T help, simply hold the lever between thumb and index, apply a rotational force forward and THEN pull backward.
- **Organizing work, multiple sections** : I personally call all my section AA1 or use BASIC mode. In most cases I can remember what I survey and in which order. In more complex

scenario you can either take the time to change the name of the section or write on a slate complementary information.

- **Trapped water after a dive** : When coming out of a dive, droplets of water can stay trapped for a few hours below the screen cover, where the contrast sensors that read the command button are located. When this happens, the device can no longer properly interpret the sensor values and will stop responding. To resolve this temporary issue, either immerse the device in water again or shake it vigorously to remove the remaining water.

Report a Hardware or Software Issue

If your Mnemo is not behaving as expected — whether it is a hardware failure, a firmware bug, or an unexpected behaviour during a survey — please fill in the failure report form and send it to us.

The report helps us identify patterns, improve the device, and assist you as quickly as possible.

What to report

- Device not powering on or off correctly
- Screen issues (missing pixels, flickering, blank display)
- Compass errors or calibration failures
- Incorrect depth or distance readings
- Firmware crashes or unexpected resets
- Connectivity problems (Wi-Fi, USB)
- Waterproofing concerns or physical damage
- Any behaviour that differs from what the manual describes

How to submit

1. Open the report form using the button below
2. Print it or save it as a PDF (`Ctrl+P` → *Save as PDF*)
3. Fill it in — the more detail the better
4. Send it to sebastien@arianesline.com or open an issue on [GitHub](#)

Open Failure Report Form

Tips for a useful report

- Note your **firmware version** before submitting (visible in the main menu)
- Include the **dive number and conditions** when the issue occurred
- Attach a **photo or video** if the failure is visible
- If the device crashed, describe the **exact sequence of button presses** that led to it