

Welcome to Teensy-LC

32 Bit Arduino-Compatible Microcontroller

To begin using Teensy, please visit the website & click [Getting Started](#).

www.pjrc.com/teensy

Digital Pins

`digitalRead`
`digitalWrite`
`pinMode`

Analog Pins

`analogRead`
`analogReference`
`analogReadRes`

PWM Pins

`analogWrite`
`analogWriteRes`

Touch Sense Pins

`touchRead`

Serial Ports


`Serial1`
`Serial2`
`Serial3`

I²C Ports

Wire Library


SPI Ports

SPI Library

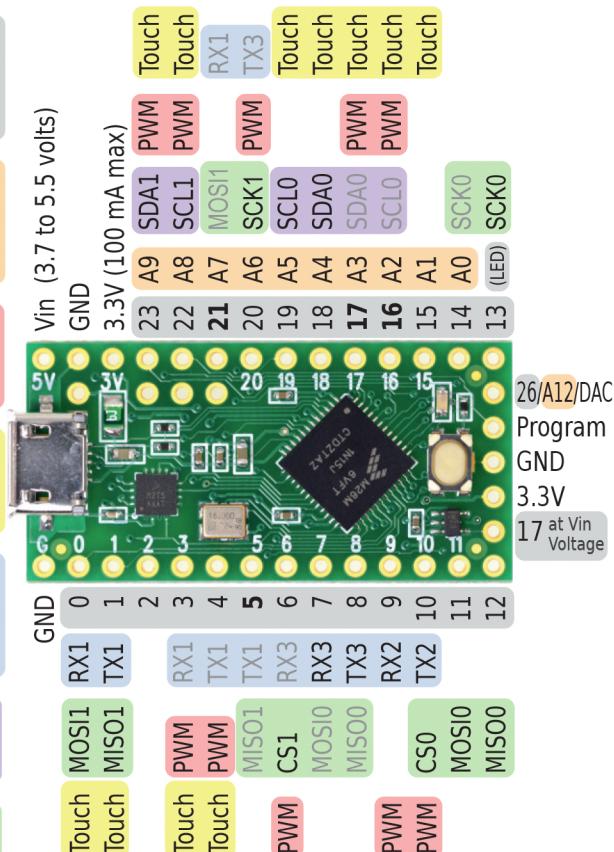

Teensy-LC Back Side

Additional pins, features, and specifications

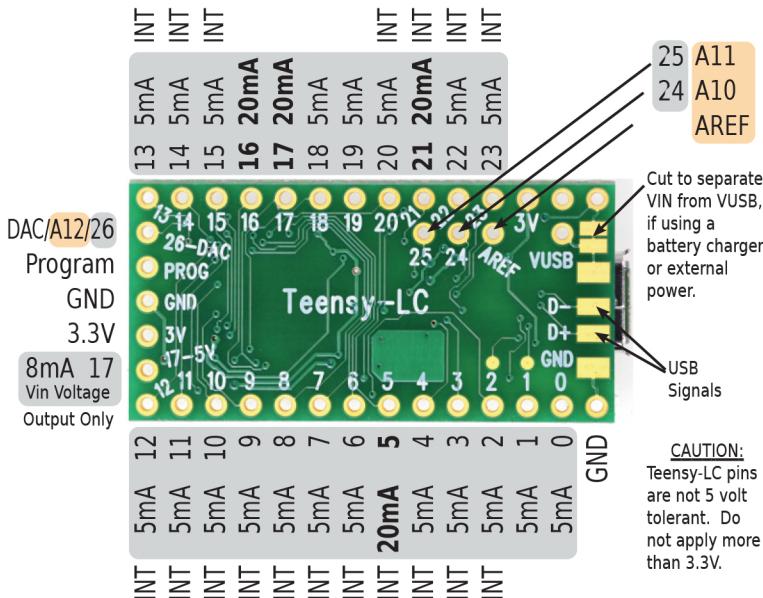

For solutions to the most common issues
and technical support, please visit:

www.pjrc.com/help

Teensy-LC System Requirements:

PC computer with Windows XP, 7, 8 or later
or Ubuntu Linux 12.04 or later
or Macintosh OS-X 10.6 or later
USB Micro-B Cable

