



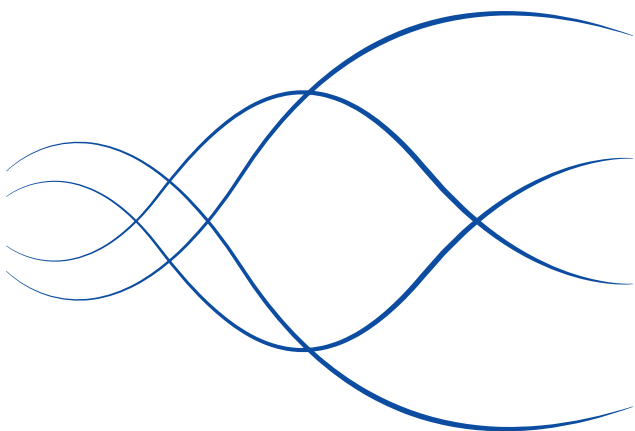

Handheld Radio Quick Operation Manual

Product Overview

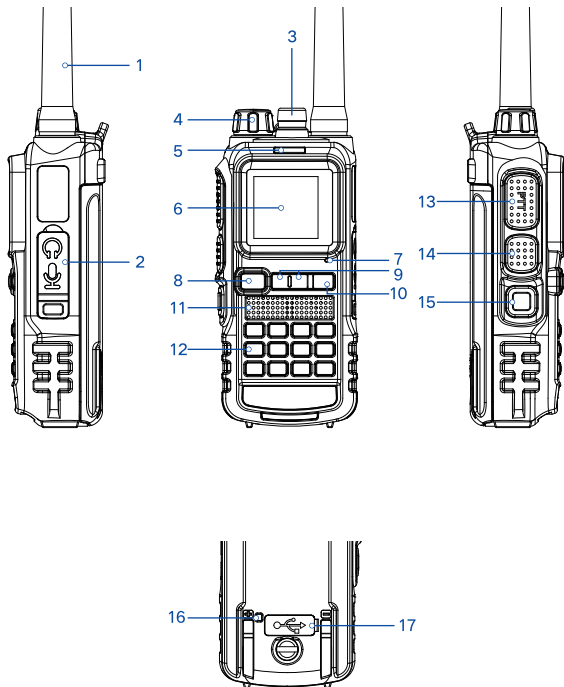

No.	Item	Function
1	Antenna	Transmits and receives radio signals
2	Accessory Port	Port for earphones/microphones/data cables
3	Shortwave Antenna Port	Used for installing a shortwave receiving antenna
4	Power/Volume Knob	Rotate to turn on/off, adjust volume
5	Indicator Light	Transmitting: Red light is always on; Receiving: Green light is always on
6	Display Screen	Displays the current working status of this device
7	Microphone	When transmitting, speak at a distance of 5 - 10 cm from the microphone
8	Menu/Confirm Key	Short press to enter the menu, long press to switch channel/frequency mode
9	Selection Key	In standby mode, used to switch frequency or channel; In menu mode, used to select the corresponding function
10	Return Key	In standby mode, short press to switch the main frequency, long press to enter CTCSS scan; In menu mode, short press to return to the previous menu/exit the menu
11	Speaker	Sound is emitted from here when receiving
12	Numeric Keypad	Can be used to manually input frequency in frequency mode
13	PTT-1	Transmit at Frequency A
14	PTT-2	Transmit at Frequency B
15	Side Key	Can customize the corresponding function for short press/long press
16	Charging Indicator Light	Red: Charging; Green: Charging completed
17	Battery Charging Port	Can use a Type - C charging cable to charge the battery

Shortcut Key Operations

In the standby state, short press the function key **#F**

After "F" appears on the display screen, briefly press the number keys to quickly enter the corresponding function menu marked on the keys. For function introduction, please refer to the "Common Menu Function Introduction" section in this manual.

#F	+	1 _{SQL}	>>>>	Squelch Level
#F	+	2 _{TXP}	>>>>	Transmit Power
#F	+	3 _{W/N}	>>>>	Channel Bandwidth
#F	+	4 _{STEP}	>>>>	Frequency Step
#F	+	5 _{VOX}	>>>>	VOX Switch
#F	+	6 _{BEEP}	>>>>	Prompt Tone
#F	+	7 _{CTC}	>>>>	CTCSS
#F	+	8 _{DCS}	>>>>	DCS
#F	+	9 _{TOT}	>>>>	Transmit Time - Out
#F	+	0 _{FM}	>>>>	FM Radio

Common Functions

Frequency Input

In frequency mode, enter the frequency value using the numeric keypad. The input operation is completed after entering a total of 6 digits.

Offset Frequency Input

1. Enter Menu > Frequency Mode > Offset Frequency, then input the offset frequency via the numeric keypad.
2. Enter Menu > Frequency Mode > Offset Direction, then set to Positive or Negative.

Transmitting

1. Press and hold the PTT key to transmit on the current frequency. The indicator light illuminates red during transmission.
2. Release the PTT key to stop transmitting.

Receiving

When a signal of the same frequency is received, the indicator light illuminates green. The receive audio will be activated when:

1. CTCSS is off
1. CTCSS is the same as the transmitting signal.

DTMF Transmission

1. In standby mode, long-press the # key to enter the DTMF input interface.
2. Input the DTMF code using the keypad.
3. Press the PTT key to initiate a call, and the device will send the DTMF code to the receiver.

When a channel is in transmitting, press a keypad key simultaneously to send the DTMF code corresponding to that key.

4. In DTMF code input mode:

To modify the entered code, short-press the side key to delete the code. When all codes are deleted, continue short-pressing the side key to exit the DTMF input interface.

Talkaround & Repeater Reverse

In standby mode, short-press the * key to switch between Talkaround and Repeater Reverse modes.

In Talkaround mode: The device will transmit signals at the receive frequency.

In Frequency Reversal mode: The receive frequency and transmit frequency will be swapped.

Side Key Functions

Users can select the function corresponding to the side key via the menu.

Optional functions: Radio, Monitor, Scan, Frequency Sweep, NOAA, Spectrum, SOS.

Frequency Sweep

When the side key function is set to Frequency Sweep, trigger the key to enter the frequency sweep mode. The device will then start scanning for surrounding radio frequency (RF) signals.

After the frequency sweep is completed, press the Confirm key to save the sweep results to the channel list.

CTCSS Scan

In standby mode, long-press the Return key to enter the CTCSS scan mode.

Keypad Lock


On the standby interface, long-press the * key to lock the keypad.

To unlock the keypad, long-press the * key again.

Battery Level

On the standby interface, long-press the numeric key 0 to check the current battery voltage.


Standby Interface

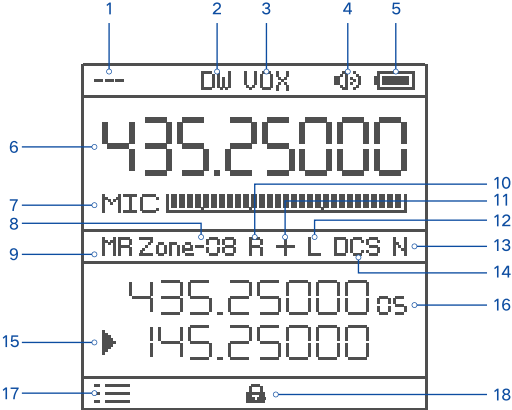

No.	Description	No.	Description
1	Transmit Receive Standby	10	T: Talkaround R: Repeater Reverse
2	Dual Watch	11	+ Offset Direction: Positive - Offset Direction: Negative
3	VOX Function On	12	Transmit Power H: High / M: Medium / L: Low
4	Sidetone On	13	W: Wide Band N: Narrow Band
5	Battery Level Indicator	14	CTC: CTCSS DCS: DCS
6	Frequency/Channel Number/Name	15	Main Frequency Indicator
7	Transmit Sound Intensity (MIC) Receive Signal Strength (RSSI)	16	Channel Number
8	Zone Number	17	Menu
9	MR: Channel Mode VFO: Frequency Mode	18	Keypad Locked

Radio Instructions

* Some functions are only applicable to versions that support shortwave reception.

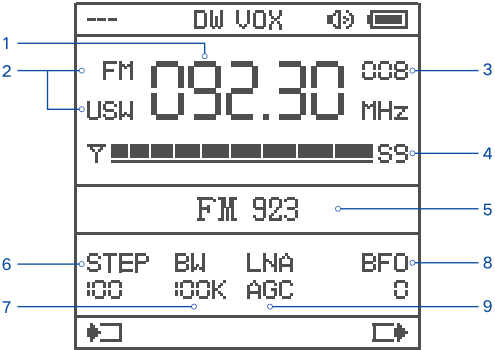

No.	Description
1	Receive Frequency You can change the receive frequency via the selection key/numeric keypad. Long press the # key to automatically search for stations (only applicable in frequency mode).
2	FM: Frequency Modulation (Transmit & Receive) AM: Amplitude Modulation LW: Long Wave MW: Medium Wave SW: Short Wave CW: Continuous Wave (Morse Code) LSB: Lower Sideband USB: Upper Sideband Except for FM, all other modes are receive-only.

No.	Description
3	Channel Number Long-press the MENU key to switch between channel and frequency modes. In channel mode, use the selection key or numeric keypad to switch channels.
4	Current Received Signal Strength
5	Currently Stored Radio Station Name, editable via programming software
6	STEP: Step Frequency refers to the minimum interval when adjusting the frequency. By selecting an appropriate step value, you can search for radio signals more accurately or quickly.
7	BW: Reception Bandwidth Used to adjust the width of the frequency range for received signals, making the signal clearer. In high-interference environments, a narrow bandwidth can filter out more clutter interference. When the signal is strong, a wide bandwidth can retain more signal details. Optimize reception performance based on the actual listening environment.
8	BFO: Beat Frequency Offset It is used to demodulate the single-sideband voice signal into a clear audio signal for normal listening.
9	LNA: Reception Gain Used to enhance the reception of weak signals. When enabled, it amplifies received weak signals to improve signal strength and clarity. Turn it off when the signal is too strong to avoid signal overload distortion. Optimize listening experience by adjusting LNA to adapt to different signal strength environments.

Care and Cleaning

To guarantee optimal performance as well as a long service life of the product, please follow the tips below.

- Do not puncture or scratch the product with hard objects.
- Do not place the product in corrosive agents, solutions or water.
- Do not handle the radio by its antenna or external microphone directly.
- When not in use, keep the accessory jacks covered with the protective caps.



Power off the product, and remove the battery before cleaning.

- Clean up the dust and fine particles on the product parts with a clean and dry lint-free cloth or a brush regularly.
- Use a non-woven fabric with neutral cleanser to clean the keys, control knobs, and shell after long-time use. Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations.
- Make sure the product is completely dry before use.