

TimeControl V3 — Library for Coolmay FX3G PLC

Abstract

TimeControl provides ticker-based time measurement for Mitsubishi FX series PLCs in GX Works 2. It replaces the CoDeSys `TIME()` function with two interrupt-driven global tickers (`TCO_DINT_50` and `TCO_DINT_10`) and a set of conversion functions, an elapsed-time difference function, and a blink function block.

Version V3 makes all function names consistent with the `F_` prefix (`F_TCO_50_TO_SEC`, `F_MIN_TO_TIME`, ...), renames all variables to Hungarian-prefixed camelCase, documents every CSV label, and fixes a copy-paste bug in `F_TCO_50_TO_SEC` (it previously wrote its result to `TCO_50_TO_MIN`).

Prerequisites

1. The library is built for Mitsubishi FX series PLCs (FX3U, FX3G, FX3S, FX5U) in GX Works 2. Structured Text only.
2. The `Utils.sul` library must be installed in GX Works 2 (the library is declared to depend on it).

Terminology

- **TCO** — short for Time Controls.
- **Ticker** — a counter that increments on a fixed period (50 ms or 10 ms). The ticker value is the "current time" of the library.
- **Tick** — one increment of a ticker. For `TCO_DINT_50` one tick equals 50 ms; for `TCO_DINT_10` one tick equals 10 ms.

Architectural Description

The library implements its own time counter because GX Works 2 does not provide a `TIME()` function equivalent. Two global `DWORD` variables hold the current ticker value:

Global	Type	Period	Full range before the signed limit
<code>TCO_DINT_50</code>	DWORD	50 ms	~3.4 years
<code>TCO_DINT_10</code>	DWORD	10 ms	~1 year


The tickers are incremented by the `PRG_TCO_TICKER_50` and `PRG_TCO_TICKER_10` programs, which must run in interrupt tasks so the count is accurate regardless of the main scan time.

Setup procedure:

1. In the main program and all other programs, add `EI(TRUE)`; as the very first line. This enables the global interrupts used by the ticker tasks.
2. In the startup program, reset the tickers on every PLC start:

```
EI(TRUE);
RST(M8002, TCO_DINT_50);
RST(M8002, TCO_DINT_10);
```

3. In GX Works 2, open *Program Settings* → *Execution Program* → *MAIN*, add a new **Task** named **TCO**, open its properties and set the event to **I750**. This makes the task run every 50 ms regardless of the main program execution time. Link the **TCO_TICKER_50** program (from this library) to this task.

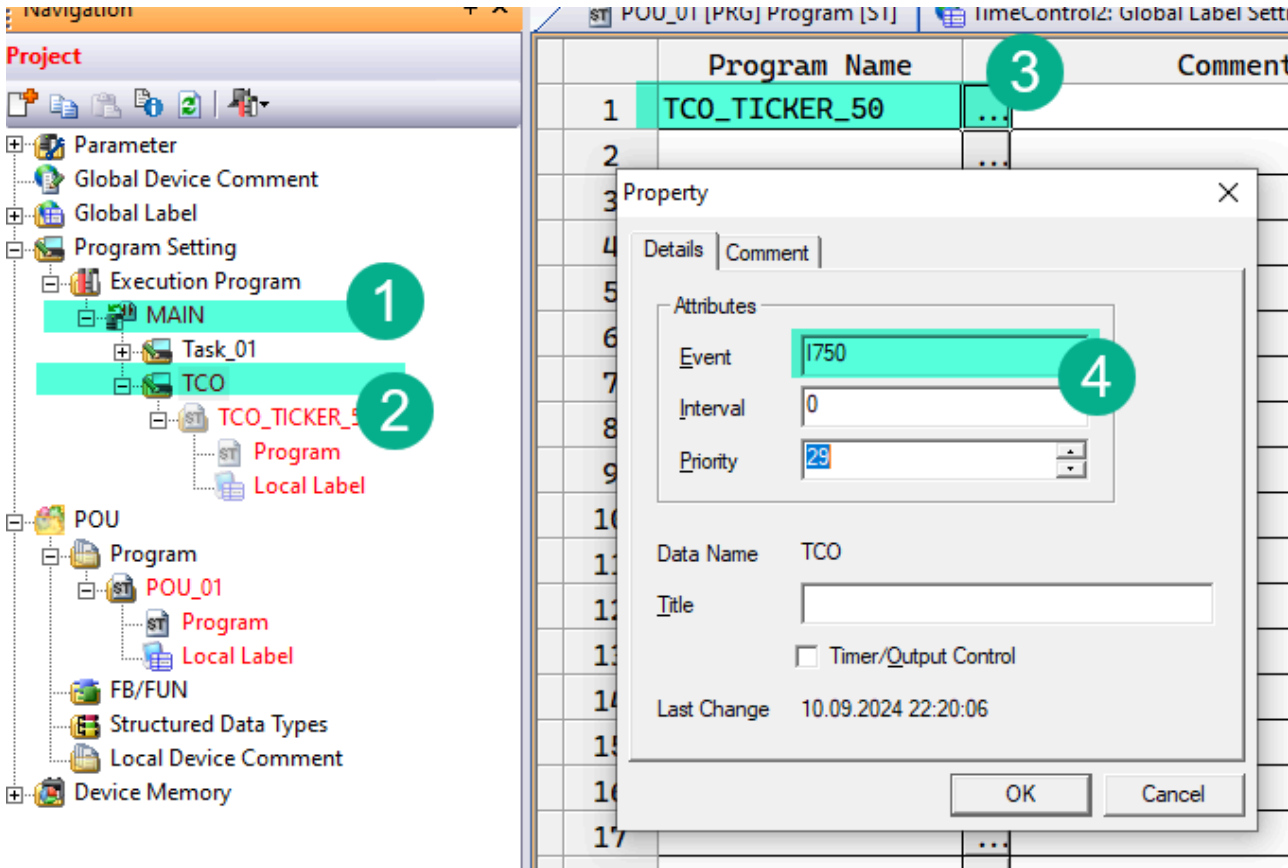

To use a 10 ms ticker instead, set the event to **I610** and link the **TCO_TICKER_10** program. Note that this puts more load on the PLC.

All conversion functions take the ticker value (**TCO_DINT_50** or **TCO_DINT_10**) or a fixed duration as input and return the equivalent in another unit.

Function Blocks and Functions — Summary Table

Name	Type	Description
FB_TCO_50_BLINK	Function Block	Blink timer: toggles the output between LOW and HIGH phases using the 50 ms ticker
FB_TC010	Function Block	Elapsed-time accumulator (0.1 ms resolution) from the scan time — ms and raw 0.1 ms outputs
F_TCO_50_DIFF	Function	Elapsed tick count between a saved and the current ticker value (wrap-safe)

Name	Type	Description
<code>F_TCO_50_TO_SEC</code>	Function	Convert 50 ms tick count to seconds (INT)
<code>F_TCO_50_TO_100MS</code>	Function	Convert 50 ms tick count to 100 ms units (INT)
<code>F_TCO_50_TO_MIN</code>	Function	Convert 50 ms tick count to minutes (INT)
<code>F_TCO_50_TO_MS</code>	Function	Convert 50 ms tick count to milliseconds (DINT)
<code>F_TCO_50_TO_TIME</code>	Function	Convert 50 ms tick count to TIME (milliseconds)
<code>F_MIN_TO_TCO_50</code>	Function	Convert minutes to 50 ms tick count (DWORD)
<code>F_MIN_TO_SEC</code>	Function	Convert minutes to seconds (INT)
<code>F_SEC_TO_TCO_50</code>	Function	Convert seconds to 50 ms tick count (DWORD)
<code>F_MIN_TO_TIME</code>	Function	Convert minutes to TIME (milliseconds)
<code>F_SEC_TO_TIME</code>	Function	Convert seconds to TIME (milliseconds)

Note: For functions, the return type is defined in the GX Works 2 POU properties (it is not part of the CSV label file). When creating the function POU, set the return type as stated in each section below.

TCO Conversion Functions

`F_TCO_50_TO_SEC`, `F_TCO_50_TO_100MS`, `F_TCO_50_TO_MIN`, `F_TCO_50_TO_MS`,
`F_TCO_50_TO_TIME`

These functions convert a 50 ms ticker value into seconds, 100 ms units, minutes, milliseconds or a `TIME` value.

Arithmetic note: the ticker is kept as a raw `DWORD` and the conversion is done with the 32-bit arithmetic instructions (`DDIV` for division, `DMUL` for multiplication). Native ST operators (+, /) do not work on `DWORD` in GX Works 2, and converting the ticker to `DINT` would corrupt values above 2^{31} (losing half the range). The computation is therefore correct for the full `DWORD` ticker range (~6.8 years at 50 ms). The range figures given per function below are **output** limits of the return type, not computation limits.

`F_TCO_50_TO_SEC`

Returns the number of full seconds in the tick count: `ticks / 20`.

Variable	Scope	Type	Description
<code>dwTicker</code>	INPUT	DWORD	Time measured in 50 ms intervals

Return type: **INT** (set in POU properties). Output range: overflows after ~9.1 hours of ticker value. Example:

```
iCurrentSeconds := F_TCO_50_TO_SEC(TCO_DINT_50);
```

`F_TCO_50_TO_100MS`

Returns the number of full 100 ms units in the tick count: $\text{ticks} / 2$.

Variable	Scope	Type	Description
<code>dwTicker</code>	INPUT	DWORD	Time measured in 50 ms intervals

Return type: **INT** (set in POU properties). Output range: overflows after ~55 minutes of ticker value.

```
iCurrent100ms := F_TCO_50_TO_100MS(TCO_DINT_50);
```

`F_TCO_50_TO_MIN`

Returns the number of full minutes in the tick count: $\text{ticks} / 1200$.

Variable	Scope	Type	Description
<code>dwTicker</code>	INPUT	DWORD	Time measured in 50 ms intervals

Return type: **INT** (set in POU properties). Output range: overflows after ~22.7 days of ticker value.

```
iCurrentMinutes := F_TCO_50_TO_MIN(TCO_DINT_50);
```

`F_TCO_50_TO_MS`

Returns the tick count in milliseconds: $\text{ticks} * 50$.

Variable	Scope	Type	Description
<code>dwTicker</code>	INPUT	DWORD	Time measured in 50 ms intervals

Return type: **DINT** (set in POU properties). Output range: overflows after ~24.8 days of ticker value.

```
diCurrentMs := F_TCO_50_TO_MS(TCO_DINT_50);
```

`F_TCO_50_TO_TIME`

Returns the tick count as a **TIME** value in milliseconds: $\text{ticks} * 50$.

Variable	Scope	Type	Description
<code>dwTicker</code>	INPUT	DWORD	Time measured in 50 ms intervals

Return type: **TIME** (set in POU properties). Output range: overflows after ~24.8 days of ticker value (same limit as `F_TCO_50_TO_MS`).

```
tCurrent := F_TCO_50_TO_TIME(TCO_DINT_50);
```

F_MIN_TO_TCO_50, F_SEC_TO_TCO_50

Convert minutes or seconds into a 50 ms tick count (for use as **TIMELOW**/**TIMEHIGH** durations or delay values).

F_MIN_TO_TCO_50

Variable	Scope	Type	Description
iMinutes	INPUT	INT	Number of minutes

Return type: **DWORD** (set in POU properties). Formula: **iMinutes** * 1200.

```
dwOneDay := F_MIN_TO_TCO_50(1440); (* 24 h in 50 ms ticks *)
```

F_SEC_TO_TCO_50

Variable	Scope	Type	Description
iSeconds	INPUT	INT	Number of seconds

Return type: **DWORD** (set in POU properties). Formula: **iSeconds** * 20.

```
dwTenSeconds := F_SEC_TO_TCO_50(10);
```

F_MIN_TO_SEC

Converts minutes into seconds.

Variable	Scope	Type	Description
iMinutes	INPUT	INT	Number of minutes

Return type: **INT** (set in POU properties). Formula: **iMinutes** * 60 (computed in DINT, converted to INT).
Range: input limited to ~546 minutes before the INT result overflows.

```
iFiveMinutes := F_MIN_TO_SEC(5); (* 300 *)
```

F_MIN_TO_TIME, F_SEC_TO_TIME

Convert minutes or seconds into a **TIME** value (milliseconds).

F_MIN_TO_TIME

Variable	Scope	Type	Description
iMinutes	INPUT	INT	Number of minutes

Return type: **TIME** (set in POU properties). Formula: `iMinutes * 60000`.

F_SEC_TO_TIME

Variable	Scope	Type	Description
<code>iSeconds</code>	INPUT	INT	Number of seconds

Return type: **TIME** (set in POU properties). Formula: `iSeconds * 1000`.

```
tDelay := F_SEC_TO_TIME(30); (* T#30s *)
```

F_TCO_50_DIFF

Returns the elapsed tick count between a saved point and the current ticker value. The subtraction is performed with the 32-bit **DSUB** instruction, so it stays correct across the ticker wrap-around (modulo 2^{32}).

Variable	Scope	Type	Description
<code>dwStart</code>	INPUT	DWORD	Saved ticker value (start point)
<code>dwCurrent</code>	INPUT	DWORD	Current ticker value (e.g. <code>TCO_DINT_50</code>)

Return type: **DWORD** (set in POU properties). Formula: `dwCurrent - dwStart`.

```
IF MEP(M0) THEN
    dwStart := TCO_DINT_50; (* save the current time *)
END_IF;

IF MEF(M0) THEN
    iEnd := F_TCO_50_TO_SEC(F_TCO_50_DIFF(dwStart, TCO_DINT_50));
END_IF;
```

This example saves in `iEnd` how many seconds `M0` was in the **TRUE** state (`MEP` is the rising-edge trigger, `MEF` the falling-edge trigger).

Function Blocks

FB_TCO_50_BLINK

Classical IEC 61131-3 blink block driven by the global 50 ms ticker. It starts with the `dwTimeLow` interval and, unlike the CoDeSys BLINK block, turns the output off when `xIn` is **FALSE**.

Variable	Scope	Type	Description
<code>xIn</code>	INPUT	BOOL	Enable: starts/stops the blink sequence
<code>dwTimeLow</code>	INPUT	DWORD	Duration of the OFF phase, in 50 ms intervals

Variable	Scope	Type	Description
dwTimeHigh	INPUT	DWORD	Duration of the ON phase, in 50 ms intervals
xQ	OUTPUT	BOOL	Blink output (TRUE during the HIGH phase)

Declare the function block instance in the local label section of the POU:

```
VAR
    fbBlink : FB_TCO_50_BLINK;
END_VAR
```

In the POU body, invoke the block every scan:

```
fbBlink(xIn := X0,
        dwTimeLow := F_MIN_TO_TCO_50(1440),
        dwTimeHigh := F_MIN_TO_TCO_50(1440),
        xQ := Y0);

Y1 := NOT Y0; (* one day motor one, next day motor two *)
```

This example rotates two motors on 24-hour intervals while X0 is ON.

FB_TC010

Elapsed-time accumulator with 0.1 ms resolution. Every scan the block adds the current scan time (special register D8010, in 0.1 ms units) to an internal accumulator, so the outputs report the time elapsed since the last reset. Call it every scan in the main program.

Variable	Scope	Type	Description
xReset	INPUT	BOOL	Reset: holds the elapsed time at 0 while TRUE
diMs	OUTPUT	DINT	Elapsed time since last reset, in milliseconds
di01ms	OUTPUT	DINT	Elapsed time since last reset, in raw 0.1 ms units

Declare the function block instance in the local label section of the POU:

```
VAR
    fbTco10 : FB_TC010;
END_VAR
```

In the POU body, invoke the block every scan:

```
fbTco10(xReset := X10, diMs := diRunTimeMs, di01ms := diRunTime01ms);
```

Note: `FB_TC010` approximates wall-clock time by summing the scan time; it does not include time spent in interrupt tasks. For accurate timing in projects that use interrupt tasks, prefer the ticker globals `TCO_DINT_50`/`TCO_DINT_10` with the conversion functions instead.

Ticker Setup (TCO)

The library's own time base is created by two programs that must be registered in GX Works 2 interrupt tasks:

- `PRG_TCO_TICKER_50` — increments `TCO_DINT_50` every 50 ms (task event `I750`).
- `PRG_TCO_TICKER_10` — increments `TCO_DINT_10` every 10 ms (task event `I610`).

The setup procedure and the required `EI(TRUE)` call are described in the [Architectural Description](#) section. Without the interrupt tasks the global tickers never increment and all conversion functions return `0`.