

Utils V4 — Library for Coolmay FX3G PLC

Utils is a library of general-purpose functions and function blocks for Mitsubishi FX3G PLCs programmed in GX Works 2. It provides bit-level WORD/DWORD manipulation, linear and non-linear scaling, on/off hysteresis regulators, index rotation and shifting, progress calculation, a 3-position valve controller, analog-input scaling for the host PLC and L02 modules, and L02 IP configuration.

The functions are stateless: they return their result directly and are designed to be used inside expressions. The function blocks hold internal state and are called every scan.

Prerequisites

1. **FB_VALVE_3P** requires the **TimeControl** library: it reads the **TCO_DINT_50** 50 ms ticker, so the TimeControl ticker program must be installed and run in an interrupt task.
-

Terminology

The manual type names map to GX Works 2 types as follows.

Type in manual	Type in GX Works 2
INT	Word [Signed]
WORD	Word [Unsigned] / Bit String [16-bit]
DINT	Double Word [Signed]
DWORD	Double Word [Unsigned] / Bit String [32-bit]
BOOL	Bit

Architectural Description

The library is split into two groups of POUs:

- **Functions (F_)** — pure, stateless helpers that compute a value from their inputs and return it through the function name. They never access global data and may be nested inside expressions (**IF F_ISBON(D100, 2) THEN ... END_IF**).
- **Function blocks (FB_)** — stateful blocks that hold internal state across scans (**FB_HYST**, **FB_VALVE_3P**, **FB_SCALE_AI**). They are declared as instances and called every scan.

Bit-manipulation functions operate on either a 16-bit **WORD** (**F_ISBON**, **F_SETB**, **F_RSTB**, **F_SRB**) or a 32-bit **DWORD** (**F_DISBON**, **F_DSETB**, **F_DRSTB**, **F_DSRB**). They take the device/value to modify and a 0-based bit number, and return the result directly.

Scaling is provided in three forms: linear 16-bit (**F_SCALE**), linear 32-bit (**F_DSCALE**), and non-linear through a point table (**F_SCALE_NL**). Analog inputs are scaled by the dedicated blocks **FB_SCALE_AI** (host PLC, **D8030** area) and **L02_SCALE_AI** (L02 modules, **R23700** area).

Function Blocks and Functions

Name	Type	Description
F_ISBON	Function	Test a single bit in a WORD
F_DISBON	Function	Test a single bit in a DWORD
F_SETB	Function	Set a single bit in a WORD and return the modified WORD
F_DSETB	Function	Set a single bit in a DWORD and return the modified DWORD
F_RSTB	Function	Reset a single bit in a WORD and return the modified WORD
F_DRSTB	Function	Reset a single bit in a DWORD and return the modified DWORD
F_SRB	Function	Set or reset a single bit in a WORD by a BOOL
F_DSRB	Function	Set or reset a single bit in a DWORD by a BOOL
F_LIMIT	Function	Clamp an INT value to a range
F_SCALE	Function	Linearly scale an INT between two ranges
F_DSCALE	Function	Linearly scale a DINT between two ranges
F_SCALE_NL	Function	Non-linearly scale an INT through a point table
F_INCN	Function	Increment an index with wrap-around
F_SHFT	Function	Shift an index within a range
F_WORK_LEFT	Function	Progress 100..0 from elapsed/total (INT units)
F_WORK_LEFT_TIME	Function	Progress 100..0 from elapsed/total (TIME)
F_VALVE_POS	Function	Valve position 0..1000 from elapsed/total TIME
F_FLT10	Function	Divide an INT by 10, returning REAL
L02_SET_IP	Function	Write L02 IP settings to R registers
F_MBMV	Function	Block-move N words between devices
FB_HYST	Function Block	Heating on/off regulator with hysteresis
FB_HYST_COOL	Function Block	Cooling on/off regulator with hysteresis
FB_SCALE_AI	Function Block	Scale a host-PLC analog input
L02_SCALE_AI	Function Block	Scale an L02-module analog input
FB_VALVE_3P	Function Block	3-position valve control with position feedback

Bit Functions

F_ISBON

Tests whether a given bit in a **WORD** is ON. The built-in **BON** instruction stores its result in a passed parameter instead of returning it; **F_ISBON** returns the result directly so it can be used inside expressions.

Variable	Scope	Type	Description
wIn	INPUT	WORD	The WORD to check
iBN	INPUT	INT	Bit number, 0-based, range 0..15

Example:

```
IF F_ISBON(D100, 2) THEN
    (* The third bit in D100 is ON *)
END_IF;
```

F_DISBON

DWORD version of **F_ISBON**.

Variable	Scope	Type	Description
dwIn	INPUT	DWORD	The DWORD to check
iBN	INPUT	INT	Bit number, 0-based, range 0..31

Example:

```
IF F_DISBON(D100, 31) THEN
    (* The highest bit of D100 is ON *)
END_IF;
```

F_SETB

Sets a single bit in a **WORD** and returns the modified WORD. The input is not changed.

Variable	Scope	Type	Description
wIn	INPUT	WORD	WORD to modify
iBN	INPUT	INT	Bit number to set, 0..15

Example:

```
wStatus := F_SETB(wStatus, 3);
(* Bit 3 of wStatus is now ON *)
```

F_DSETB

DWORD version of **F_SETB**.

Variable	Scope	Type	Description
dwIn	INPUT	DWORD	DWORD to modify
iBN	INPUT	INT	Bit number to set, 0..31

Example:

```
dwStatus := F_DSETB(dwStatus, 31);
```

F_RSTB

Resets a single bit in a **WORD** and returns the modified WORD. The input is not changed.

Variable	Scope	Type	Description
wIn	INPUT	WORD	WORD to modify
iBN	INPUT	INT	Bit number to reset, 0..15

Example:

```
wStatus := F_RSTB(wStatus, 3);  
(* Bit 3 of wStatus is now OFF *)
```

F_DRSTB

DWORD version of **F_RSTB**.

Variable	Scope	Type	Description
dwIn	INPUT	DWORD	DWORD to modify
iBN	INPUT	INT	Bit number to reset, 0..31

Example:

```
dwStatus := F_DRSTB(dwStatus, 31);
```

F_SRB

Sets or resets a single bit in a **WORD** depending on **xState** and returns the modified WORD.

Variable	Scope	Type	Description
wIn	INPUT	WORD	WORD to modify
iBN	INPUT	INT	Bit number, 0..15
xState	INPUT	BOOL	TRUE = set the bit, FALSE = reset the bit

Example:

```
wStatus := F_SRB(wStatus, 15, TRUE); (* set bit 15 *)
wStatus := F_SRB(wStatus, 0, FALSE); (* reset bit 0 *)
```

F_DSRB

DWORD version of **F_SRB**.

Variable	Scope	Type	Description
dwIn	INPUT	DWORD	DWORD to modify
iBN	INPUT	INT	Bit number, 0..31
xState	INPUT	BOOL	TRUE = set the bit, FALSE = reset the bit

Example:

```
dwStatus := F_DSRB(dwStatus, 31, TRUE);
```

Value and Index Functions

F_LIMIT

Clamps **iIn** to the range [**iMin**..**iMax**] and returns the clamped value.

Variable	Scope	Type	Description
iMax	INPUT	INT	Upper limit
iIn	INPUT	INT	Value to clamp
iMin	INPUT	INT	Lower limit

Example:

```
iValue := F_LIMIT(100, iValue, 0);
(* iValue is now within 0..100 *)
```

F_SCALE

Linearly scales **iVal** from the input range **iInLow**..**iInHigh** to the output range **iOutLow**..**iOutHigh** and returns the result as an **INT**. The input value is first clamped to the input range; the result is clamped to the output range.

Variable	Scope	Type	Description
iVal	INPUT	INT	Value to scale
iInLow	INPUT	INT	Input range minimum
iInHigh	INPUT	INT	Input range maximum
iOutLow	INPUT	INT	Output range minimum
iOutHigh	INPUT	INT	Output range maximum

Example:

```
D8052 := F_SCALE(iPidTask, 0, 100, 0, 4000);
```

iPidTask holds 0..100 and D8052 is the system register that controls analog output DA2, which accepts 0..4000.

F_DSCALE

DINT version of F_SCALE: linearly scales a DINT between two DINT ranges and returns a DINT.

Variable	Scope	Type	Description
diVal	INPUT	DINT	Value to scale
diInLow	INPUT	DINT	Input range minimum
diInHigh	INPUT	DINT	Input range maximum
diOutLow	INPUT	DINT	Output range minimum
diOutHigh	INPUT	DINT	Output range maximum

Example:

```
diResult := F_DSCALE(diVacuumSensor, 0, 32000, 0, 100000);
```

This scales a vacuum sensor from 0..32000 raw units to 0..100000 Pa.

F_SCALE_NL

Non-linearly scales iPV through a point table stored in consecutive D registers. The table starts at iDStart: the first register holds the number of points iPN, the next iPN registers hold the X coordinates, and the following iPN registers hold the Y coordinates.

Variable	Scope	Type	Description
iPN	INPUT	INT	Number of points
iDStart	INPUT	INT	First device of the point table


Variable	Scope	Type	Description
iPv	INPUT	INT	Process value on the X scale to convert to Y

For a 5-point table starting at D100:

```
D100 = 5      (number of points)
D101..D105 = X1..X5
D106..D110 = Y1..Y5
```

Example:

```
D200 := F_SCALE_NL(5, 100, iPv);
```

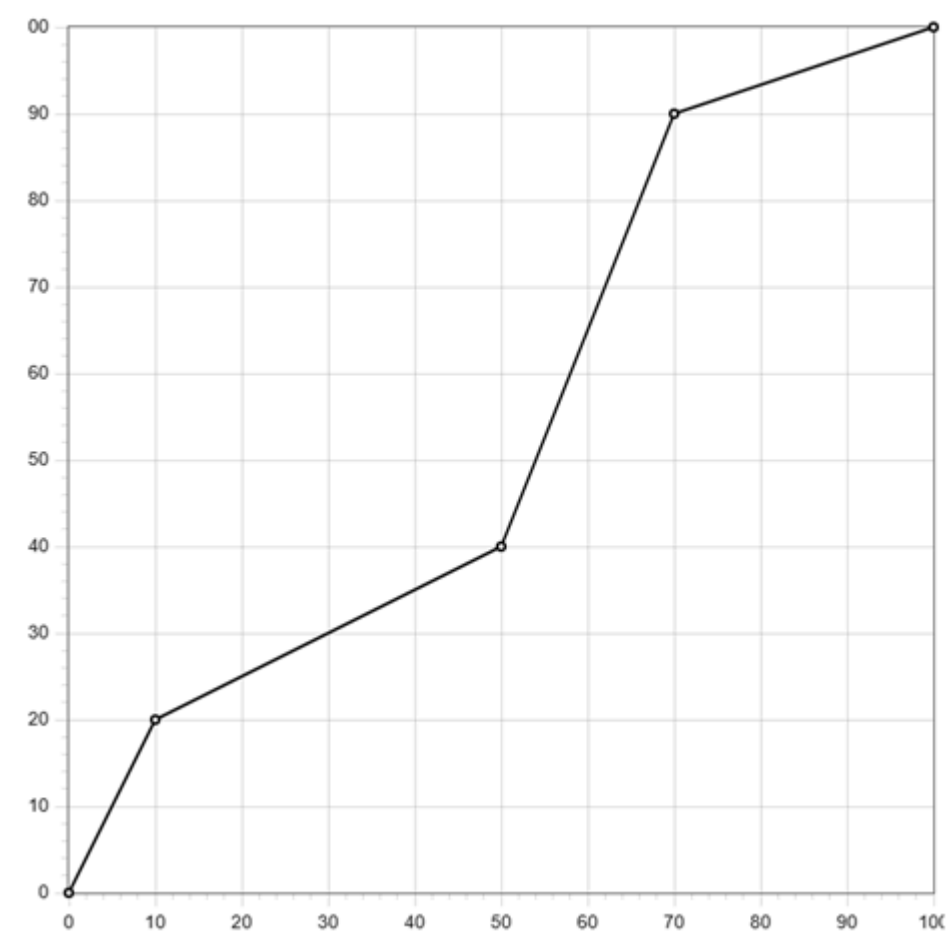

Note: F_SCALE_NL writes the point count to D(iDStart) on every call and reads the X/Y coordinates through index registers. When a Coolmay panel is used, an XY Graph element can be pointed at the same D100 register to draw the curve.

F_INCN

Increments an index iCur by 1 when xIn is TRUE, wrapping to 0 after iMax. The result is returned.

Variable	Scope	Type	Description
<code>xIn</code>	INPUT	BOOL	Increment trigger
<code>iCur</code>	INPUT	INT	Current index
<code>iMax</code>	INPUT	INT	Maximum index (wrap point)

Example:

```
iCount := F_INCN(TRUE, iCount, 2);
```

`iCount` rotates 0, 1, 2, 0, 1, 2, ... each scan.

`F_SHFT`

Shifts an index `iIdx` by `iShifter` within the range 0..`iMax`, wrapping around. It is used to rotate the starting index of an array (e.g. a cascade of pumps or heaters).

Variable	Scope	Type	Description
<code>iShifter</code>	INPUT	INT	Amount to shift by
<code>iIdx</code>	INPUT	INT	Current index
<code>iMax</code>	INPUT	INT	Maximum index

Example:

```
iShiftedCount := F_SHFT(iShifter, iCount, 2);
```

With an array of 3 pumps, `iShifter` values of 0, 1, 2 make `iShiftedCount` start the cascade at index 0, 1, or 2 respectively.

Progress and Time Functions

`F_WORK_LEFT`

Computes the remaining progress of a process as a backward countdown from 100 to 0, given the elapsed and total time in abstract units (seconds, 100 ms ticks, etc.).

Variable	Scope	Type	Description
<code>iEt</code>	INPUT	INT	Elapsed time
<code>iTw</code>	INPUT	INT	Total time

Example:

```
OUT_T(xStart, TC0, 200);
iTimeLeft := F_WORK_LEFT(TN0, 200);
```

F_WORK_LEFT_TIME

TIME version of F_WORK_LEFT.

Variable	Scope	Type	Description
tEt	INPUT	TIME	Elapsed time
tTw	INPUT	TIME	Total time

Example:

```
fbTON(IN := xStart, PT := T#5m);
iTimeLeft := F_WORK_LEFT_TIME(fbTON.ET, fbTON.PT);
```

F_VALVE_POS

Returns the current valve position as a percentage 0..1000 (0.0..100.0 %) from the elapsed travel time and the total travel time.

Variable	Scope	Type	Description
tCt	INPUT	TIME	Current (elapsed) time
tTt	INPUT	TIME	Total travel time

Example:

```
iPosition := F_VALVE_POS(tElapsed, tTotal);
```

Other Functions

F_FLT10

Divides an INT by 10 and returns the result as a REAL.

Variable	Scope	Type	Description
iIn	INPUT	INT	Input value

Example:

```
rResult := F_FLT10(123); (* 12.3 *)
```

Note: `F_FLT10` returns `REAL`; set the function return type to `REAL` in the GX Works 2 POU properties.

L02_SET_IP

Writes an L02 PLC IP setting (PLC IP, gateway, mask, or remote EIP coupler) into the corresponding R register while `xInit` is `TRUE`.

Variable	Scope	Type	Description
<code>xInit</code>	INPUT	BOOL	Trigger to write the setting
<code>iWts</code>	INPUT	INT	Setting type — one of the <code>IP_*</code> constants
<code>wIp1</code>	INPUT	WORD	IP octet 1
<code>wIp2</code>	INPUT	WORD	IP octet 2
<code>wIp3</code>	INPUT	WORD	IP octet 3
<code>wIp4</code>	INPUT	WORD	IP octet 4

Setting types:

- `IP_PLC_IP` — IP address of the PLC
- `IP_PLC_GATEWAY` — PLC gateway
- `IP_PLC_MASK` — PLC subnet mask
- `IP_REMOTE1` ... `IP_REMOTE4` — remote EIP coupler addresses

Example:

```
xDone := L02_SET_IP(xSaveSettings, IP_PLC_IP, 16#00C0, 16#00A8, 16#0000, 16#0064);
xDone := L02_SET_IP(xSaveSettings, IP_PLC_GATEWAY, 16#00C0, 16#00A8, 16#0000,
16#0001);
xDone := L02_SET_IP(xSaveSettings, IP_PLC_MASK, 16#00FF, 16#00FF, 16#00FF, 16#0000);
```

Note: `L02_SET_IP` performs no return assignment, so its result is always the default (`FALSE`). It is used for its device side effect (writing the R registers).

F_MBMOV

Block-moves `iNum` words from a source device to a destination device while `xEnable` is `TRUE`. The source and destination are given by device number (e.g. `100` = `D100`).

Variable	Scope	Type	Description
<code>xEnable</code>	INPUT	BOOL	Enable the move
<code>iSrc</code>	INPUT	INT	Source device number
<code>iNum</code>	INPUT	INT	Number of words to move
<code>iDst</code>	INPUT	INT	Destination device number

Example:

```
xDone := F_MBMOV(TRUE, 100, 4, 200);  
(* Copies D100..D103 to D200..D203 *)
```

Note: `F_MBMOV` performs no return assignment, so its result is always the default (`FALSE`). It is used for its device side effect.

Regulators

FB_HYST

On/off regulator function block for heating logic. It turns the output off when `iPV` drops below `iSV`, and on when `iPV` rises above `iSV + iDV`.

Variable	Scope	Type	Description
<code>xIn</code>	INPUT	BOOL	Enable regulator
<code>iSV</code>	INPUT	INT	Set value
<code>iPV</code>	INPUT	INT	Process value
<code>iDV</code>	INPUT	INT	Delta (hysteresis band)
<code>xQ</code>	OUTPUT	BOOL	Regulator output

Example:

```
VAR  
    fbHYST : FB_HYST;  
END_VAR  
  
fbHYST(  
    xIn := xStart,  
    iSV := 255,           (* Set value is 25.5 *)  
    iPV := AI_Temperature,  
    iDV := 2,             (* Delta is 0.2 *)  
    xQ := Y0  
);
```

FB_HYST_COOL

Cooling version of `FB_HYST` — the logic is reversed: it turns the output off when `iPV` rises above `iSV`.

Variable	Scope	Type	Description
<code>xIn</code>	INPUT	BOOL	Enable regulator
<code>iSV</code>	INPUT	INT	Set value

Variable	Scope	Type	Description
iPV	INPUT	INT	Process value
iDV	INPUT	INT	Delta (hysteresis band)
xQ	OUTPUT	BOOL	Regulator output

Example:

```
VAR
    fbHystCool : FB_HYST_COOL;
END_VAR

fbHystCool(xIn := xStart, iSV := 250, iPV := iTemperature, iDV := 5, xQ := Y0);
```

Analog Input Scaling

Sensor Types

The `STYPE_*` constants select the sensor type for `FB_SCALE_AI` and `L02_SCALE_AI`.

Scalable — these three types are scaled into engineering units using `iMin/iMax`:

- `STYPE_0_10V`
- `STYPE_0_20MA`
- `STYPE_4_20MA`

Non-scalable — these types are returned as-is (`iMin/iMax` are not applied), but it is still recommended to read them through the block so the internal system devices that configure the AI type are set correctly:

- `STYPE_PT100`
- `STYPE_PT1000`
- `STYPE_TC_K`
- `STYPE_NTC`
- `STYPE_NTC10K`
- `STYPE_TC_E`
- `STYPE_TC_T`
- `STYPE_TC_S`
- `STYPE_TC_J`

`FB_SCALE_AI`

Scales an analog input of the host PLC into engineering units. Coolmay PLCs store analog inputs in `D8030–D8045`; the input is 12-bit (0..4000).

Variable	Scope	Type	Description
iAINum	INPUT	INT	Analog input number, 0..16

Variable	Scope	Type	Description
iSType	INPUT	INT	Sensor type — see the list above
iMin	INPUT	INT	Minimum of the measured unit (scalable types only)
iMax	INPUT	INT	Maximum of the measured unit (scalable types only)
iFilterTime	INPUT	INT	Filter time, 1..60 ms
iFilterNum	INPUT	INT	Filter cycles, 1..999 (default 100)
iCorrection	INPUT	INT	Correction added to the output
iValueOut	OUTPUT	INT	Scaled value
xErrWire	OUTPUT	BOOL	Wire error
xErrLimit	OUTPUT	BOOL	Input values error (minimum greater than maximum)
xErrMinMax	OUTPUT	BOOL	Min/Max invalid error

Example:

```

VAR
    fbScale : FB_SCALE_AI;
    iPressure : INT;
    iTemperature : INT;
END_VAR

fbScale(
    iAINum := 0,
    iSType := STYPE_4_20MA,
    iMin := 0,
    iMax := 160,           (* 160 is equal to 16.0 bar *)
    iFilterTime := 30,
    iFilterNum := 200,
    iValueOut := iPressure
);

IF fbScale.xErrWire THEN
    (* Wire problem on analog input AD0 *)
END_IF;

fbScale(
    iAINum := 1,
    iSType := STYPE_PT100,
    iCorrection := 5,      (* Add +0.5 *)
    iValueOut := iTemperature
);

```

The same FB instance can read all analog inputs — a new instance is not required for each AI.

L02_SCALE_AI

Scales an analog input of an L02 series module (L02-4AD, L02-RTD, ...) into engineering units. Values are stored in **R23700–R23749**, 16-bit, range 0..32000.

Variable	Scope	Type	Description
iAINum	INPUT	INT	Analog input number, 0..49
iSType	INPUT	INT	Sensor type — see the list above
iMin	INPUT	INT	Minimum of the measured unit (scalable types only)
iMax	INPUT	INT	Maximum of the measured unit (scalable types only)
iCorrection	INPUT	INT	Correction added to the output
iValueOut	OUTPUT	INT	Scaled value

Example:

```

VAR
    fbScaleL02 : L02_SCALE_AI;
    iPressure : INT;
    iTemperature : INT;
END_VAR

fbScaleL02(
    iAINum := 0,
    iSType := STYPE_4_20MA,
    iMin := 0,
    iMax := 160,
    iValueOut := iPressure
);

fbScaleL02(
    iAINum := 1,
    iSType := STYPE_PT100,
    iCorrection := -2,      (* Subtract 0.2 *)
    iValueOut := iTemperature
);

```

Valve Control

FB_VALVE_3P

Controls a 3-position valve. It is not a pulse regulator but a regulator with constant position search: it tracks the current position via the travel time and drives the open/close outputs toward the set position **iSV** (0..1000).

Important: This function block requires the **TimeControl** library and its **TCO_DINT_50** ticker setup.

Variable	Scope	Type	Description
xEnable	INPUT	BOOL	Enable valve control
iSV	INPUT	INT	Set valve position, 0..1000 (0.0..100.0 %)
iDlt	INPUT	INT	Dead zone: no movement while the error is below this value
tTotalTime	INPUT	TIME	Total travel time from fully closed to fully open (add ~2 %)
tLuftTime	INPUT	TIME	Backlash (luft) compensation time on direction change
xCloseOnDisable	INPUT	BOOL	Close the valve when control is disabled
xIsOpened	INPUT	BOOL	Fully-open feedback
xIsClosed	INPUT	BOOL	Fully-closed feedback
xOpen	OUTPUT	BOOL	Open-valve command
xClose	OUTPUT	BOOL	Close-valve command

Example:

```
VAR
    fbValve : FB_VALVE_3P;
END_VAR

fbValve(
    xEnable := X0,
    iSV := iPidTask,
    iDlt := 50, (* 5.0 % *)
    tTotalTime := T#10s,
    tLuftTime := T#500ms,
    xCloseOnDisable := TRUE,
    xIsOpened := X2,
    xIsClosed := X3,
    xOpen := Y0,
    xClose := Y1
);
```