

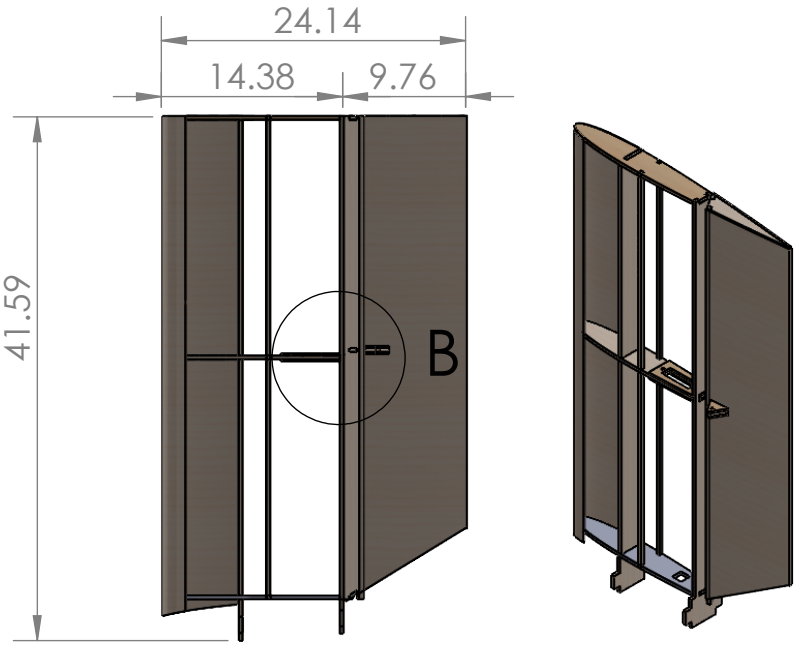


Overview

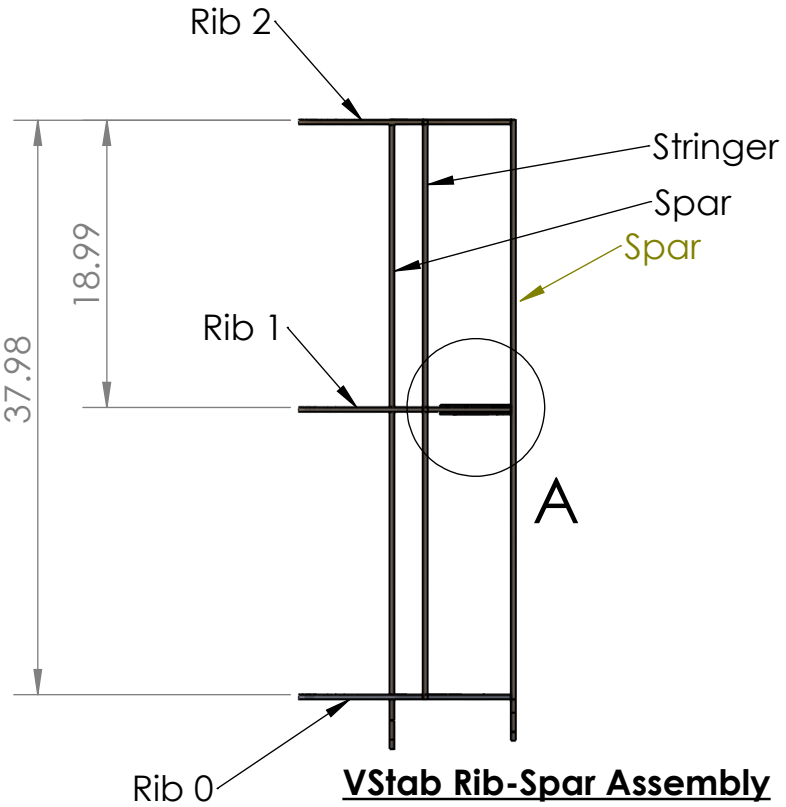


VStab Rib-Spar Assembly

Rudder Control Surface
Horn is placed ABOVE Rib2

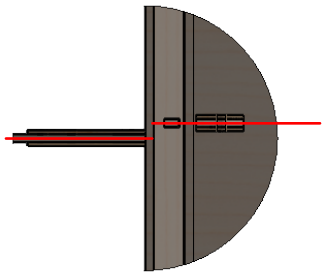


DETAIL B
SCALE 1 : 3

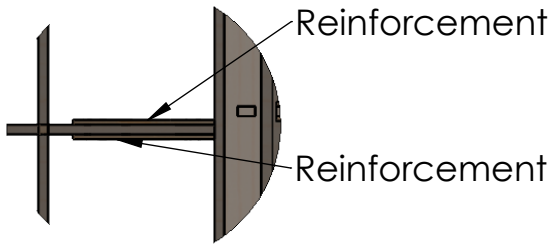


DETAIL A
SCALE 2 : 5


Rib 1 Reinforcements

TITLE: **Vstab**		
SIZE **A**	DWG. NO. V3_VStab_Drawing_YS	REV
SCALE: 1:6	All in centimeters	SHEET 1 OF 3

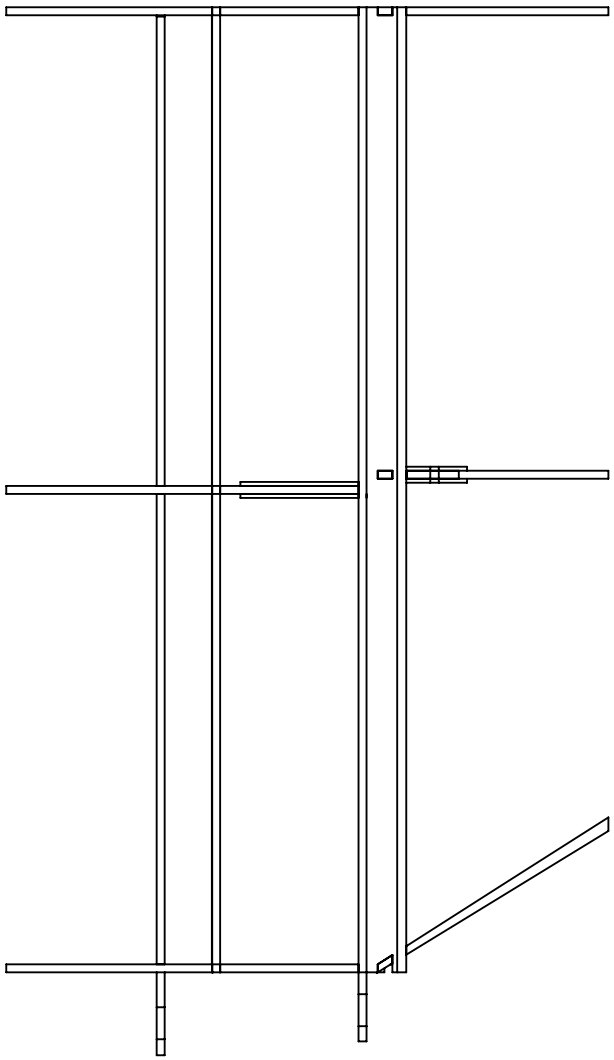


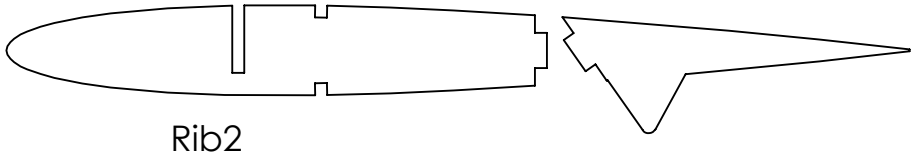

Rib2

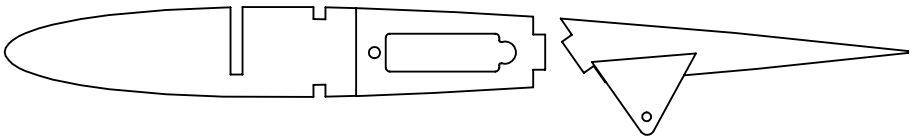



Rib1



Rib0

TITLE:		
SIZE **A**	DWG. NO. V3_VStab_Drawing_YS	REV
SCALE: 1:5	All in centimeters	SHEET 2 OF 3

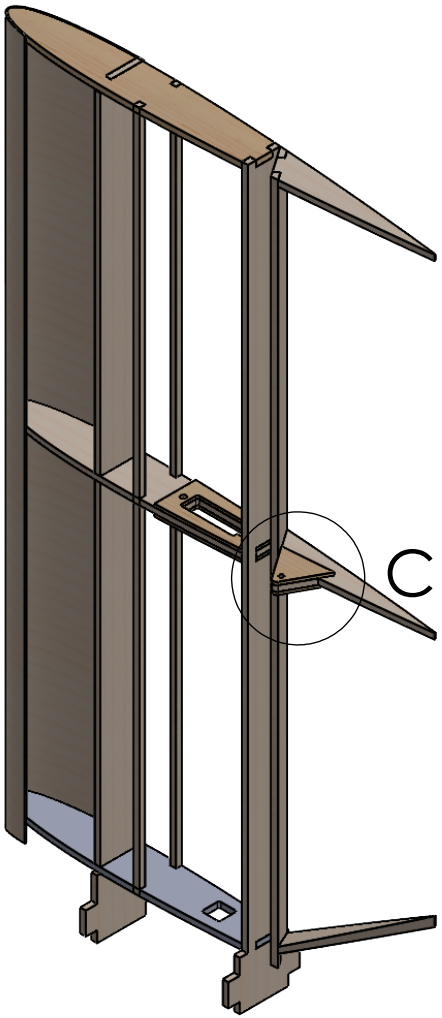

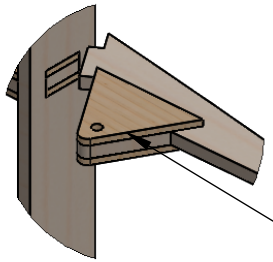

Dont' forget the reinforcments for the rudder

DETAIL C
SCALE 2 : 3

TITLE:		
SIZE **A**	DWG. NO. V3_VStab_Drawing_YS	REV
SCALE: 1:5	All in centimeters	SHEET 3 OF 3