

User Guide

Contents

- Overview..... 3**
- Dashboards..... 3**
 - General Dashboard.....4
 - Faults.....4
 - Alarm Notification..... 5
 - Language Preference..... 5
- Core Controller Capabilities..... 6**
 - Tools.....6
 - NETCONF Command Relay.....7
 - Performance.....8
 - Create/Update Performance Measurement Filter.....8
 - View Clock..... 11
 - Edit Clock..... 12
 - View Alarm..... 13
 - Edit Alarm..... 14
 - Administration..... 16
 - Users..... 16
 - Groups..... 20
 - Access Profiles..... 22
- System and User Preferences..... 25**
 - Preferences..... 26
 - System Status..... 28
 - Cluster..... 29
 - Pods..... 29
 - Events..... 31
- Docs.....32**
 - About..... 32
 - Licenses..... 32
 - API Tool..... 32
 - Postman Collection.....34
- Glossary.....34**
- Index.....36**

Overview

ABC application is a software solution that provides unified Radio Access Network capabilities for mobile networks. ABC application is designed as a cloud-native solution with a micro-services architecture, ensuring scalability and flexibility to meet the requirements of various network operators.

The ABC application verifies the proper operation and maintenance of the network infrastructure by providing the necessary tools, protocols, and interfaces to manage various aspects of the RAN. These functions enable network operators to effectively configure, monitor, and maintain their network deployments. The ABC application provides access to network-wide data that operators can use to make informed decisions and aspects of Artificial Intelligence (AI) and Machine Learning (ML) to take well-informed actions.



Note: ABC application supports both XYZ and multivendor RAN elements.

Fault Management

Fault management tools and techniques help to detect, isolate, and resolve network infrastructure problems to minimize downtime and costly service disruptions. ABC application allows the user to monitor the faults, abnormalities, or failures in network and take action manually or automatically. User can enhance fault management with machine learning and artificial intelligence that helps in early fault detection.

Performance Management

Performance management in the RAN is used for minimizing disruptions, maximizing resource use, achieving optimal network performance, and delivering user experiences that meet expectations. By monitoring network performance, operators can improve network efficiency, maintain high-quality connectivity for their subscribers, and proactively resolve the issues. ABC application manages the Network Elements (NEs) performance by monitoring network parameters.

Configuration Management

Visualizing and managing the configuration of RAN elements, for example, gNodeBs and transmission equipment is required for maintaining a stable network. ABC application configuration management allows network operators to control standard configurations throughout provisioning, verifying proper network operation, and supporting service expansion.

Security and Access Management

ABC application provides security and access management for overall network security, user authentication, authorization, and access control to network services. ABC application security and access management includes:

- Implementing measures to protect the RAN infrastructure from unauthorized access
- Securing user data
- Monitoring for security breaches
- Verifying the users are granted the appropriate level of access based on their credentials and permissions

Dashboards

The **Dashboards** menu allows the user to view the status of network alarms and the connection status of managed elements.

To view the **General Dashboard** page in the ABC application application, navigate to the **Dashboards** menu.

- [General Dashboard](#) on page 4

- [Faults](#) on page 4
- [Alarm Notification](#) on page 5
- [Language Preference](#) on page 5

General Dashboard

The **General Dashboard** feature has the following general statistics:

- **Managed Element Status**
- **Network Alarm Status**
- **alarmCount**
- **Clock**
- **PM Filters Time Series Chart**
- **Alarm Table**

To view the **General Statistics**, navigate to the **General Dashboard Custom** tab from the **Dashboards** dropdown.



Note:

- By default, **Managed Element Status** and **Network Alarm Status** panes are displayed.
- Users should click the **Customize Dashboard** icon (🔧) to view the **alarmCount**, **Clock**, **PM Filters Time Series Chart**, **Managed Element Status**, **Network Alarm Status**, and **Alarm Table**.

Managed Element Status

The **Managed Element Status** pane displays the number of devices/NEs in the network with the connectivity status.

The NEs connected in the network with connectivity status are listed on the right side of the **Managed Element Status** pane and the count of NEs are shown in the circle, for example, **CONNECTED**, **CONNECTING**, **DISCONNECTED**, **UNABLETOCONNECT**, **UNDEFINED**, **MOUNTED**, and **UNMOUNTED**.

Network Alarm Status

The **Network Alarm Status** pane displays the total number of alarms raised and the count of each alarm based on the severity.

The perceived severity alarms are listed on the right side of the **Network Alarm Status** pane and the count of perceived severity alarms are shown in the circle, for example, **CRITICAL**, **MAJOR**, **MINOR**, **WARNING**, **CLEARED**, and **INDETERMINATE** alarms.



Note:

- When a user clicks the listed perceived severity alarms, it redirects to the **System Alarms** of the **Control Button** menu and displays the respective alarm details based on the severity of alarm selected.
- Users can view the count of each alarm severity by hovering over the **Network Alarm Status** pane.

Faults

The **Faults** icon (🔔) displays the number of alarms raised in the NEs with severity.

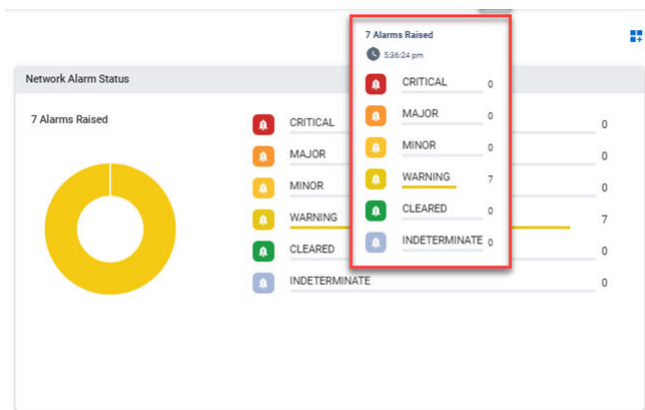


Figure 1: Faults



Note: When a user clicks the severity of each alarm, it redirects to the **System Alarms** page.

Alarm Notification

The **Alarm Notification** icon () allows the user to enable/disable the alarm notification.

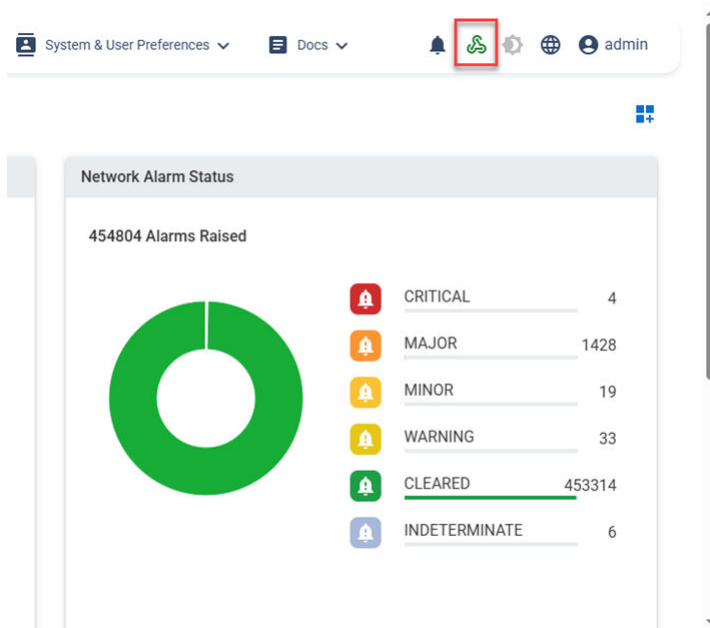


Figure 2: Enable/Disable Alarm Notification

Language Preference

The **Language Preference** icon () allows the user to select the preferred language.

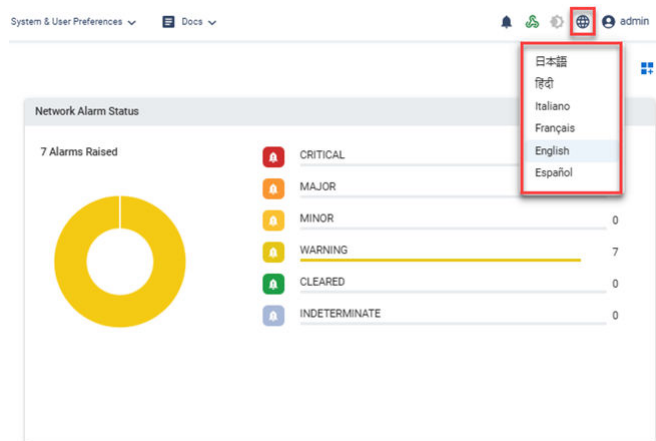


Figure 3: Language Preference



Note: By default, **English** is selected.

Core Controller Capabilities

The **Control Button** menu is the collection of FM, CM, and PM features. It allows the user to perform the core control capabilities of the managed NEs, for example, configuration, fault, and performance management.

To view the following sections, navigate to **Control Button** menu in the ABC application application:

- **Fault**
- **Connect**
- **Configuration**
- **Tools**
- **Performance**
- **Administration**
- [Tools](#) on page 6
- [Performance](#) on page 8
- [Administration](#) on page 16

Tools

The **Tools** menu allows the user to run the NETCONF command.

To view the **NETCONF Command Relay** screen, navigate to **Control Button > Tools > NETCONF Command Relay**.

Table 1: NETCONF Command Relay Icons

Icon	Name of Icon	Description
	Run NETCONF Command	Executes NETCONF command
	Open	Opens NETCONF command from a file

Icon	Name of Icon	Description
	Save As	Saves NETCONF command to a file. Users can click the Append response to file checkbox to export the response in .txt format.
	Source database	running Running datastore contains the entire configuration that is currently active on the device. candidate Candidate configuration datastore can be manipulated without impacting the devices current configuration. The candidate database can later be committed to the running configuration datastore.
A-	Decrease font size	Decreases font size
A+	Increase font size	Increases font size
	Split vertical	Splits the incoming and outgoing configurations vertically
	Split horizontal	Splits the incoming and outgoing configurations horizontally

- [NETCONF Command Relay](#) on page 7

NETCONF Command Relay

This procedure describes how to read a NETCONF command from a file, execute it, and save the NETCONF response to a separate file.

1. Select: **Control Button** > **Tools** > **NETCONF Command Relay**
The **NETCONF Command Relay** screen is displayed.
2. Select the NE from the **Network Element** dropdown.
The APIs are displayed based on the NE selected.
3. Select the API from the **NETCONF Command** dropdown.
4. Edit the configuration fields in the left pane as required.
5. Click the **Run NETCONF Command** icon () to execute the command.
The output is displayed in the right pane.

The NETCONF command is executed and the response is saved successfully.

¹ The running configuration datastore always exists.

² Candidate configuration datastore does not support for all devices.

Performance

The **Performance** menu displays the performance monitoring data in chart form. The **alarmCount**, **Clock**, and **PM Filters Time Series Chart** is customizable based on user requirement.

To view the **PM Dashboard** screen, navigate to **Control Button > Performance > Charts**.

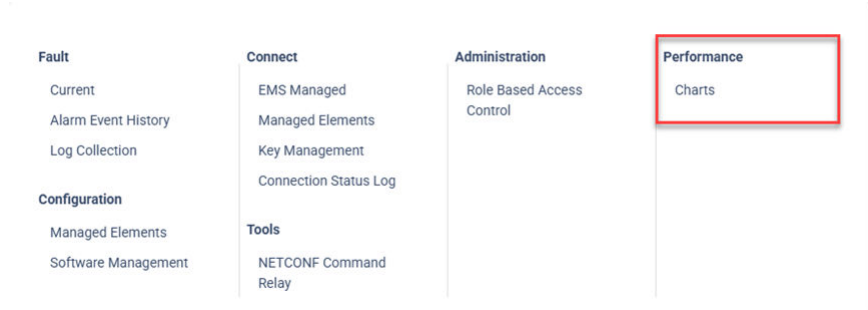


Figure 4: Performance

- [Create/Update Performance Measurement Filter](#) on page 8
- [View Clock](#) on page 11
- [Edit Clock](#) on page 12
- [View Alarm](#) on page 13
- [Edit Alarm](#) on page 14

Create/Update Performance Measurement Filter

This procedure describes how to create/update the performance measurement filter.

1. Select: **Control Button > Performance > Charts**

The **PM Dashboard** screen is displayed.

PM Dashboard

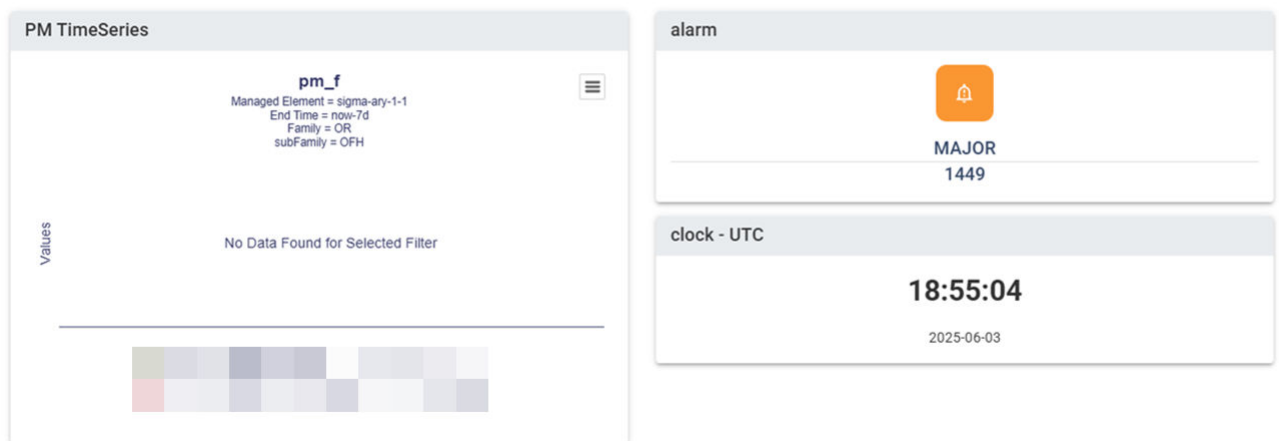


Figure 5: PM Dashboard Screen

2. Click the **Customize Dashboard** icon (🔧) in PM Dashboard.
The **Create/Update PM filters**, **Grid Layout**, **Add Widgets**, and **Close** icons are displayed.
3. Select the **Create/Update PM filters** icon (📄) to create/update the performance measurement filters.
The **Create/Update Performance Measurement Filter** window is displayed.

Create/Update Performance Measurement Filter

Filter List

Select from existing filter list

Name *

New Filter name should be unique

Network Element *

Select Network Element

☒ End Time
☐ Time Range

End Time

Last 1 Hour

Select a end time range

Family Measurement

Select from available families

Family Sub Measurement

Select from available subfamilies

KPI

Select a valid Key Performance Indicator

CANCEL

CREATE

Figure 6: Create/Update Performance Measurement Filter Window

4. Perform the following steps to create/update the performance measurement filters.

- Perform 5 on page 911 on page 10.
- Perform 12 on page 1014 on page 11.

5. Enter the Filter name in the **Name** field.

Create/Update Performance Measurement Filter

Filter List

Select from existing filter list

Name *

New Filter name should be unique

Network Element *

Select Network Element

☒ End Time
☐ Time Range

End Time

Last 1 Hour

Select a end time range

Family Measurement

Select from available families

Family Sub Measurement

Select from available subfamilies

KPI

Select a valid Key Performance Indicator

CANCEL

CREATE

Figure 7: Create Performance Measurement Filter

6. Select the NE from the **Network Element** dropdown.

7. Perform the following steps based on the **Time Selection**.

- Select the time from the **End Time** dropdown.

- a. Click the calendar icon (📅) and select the start date and time in the **Start Time** field.
- b. Click the calendar icon (📅) and select the end date and time in the **End Time** field.



Note: By default, **End Time** is selected.

8. Select the family measurement type from the **Family Measurement** dropdown.



Note: Users can select the **Family Measurement** type when the NE is selected from the **Network Element** dropdown.

9. Select the family sub measurement type from the **Family Sub Measurement** dropdown.



Note: The **Family Sub Measurement** value varies based on the **Family Measurement** selected.

10. Select the performance KPI measurement type from the **KPI** field.



Note: The **KPI** dropdown displays the values based on the family measurement type selected in the **Family Measurement** dropdown.

11. Click **CREATE**.

The PM filter is created successfully and the created filter lists in the **Filter List** dropdown of **User Preferences** screen.

12. Select the filter to update from the **Filter List** dropdown.

Create/Update Performance Measurement Filter

Filter List

Name *

New Filter name should be unique

Test

stream

Streaming

pm

pm_f

Select a end time range

Family Measurement

Family Sub Measurement

Select from available families

Select from available subfamilies

KPI

Select a valid Key Performance Indicator

End Time Time Range

CANCEL CREATE

Figure 8: Update Performance Measurement Filter

The values are displayed based on the selected filter.

Create/Update Performance Measurement Filter

Filter List
Test
Select from existing filter list

Name *
Test
New Filter name should be unique

Network Element
du-sim-12-05-du1-v2
Select Network Element

☒ End Time ☐ Time Range

End Time
Last 24 Hours
Select a end time range

Family Measurement
OR
Select from available families

Family Sub Measurement
ULSQL
Select from available subfamilies

KPI
OR.ULSQL.DistPathlossFr1.0.12
Select a valid Key Performance Indicator

CANCEL UPDATE

Figure 9: Update Performance Measurement Filter Value

13. Update the values in the respective fields to update the performance measurement filter.

14. Click **UPDATE**.

The PM filter is updated successfully.

The performance measurement filter is created/updated successfully.

View Clock

This procedure describes how to view and edit the time and date in clock pane.

1. Select: **Control Button > Performance > Charts**

The **PM Dashboard** screen is displayed.

PM Dashboard

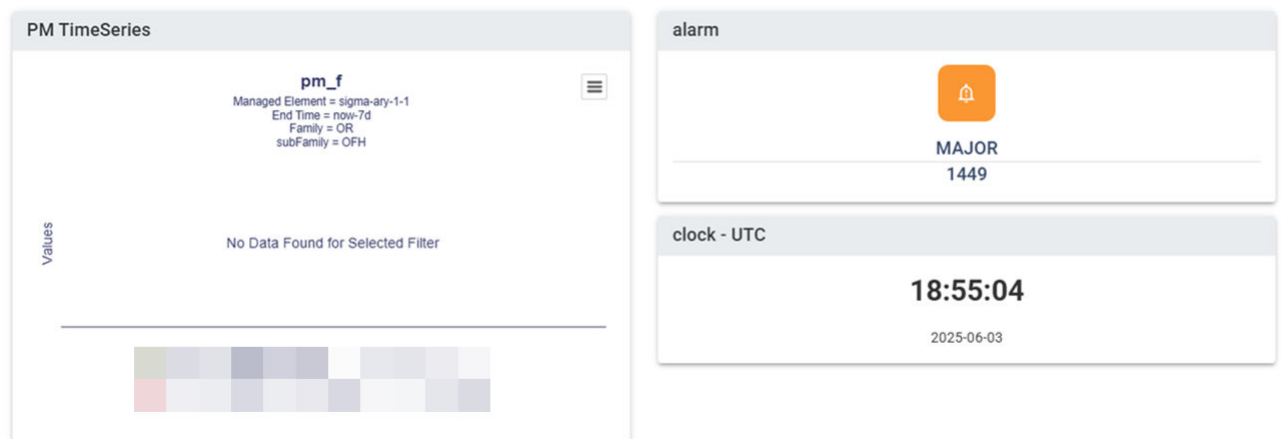


Figure 10: PM Dashboard Screen

2. Click the **Customize Dashboard** icon (🔧).

The **Create/Update PM filters**, **Grid Layout**, **Add Widgets**, and **Close** icons are displayed.

3. Select the add icon (+) to get the **clock - UTC** pane.

PM Dashboard

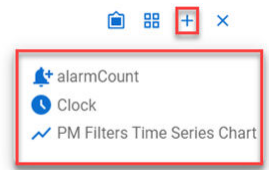


Figure 11: Add Icon

4. Select the **Clock** to view the time and date.
The **clock - UTC** pane is displayed.

PM Dashboard

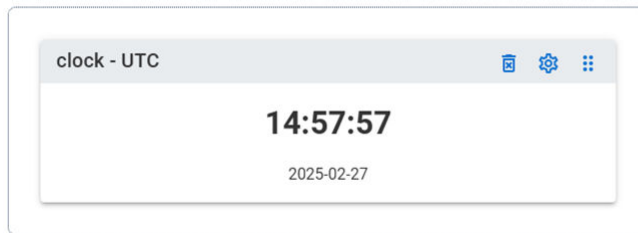


Figure 12: Clock Pane

Table 2: Clock Pane Icons

Icon	Name of Icon	Description
	Drag to Reorder	Rearranges the visibility of the clock - UTC pane
	Customize	Displays the Edit Clock dialog box
	Delete	Deletes the clock - UTC pane

The **clock - UTC** pane is displayed successfully.

Edit Clock

This procedure describes how to edit the values in clock pane.

1. Select: **Control Button > Performance > Charts**
The **PM Dashboard** screen is displayed.
2. Click the **Customize Dashboard** icon (+).
The **Create/Update PM filters**, **Grid Layout**, **Add Widgets**, and **Close** icons are displayed.

PM Dashboard



Figure 13: PM Icons

3. Select the **Customize** icon () to edit the clock fields in the **clock - UTC** pane.
The **Edit Clock** window is displayed.

Edit Clock

Name Clock Customize the name of clock	TimeZone UTC Select a valid timezone
Date Pattern yyyy-MM-dd Valid Date formats: yyyy/MM/dd, yyyy-mm-dd, yy/MM/dd, dd/MM/yy, dd-MM-yy, etc	Time Pattern HH:mm:ss Valid Time format: HH:mm:ss, HH:mm (24h), hh:mm:ss, hh:mm (12h)

Figure 14: Edit Clock Window

- Enter the clock name in the **Name** field to customize the name of the clock.



Note: The title of the clock pane changes when the user customizes the name of the clock.

- Select the required time zone from the **TimeZone** dropdown.



Note: The title of the clock pane changes when the user customizes the **TimeZone**.

- Enter the valid date format in the **Date Pattern** field.



Note: The valid date formats are `yyyy/MM/dd`, `yyyy-mm-dd`, `yy/MM/dd`, `dd/MM/yy`, and `dd-MM-yy`.

- Enter the valid time format in the **Time Pattern** field.



Note: The valid time formats are `HH:mm:ss`, `HH:mm (24h)`, `hh:mm:ss`, and `hh:mm (12h)`.

- Click **SAVE**.

The **Clock** pane is displayed successfully based on the edited values.

View Alarm

This procedure describes how to view the alarm count.

- Select: **Control Button > Performance > Charts**
The **PM Dashboard** screen is displayed.

PM Dashboard

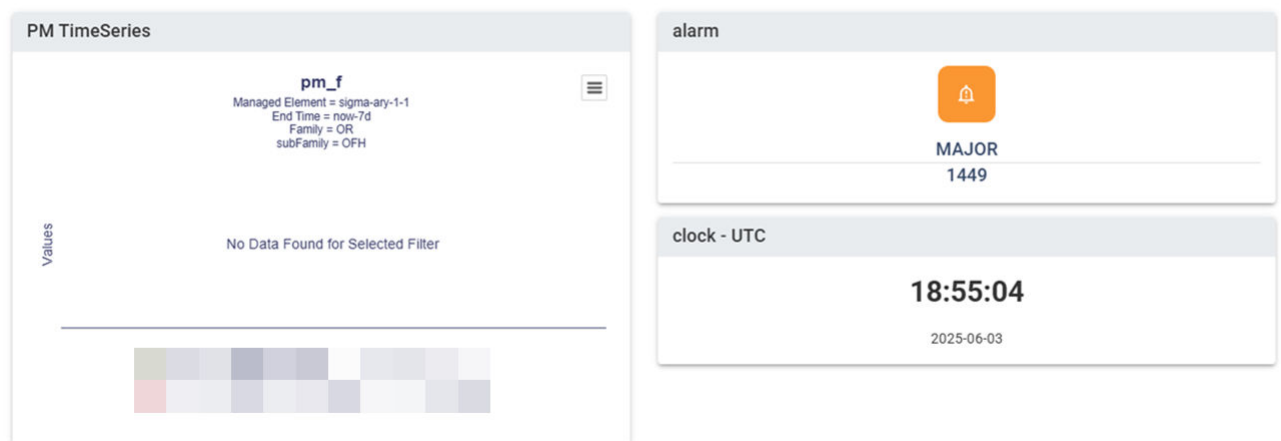


Figure 15: PM Dashboard Screen

- Click the **Customize Dashboard** icon (🔧) in **PM Dashboard**.
The **Create/Update PM filters**, **Grid Layout**, **Add Widgets**, and **Close** icons are displayed.
- Select the add icon (+) to create the **Alarm** chart.

PM Dashboard

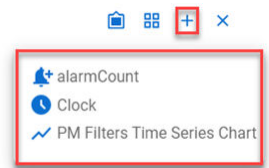


Figure 16: Add Chart

- Select the **alarmCount** to add the **Alarm** chart.
The **Alarm** chart is displayed.

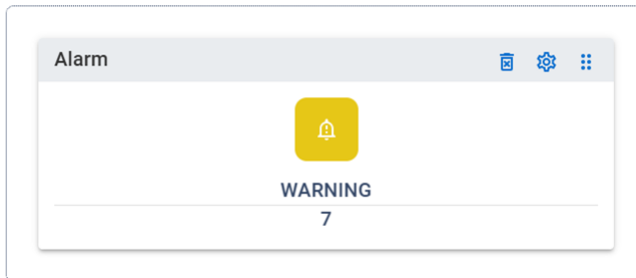


Figure 17: Alarm Chart

Table 3: Alarm Pane Icons

Icon	Name of Icon	Description
⋮	Drag to Reorder	Rearranges the visibility of the Alarm pane
⚙️	Customize	Displays the Edit Alarm dialog box
🗑️	Delete	Deletes the Alarm pane

Edit Alarm

This procedure describes how to edit the alarm count.

- Select: **Control Button** > **Performance** > **Charts**
The **PM Dashboard** screen is displayed.
- Click the **Customize Dashboard** icon (🔧) in **PM Dashboard**.
The **Create/Update PM filters**, **Grid Layout**, **Add Widgets**, and **Close** icons are displayed.

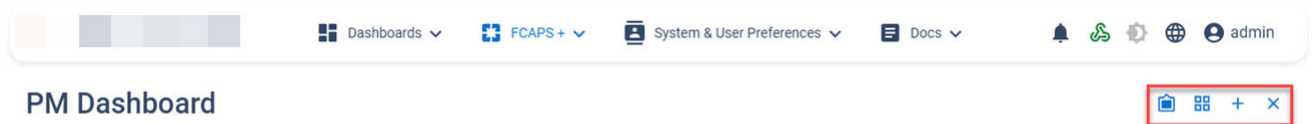


Figure 18: PM Icons

- Select the **Customize** icon (⚙️) to edit the alarm fields in the **alarmCount** pane.
The **Edit Alarm** window is displayed.

Edit Alarm

Name
Alarm
Customize the name of alarm widget

Alarm Type
WARNING
Select alarm type

CANCEL SAVE

Figure 19: Edit Alarm Window

- Enter the alarm name in the Name field to customize the name of the alarm.



Note: The title of the alarm chart changes when the user customizes the name of the alarm.

- Select the required alarm type from the **Alarm Type** dropdown.

Edit Alarm

Name
Alarm
Customize the name of alarm widget

Alarm Type
WARNING

total
CRITICAL
MAJOR
MINOR
WARNING
CLEARED
INDETERMINATE

Figure 20: Alarm Type Dropdown



Note: The applicable alarm types are:

- **total**
- **CRITICAL**
- **MAJOR**
- **MINOR**
- **WARNING**
- **CLEARED**
- **INDETERMINATE**

- Click **SAVE**.

The **Alarm** chart is displayed successfully based on the alarm types.

Administration

The **Administration** menu is designed to manage the ABC application application using keycloak-based authentication. It uses keycloak integration for Role-Based Access Control (*RBAC*) and uses REST API support from keycloak. Keycloak interface serves as a backend API for access management.

The **Role-based Access Control** tab allows the user to view and edit the list of users, groups, and access profiles.

To view the **Role-based Access Control** screen, navigate to **Control Button > Administration > ADC**.

- [Users](#) on page 16
- [Groups](#) on page 20
- [Access Profiles](#) on page 22

Users

The **Users** tab allows the user to view and edit the list of users added in the ABC application application.

To view the **Users** screen, navigate to **Control Button > Administration > ADC > USERS**.

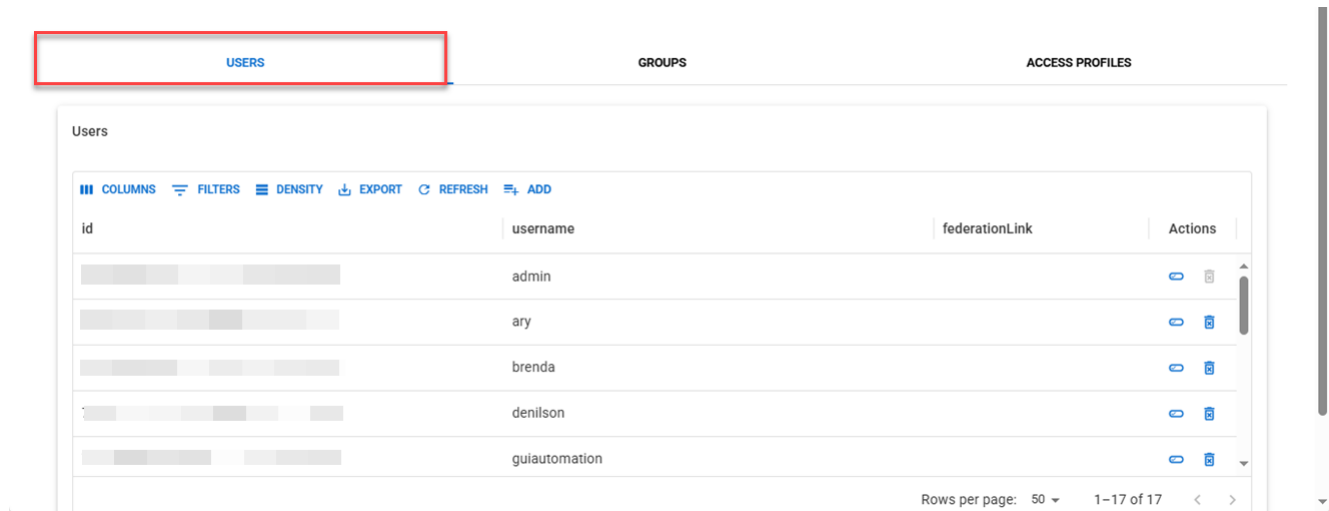


Figure 21: Users Screen

Table 4: User Fields

Field	Description
id	ID of the user
username	Name of the user
federationLink	Groups in which the user is specified
Actions	Users can click the Edit icon () to edit the Users pane. Users can click the Delete icon () to delete the registered user from the application.

Table 5: User Icons

Icon	Name of Icon	Description
 COLUMNS	Select columns	Shows the user fields. Users can select/deselect each of the attribute fields that need to be displayed in the Users screen. Users can click Show/Hide All to view/hide all the attributes in the Users screen.
 FILTERS	Show filters	Filters the users by selecting the field from the Columns and Operator dropdown and enter the value in the Value field. Users can click the ADD FILTER icon to add one or more filters. Users can click the Delete icon (✕) to delete a single filter or click the REMOVE ALL icon to delete all the filters.
 DENSITY	Density	Shows the users list in a Compact , Standard , or Comfortable type of view as required.
 EXPORT	Export	Exports the users list in CSV format by selecting Export > Download as CSV .
 REFRESH	Refresh	Refreshes the users list manually
 ADD	Add	Creates a new user

- [Create User](#) on page 17
- [Edit/View User](#) on page 18

Create User

This procedure describes how to create a new user in the application.

1. Select: **Control Button** > **Administration** > **ADC** > **USERS**
2. Click the add icon ( **ADD**) in the **Users** pane.
The **createUser** window is displayed.

createUser
Username and email are not case sensitive

username *

Enter unique username

email ☐ emailVerified

emailHelper

firstName lastName

Enter your first name Enter your last name

Password * ☒ Temporary Password

Enter a default password for user

Figure 22: Create User Window

3. Enter the Username in the **username** field.
4. Enter the email in the **email** field.



Note: If the Email is verified, select the **Email Verified** toggle button.

5. Enter the First name in the **firstName** field.
6. Enter the Last name in the **lastName** field.
7. Enter the Password in the **Password** field and select the **Temporary Password** toggle button.
8. Click **SAVE**.

User is created successfully.

Edit/View User

This procedure describes how to edit the registered user in the application.

1. Select: **Control Button > Administration > ADC > USERS**
2. Click the edit icon () in the **Users** pane.
The **Edit/View Users** window is displayed.

Edit/View Users ✕

Username and email are not case sensitive

User Name *

Username cannot be changed

Email

firstName

Enter your first name

lastName

Enter your last name

User Enabled ☒ Temporary Password ☐

Groups *

Access Profiles

ROLE_ADMIN uma_authorization

offline_access default-roles-vmc

ROLE_WEB_GUI

Select multiple profiles as applicable

Figure 23: Edit/View Users Window

3. Enter the Username in the **User Name** field.
4. Enter the Email in the **Email** field.
5. Enter the First Name in the **firstName** field.
6. Enter the Last Name in the **lastName** field.
7. Select the **User Enabled** toggle button to enable the user.
8. Select the **Temporary Password** toggle button to activate the temporary password.
9. Select the Groups from the **Groups** dropdown.



Note: If no groups are displayed, users can click the **Create new Group** to create a new group. Refer to [Create Group](#) on page 21.

10. Select the Access Profiles from the **Access Profiles** dropdown.



Note: Users can select multiple access profiles.

11. Click **SAVE**.

User details are updated successfully.

Groups

The **Groups** tab allows the user to create, view, and edit the list of groups added in the application.

To view the **Groups** screen, navigate to **Control Button > Administration > ADC > GROUPS**.

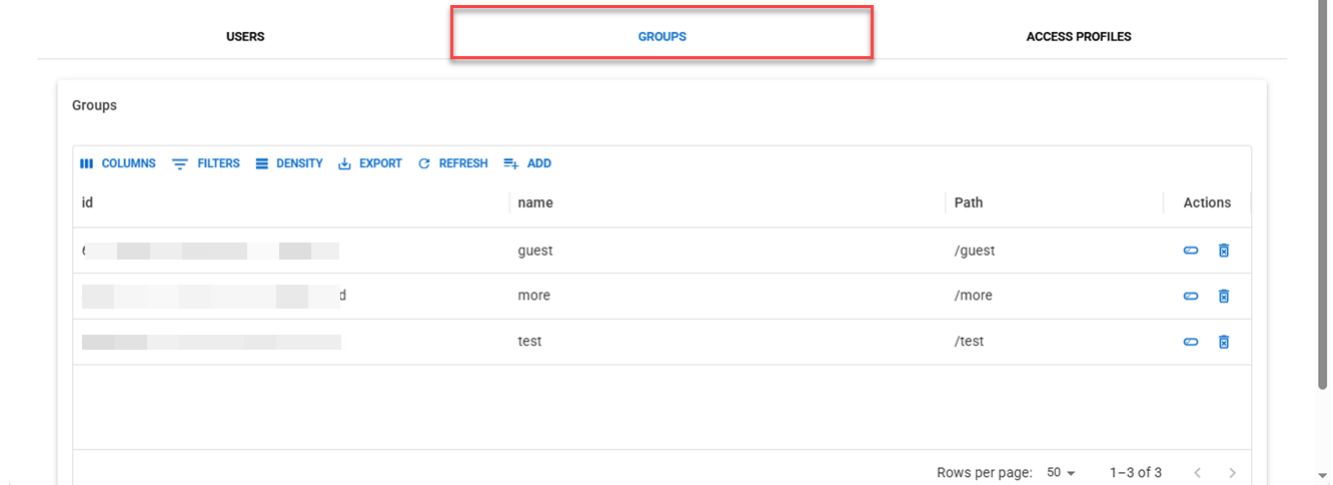


Figure 24: Groups Screen

Table 6: Group Field

Field	Description
id	ID of the group
name	Name of the group
path	Shows the path
Actions	Users can click Edit icon () to edit the Groups pane. Users can click Delete icon () to delete the registered group from the application.

Table 7: Group Icons

Icon	Name of Icon	Description
 COLUMNS	Select columns	Shows the group fields. Users can select/deselect each of the attribute fields that need to be displayed in the Groups screen. Users can click Show/Hide All to view/hide all the attributes in the Groups screen.

Icon	Name of Icon	Description
 FILTERS	Show filters	Filters the groups by selecting the field from the Columns and Operator dropdown and enter the value in the Value field. Users can click the ADD FILTER icon to add one or more filters. Users can click the Delete icon (✕) to delete a single filter or click the REMOVE ALL icon to delete all the filters.
 DENSITY	Density	Shows the groups list in a Compact , Standard , or Comfortable type of view as required.
 EXPORT	Export	Exports the groups list in CSV format by selecting Export > Download as CSV .
 REFRESH	Refresh	Refreshes the groups list manually
 ADD	Add	Creates a new group

- [Create Group](#) on page 21
- [Edit/View Groups](#) on page 22

Create Group

This procedure describes how to create a group.

1. Select: **Control Button** > **Administration** > **ADC** > **GROUPS**
2. Click the add icon ( **ADD**) in the **Groups** pane.
The **Create User Role Group** window is displayed.

Create User Role Group

name

Enter a new Group name

Path

Figure 25: Create User Role Group Window


3. Enter the Group name in the **name** field.
4. Enter the Group path in the **Path** field.
5. Click **SAVE**.

User group is created successfully.

Edit/View Groups

This procedure describes how to edit the groups in the application.

1. Select: **Control Button** > **Administration** > **ADC** > **GROUPS**
2. Click the edit icon () under **Actions** field in the **Groups** pane.
The **Edit/View Groups** screen is displayed.

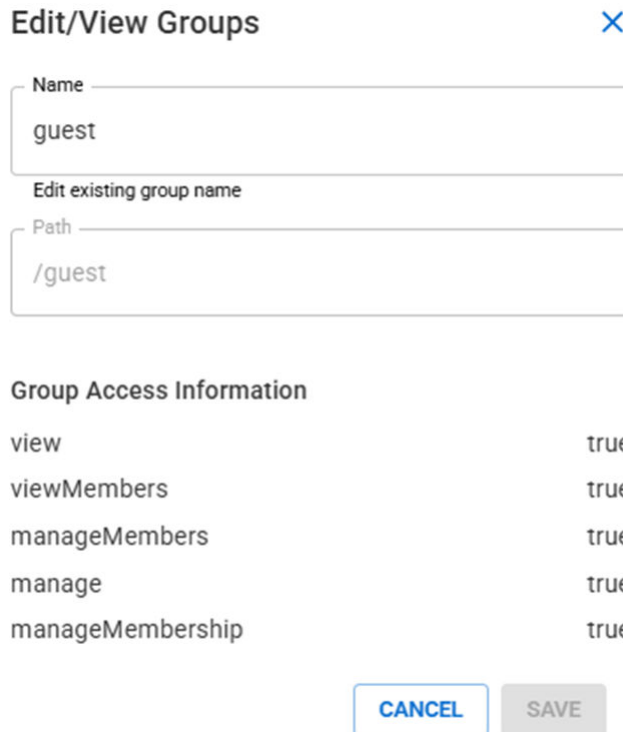

Edit/View Groups [Close]

Name

Edit existing group name

Path

Group Access Information	
view	true
viewMembers	true
manageMembers	true
manage	true
manageMembership	true

[CANCEL] [SAVE]

Figure 26: Edit/View Groups Window

3. Enter the Group name in the **Name** field.
4. Enter the Path in the **Path** field.
5. Click **SAVE**.

The group details are updated successfully.

Access Profiles

The **Access Profiles** tab allows the user to view and edit the list of profiles added in the ABC application application.

To view the **Access Profiles** screen, navigate to **Control Button** > **Administration** > **ADC** > **ACCESS PROFILES**.

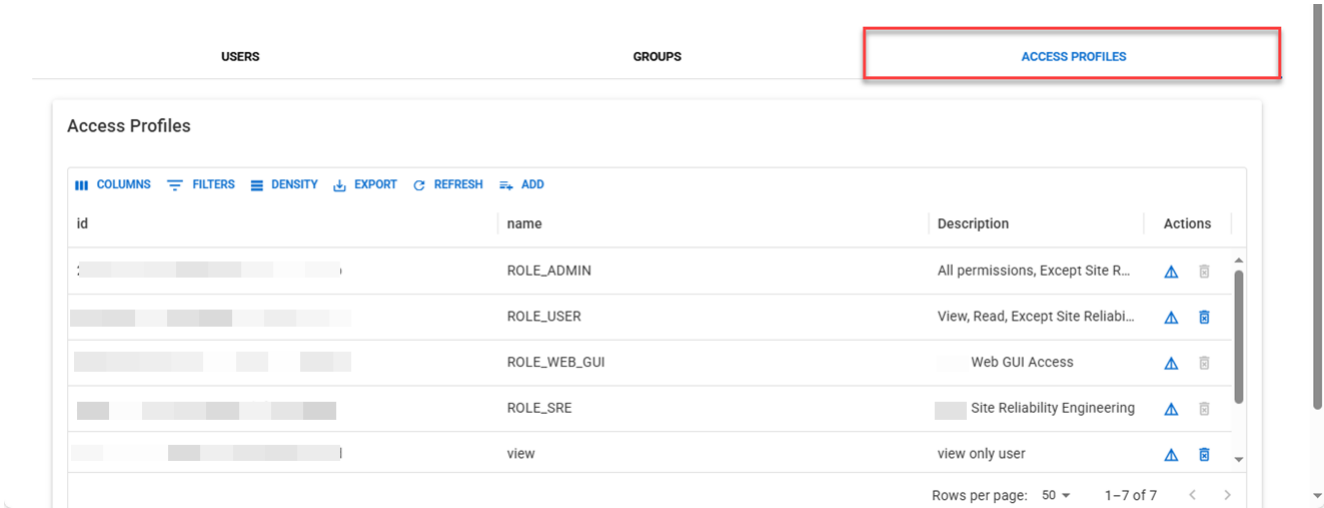


Figure 27: Access Profiles Screen

Table 8: Access Profile Fields

Field	Description
id	Access profiles id
name	Access profile name
description	Accessibility of the profiles
Actions	Users can click the View icon () to edit the Access Profiles pane. Users can click the Delete icon () to delete the registered access profile from the application.

Table 9: Access Profile Icons

Icon	Name of Icon	Description
 COLUMNS	Select columns	Shows the access profile fields. Users can select/deselect each of the attribute fields that need to be displayed in the Access Profiles screen. Users can click Show/Hide All to view/hide all the attributes in the Access Profiles screen.

Icon	Name of Icon	Description
 FILTERS	Show filters	Filters the access profiles by selecting the field from the Columns and Operator dropdown and enter the value in the Value field. Users can click the ADD FILTER icon to add one or more filters. Users can click the Delete icon (✕) to delete a single filter or click the REMOVE ALL icon to delete all the filters.
 DENSITY	Density	Shows the access profiles list in a Compact , Standard , or Comfortable type of view as required.
 EXPORT	Export	Exports the access profiles list in CSV format by selecting Export > Download as CSV .
 REFRESH	Refresh	Refreshes the access profiles list manually
 ADD	Add	Creates a new access profile

- [Create Access Profile](#) on page 24
- [View Access Profiles](#) on page 25

Create Access Profile

This procedure describes how to create a new access profile in the application.

1. Select: **Control Button > Administration > ADC > ACCESS PROFILES**
2. Click  **ADD** icon in the **Access Profiles** pane.
The **Create Access profile** window is displayed.

Create Access Profile

name *

Enter unique profile name

Description

Enter a brief description

Rules

Resources	Actions	options
*	*	 

Total Rows: 1

CANCEL **SAVE**

Figure 28: Create Access Profile Window

Table 10: Create Access Profile Icons

Icon	Name of Icon	Description
	Add	Adds a row in the Rules pane
	Edit	Edits the Resources and Actions
	Delete	Deletes the Resources and Actions

3. Enter the `Profile` name in the **name** field.
4. Enter the `Description` in the **Description** field.
5. Enter the `Resource` type in the **Resource** field.
6. Select the `Actions` type from the **Action** dropdown.
7. Click **SAVE**.

Access profile is created successfully.

View Access Profiles

This procedure describes how to view the access profiles in the application.

1. Select: **Control Button** > **Administration** > **ADC** > **ACCESS PROFILES**
2. Click the view icon () in the **Access Profiles** pane.
The **View Access Profiles** screen is displayed.
3. Enter the `Access profile` ID in the **ID** field.
4. Enter the `Access profile` name in the **Name** field.
5. Enter the `Description` in the **Description** field.
6. Select the access profile rule list from the **Rule List** dropdown.
7. Select the actions from the **Actions** dropdown.
8. Select the access profile resources from the **Resources** dropdown.
9. Click **SAVE**.

The access profiles are displayed successfully.

System and User Preferences

The **System & User Preferences** menu allows the user to view the filter details in the user preferences and to view the system status and pod details.

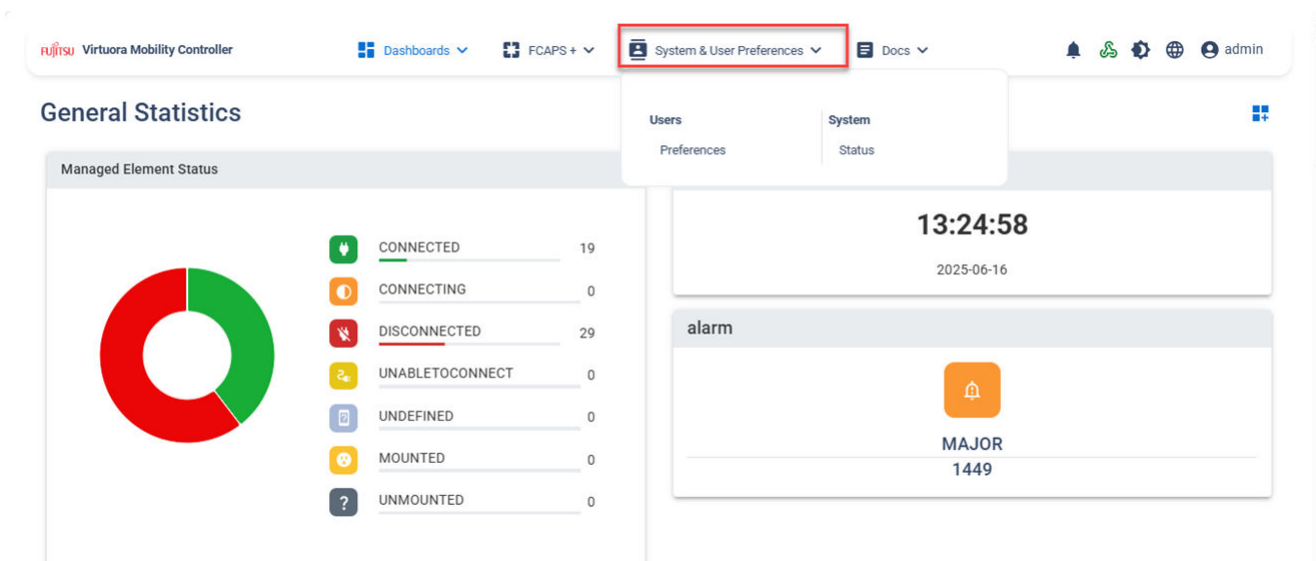


Figure 29: System & User Preferences

- [Preferences](#) on page 26
- [System Status](#) on page 28

Preferences

This procedure describes how to edit the language, theme preference, time format, and to view the filter details.

1. Select: **System & User Preferences > Users > Preferences**
The **User Preferences** screen is displayed.

System
Selections take effect after change. To make permanent save

Select Language *
English
Select from the available language list

Select Theme *
system
Select from the available theme list

Select Time Format *
ISO
Customize time format here

SAVE

Performance Management Filters

Filter List
Select from existing filter list

Figure 30: User Preferences Screen

2. Select the required language from the **Select Language** dropdown.

System

Selections take effect after change. To make permanent save



Select Language *

English

日本語

हिंदी

Italiano

Français

English

Español

SAVE

Figure 31: Select Language




Note: By default, **English** is selected.

The selected language is updated successfully.

3. Select the required theme from the **Select Theme** dropdown.

System

Selections take effect after change. To make permanent save

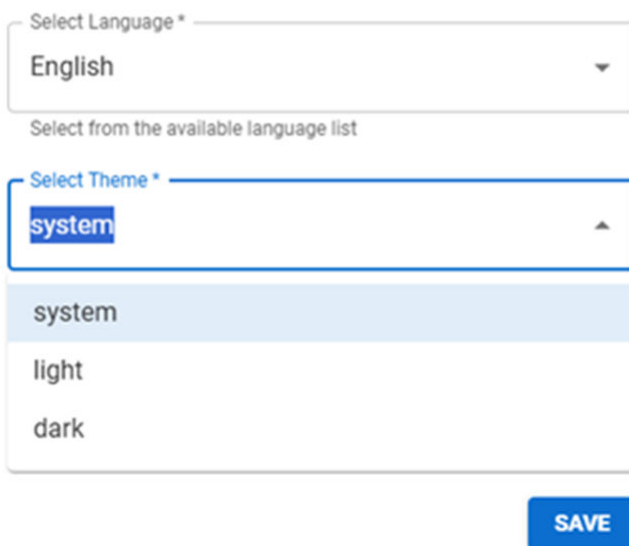

Select Language *

English

Select from the available language list

Select Theme *

system

system

light

dark

SAVE

Figure 32: Select Theme



Note: By default, **system** is selected.

The selected theme is updated successfully.

Figure 33: Dark Theme

4. Select the required time format from the **Select Time Format** dropdown.



Note: The valid time formats are **12H**, **24H**, and **ISO**.

5. Click **SAVE**.
6. Select the filter from the **Filter List** dropdown to view the filter details.

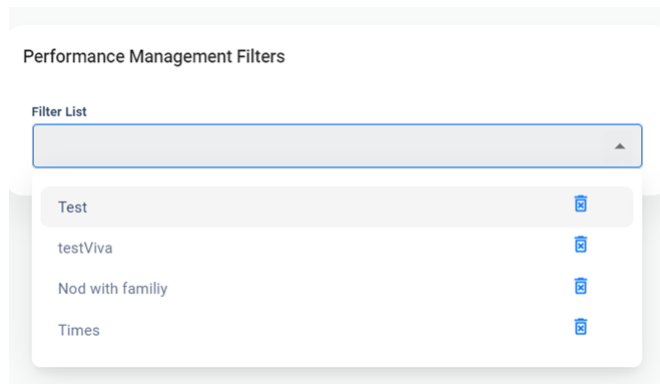


Figure 34: Performance Management Filters

The values of the selected PM filter are displayed successfully.

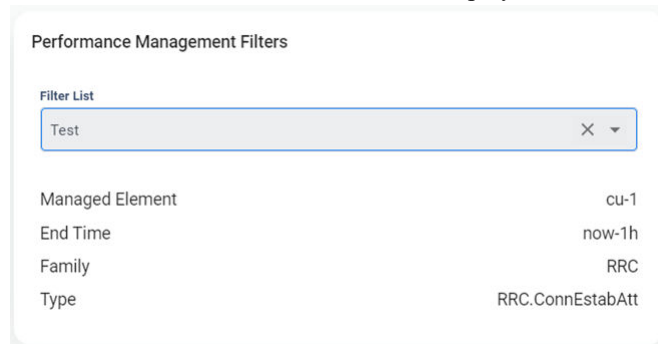


Figure 35: Performance Management Filters Values

System Status



Note:

Users require **ROLE_SRE** to access the **System status** page. Refer to [Administration](#) on page 16.

The **System Status** page displays the system nodes status and usage of resources, for example, CPU, memory, and disk.

To view the **System Status** screen, navigate to **System & User Preferences > System > Status**.

- [Cluster](#) on page 29
- [Pods](#) on page 29
- [Events](#) on page 31

Cluster

The **CLUSTER** page displays the CPU, memory, disk, and Process ID (*PID*) pressure on the cluster node, grouped by namespace.

To view the **CLUSTER** tab, navigate to **System & User Preferences > System > Status > CLUSTER**.

Table 11: Cluster Tab Icons

Icon	Name of Icon	Description
	n/a	Network availability
	n/a	Memory pressure
	n/a	Disk pressure
	n/a	PID availability

The user can view the node status in the tooltip by clicking the node icon ()

Green color Indicates the node has stable pressure and is in ready state

Red color Indicates the node is overloaded and is not in ready state

Grey color Indicates the node status is unknown

The user can click the dropdown icon () to view the nodes underlying VM details.

Pods

The **PODS** page allows the user to view the pod details, for example, **show container state**, **view container log**, and **view previous container log**.

To view the **PODS** tab, navigate to **System & User Preferences > System > Status > PODS**.

Table 12: Pods Fields

Field	Description
Detail panel toggle	Users can click the plus icon () to open the detail panel view. Users can click the show container state icon () to view the container details of the pod. Users can click the view container log icon () to view the current container logs. Users can click the view previous container log icon () to view the previous container logs resulting from restart.³

³ Users can click **SAVE** to save the container logs to the local file system in **.txt** format and click **CLOSE** to close the window.

Field	Description
Name	Pods unique name in the cluster
Namespace	Pods namespace within the Kubernetes cluster
Creation Timestamp	Specifies the pod created time in the cluster
Ready	Indicates whether the pod is ready to manage traffic
Phase	Pods current lifecycle state, for example, Running , Pending , and Succeeded
Restarts	Indicates the total restart count for the pod container
Host IP	IP address of the node where the pod is running
Pod IP	Internal IP address assigned to the pod within the cluster
Start Time	Indicates when the pod started running on the node
Actions	Users can click the get pod details icon () to view the pod details. Users can click the show events icon () to view events. Users can click the delete pod icon () to delete the pod.

Table 13: Pods Icons

Icon	Name of Icon	Description
 COLUMNS	Select columns	Shows the pod fields. Users can select/deselect each of the attribute fields that need to be displayed in the PODS view. Users can click Show/Hide All to view/hide all the attributes PODS view.
 FILTERS	Show filters	Filters the pod by selecting the field from the Columns and Operator dropdown and enter the value in the Value field. Users can click the ADD FILTER icon to add one or more filters. Users can click the Delete icon () to delete a single filter or click the REMOVE ALL icon to delete all the filters.

Icon	Name of Icon	Description
 DENSITY	Density	Shows the pod list in a Compact , Standard , or Comfortable type of view as required.
 EXPORT	Export	Exports the pod list in CSV format by selecting Export > Download as CSV .
 REFRESH	n/a	Refreshes the pod list manually

- [View Pod Details](#) on page 31

View Pod Details

This procedure describes how to view pod details based on the selected namespace.

1. Select: **System & User Preferences > System > Status**
The **System Status** screen is displayed successfully.
2. Click the **PODS** tab.
3.  **Note:** By default, the **CLUSTER** tab is selected.
3. Select the required namespace from the **Namespace** dropdown.
The pods deployed in the selected namespace are displayed.
4. Click the **get pod details** icon () on the required pod.
The details of the selected pod are displayed.

Pod Details - calico-kube-controllers-69cb5d9c7b-sgw2s

COLLAPSE ALL

- > metadata
- > spec
- > status

Figure 36: Pod Details

5. Click the **metadata**, **spec**, and **status** to expand and view the pod details.
The details of **metadata**, **spec**, and **status** are displayed successfully.

The pod details are viewed successfully.

For detailed information, contact the XYZ TAC at 1-800-873-3822.

Events

This procedure describes how to view the available pods and their events based on the selected namespace.

1. Select: **System & User Preferences > System > Status**
The **System Status** screen is displayed successfully.

- Click the **EVENTS** tab.



Note: By default, the **CLUSTER** tab is selected.

- Select the required pod from the **Namespace** dropdown.
- Select the pod name from the **Pod Name** dropdown.
The events are displayed based on the selected pod name.

The available pod and its events are viewed successfully.

Docs

The chapter describes how to access the API tool in detail.

To view the **About**, **Licenses**, **API**, and **Postman**, navigate to **Docs** tab in the ABC application application.

- [About](#) on page 32
- [Licenses](#) on page 32
- [API Tool](#) on page 32
- [Postman Collection](#) on page 34

About

The **About** page describes the architecture and overview of the ABC application application.

To launch the **About** screen, navigate to **Control Button** > **Docs** > **About**.

Licenses

The **Licenses** page allows the user to view the ABC application application release details and its trademark.

To launch the **Licenses** screen, navigate to **Control Button** > **Docs** > **Licenses**.

API Tool

This procedure describes how to view the API documents in the API tool.

- Select: **Docs** > **API**
The **API Tool** screen is displayed.
- Select the required API from the **API** dropdown.
The **Fault Management** API is displayed successfully.
- Select the required operation to try.



Note: Users can select the desired API operation from the available options.

Table 14: API Operation and Description

Operation	Description
GET	Allows the user to find and retrieve data
POST	Allows the user to create data
DELETE	Allows the user to delete data

Operation	Description
PATCH	Allows the user to update data

4. Click **Try it out**.

5. Update the parameter fields.

6. Click **Execute**.

The response is displayed. Refer to the following table for possible responses.

Table 15: Response Types

Response Code (HTTP Code)	Description
200	OK, Success, or Updated
201	Created
204	Deleted or No Content
400	Bad Request
401	Unauthorized
403	Forbidden
404	Not Found
405	Method Not allowed
409	Conflict
412	Precondition Failed
415	Unsupported Media Type
422	Unprocessable Entity
500	Internal Server Error
501	Not Implemented
502	Bad Gateway
503	Service Unavailable
504	Gateway Timeout
505	HTTP Version Not Supported

For detailed information, contact the XYZ TAC at 1-800-873-3822.

Postman Collection

This procedure describes how to download the Postman® collection files.

1. Select: **Docs > Postman**

The **Postman Collections** screen is displayed.

2. Select the required ABC application Postman collections to be downloaded by clicking the checkbox.



Note: Users can select multiple Postman collection files based on the requirement.

3. Click the download icon (↓).

Files are downloaded and saved successfully to the default downloads directory for the current user.

For detailed information, contact the XYZ TAC at 1-800-873-3822.

Glossary

This chapter describes the product glossary terms and definitions.

3GPP	Third Generation Partnership Project
AI	Artificial Intelligence
API	Application Programming Interface
CU	Centralized Unit
CM	Configuration Management
CPU	Central Processing Unit
DU	Distributed Unit
EMS	Element Management System
FM	Fault Management
GUI	Graphical User Interface
IP	Internet Protocol
LDAP	Lightweight Directory Access Protocol
ME	Managed Element
ML	Machine Learning
NE	Network Element
O&M	Operations and Maintenance
OAM	Operations, Administrations, and Maintenance
PID	Process ID

PM	Performance Measurement
RAM	Random Access Memory
RAN	Radio Access Network
RAN EM	Radio Access Network Element Manager
RBAC	ADC
RKE2	Rancher Kubernetes Engine 2
RPC	Remote Procedure Call
RU	Radio Unit
SFTP	Secure File Transfer Protocol
SSH	Secure Shell
URI	Uniform Resource Identifier
URL	Uniform Resource Locator
ABC application	Virtuora Mobility Controller

Index

A

- about [32](#)
- access
 - management [16](#)
 - profile [22](#)
- add
 - filter [26](#)
- alarm
 - notification [5](#)
- API [32](#)
- architecture [3](#)

C

- cluster [29](#)
- Control Button [6](#)
- create
 - access profile [24](#)
 - group [21](#)
 - performance measurement filter [8](#)

D

- dashboard [3](#)

E

- edit
 - alarm [14](#)
 - clock [12](#)
 - group [22](#)
- event [31](#)

F

- fault [4](#)

G

- general statistic [4](#)
- group [20](#)

L

- language preference [5](#)
- license [32](#)

N

- NETCONF command [7](#)
- northbound API [32](#)

P

- performance [8](#)

- pod [29](#)
- Postman collection [34](#)

S

- system [25](#)
 - status [28](#)

T

- tool [6](#)

U

- user [16](#)
 - create [17](#)
 - edit [18](#)
 - preference [25](#)

V

- view
 - access profile [25](#)
 - alarm [13](#)
 - clock [11](#)
 - pod detail [31](#)