



LPDDR2 SDRAM Controller Lite IP Core - Lattice Radiant Software

User Guide

FPGA-IPUG-02089-1.5

June 2021

Disclaimers

Lattice makes no warranty, representation, or guarantee regarding the accuracy of information contained in this document or the suitability of its products for any particular purpose. All information herein is provided AS IS and with all faults, and all risk associated with such information is entirely with Buyer. Buyer shall not rely on any data and performance specifications or parameters provided herein. Products sold by Lattice have been subject to limited testing and it is the Buyer's responsibility to independently determine the suitability of any products and to test and verify the same. No Lattice products should be used in conjunction with mission- or safety-critical or any other application in which the failure of Lattice's product could create a situation where personal injury, death, severe property or environmental damage may occur. The information provided in this document is proprietary to Lattice Semiconductor, and Lattice reserves the right to make any changes to the information in this document or to any products at any time without notice.

Contents

Acronyms in This Document	5
1. Introduction	6
1.1. Quick Facts	6
1.2. Features	6
1.3. Conventions	7
1.3.1. Nomenclature.....	7
1.3.2. Signal Names	7
1.3.3. Attribute	7
2. Functional Description.....	8
2.1. Overview	8
2.2. Signal Description.....	9
2.3. Attributes Summary	11
2.4. Submodules Description	15
2.4.1. LPDDR2 Memory Controller Module.....	15
2.4.2. LPDDR2 PHY Module	15
2.4.3. Clock Synchronization Module	16
2.5. Operations Details.....	17
2.5.1. Initialization Control	17
2.5.2. Command and Address	18
2.5.3. User Commands	19
2.5.4. WRITE	20
2.5.5. WRITEA.....	21
2.5.6. READ	21
2.5.7. READA.....	21
2.5.8. REFRESH Support.....	21
2.6. Local-to-Memory Address Mapping.....	22
2.7. Mode register Programming.....	23
3. Core Generation, Simulation, and Validation	24
3.1. Licensing the IP.....	24
3.2. Generation and Synthesis	24
3.2.1. Required Post-Synthesis Constraints.....	27
3.3. Running Functional Simulation	27
4. Ordering Part Number	29
Appendix A. Resource Utilization	30
References.....	31
Technical Support Assistance	32
Revision History	33

Figures

Figure 2.1. LPDDR2 SDRAM Controller Lite IP Core Functional Diagram	8
Figure 2.2. Timing of Memory Initialization Control	17
Figure 2.3. Timing Diagram for Read Retraining	18
Figure 2.4. Timing of Command and Address	19
Figure 2.5. Timing One-Clock vs. Two-Clock Write Data Delay	20
Figure 2.6. User-Side Read Operation	21
Figure 2.7. Local-to-Memory Address Mapping for Memory Access	22
Figure 2.8. Mapped Address for the Example	22
Figure 2.9. User-to-Memory Address Mapping for MR Programming	23
Figure 3.1. Module/IP Block Wizard	24
Figure 3.2. Module/IP Block Wizard of LPDDR2 SDRAM Controller Lite IP Core	25
Figure 3.3. Check Generating Result	26
Figure 3.4. Simulation Wizard	27
Figure 3.5. Adding and Reordering Source	28
Figure 3.6. Simulation Waveform Hardware Evaluation	28

Tables

Table 1.1. Quick Facts	6
Table 2.1. LPDDR2 SDRAM Controller Lite IP Core Signal Description	9
Table 2.2. Attributes Table	11
Table 2.3. Attributes Descriptions	13
Table 2.4. Native Interface Functional Groups	17
Table 2.5. Defined User Commands	19
Table 2.6. Address Mapping Example	22
Table 2.7. Mode Register Selection Using Address Bits	23
Table 2.8. Initialization Default Values for Mode Register Setting	23
Table 3.1. Generated File List	26
Table A.1. Resource Utilization	30

Acronyms in This Document

A list of acronyms used in this document.

Acronym	Definition
LPDDR2	Low Power Double Data Rate Type 2
JEDEC	Joint Electron Device Engineering Council
SDRAM	Synchronous Dynamic Random Access Memory
FPGA	Field Programmable Gate Array
RTL	Register Transfer Level

1. Introduction

The Lattice Low Power Double Data Rate Type 2 (LPDDR2) Synchronous Dynamic Random-Access Memory (SDRAM) Controller Lite IP Core is a general-purpose memory controller that interfaces with industry standard LPDDR2 memory devices compliant with JESD209-2B, LPDDR2 SDRAM Standard, and provides a generic command interface to user applications. LPDDR2 SDRAM is the next-generation Low Power SDRAM memory technology which offers a higher data rate, higher density, greater bandwidth and power efficiency. This core reduces the effort required to integrate the LPDDR2 memory controller with the user application design and minimizes the need to directly deal with the LPDDR2 memory interface.

1.1. Quick Facts

Table 1.1 presents a summary of the LPDDR2 SDRAM Controller Lite IP Core.

Table 1.1. Quick Facts

IP Requirements	Supported FPGA Family	CrossLink™-NX, Certus™-NX, CertusPro™-NX
Resource Utilization	Targeted Devices	LIFCL-40, LIFCL-17, LFD2NX-40, LFD2NX-17, LFCPNX-100
	Supported User Interface	Native
	Resources	See Table A.1
Design Tool Support	Lattice Implementation	IP Core v1.0.x – Lattice Radiant™ software 2.0
		IP Core v1.1.x – Lattice Radiant software 2.1
		IP Core v1.3.x – Lattice Radiant software 3.0
	Synthesis	Lattice Synthesis Engine (LSE)
		Synopsys® Synplify Pro® for Lattice
	Simulation	For a list of supported simulators, see the Lattice Radiant software user guide.

1.2. Features

The key features of LPDDR2 SDRAM Controller Lite IP Core include:

- Interfaces to industry standard LPDDR2 SDRAM components and modules compliant with JESD209-2B, LPDDR2 SDRAM Standard
- Interfaces to LPDDR2 SDRAM at speeds up to 400 MHz/800 Mbps
- Supports memory data path width of 16
- Supports x16 device configuration
- Supports single rank of an LPDDR2 device (one chip select)
- Supports burst lengths of eight (fixed)
- Programmable read and write latency set
- Supports automatic LPDDR2 SDRAM initialization and refresh
- Automatic read training for each DQS
- Supports Deep Power Down mode and Power down mode
- Supports Self-Refresh operations on all Banks
- Partial Array Self-Refresh (PASR) operations on Bank and Segment
- Automatic programmable interval refresh or user-initiated refresh
- Supports Burst or Distributed auto refresh
- Supports all LIFCL devices

Note: This Lite version IP Core only supports features and commands that LPDDR2 have in common with LPDDR3. Burst lengths of 8 is supported, but burst lengths of 4 and 16 are not supported. Also, flash memory commands (LPDDR2-N) are not supported.

1.3. Conventions

1.3.1. Nomenclature

The nomenclature used in this document is based on Verilog HDL.

1.3.2. Signal Names

Signal Names that end with:

- `_n` are active low
- `_i` are input signals
- `_o` are output signals
- `_io` are bi-directional input/output signals

1.3.3. Attribute

The names of attributes in this document are formatted in title case and italicized (*Attribute Name*).

2. Functional Description

2.1. Overview

The LPDDR2 SDRAM Controller Lite IP Core consists of three submodules: Memory Controller (MC) module, Physical Interface (PHY) module and Clock Synchronization Module (CSM). It takes the requests on its Local Interface and converts into LPDDR2 SDRAM Memory Interface. It formats request and organizes flow control on the data buses of to/from the LPDDR2 SDRAM Memory.

The [Submodules Description](#) section briefly describes the operation of each of these submodules. [Figure 2.1](#) provides a high-level block diagram illustrating the main functional blocks used to implement the LPDDR2 SDRAM Controller Lite IP Core functions.

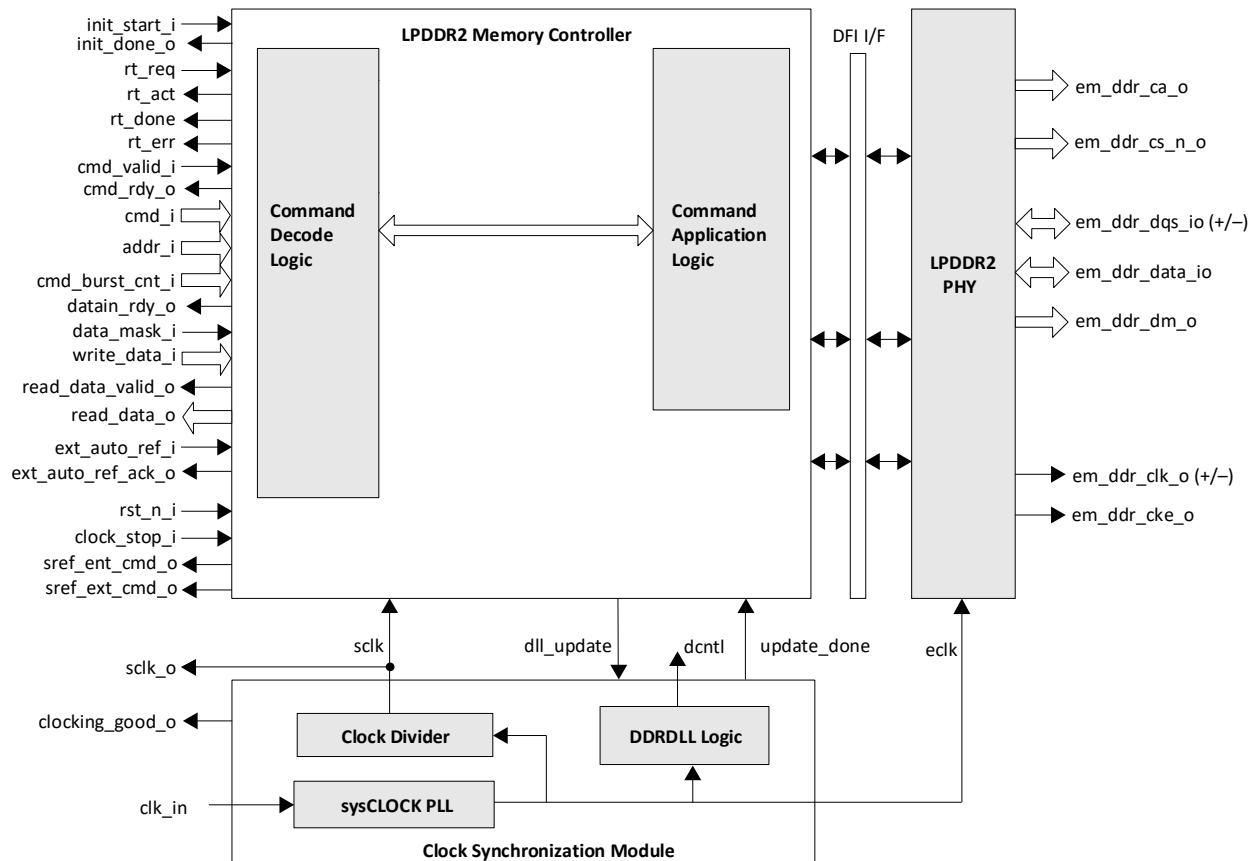


Figure 2.1. LPDDR2 SDRAM Controller Lite IP Core Functional Diagram

2.2. Signal Description

Table 2.1 lists the input and output signals for LPDDR2 SDRAM Controller Lite IP Core.

Table 2.1. LPDDR2 SDRAM Controller Lite IP Core Signal Description

Port Name	I/O	Width*	Description
Clock and Reset			
clk_i	In	1	Reference clock for PLL
clocking_good_o	Out	1	Signal from LPDDR2 SDRAM PHY indicating stable clock condition
sclk_o	Out	1	System clock used by LPDDR2 Memory Controller Module. You may use this clock for LPDDR2 controller interface logic.
clock_stop_i	In	1	Stops the LPDDR2 SDRAM memory clock The memory clock stays Low while this signal is asserted High.
rst_n_i	In	1	Active low asynchronous reset signal for the entire IP Core
LPDDR2 SDRAM Memory Interface*¹			
em_ddr_clk_o	Out	CLKO_WIDTH	Differential pair memory clock generated by the controller. This signal is internally single ended and is converted to differential pair at the FPGA pin.
em_ddr_cke_o	Out	CKE_WIDTH	Memory clock enable generated by the controller
em_ddr_ca_o	Out	CA_WIDTH	Memory Command and Address (CA) signal – Multiplexed row address, column address and command to the memory.
em_ddr_data_io	In/Out	DATA_WIDTH	Memory bi-directional data signal
em_ddr_dm_o	Out	DATA_WIDTH/8	LPDDR2 memory write data mask used to mask the byte lanes for byte-level write.
em_ddr_dqs_io	In/Out	DATA_WIDTH/8	Memory bi-directional, differential pair data strobe
em_ddr_cs_n_o	Out	CS_WIDTH	Memory chip select
Native Interface			
init_start_i	In	1	Initialization start request Assert this signal to start memory initialization either right after the power-on reset or before sending the first user command to the memory controller.
init_done_o	Out	1	Initialization done output. Asserts for one clock period after the core completes memory initialization. When sampled high, the input signal init_start must be immediately de-asserted at the same edge of the sampling clock.
rt_req_i	In	1	Read pulse training request from the user
rt_act_o	Out	1	Signal to indicate that the read pulse training is active
rt_done_o	Out	1	Signal to indicate that the read pulse training has been completed
rt_err_o	Out	1	Signal to indicate a failure during the read pulse training
cmd_valid_i	In	1	Command and address valid input When asserted, the addr, cmd and cmd_burst_cnt inputs are considered valid.
cmd_rdy_o	Out	1	Command ready output When asserted, indicates that the core is ready to accept the next command and the corresponding address.
cmd_i	In	4	User command input to the memory controller
addr_i* ²	In	ADDR_WIDTH	User read or write address input to the memory controller
cmd_burst_cnt_i	In	1	Command burst count input Indicates the number of times a given read or write command is to be repeated by the controller automatically.
datain_rdy_o	Out	1	Data ready output When asserted, indicates the core is ready to receive the write data.

Port Name	I/O	Width*	Description
data_mask_i ^{*3}	In	DSIZE/8	Data mask input for write data Each bit masks a corresponding byte of local write data.
write_data_i ^{*3}	In	DSIZE	Write data input from user logic to the memory controller The user side write data width is four times the memory data signal.
read_data_valid_o	Out	1	Read data valid output When asserted, indicates the data on the read_data_o signal is valid.
read_data_o ^{*3}	Out	DSIZE	Read data output from memory controller to the user logic
ext_auto_ref_i	In	1	Refresh request from user This signal is available only when the <i>External Auto Refresh Port</i> attribute is Checked.
ext_auto_ref_ack_o	Out	1	Completion of memory refresh in response to ext_auto_ref_i signal assertion. This signal is available only when the <i>External Auto Refresh Port</i> attribute is Checked.
sref_ent_cmd_o	Out	1	Asserts when the IP Core enters Self refresh operation. This occurs when a Self-Refresh Entry command is received.
sref_ext_cmd_o	Out	1	Asserts when the IP Core exits Self refresh operation. This occurs when a Self-Refresh Exit command is received.

Notes:

1. The bit width of LPDDR2 SDRAM Memory Interface signals are set by the attributes, refer to [Table 2.3](#) for the description of these attributes.
2. The bit width of addr_i is set by ADDR_WIDTH which is defined in [Local-to-Memory Address Mapping](#) section.
3. The bit width of write_data_i, data_mask_i and read_data_o are set by DSIZE which is 4 × DATA_WIDTH.

2.3. Attributes Summary

The configurable attributes of the LPDDR2 SDRAM Controller Lite IP Core are shown in [Table 2.2](#) and are described in [Table 2.3](#). The attributes can be configured through the IP Catalog's Module/IP wizard of the Lattice Radiant software. The attributes are arranged into tabs and related attributes are collected into groups. The three tabs are as follows:

- **General Tab**
The General tab contains the attributes for configuring the target memory device and the IP Core features. These attributes are static; they can only be set in the Module/IP Block wizard. The LPDDR2 SDRAM Controller Lite IP Core must be regenerated to change the features set by these attributes.
- **Memory Device Setting Tab**
The Memory Device Setting Tab contains the attributes for configuring the target memory device/module. The attributes under Mode Register Initial Setting Group are dynamic, which means, reset values are set from Module/IP Block Wizard and are dynamically changeable using MRW user commands. Refer to JESD209-2B, LPDDR2 SDRAM Standard, for allowed values.
- **Memory Device Timing Tab**
The attribute default displayed in this tab are the default values of the Micron LPDDR2 4Gb -25 memory module. These attributes can be modified by checking the *Manual Adjust* attribute. It is important that the attribute values in this tab are adjusted to the timing parameters of the memory device for the target application. The LPDDR2 SDRAM Controller Lite IP Core also uses these timing parameters when generating memory commands.

Table 2.2. Attributes Table

Attribute	Selectable Values	Default	Dependency on Other Attributes
General Tab			
Device Information Group			
Select Memory	Micron LPDDR2 1Gb-25 16x, Micron LPDDR2 4Gb-25 32x, Custom	Micron LPDDR2 1Gb- 25 16x	The <i>Micron LPDDR2 4Gb-25 32x</i> is not available when the target FPGA device cannot support 32-bit data.
Clock Settings Group			
Enable PLL	Checked	Checked	Display only
PLL Reference Clock from Pin	Checked, Unchecked	Checked	—
I/O Standard for Reference Clock	SLVS, HSUL12, HSUL12D, LVTT133, LVCMOS33, LVCMOS25, LVCMOS18, LVCMOS15, LVCMOS12, LVCMOS10, LVCMOS10R	SLVS	Enabled when <i>PLL Reference Clock from Pin</i> is checked
RefClock (MHz)	25.0, 33.3, 50, 66.6, 75.0, 100.0, 125.0, 150.0, 200.0	50	—
MemClock (MHz)	50.0, 66.6, 150.0, 166.6, 200.0, 250.0, 266.6, 300.0, 333.3, 350.0, 366.6, 400.0	150	—
MemClock Tolerance (%)	0.0, 0.1, 0.2, 0.5, 1.0, 2.0, 5.0, 10.0	0.0	—
MemClock Actual Frequency (MHz)	Calculated	N/A	Display Information only
Memory Configuration Group			
Memory Type	On-board Memory	On-board Memory	—

Attribute	Selectable Values	Default	Dependency on Other Attributes
Memory Data Bus Size	16, 32	16	Depends on <i>Select Memory</i> - Micron LPDDR2 1Gb-25 16x: 16 - Micron LPDDR2 4Gb-25 32x: 32 - Custom: 16, 32 The 32-bit data configuration is not available if the target FPGA device cannot support it.
Configuration	x16, x32	x16	Depends on <i>Memory Data Bus Size</i> 16: x16 32: x32
Rank Size	Single	Single	Display Information only
Clock Width	1	1	Display Information only
CKE Width	1	1	Display Information only
Local Interface			
Local Bus Type	Native	Native	Display Information only
Additional Configuration Group			
Data ready to Write Data delay	1, 2, 3	1	—
Memory Device Setting Tab			
Address Group			
Bank Address Width	2,3	3	Editable when <i>Select Memory</i> = Custom
Row Size	12,13,14,15	13	Default value is set by <i>Select Memory</i> : - Micron LPDDR2 1Gb-25 16x: 13 - Micron LPDDR2 4Gb-25 32x: 14 - Custom: 12 Editable when <i>Select Memory</i> = Custom
Column Size	8, 9, 10, 11, 12	10	Editable when <i>Select Memory</i> = Custom
Auto Refresh Control Group			
Refresh Type	Burst, Distributed	Burst	
Refresh Bank	All-Bank	All-Bank	Display Information only
Auto Refresh Burst Count	8, 32, 512, 1024, 2048, 4096, 8192	32	—
External Auto Refresh Port	Checked/Unchecked	Unchecked	—
Mode Register Initial Setting Group			
Burst Length	Fixed 8	Fixed 8	—
Write Recovery	3, 4, 5, 6, 7, 8	6	—
Read Latency	3, 4, 5, 6, 7, 8	6	—
Write Latency	1, 2, 3, 4	3	—
Drive Strength (Ohm)	[34.3, 40, 48, 60, 80, 12] PD/PU	40 PD/PU	—
Memory Device Timing Tab			
Command and Address Timing Group			
Manually Adjust	Checked/Unchecked	Unchecked	—
TRTP(tCLK)	2–65536	3	Enabled when <i>Manually Adjust</i> is Checked
TWTR(tCLK)	2 –65536	4	Enabled when <i>Manually Adjust</i> is Checked
TMRW(tCLK)	5–65536	10	Enabled when <i>Manually Adjust</i> is Checked
TMRR(tCLK)	4–65536	4	Enabled when <i>Manually Adjust</i> is Checked
TRCD(tCLK)	3–65536	10	Enabled when <i>Manually Adjust</i> is Checked
TRP_AB(tCLK)	3–65536	10	Enabled when <i>Manually Adjust</i> is Checked
TRP_PB(tCLK)	3–65536	10	Enabled when <i>Manually Adjust</i> is Checked

Attribute	Selectable Values	Default	Dependency on Other Attributes
TRC(tCLK)	6–65536	27	Enabled when <i>Manually Adjust</i> is Checked
TRAS(tCLK)	3–65536	17	Enabled when <i>Manually Adjust</i> is Checked
TRRD(tCLK)	2–65536	4	Enabled when <i>Manually Adjust</i> is Checked
Refresh, Reset and Power Down Timing Group			
TRFC_AB(tCLK)	13–65536	52	Enabled when <i>Manually Adjust</i> is Checked
TRFC_PB(tCLK)	6–65536	24	Enabled when <i>Manually Adjust</i> is Checked
TREFI_AB(tCLK)	8–4160	3120	Enabled when <i>Manually Adjust</i> is Checked
TREFI_PB(tCLK)	8–4160	390	Enabled when <i>Manually Adjust</i> is Checked
TCKE(tCLK)	3–65536	3	Enabled when <i>Manually Adjust</i> is Checked
TCKESR(tCLK)	3–65536	6	Enabled when <i>Manually Adjust</i> is Checked
TXP(tCLK)	2–4160	4	Enabled when <i>Manually Adjust</i> is Checked
TXSR(tCLK)	14	56	Enabled when <i>Manually Adjust</i> is Checked

Table 2.3. Attributes Descriptions

Attribute	Description
General Tab	
Device Information Group	
Select Memory	Some attribute default values are dependent on this attribute. Micron LPDDR2 1Gb-25 16x is provided as the default LPDDR2 SDRAM device, the timing parameters of this memory device are listed in the Memory Device Timing tab as default values.
Clock Settings	
Enable PLL	Shows that PLL is instantiated inside the LPDDR2 SDRAM Controller Lite IP Core.
PLL Reference Clock from Pin	When checked, the reference clock of internal PLL is connected to an FPGA pin. This option allows you to specify the <i>I/O Standard for Reference Clock</i> . If Unchecked, PLL expects that the reference clock is connected to the FPGA fabric.
I/O Standard for Reference Clock	Specifies the I/O standard of the FPGA pin that is used for input reference clock.
RefClock (MHz)	Specifies the reference input clock to PLL which generates the system clock (sclk_o) and memory clock (em_ddr_clk_o).
MemClock (MHz)	Specifies the frequency of the memory clock to memory device. The default value is linked to the speed grade of Lattice device selected. This is the PLL output frequency which depends on the corresponding value of RefClock. For example, for MemClock value of 333 MHz the PLL RefClock should be set to 111 MHz.
MemClock Tolerance (%)	Enables the acceptance of selected percent difference between <i>MemClock</i> attribute and the calculated <i>MemClock Actual Frequency</i> .
MemClock Actual Frequency (MHz)	Shows the calculated actual DDR memory clock frequency.
Memory Configuration Group	
Memory Type	This attribute is for information only. Only On-board Memory type is supported.
Memory Data Bus Size (DATA_WIDTH)	Specifies the bit width of LPDDR2 SDRAM data signal (em_ddr_data_io). If the memory module has a wider data than required, only the required data width should be selected.
Configuration	Selects the device configuration of the on-board memory. The memory controller supports device configurations x16, and x32.
Rank Size (CS_WIDTH)	Select the number of Chip selects (em_ddr_cs_n_o) required. Only single Rank is supported.
Clock Width (CLKO_WIDTH)	Specifies the number of clocks signals (em_ddr_clk_o) with which the IP Core drives the memory. Only 1 clock output. The clocks signals are converted to differential pair in the FPGA pins. Note that the differential pair signals are not shown in simulation.
CKE Width (CKE_WIDTH)	Specifies the number of Clock Enable (CKE) signals (em_ddr_cke_o) with which the IP Core drives the memory. Only one cke output is supported.

Attribute	Description
Local Interface	
Local Bus Type	Specifies the user interface in FPGA fabric side. Only Native Interface is currently supported.
Additional Configuration Group	
Data ready to Write Data delay	This option is for information only. User logic is allowed to send the write data to the controller after a one-clock cycle delay with respect to datain_rdy_o signal.
Memory Device Setting Tab	
Address Group	
Bank Address Width	Indicates the size of Bank Address.
Row Size (ROW_WIDTH)	Indicates the default Row Address size used in the selected memory configuration.
Column Size	Indicates the default Column Address size used in the selected memory configuration.
Auto Refresh Control Group	
Refresh Type	This option allows you to select either Burst auto refresh or Distributed auto refresh. Burst: IP Core performs a series of refresh cycles one after another until all the rows have been refreshed, after which normal memory accesses occur until the next refresh Distributed: Refresh cycles are performed at regular intervals, interspersed with memory accesses.
Refresh Bank	Indicates that refresh operation is performed for all banks. Per bank auto refresh is not supported.
Auto Refresh Burst Count	Indicates the number of Auto Refresh commands that the LPDDR2 SDRAM Controller Lite IP Core is set to send in a single burst. Refer to REFRESH Support for more details.
External Auto Refresh Port	Specifies the generation of refresh commands to the memory. If Unchecked: the controller automatically generates refresh commands to the memory at the interval defined by the <i>Auto Refresh Burst Count</i> and memory refresh timing requirement. If Checked: The user logic is allowed to generate a Refresh request to the controller through the ext_auto_ref_i signal. Refer to REFRESH Support for more details.
Mode Register Initial Setting Group	
Burst Length	Sets the Burst length value in Mode Register 1 during initialization. Only Burst Length 8 is currently supported.
READ Latency	Sets the READ Latency value in Mode Register 1 during initialization. This value remains until you write a different value to the Mode Register.
Write Latency	This only displays the corresponding Write latency for the selected Read Latency. This value remains until you write a different Read Latency value to the Mode Register.
Write Recovery	Sets the Write Recovery value in Mode Register 1 during initialization. The value is in terms of Memory clock. This value remains until you write a different value to the Mode Register.
Drive Strength (Ω)	This option sets the Output Driver Strength Control value in Mode Register 3 during initialization. This value remains until you write a different value to the Mode Register. A list of Pull-down (PD) and Pull-up (PU) values are provided as defined by the LPDDR2's Mode Register 3.
Memory Device Timing Tab*	
Command and Address Timing Group	
Manually Adjust	Checking this box allows you to manually set any of the memory timing parameters. If you need to change any of the default values, the Manual Adjust checkbox must be checked. This selection enables you to modify the memory timing parameters.
TRTP(tCLK)	Internal Read to Precharge Command Delay
TWTR(tCLK)	Internal Write to Read Command Delay
TMRW(tCLK)	MODE Register Write Command Period
TMRR(tCLK)	Mode Register Read Command Period
TRCD(tCLK)	RAS to CAS Delay
TRP_AB(tCLK)	Row Precharge Time (all banks)
TRP_PB(tCLK)	Row Precharge Time (single bank)
TRC(tCLK)	ACTIVE to ACTIVE Command Period

Attribute	Description
TRAS(tCLK)	Row Active Time
TRRD(tCLK)	Active Bank A to Active Bank B
Refresh, Reset and Power Down Timing Group	
TRFC_AB(tCLK)	Refresh Cycle time
TRFC_PB(tCLK)	Per Bank Refresh Cycle Time
TREFI_AB(tCLK)	Average time between REFRESH commands (all banks)
TREFI_PB(tCLK)	Average time between REFRESH commands (single bank)
TCKE(tCLK)	CKE min. pulse width (high and low pulse width)
TCESR(tCLK)	CKE min. pulse width during Self-Refresh (low pulse width during Self-Refresh)
TXP(tCLK)	Exit power down to next valid command delay
TXSR(tCLK)	Self-refresh exit to next valid command delay

***Note:** The Memory Device Timing parameters listed in this tab are standard parameters as defined in JESD209-2B, LPDDR2 SDRAM Standard. Refer to the memory device data sheet for detailed descriptions and allowed values of these parameters.

2.4. Submodules Description

2.4.1. LPDDR2 Memory Controller Module

The LPDDR2 Memory Controller module contains Command Decode Logic (CDL) block and Command Application Logic (CAL) block.

2.4.1.1. Command Decode Logic

The Command Decode Logic (CDL) block accepts user commands from the local interface and decodes them to generate a sequence of internal memory commands depending on the current command and the status of current bank and row. The intelligent bank management logic tracks the open/close status of every bank and stores the row address of every opened bank. The controller implements a command pipeline of depth 2 to improve throughput. With this capability, the next command in the queue is decoded while the current command is presented at the memory interface.

2.4.1.2. Command Application Logic

The Command Application Logic (CAL) block accepts the decoded internal command sequence from the Command Decode Logic and translates each sequence into appropriate memory commands that meet the operational sequence and timing requirements of the memory device. The CDL and CAL blocks work in parallel to fill and empty the command queue respectively.

2.4.2. LPDDR2 PHY Module

The Physical Interface (PHY) module implements a set of soft logic in the FPGA fabric for initialization, read training and read/write paths as well as MDDR Controller IP for 1:2 clock gearing and LPDDR2 memory interface. MDDR Controller IP includes LIFCL FPGA Family device hardware primitives including I/O modules that directly interface with the LPDDR2 memory. These primitives implement all interface signals required for memory access. They convert the single data rate (SDR) data from you to double rate LPDDR2 data for the write operation and perform the DDR to SDR conversion in the read mode.

2.4.2.1. Initialization

The Initialization block performs the LPDDR2 memory initialization sequence as defined by LPDDR2 JEDEC protocol. After power on or a normal reset of the LPDDR2 controller, the memory must be initialized before sending any command to the controller. It is your responsibility to assert the init_start input to the LPDDR2 controller to initiate the memory initialization sequence. The completion of initialization is indicated by the init_done field of the status register.

2.4.2.2. Read Training

For every read operation, the LPDDR2 I/O primitives of the LIFCL device must be initialized at the appropriate time to identify the incoming DQS preamble. Upon a proper detection of the preamble, the primitive DQSBUF extracts a clean signal out of the incoming DQS signal from the memory and generates the DATAVALID output signal that indicates the correct timing window of the valid read data. The memory controller generates a positioning signal, READ[2:0], to the primitive DQSBUF that is used for the above-mentioned operation. In addition to the READ[2:0] input, another fine control input signal READCLKSEL[3:0] and an output signal, BURSTDET, of the DQSBUF block are provided to the controller to accomplish the READ signal positioning. Due to the DQS round trip delay that includes PCB routing and I/O pad delays, proper internal positioning of the READ signal with respect to the incoming preamble is crucial for successful read operations. The LIFCL DQSBUF block supports a dynamic READ signal positioning function called read training that enables the memory controller to position the internal READ signal within an appropriate timing window by progressively shifting the READ signal and monitoring the positioning result. During the read training, the memory controller generates the READ[2:0] pulse as a coarse positioning control. READCLKSEL[3:0] is also generated to provide a finer position control (1/4 T per step). The BURSTDET output of DQSBUF is used to monitor the result of the current position. The READ[2:0] signal is needed to be set high at least 5.5T before the read preamble starts. The internal READ is progressively shifted by READ[2:0] and READCLKSEL[3:0] once the read training routine starts. When the internal READ signal is properly positioned, the BURSTDET signal is asserted high to indicate that the preamble has been detected correctly. This guarantees that the generated DATAVALID signal is indicating the correct read valid time window. The READ[2:0] and READSELCLK[2:0] signals are generated in the system clock (SCLK) domain and required to stay asserted for the total burst length of the read operation.

The memory controller determines the proper position alignment when there is not a single failure on BURSTDET assertions during the multiple trials. If there is any failure, the memory controller shifts the READCLKSEL[3:0] and READ[2:0] signals accordingly to position the internal READ to a safer position and tries again until it detects no BURSTDET failure during the entire read training process. The memory controller stores the delay value of the successful position of the READCLKSEL[3:0] and READ[2:0] signal for each DQS group. It uses these delay values during a normal read operation to correctly detect the preamble first, followed by the generation of DATAVALID signal.

2.4.2.3. PHY Control Block

The PHY Control Block includes the data path control and PHY timing control functions. The data path control function interfaces with the LPDDR2 I/O modules and is responsible for generating the read data and read data valid signals during the read operations. This block also implements all the logic that are needed to ensure that the LPDDR2 command/controls and data write/read to and from the memory are properly transferred to the local user interface in a deterministic and coherent manner.

2.4.2.4. Data Path Logic

The Data Path Logic (DPL) block interfaces with the LPDDR2 I/O modules and is responsible for generating the read data and read data valid signals during read operations. This block implements all the logic needed to ensure that the data write/read to and from the memory is transferred to the local user interface in a deterministic and coherent manner.

2.4.3. Clock Synchronization Module

The Clock Synchronization Module (CSM) generates all the clock signals, such as system clock (sclk_o) and edge clock (ECLK) for the IP core. The CSM logic ensures that all DDR I/O primitives are synchronized after a system reset. CSM also provides the logic for the DLL update operation. Without proper synchronization, the bit order on different elements might be off-sync with each other and the entire bus is scrambled. The clock synchronization ensures that all DDR components start from exactly the same edge clock cycle.

For 400 MHz LPDDR2 SDRAM device support, the MC module operates with a 200 MHz system clock (SCLK), the I/O logic works with a 400 MHz edge clock (ECLK). The combination of this operating clock ratio and the double data rate transfer leads to a user side data bus that is four times the width of the memory side data bus.

2.5. Operations Details

The Native Interface of the LPDDR2 SDRAM Controller Lite IP Core consists of five independent functional groups. Each functional group and its associated local interface signals as listed in [Table 2.4](#).

Table 2.4. Native Interface Functional Groups

Functional Group	Native Interface Signals
Initialization Control	init_start_i, init_done_o, rt_req_i, rt_act_o, rt_done_o, rt_err_o
Command and Address	cmd_valid_i, cmd_rdy_o, cmd_i, addr_i, cmd_burst_cnt_i
Data Write	datain_rdy_o, data_mask_i, write_data_i
Data Read	read_data_valid_o, read_data_o
Auto Refresh	ext_auto_ref_i, ext_auto_ref_ack_o

2.5.1. Initialization Control

LPDDR2 SDRAM devices must be initialized before they can be accessed by the memory controller. The memory controller starts the memory initialization sequence when external/user logic asserts the `init_start_i` signal. Once asserted, the `init_start` signal needs to be held high until the initialization process is completed. The output signal `init_done_o` is asserted for one clock cycle indicating that the core has completed the initialization sequence and is now ready to access the SDRAM device. The external/user logic must negate the `init_start_i` signal as soon as `init_done_o` is sampled high at the rising edge of `sclk_o`. If the `init_start` is left high at the next rising edge of `sclk` the memory controller takes it as another request for initialization and starts the initialization process again. Memory initialization is required only once, immediately after the system reset. The memory controller ensures a minimum gap of 200 μ s between `em_ddr_cke` assertion and reset command to the memory. [Figure 2.2](#) shows the timing diagram of the initialization control signals.

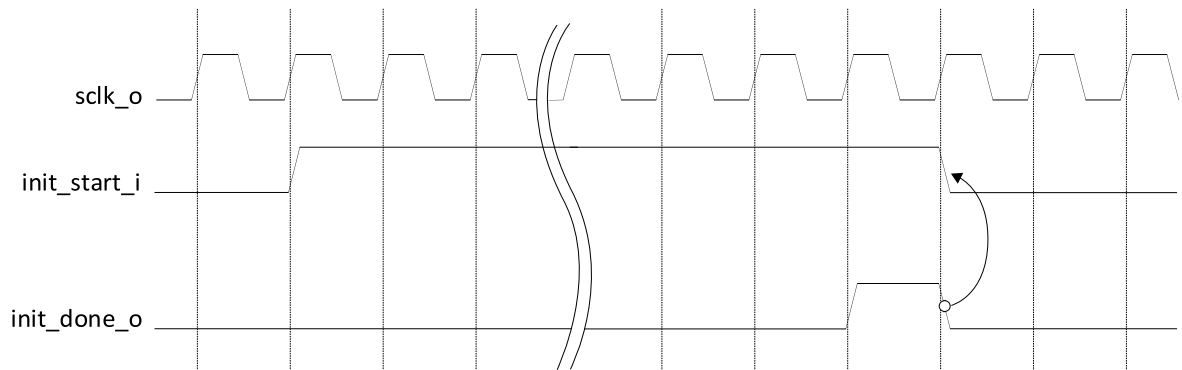


Figure 2.2. Timing of Memory Initialization Control

The read training is also performed during the initialization process to find the best read pulse position that detects the incoming read DQS preamble timing. Since LPDDR2 SDRAM devices do not use a DLL function, the clock to DQS driving time can vary significantly with the process, voltage, and temperature (PVT) variations. Due to this reason, periodic retraining of the read pulse position may be necessary for guaranteeing stable read transactions over the PVT variations during the normal operation. The LPDDR2 SDRAM Controller Lite IP core provides you with a function that can perform read retraining for PVT calibration during the normal operation using the following signals:

- `rt_req_i`: read retraining request
- `rt_act_o`: read training active
- `rt_done_o`: read retraining done

External/user logic need to assert the `rt_req_i` signal during the normal operation but only when the LPDDR2 interface is in an idle state. No activity other than NOP command is allowed when the core enters to the read retraining mode.

Once asserted, `rt_req_i` should remain asserted until the `rt_done_o` signal is sampled High. The `rt_act_o` signal indicates that the IP core is in the read training mode, and the LPDDR2 interface should remain idle with only NOP commands until the retraining process is completed. The `rt_done` signal is asserted only for one clock cycle, and the `rt_req_i` signal must be deasserted immediately after the sampling of the `rt_done` assertion to avoid unnecessary reentering the training. The `rt_err_o` signal is asserted if the read training is not successful. Since a failure during the read training usually causes the IP core unable to transfer the read data from the LPDDR2 SDRAM device to the FPGA fabric, `rt_err_o` should be the first signal that you need to check if the LPDDR2 interface does not work properly.

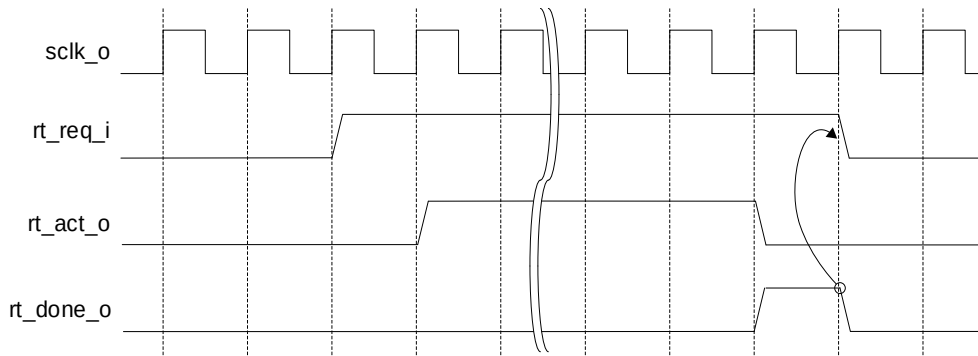


Figure 2.3. Timing Diagram for Read Retraining

2.5.2. Command and Address

After memory initialization is completed, the IP Core waits for user commands in order to set up or access the SDRAM device. The user logic needs to provide the command and address to the core along with the control signals. The commands and addresses are delivered to the core using the following procedure.

The memory controller core informs the user logic that it is ready to receive a command by asserting the `cmd_rdy_o` signal for one cycle. If the core finds the `cmd_valid_i` signal asserted by the user logic while its `cmd_rdy_o` is asserted, it takes the `cmd` input as a valid user command. Usually, `cmd_valid_i` is deasserted at the rising edge of the clock that samples `cmd_rdy_o` high. The core also accepts the `addr_i` input as a valid start address or mode register programming data depending on the command type. Along with `addr_i` input the core also accepts the signal `cmd_burst_cnt_i`. If `cmd_valid_i` is not asserted, the `cmd_i` and `addr_i` inputs become invalid and the core ignores them. The `cmd_i`, `addr_i`, `cmd_burst_cnt_i` and `cmd_valid_i` inputs become *don't care* while `cmd_rdy_o` is de-asserted. The `cmd_rdy_o` signal is asserted again to accept the next command.

The core is designed to ensure maximum throughput at a burst length of eight by asserting `cmd_rdy_o` once every two-clock cycles unless the command queue is full or there is an intervention on the memory interface such as Auto-Refresh cycles.

When the core is in the command burst operation, it extensively occupies the data bus. During this time, the core prevents `cmd_rdy_o` from being asserted until the command burst is completed. While the core is operating in the command burst mode, it can keep maximum throughput by internally replicating the command. The memory controller repeats the given READ or WRITE command up to 32 times. The `cmd_burst_cnt_i` input is used to set the number of repeats of the given command. The core allows the command burst function to access the memory addresses within the current page. When the core reaches the boundary of the current page while accessing the memory in the command burst mode, the next address that the core accesses becomes the beginning of the same page. This results in overwriting the contents of the location or reading unexpected data. Therefore, you must track the accessible address range in the current page while the command burst operation is performed. If an application requires a fixed command burst size, use of 2-, 4-, 8-, 16- or 32-burst is recommended to ensure that the command burst accesses do not cross the page boundary. When `cmd_burst_cnt_i` is 0, the controller performs 32 commands (reads or writes). The `cmd_burst_cnt` input_i is sampled the same way as `cmd` signal. The timing diagram of the Command and Address group is shown in Figure 2.4. The timing for burst count_i in Figure 2.4 shows only the sampling time of the bus. When `cmd_burst_cnt_i` is sampled with a value greater than 5'b00001 and the command queue becomes full, the `cmd_rdy_o` signal is not asserted and the memory address is automatically increased by the core until the current command burst cycle is completed.

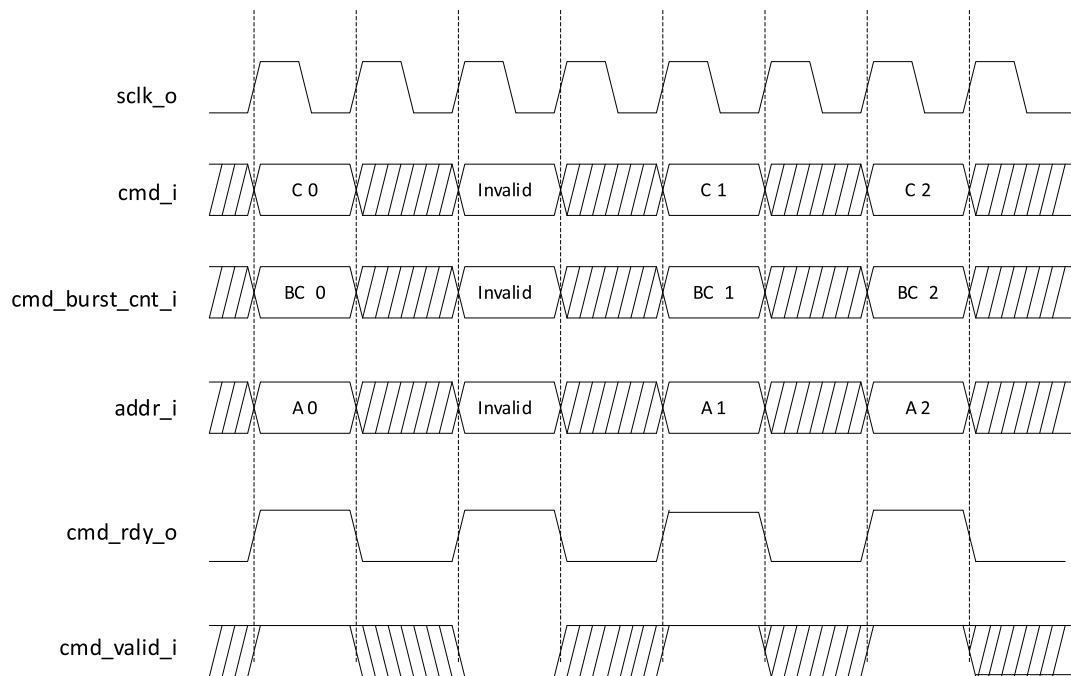


Figure 2.4. Timing of Command and Address

2.5.3. User Commands

You can initiate a request to the memory controller by loading a specific command code in cmd input along with other information such as memory address. The command on the cmd_i signal must be a valid command. Lattice defines a set of valid memory commands as shown in Table 2.5. All other values are reserved and considered invalid.

Table 2.5. Defined User Commands

Command	Mnemonic	cmd_i[3:0]
Read	READ	4'b0001
Write	WRITE	4'b0010
Read with Auto Precharge	READA	4'b0011
Write with Auto Precharge	WRITEA	4'b0100
Powerdown Entry	PDOWN_ENT	4'b0101
Load Mode Register	LOAD_MR	4'b0110
Self-Refresh Entry	SEL_REF_ENT	4'b1000
Self-Refresh Exit	SEL_REF_EXIT	4'b1001
Powerdown Exit	PDOWN_EXIT	4'b1011
ZQ Calibration Long	ZQ_LNG	4'b1100
ZQ Calibration Short	ZQ_SHRT	4'b1101

Notes:

- The controller accepts only the command codes listed above as legal commands. Any other command code is discarded as invalid command.
- The controller discards Self-Refresh Entry or Power Down Entry command if the memory is already in Self-refresh mode or Power Down mode respectively.
- The controller discards Self-Refresh Exit or Power Down Exit command if the memory is already not in Self-refresh mode or Power Down mode respectively.

2.5.4. WRITE

The user initiates a memory write operation by asserting `cmd_valid_i` along with the WRITE or WRITEA command and the address. After the WRITE command is accepted, the memory controller core asserts the `datain_rdy_o` signal when it is ready to receive the write data from the user logic to write into the memory. Since the duration from the time a write command is accepted to the time the `datain_rdy_o` signal is asserted is not fixed, the user logic needs to monitor the `datain_rdy_o` signal. Once `datain_rdy_o` is asserted, the core expects valid data on the `write_data_i` signal 1, 2 or 3 clock cycles after the `datain_rdy_o` signal is asserted. The write data delay is programmable by the user, by setting desired value to *Data Ready to Write Data Delay* attribute, providing flexible backend application support. For example, setting the value to 2 ensures that the core takes the write data in proper time when the local user interface of the core is connected to a synchronous FIFO module inside the user logic. Figure 2.5 shows two examples of the local user interface data write timing. Both cases are in BL8 mode. The upper diagram shows the case of one clock cycle delay of write data, while the lower one displays a two clock-cycle delay case. The memory controller considers D0, DM0 through D5, DM5 valid write data.

The controller decodes the `addr` input to extract the current row and current bank addresses and checks if the current row in the memory device is already opened. If there is no opened row in current bank, an ACTIVE command is generated by the controller to the memory to open the current row first. The memory controller then issues a WRITE command to the memory. If there is already an opened row in the current bank and the current row address is different from the opened row, a PRECHARGE command is generated by the controller to close opened row in the bank. This is followed with an ACTIVE command to open the current row. The memory controller then issues a WRITE command to the memory. If current row is already opened, only a WRITE command (without any ACTIVE or PRECHARGE commands) is sent to the memory.

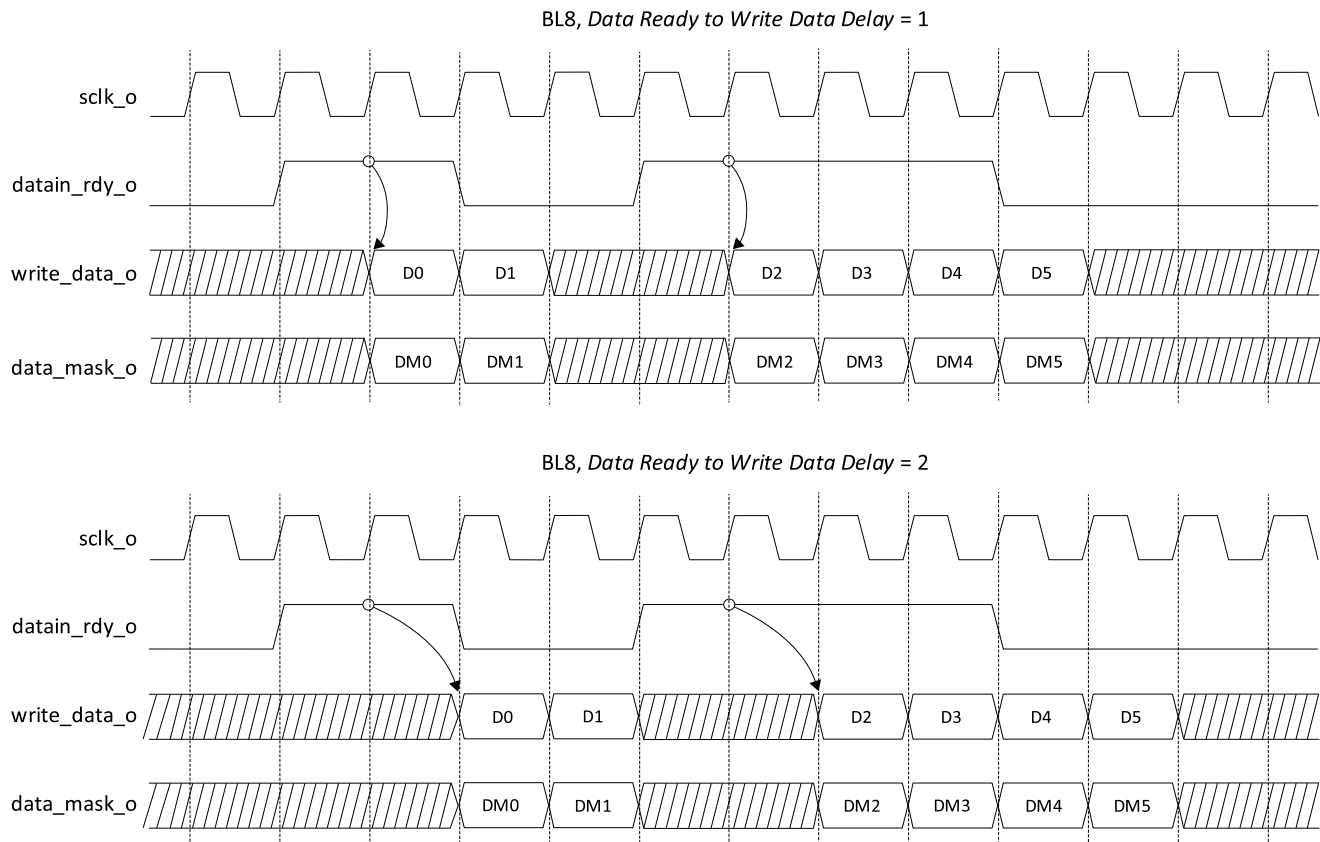


Figure 2.5. Timing One-Clock vs. Two-Clock Write Data Delay

2.5.5. WRITEA

WRITEA is treated the same way as WRITE command, except that the IP Core issues a Write with Auto Precharge command to the memory, instead of just a Write command. This causes the memory to automatically close the current row upon completing the write operation.

2.5.6. READ

When the READ command is accepted, the memory controller core accesses the memory to read the addressed data and brings the data back to the local user interface. Once the read data is available on the local user interface, the memory controller core asserts the read_data_valid_o signal to tell the user logic that the valid read data is on the read_data_o signal. The timing diagram of read data on the local user interface is shown in Figure 2.6.

Read operation follows the same row status checking scheme as mentioned in write operation. Depending on current row status the memory controller generates ACTIVE and PRECHARGE commands as required. Refer to the description mentioned in Write operation for more details.

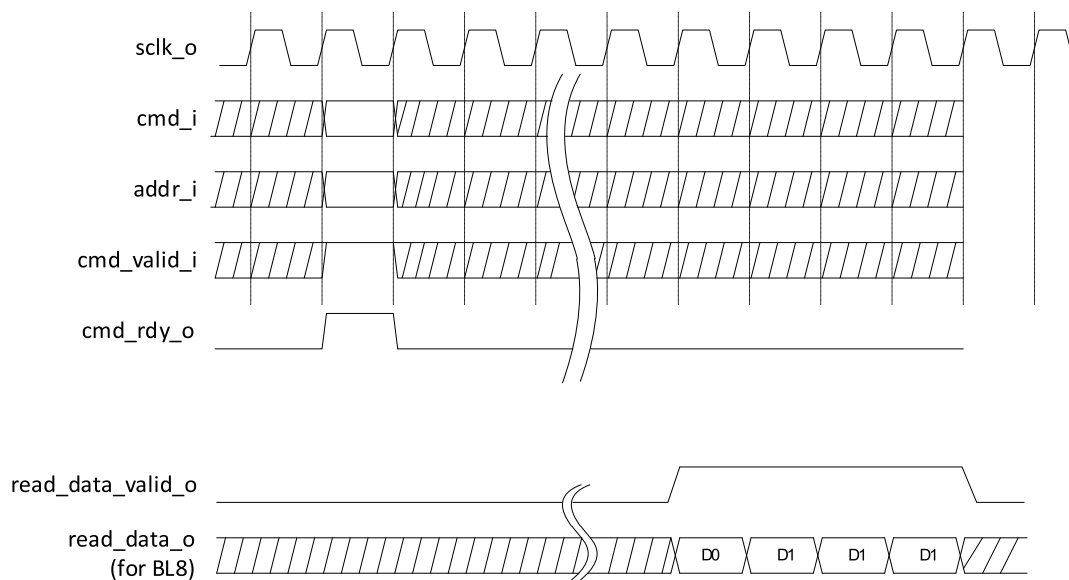


Figure 2.6. User-Side Read Operation

2.5.7. READA

READA is treated in the same way as READ command except for the difference that the IP Core issues a Read with Auto Precharge command to the memory instead of Read command. This makes the memory automatically close the current row after completing the read operation.

2.5.8. REFRESH Support

Since LPDDR2 SDRAM devices have at most an 8192-deep Auto Refresh command queue as per JEDEC JESD209-2B specification, Lattice's LPDDR2 memory controller core can support up to 8192 Auto Refresh commands in one burst. The core has an internal auto refresh generator that sends out a set of consecutive Auto Refresh commands to the memory at once when it reaches the time period of the refresh intervals ($TREFI_AB$ attribute) times the *Auto Refresh Burst Count* as selected in the Module/IP Block Wizard.

It is recommended that the optimum number of burst Refresh commands be used if the LPDDR2 interface throughput is a major concern of the system. If the *Auto Refresh Burst Count* attribute is set to n , for example, the core sends a set of n consecutive Auto Refresh commands to the memory at once when it reaches the time period of the n refresh intervals ($TREFI_AB \times n \times \text{sclk_o period}$). Sending out n number of refresh commands in a burst takes about $n \times 4 \times TRFC_AB \times \text{sclk_o period}$ in All bank refresh mode. During this time, no other command is sent to the memory.

When a refresh burst is used, the controller issues a Pre-charge command only for the first Refresh command and the subsequent Refresh commands of the burst are issued without the associated Pre-charge commands. This is to improve the LPDDR2 throughput.

Alternatively, you can enable the *External Auto Refresh Port* attribute which adds an input signal `ext_auto_ref_i` and an output signal `ext_auto_ref_ack_o` to the core. In this case the internal auto refresh generator is disabled and the core sends out a burst of refresh commands, as directed by *Auto refresh Burst Count*, every time the `ext_auto_ref_i` is asserted. Completion of refresh burst is indicated by the output signal `ext_auto_ref_ack_o`.

In an application where explicit memory refresh is not necessary, you can enable *External Auto Refresh Port* attribute and keep the `ext_auto_ref_i` signal deasserted.

The user logic can use the `sref_ent_cmd_o` and `sref_ext_cmd_o` signal to determine if the IP Core enters and exits self-refresh operation.

2.6. Local-to-Memory Address Mapping

Mapping local addresses to memory addresses is an important part of a system design when a memory controller function is implemented. You must know how the local address lines from the memory controller connect to those address lines from the memory because proper local-to-memory address mapping is crucial to meet the system requirements in applications such as a video frame buffer controller. Even for other applications, careful address mapping is generally necessary to optimize the system performance. In the memory side, the address (A), bank address (BA) and chip select (CS) inputs are used for addressing a memory device. You can obtain this information from a given data sheet. Figure 2.7 shows the local-to-memory address mapping of the Lattice LPDDR2 SDRAM Controller Lite IP Core.

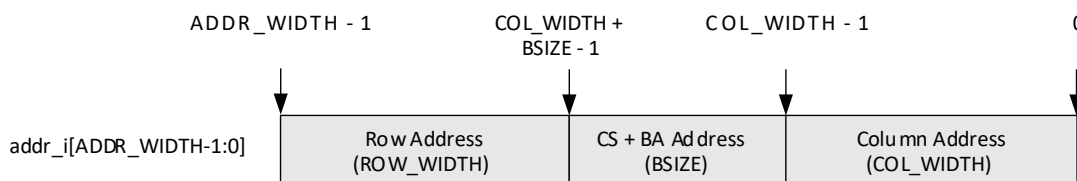


Figure 2.7. Local-to-Memory Address Mapping for Memory Access

`ADDR_WIDTH` is calculated by the sum of `COL_WIDTH`, `ROW_WIDTH` and `BSIZE`. `BSIZE` is determined by the sum of the `BANK_WIDTH` and `CS_WIDTH`. Since the number of chip select is 1, the chip select address size becomes 0. An example of a typical address mapping is shown in Table 2.6 and Figure 2.8.

Table 2.6. Address Mapping Example

Attribute Name	Example User Value	Actual Line Size	Local Address Map
Column Size	11	11	<code>addr_i[10:0]</code>
Bank Address Width	3	3	<code>addr_i[13:11]</code>
Rank Size (or Chip Select Size)	Single	0	—
Row Size	14	14	<code>addr_i[27:14]</code>
Total Local Address Line Size		29	<code>addr_i[27:0]</code>

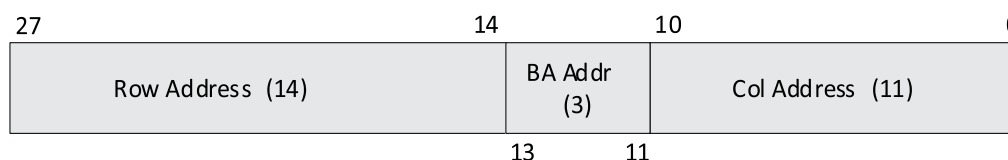


Figure 2.8. Mapped Address for the Example

2.7. Mode register Programming

The LPDDR2 SDRAM devices are programmed using a set of up to 256 Mode Registers. Mode Register address and the Opcode to the Mode Register (for MRW only) are sent to the memory device through the `em_ddr_ca_o` signal along with the MRW/MRR command. The memory data (`em_ddr_data_io`) signal cannot be used for the Mode Register programming.

The Lattice LPDDR2 memory controller core uses the local address signal, `addr_i`, to program these registers. The core accepts a user command, MRW, to initiate the programming of mode registers. When MRW is applied on the `cmd_i` signal, the user logic must provide the information for the targeted mode register and the programming data on the `addr_i` signal. When the target mode register is programmed, the memory controller core is also configured to support the new memory setting. Figure 2.7 and Table 2.7 show the bit mapping of local address signal, `addr_i` for the programming of memory registers.

<code>addr_i[ADDR_WIDTH-1:16]</code>	<code>addr_i[15:8]</code>	<code>addr_i[7:0]</code>
Unused	Op code for MRW Unused for MRR	Mode Reg Addr for MRW and MRR

Figure 2.9. User-to-Memory Address Mapping for MR Programming

The register address (8 bits) is provided through the lower side of the `addr_i` signal starting from the bit 0 for LSB. The programming data uses the next 8 bits.

Table 2.7. Mode Register Selection Using Address Bits

Mode Register	(<code>addr_i[7:0]</code>)
MR0	8'h00
MR1	8'h01
...	...
MR255	8'hFF

The initialization process uses the Mode register initial values selected through the interface. If these registers are not further programmed by the user logic, using MRW user command, they remain in the configurations programmed during the initialization process. Table 2.8 shows the list of available parameters and their initial default values from the interface if they are not changed by the user.

Table 2.8. Initialization Default Values for Mode Register Setting

Mode Register	Register Field	Default Value	Description	Local Address	Module/IP Block Wizard Setting
MR1	Burst Length	3'b011	BL = 8	<code>addr_i[10:8]</code>	Yes
	WR Recovery	3'b100	6	<code>addr_i[15:13]</code>	Yes
MR2	Read and Write Latency	4'b0100	RL=6, WL=3	<code>addr_i[11:8]</code>	Yes
MR3	Drive strength	4'b0010	40 Ω PD/PU	<code>addr_i[ROW_WIDTH-1:0]</code>	Yes

3. Core Generation, Simulation, and Validation

This section provides information on how to generate the LPDDR2 SDRAM Controller Lite IP Core using the Lattice Radiant software and how to run simulation and synthesis. For more details on the Lattice Radiant software, refer to the Lattice Radiant Software User Guide.

3.1. Licensing the IP

An IP core-specific license string is required enable full use of the LPDDR2 SDRAM Controller Lite IP Core in a complete, top-level design. You can fully evaluate the IP core through functional simulation and implementation (synthesis, map, place and route) without an IP license string. This IP core supports Lattice's IP hardware evaluation capability, which makes it possible to create versions of the IP core, which operate in hardware for a limited time (approximately four hours) without requiring an IP license string. See Hardware Evaluation section for further details. However, a license string is required to enable timing simulation and to generate bitstream file that does not include the hardware evaluation timeout limitation.

3.2. Generation and Synthesis

The Lattice Radiant software allows you to customize and generate modules and IPs and integrate them into the device's architecture. The procedure for generating the LPDDR2 SDRAM Controller Lite IP Core in Lattice Radiant software is described below.

To generate the LPDDR2 SDRAM Controller Lite IP Core:

1. Create a new Lattice Radiant software project or open an existing project.
2. In the **IP Catalog** tab, double-click on **LPDDR2_SDRAM_Controller_Lite** under **IP, Processors, Controllers, and Peripherals** category. The **Module/IP Block Wizard** opens as shown in [Figure 3.1](#). Enter values in the **Component name** and the **Create in** fields and click **Next**.

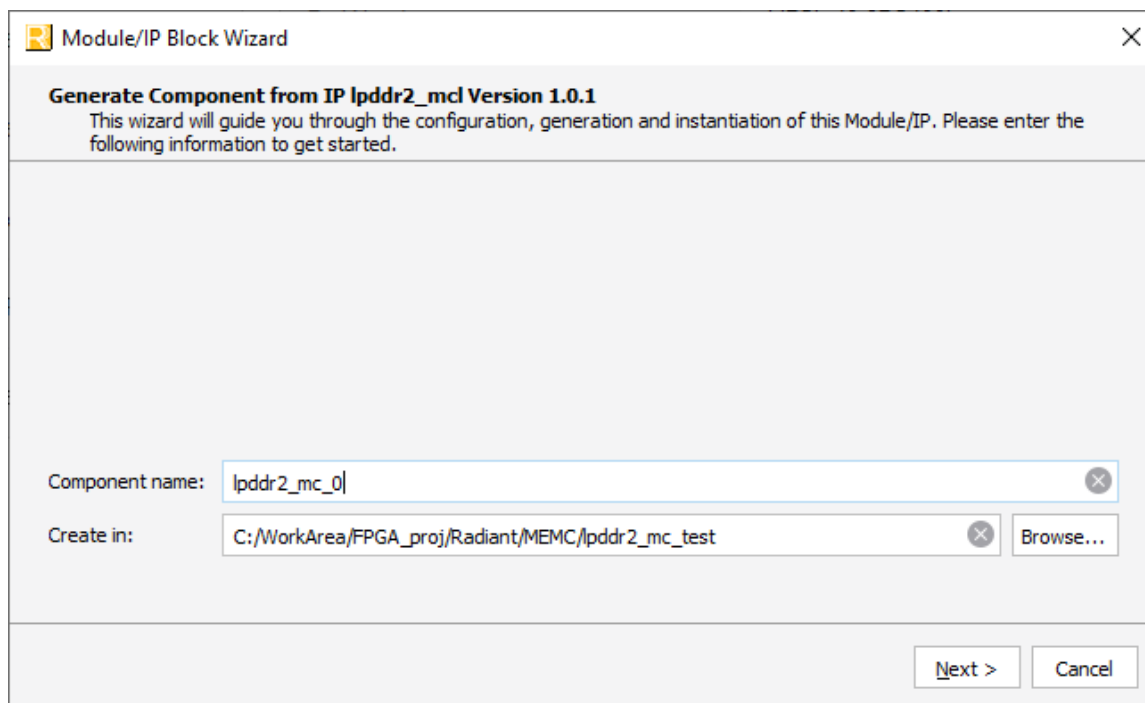


Figure 3.1. Module/IP Block Wizard

3. In the module's dialog box of the **Module/IP Block Wizard** window, customize the selected LPDDR2 SDRAM Controller Lite IP Core using drop-down menus and check boxes. As a sample configuration, see [Figure 3.2](#). For configuration options, see the [Attributes Summary](#) section.

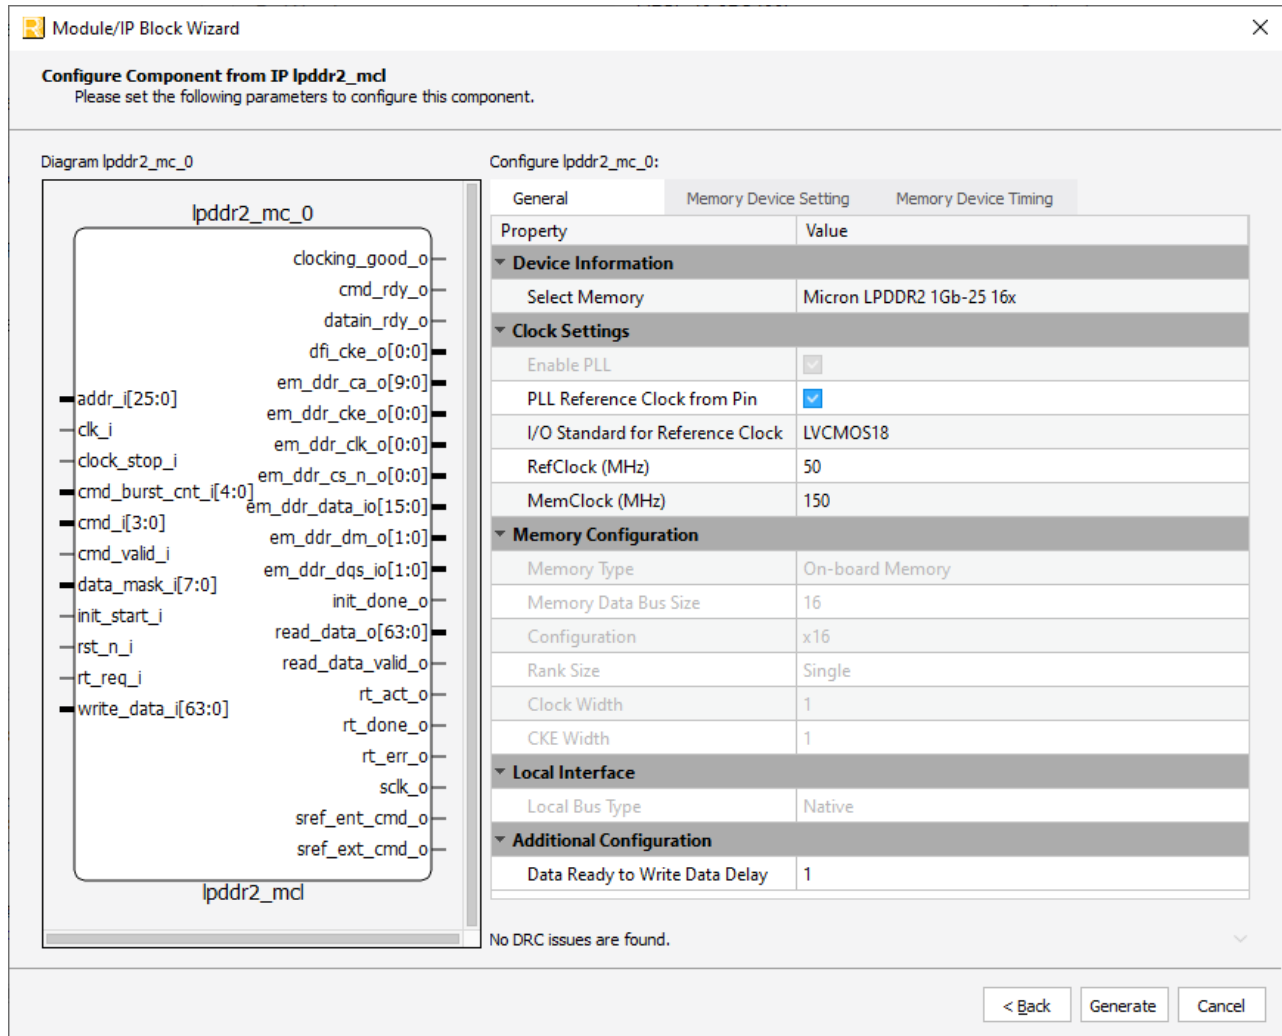


Figure 3.2. Module/IP Block Wizard of LPDDR2 SDRAM Controller Lite IP Core

4. Click **Generate**. The **Check Generating Result** dialog box opens, showing design block messages and results as shown in [Figure 3.3](#).

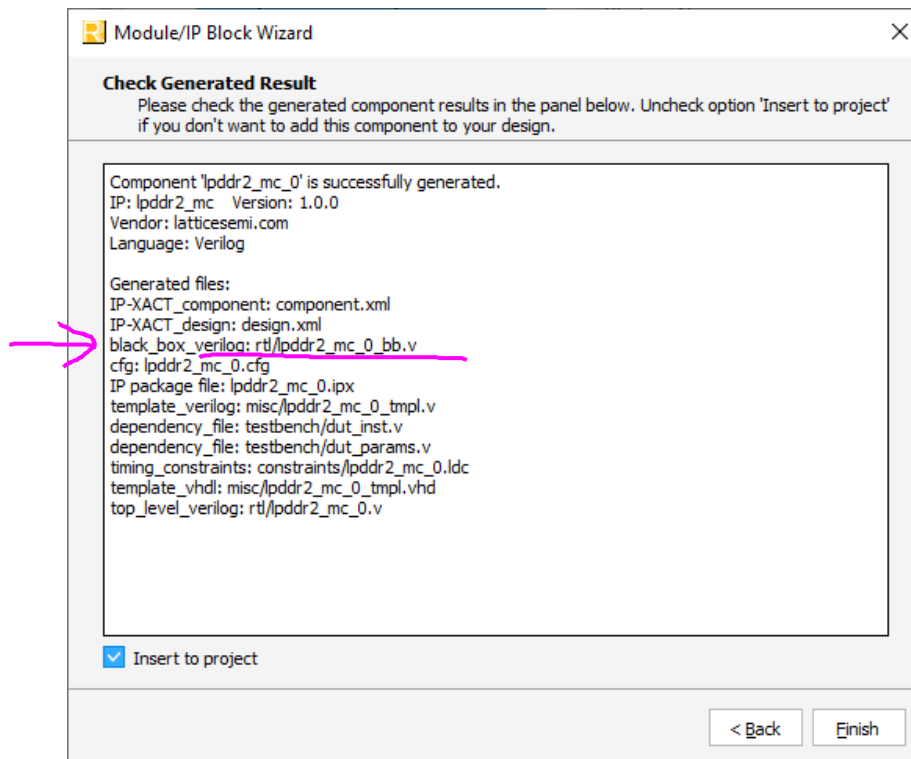


Figure 3.3. Check Generating Result

- Click the **Finish** button. All the generated files are placed under the directory paths in the **Create in** and the **Component name** fields shown in [Figure 3.1](#).

The generated LPDDR2 SDRAM Controller Lite IP Core package includes the black box (<Component name>_bb.v) and instance templates (<Component name>_tmpl.v/vhd) that can be used to instantiate the core in a top-level design. An example RTL top-level reference source file (<Component name>.v) that can be used as an instantiation template for the IP core is also provided. You may also use this top-level reference as the starting template for the top-level for their complete design. The generated files are listed in [Table 3.1](#).

Table 3.1. Generated File List

Attribute	Description
<Component name>.ipx	This file contains the information on the files associated to the generated IP.
<Component name>.cfg	This file contains the parameter values used in IP configuration.
component.xml	Contains the ipxact:component information of the IP.
design.xml	Documents the configuration parameters of the IP in IP-XACT 2014 format.
rtl/<Component name>.v	This file provides an example RTL top file that instantiates the IP core.
rtl/<Component name>_bb.v	This file provides the synthesis black box.
misc/<Component name>_tmpl.v misc /<Component name>_tmpl.vhd	These files provide instance templates for the IP core.
eval/top_constraint.pdc	Guide for setting clock constraint in the post-synthesis constraint files
eval/eval_top.v	Top level RTL files that may be used for running Lattice Radiant software flow check (synthesis to export) on the generated IP. Without this, the Radiant software Map process fails due to not enough I/O. This is mainly used for checking resource utilization and fmax for the selected IP configuration, this is not for implementation.
eval/lscf_simple_ifsr.v	A simple linear-feedback shift register.
eval/dut_inst.v	A sample instantiation of the generated IP. This is included by the eval_top.v.
eval/dut_params.v	Lists the equivalent localparams of the user settings. This is included by the eval_top.v.

3.2.1. Required Post-Synthesis Constraints

The LPDDR2 SDRAM Controller IP Core has one PLL reference clock input and three internally-generated clocks. You need to constrain these clocks in the post-synthesis constraint file of your Lattice Radiant software project.

The eval/top_constraint.pdc file described in Table 3.1 is a constraint file that is generated based on the user settings. You need to copy the contents of this file to your post synthesis constraint file for your Lattice Radiant project.

3.3. Running Functional Simulation

The initialization of LPDDR2 memories take around 200 μ s. This takes a long time to simulate. After checking that the initialization works, it is usually desired to bypass (reduce to few clock cycles) these process in the succeeding simulation to save time. Bypassing these requires manual update on the generated IP RTL file and testbench file as follows:

- Modify the <generated_ip_path>/rtl/<generated_ip_name>.v and set SIMULATION parameter to 1. For example:

```
lpddr2_mcl_0_ipgen_lscclpddr2_mc #(.FAMILY("LIFCL"),
    .SIMULATION(1), // Set SIMULATION=1 for simulation only
    .SELECT_MEMORY("1Gb"),
```

- The file <generated_ip_path>/testbench/dut_params.v contains the user-defined parameters. This is used for configuring the test. You should set the localparam SIMULATION to 1 so that the test knows that you bypass reset and initialization.

```
localparam SIMULATION = 1;
```

You should ensure that the generated IP that you used for bitstream generation has SIMULATION parameter set to 0 so that the IP Core can generate correct initialization period which is necessary for proper LPDDR2 SDRAM operation.

To run the functional simulation:

- Add the top-level testbench file, tb_top.v in the project as a simulation file, click **File** Tab, then select **Add** in the drop down menu, then click **Existing Simulation File**. Then select <Component name>/testbench/tb_top.v.
- Click the  button located on the **Toolbar** to initiate the **Simulation Wizard** shown in Figure 3.4.

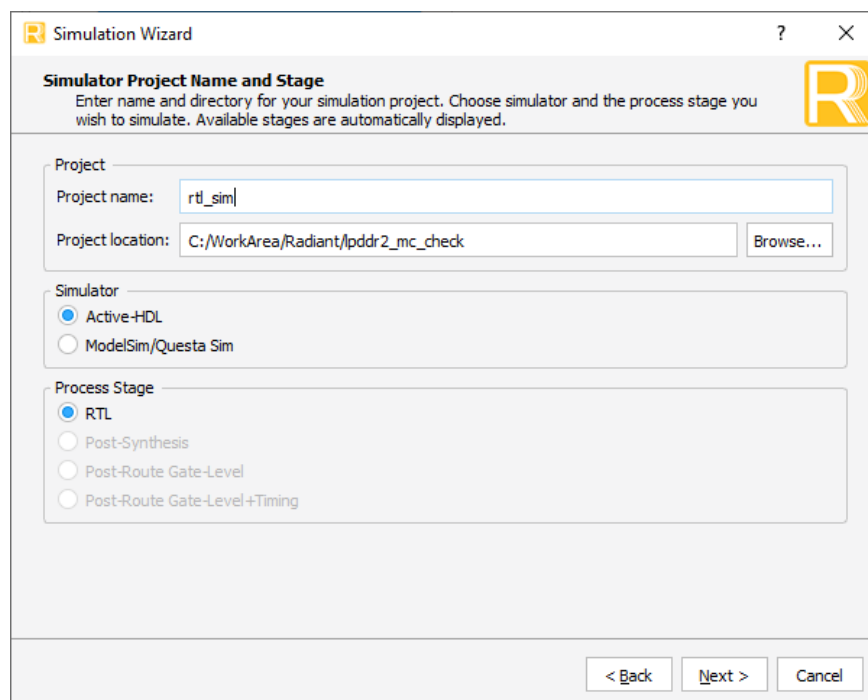


Figure 3.4. Simulation Wizard

- Click **Next** to open the **Add and Reorder Source** window as shown in Figure 3.5. Notice that the **Source Files** area only contain the generated IP (<Component name>.v) and the tb_top.v, which is added in Step 1. The tb_top.v includes all the necessary test files for simulation.

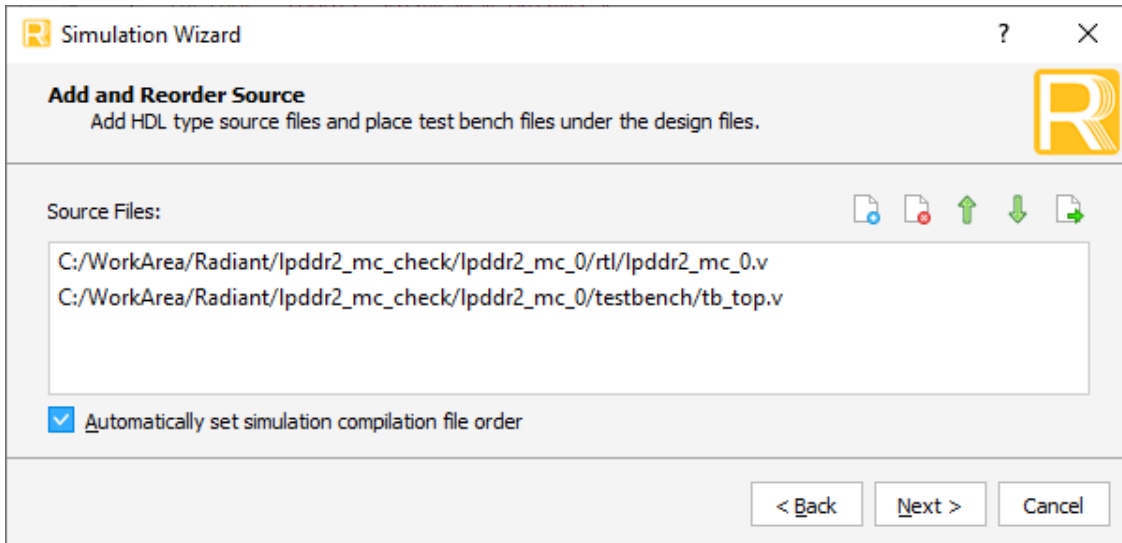


Figure 3.5. Adding and Reordering Source

- Click **Next**. The **Summary** window is shown; click **Finish** to run the simulation.

Note: It is necessary to follow the procedure above until it is fully automated in the Lattice Radiant software suite. The results of the simulation in our example are provided in Figure 3.6.



Figure 3.6. Simulation Waveform Hardware Evaluation

The LPDDR2 SDRAM Controller Lite IP Core supports Lattice’s IP hardware evaluation capability when used with CrossLink-NX devices. This makes it possible to create versions of the IP core that operate in hardware for a limited period of time (approximately four hours) without requiring the purchase of an IP license. It may also be used to evaluate the core in hardware in user-defined designs. The hardware evaluation capability may be enabled/disabled in the Strategy dialog box. It is enabled by default. To change this setting, go to Project > Active Strategy > LSE/Synplify Pro Settings.

4. Ordering Part Number

The Ordering Part Number (OPN) for this IP Core are the following:

- LPDDR2L-CN-X-U – LPDDR2 SDRAM Controller Lite for CrossLink-NX – Single Design License
- LPDDR2L-CN-X-UT – LPDDR2 SDRAM Controller Lite for CrossLink-NX – Site License
- LPDDR2L-CTN-X-U – LPDDR2 SDRAM Controller Lite for Certus-NX – Single Design License
- LPDDR2L-CTN-X-UT – LPDDR2 SDRAM Controller Lite for Certus-NX – Site License
- LPDDR2L-CPN-X-U – LPDDR2 SDRAM Controller Lite for CertusPro-NX – Single Design License
- LPDDR2L-CPN-X-UT – LPDDR2 SDRAM Controller Lite for CertusPro-NX – Site License

Appendix A. Resource Utilization

Table A.1 show configuration and resource utilization for LIFCL-40-9BG400I using Synplify Pro of Lattice Radiant software 2.1.

Table A.1. Resource Utilization

Configuration	sclk_o Fmax (MHz)	Registers	LUTs	EBR	IDDR/ODDR/TDDR
Default (MemClock=150 MHz)	177.368	1762	2104	0	67
MemClock=300 MHz, Others = Default	194.477	1762	2067	0	67
MemClock=350 MHz, Others = Default	194.212	1762	2070	0	67

Note:

1. The sclk_o Fmax is generated using the eval_top.v that is described in Table 3.1. This design only contains the LPDDR2 SDRAM Controller Lite IP Core and a few linear-feedback shift registers. These values may be reduced when the IP Core is used with the user logic.
2. The *distributed RAM* utilization is accounted for in the total LUT4 utilization. The actual LUT4 utilization is distribution among *logic*, *distributed RAM*, and *ripple logic*.

References

- [CrossLink-NX FPGA Web Page at www.latticesemi.com](http://www.latticesemi.com)
- [Certus-NX FPGA-Web Page at www.latticesemi.com](http://www.latticesemi.com)
- [CertusPro-NX FPGA Web Page at www.latticesemi.com](http://www.latticesemi.com)
- <http://www.jedec.org>

Technical Support Assistance

Submit a technical support case through www.latticesemi.com/techsupport.

Revision History

Revision 1.5, June 2021

Section	Change Summary
Introduction	Updated Table 1.1 to add CertusPro-NX support and update IP Core – Lattice Radiant Design version.
Ordering Part Number	Added part number for CertusPro-NX.
Appendix B. Limitation	Removed this section.
References	Updated this section to add CertusPro-NX web page.

Revision 1.4, October 2020

Section	Change Summary
Introduction	- Added LIFCL-17 and LFD2NX-17 in the Target Devices. - Updated reference to the Lattice Radiant Software User Guide.
Functional Descriptions	Updated selectable values in Table 2.2 for the following attributes: I/O Standard for Reference Clock, RefClock (MHz), MemClock (MHz).
Core Generation, Simulation, and Validation	Updated reference to the Lattice Radiant Software User Guide.
References	Updated this section.

Revision 1.3, August 2020

Section	Change Summary
Appendix A. Resource Utilization	Updated Table A.1.

Revision 1.2, June 2020

Section	Change Summary
All	Updated Lattice Radiant software user guide references to version 2.1 across the document.
Introduction	- Added Certus-NX and LFD2NX-40 in Supported FPGA Family and Target Devices, respectively, and added IP Core v1.1.x in Lattice Implementation row in Table 1.1. - Updated Features to limit memory data path width and device configurations to 16 and x16 respectively due to the limitation.
Functional Descriptions	- Updated Select Memory and Memory Data Bus Size entries in Table 2.2 in the Attributes Summary section. - Added MemClock Tolerance and MemClock Actual Frequency attributes in Table 2.2 and Table 2.3.
Core Generation, Simulation, and Validation	- Updated Table 3.1 for the added eval folder. - Added Required Post-Synthesis Constraints section.
Ordering Part Number	Updated this section.
Appendix A. Resource Utilization	Updated Table A.1.
Appendix B. Limitation	Added this section.
References	Updated this section.

Revision 1.1, February 2020

Section	Change Summary
Functional Description	Added sref_ent_cmd_o and sref_ext_cmd_o signals in Figure 2.1. Fixed signal names in Figure 2.2.
Core Generation, Simulation, and Validation	Updated Figure 3.1 and Figure 3.2 for IP Core v1.0.1.

Revision 1.0, December 2019

Section	Change Summary
All	Initial release.



www.latticesemi.com