EcoPulse Thermostat v2.3 — Install & User Manual

Document ID: HV-PROD-003 | Firmware 2.3.7 (Matter in v2.4 June 15, 2026) | Price $189 | Serial EP-2024/2025-XXXXXX

1. In the Box: Thermostat, wall plate, 5 wire labels, 2 screws/anchors, 24V C-wire adapter SKU HV-ADP-24V ($19 value included), Install guide HV-INS-EP23. Requires 24VAC HVAC (C-wire). If no C-wire, must install included adapter or Error E-14 appears.

2. Wiring (See Figure 2 below): Turn OFF breaker. Label wires R (power), C (common 24V), W (heat), Y (cool), G (fan). C-wire voltage must be 20-30VAC (measure R-C with multimeter). If E-14 shows C-wire undervoltage <20VAC, install HV-ADP-24V. Power-cycle by holding Dial + Side button 10 sec.

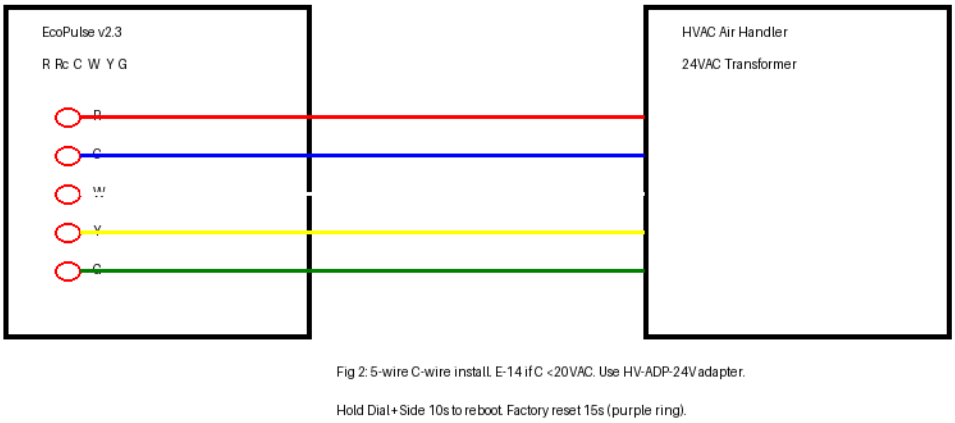

Figure 2: 5-wire install diagram. Factory reset: hold Dial + Side 15 sec until purple ring, then confirm. Temperature calibration: Settings > Advanced > Temp Offset. Wait 45 min after install for stabilization. Sunlight correction ON if facing window.

3. Wi-Fi & App: Connects 2.4GHz only (SSID must not be 5GHz-only). Open HelioVolt app (app.heliovolt.fake), Add Device → scan QR → enter 8-char code. MQTT telemetry every 60 sec. API setpoint range: heat 10-26°C, cool 18-30°C. Default schedule Eco 21.5°C heat / 24°C cool.

4. Specs Table: Display 3.5in TFT, Power 24VAC ±15%, Connectivity Wi-Fi 6 + Thread (enabled v2.4), Sensors temp ±0.3°C / humidity ±2%, Dimensions 92x92x24mm, Certs FCC/CE/UL. Warranty 3 years, support support@heliovolt.fake +1-512-555-0147.