



			AL	FAE	BET (	O M	OR	SE			
Α		G		М		S		Υ	-,	5	
В		Н		N		T	-	Z		6	
С		]		0		U		1		7	
D		J		Р		٧		2		8	
Ε	•	K		Q		W		3		9	
F		L		R	, <del>-</del> ,	Χ		4		0	

	INSTALA (		VES	
APP BARRANQUIL	119.1 MHz			
APP BARRANQUIL	119.75 MHz			
TWR ERNESTO CO	118.1 MHz			
EMERGENCIA	121.5 MHz			
BAQ INFORMACIĆ	127.5 MHz			
ACC BAQ SECTOR	128.4 MHz			
ACC BAQ SECTOR	128.1 MHz			
ACC BAQ SECTOR	124.2 MHz			
ACC BAQ SECTOR	124.85 MHz			
TWR RAFAEL NUÑ	ÍΕΖ		118.3 MHz	
TWR SIMÓN BOLÍ	VAR		118.7 MHz	
TWR LOS GARZON	NES		118.1 MHz	
TWR GOLFO DE M	IORROSQUILL	.0	118.5 MHz	
TWR LAS BRUJAS			118.4 MHz	
TWR ALMIRANTE	118.4 MHz			
BASE NAVAL COV	EÑAS		126.2 MHz	
MEDELLÍN	CONT	ROL	127.2 MHz	
BUCARAMANGA		APP TWR	119.0 MHz 118.3 MHz	
CÚCUTA		APP TWR	119.9 MHz 118.1 MHz	
BOGOTÁ	ACC	NE NW	128.6 MHz 123.7 MHz	

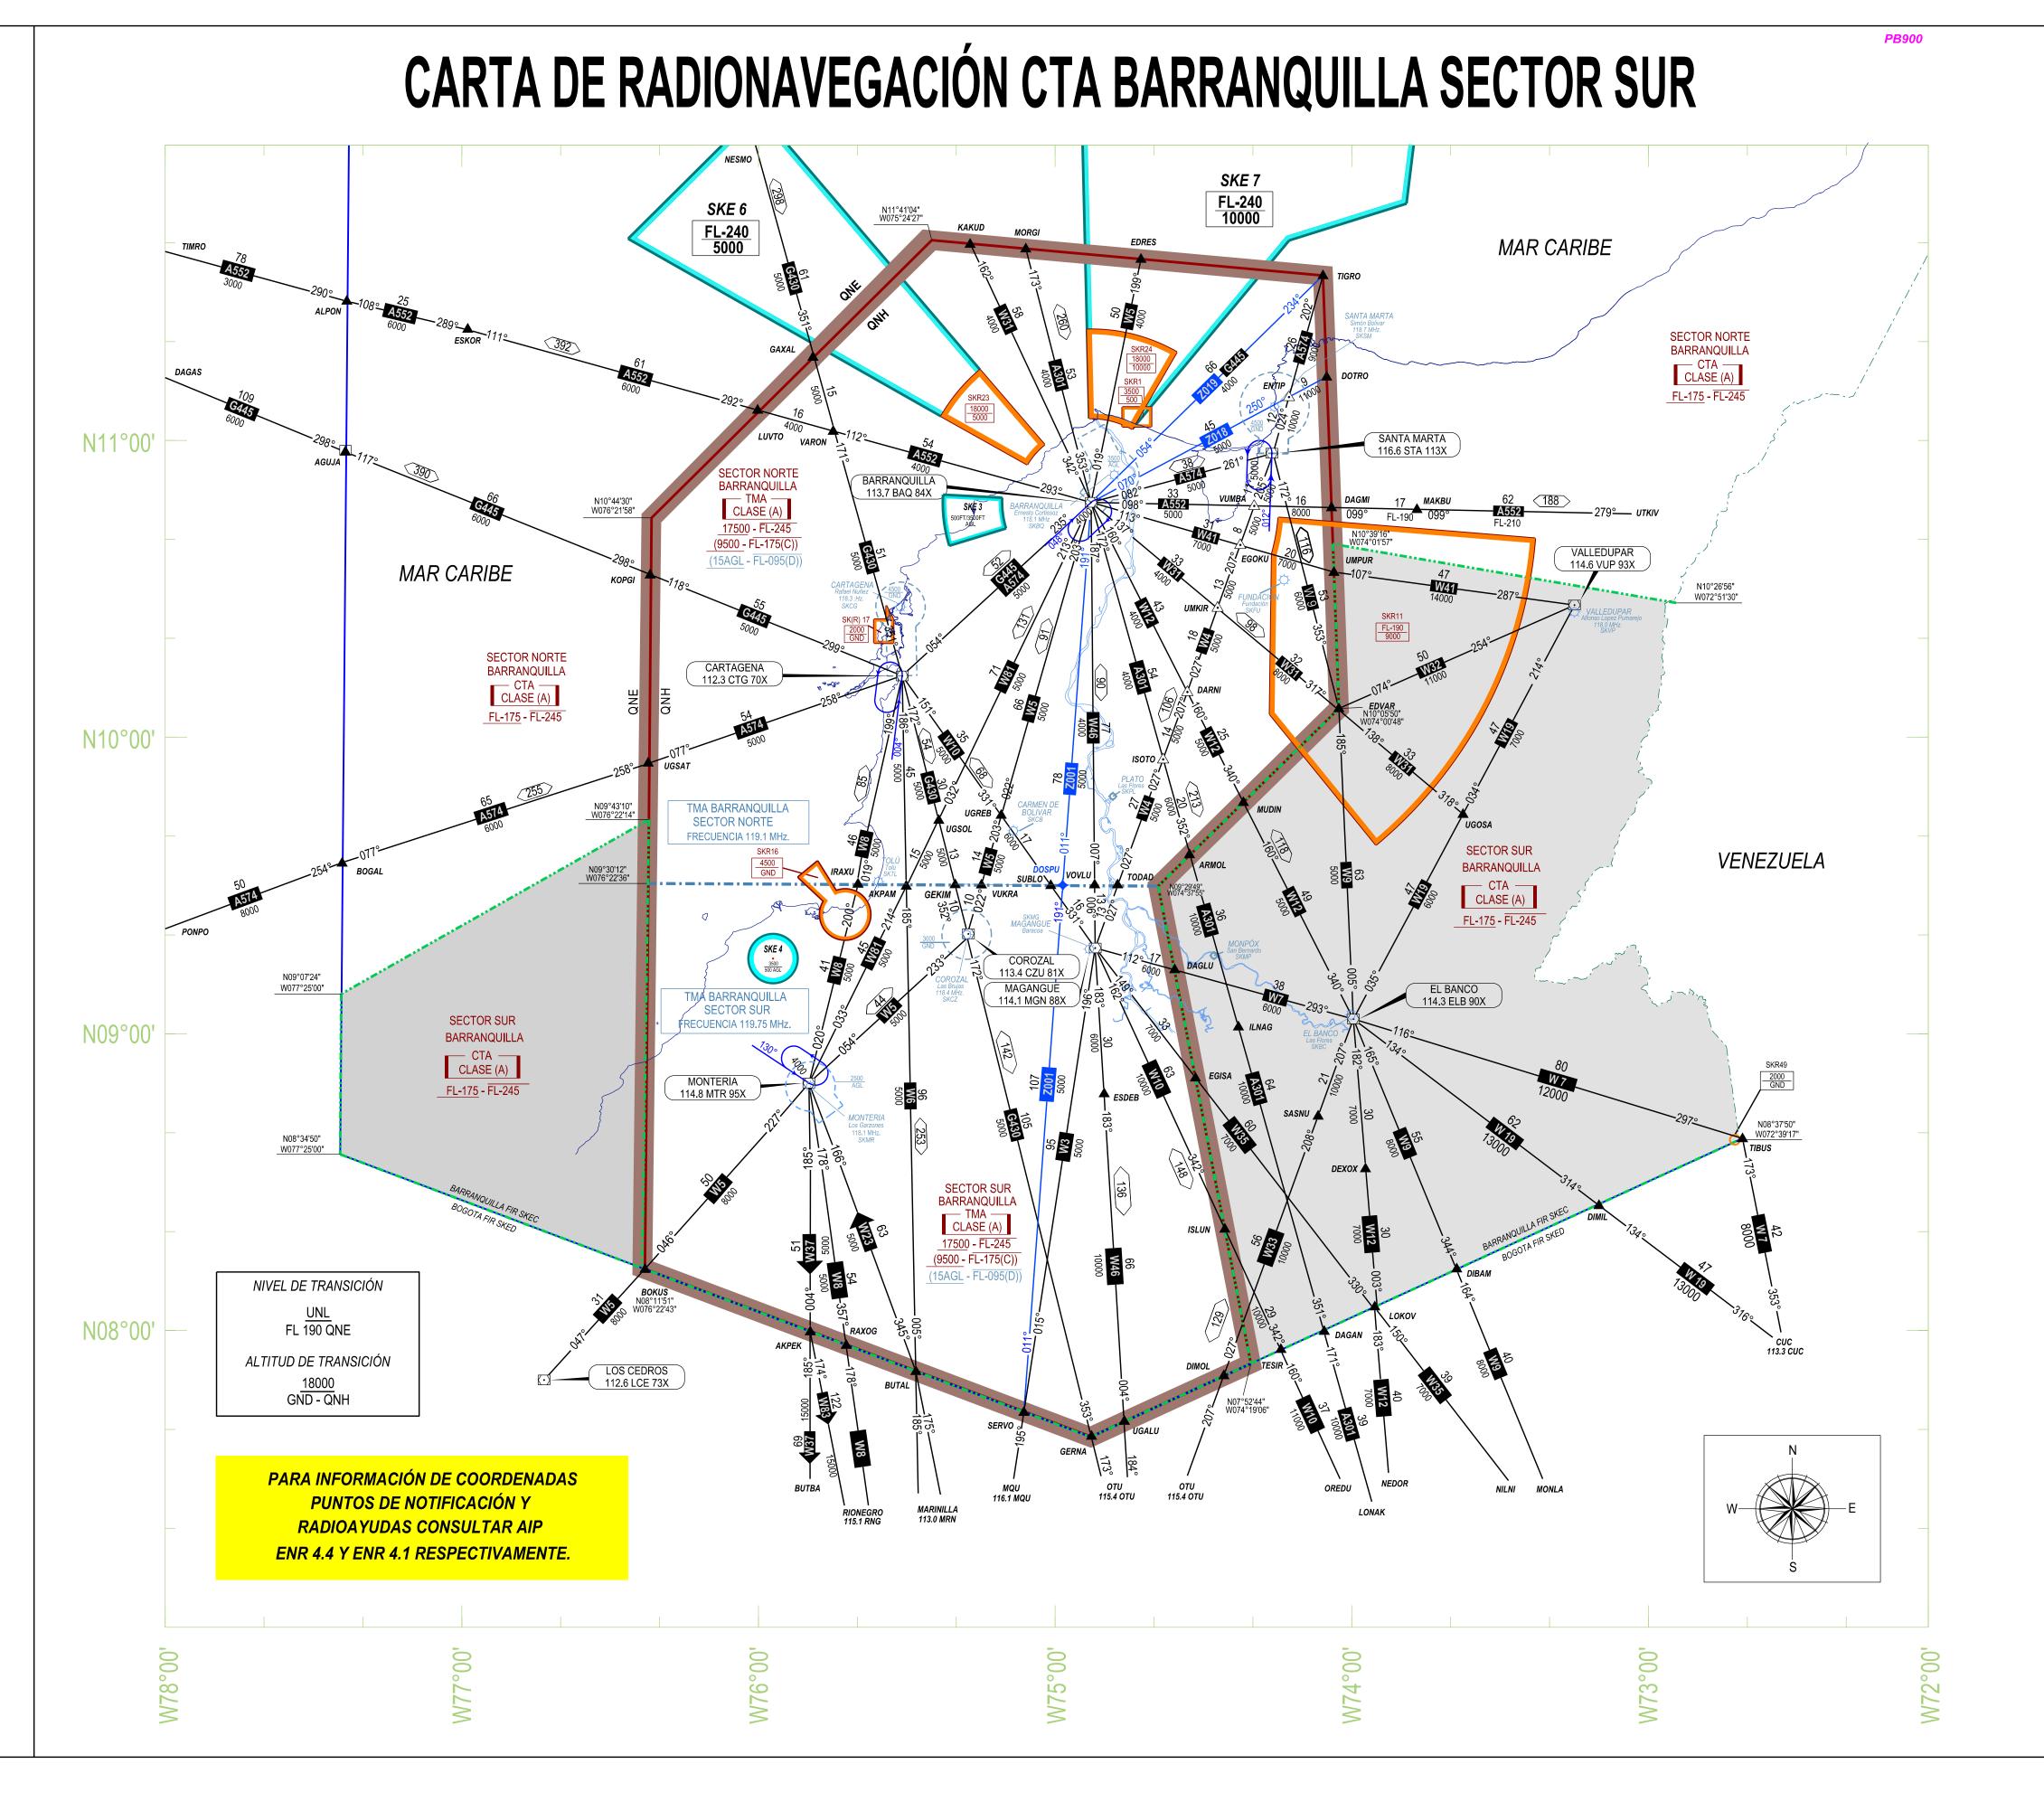

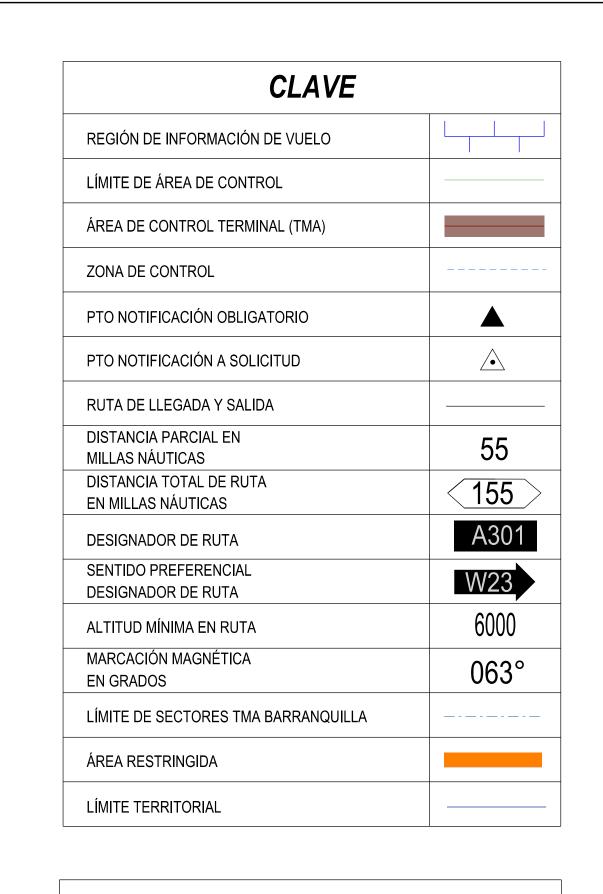

## CLASIFICACIÓN DEL ESPACIO AÉREO Y LÍMITES

NOMBRE ESPACIO	CLASE	LÍMITE
CTA BARRANQUILLA SECTOR NORTE	Α	FL245 17500
CTA BARRANQUILLA SECTOR SUR	A	FL245 17500

## PUNTOS DE NOTIFICACIÓN ATS / MET OBLIGATORIOS

FIX'S SIDOS

VOR/DME BARRANQUILLA

ESCALA

1' = 10 NM

0 10 20 30 40 50 60