



Lakshmi Easyfit Bush

Taper bushes provide a low cost, simple, quick method of fitting pulleys and couplings to a wide range of standard metric and imperial dimensioned shafts of general commercial tolerances and finish. The taper surfaces on the bush and mating hub are fixed together by high tensile screws, causing the split bush to be firmly contracted on to the shaft. The strong clamping force which can be achieved enables transmission of high torque without the problems. The design ensures quick, easy installation of couplings and pulleys onto shafts with simple positioning for alignment. Positive jacking –off of the bush during removal ensures quick disassembly without normal problems of seizure between shaft and pulley

Size 3525 – 5050 (5hole)

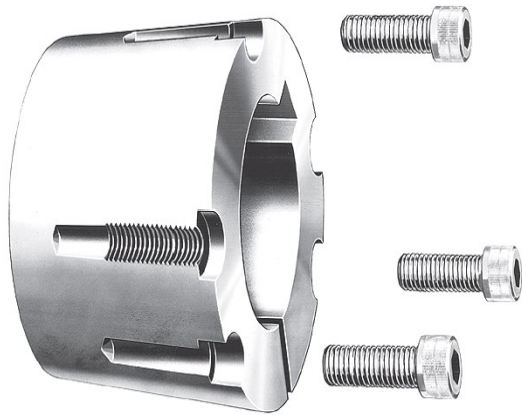

Size 1008 – 3030 (3hole)

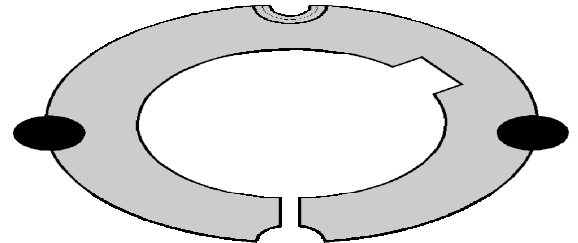

Optional Hole



Fixing Hole Removal Hole

To FIX

- 1 Ensure the mating surfaces are free from dirt, Insert the bush into the hub so that the fixing holes are matched.
- 2 Oil the screws and put them freely into the threaded holes of the hub as shown in the fig
- 3 Clean the shaft and fit the hub and bush to the shaft as one unit in the required position. Remember that the bush will hold the shaft first and then the hub will be drawn slightly on to the bush
- 4 Using a hexagon wrench, gradually tighten the screws alternately until tight
- 5 Hammer against the large end of the bush using a block to avoid damaging the bush. The screws can now be tightened more. Repeat this procedure until the correct wrench tightening torque is achieved from the table below. To get the best balance(if key is not used) position the keyways in the bush and hub diametrically opposite to each
- 6 If a key is to be fitted, locate it in the shaft keyway before fitting the bush. Fit a parallel key with top clearance be fitted. Taper or top fitting keys should not be used.
- 7 Drive for a short time, check the tightness of the screws
- 8 Fill all empty holes with grease to exclude dirt and prevent corrosion

Remove

- 1 Unfasten all screws and remove one or two screws, according to the number of removal holes (see fig)
- 2 Oil the screw and insert it or them into the removal hole and tighten the screws until the assembly is free. If the bush does not loosen immediately, lightly tap the hub. Remove the assembly from the shaft

❖ Keyways are British Standard Metric BS4235:Part 1:1972 DIN 6885 and confirm to ISO recommendations with the exception of those marked * which are shallower.

Lakshmi Easyfit Bush METRIC BORS AND KEYWAYS

Dia.	Keyway		Shallow Keyway Depth	EFB												
	Width	Depth		1008	1108	1210	1610	1615	2012	2517	3020	3030	3535	4040	4545	5050
9	3	1.4	—	009	009											
10	3	1.4	—	010	010											
11	4	1.8	—	011	011	11										
12	4	1.8	—	012	012	12										
14	5	2.3	—	014	014	14	14	0014	14							
15	5	2.3	—	015	015	15	15	015	15							
16	5	2.3	—	016	016	16	16	016	16	16						
18	6	2.8	—	018	018	18	18	018	18	18						
19	6	2.8	—	019	019	19	19	019	19	19						
20	6	2.8	—	020	020	20	20	020	20	20						
22	6	2.8	—	022	022	22	22	022	22	22						
24	8	3.3	1.3	024*	024	24	24	024	24	24						
25	8	3.3	1.3	025*	025	25	25	025	25	25	25					
28	8	3.3	1.3		028*	28	28	028	28	28	28					
30	8	3.3	—			30	30	030	30	30	30					
32	10	3.3	1.3			32*	32	032	32	32	32					
35	10	3.3	—				35	035	35	35	35	35	35			
38	10	3.3					38	038	38	38	38	38	38			
40	12	3.3	1.3				40*	040*	40	40	40	40	40	40		
42	12	3.3	2.2				042*	042*	42	42	42	42	42	42		
45	14	3.8	—						45	45	45	45	45	45		
48	14	3.8	—						48	48	48	48	48	48		
50	14	3.8	—					50*	50	50	50	50	50	50		
55	16	4.3	—						55	55	55	55	55	55	55	
60	18	4.4	—						60	60	60	60	60	60	60	
65	18	4.4	—							65	65	65	65	65	65	
70	20	4.9	—							70	70	70	70	70	70	70
75	20	4.9	—							75	75	75	75	75	75	75
80	22	5.4	—									80	80	80	80	80
85	22	5.4	—									85	85	85	85	85
90	25	5.4	—									90*	90	90	90	90
95	25	5.4	—										95	95	95	95
100	28	6.4	4.4											100*	100	100
105	28	6.4	—												105	105
110	28	6.4	—												110	110
115	32	7.4	5.4													115
120	32	7.4	—													120
125	32	7.4	—													125
TORQUE NM				5	5	17	17	17	27	42	81	81	100	160	175	250
NO.OF SCREWS				2	2	2	2	2	2	2	2	2	3	3	3	3
SCREWS(BSW)				1/4"	1/4"	3/8"	3/8"	3/8"	7/16"	1/2"	5/8"	5/8"	1/2"	5/8"	3/4"	7/8"

