


## 12.8.1 Encrypted pools

For more information about how to open the Create Pool window, see Chapter 6, “Storage pools” on page 191. After encryption is enabled, any new pool is created by default as encrypted, as shown in Figure 12-69.

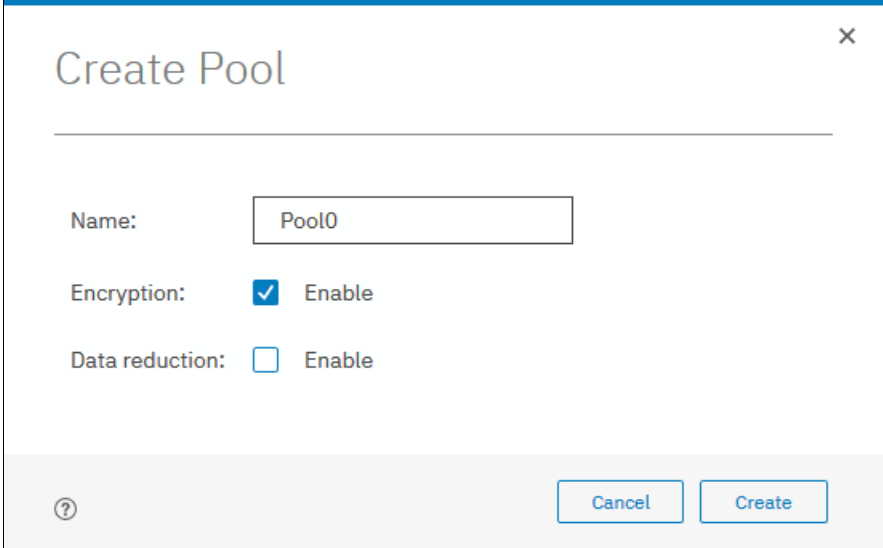

The 'Create Pool' window is a light gray dialog box with a title bar and a close button (X) in the top right corner. It contains three main sections: 'Name:' with a text input field containing 'Pool0'; 'Encryption:' with a checked checkbox and the label 'Enable'; and 'Data reduction:' with an unchecked checkbox and the label 'Enable'. At the bottom right, there are two buttons: 'Cancel' and 'Create'. A help icon (?) is located at the bottom left.

Figure 12-69 Create Pool window basic

You can click **Create** to create an encrypted pool. All storage that is added to this pool is encrypted.

You can customize the Pools view in the management GUI to show pool encryption status. Click **Pools** → **Pools**, and then, click **Actions** → **Customize Columns** → **Encryption**, as shown in Figure 12-70.

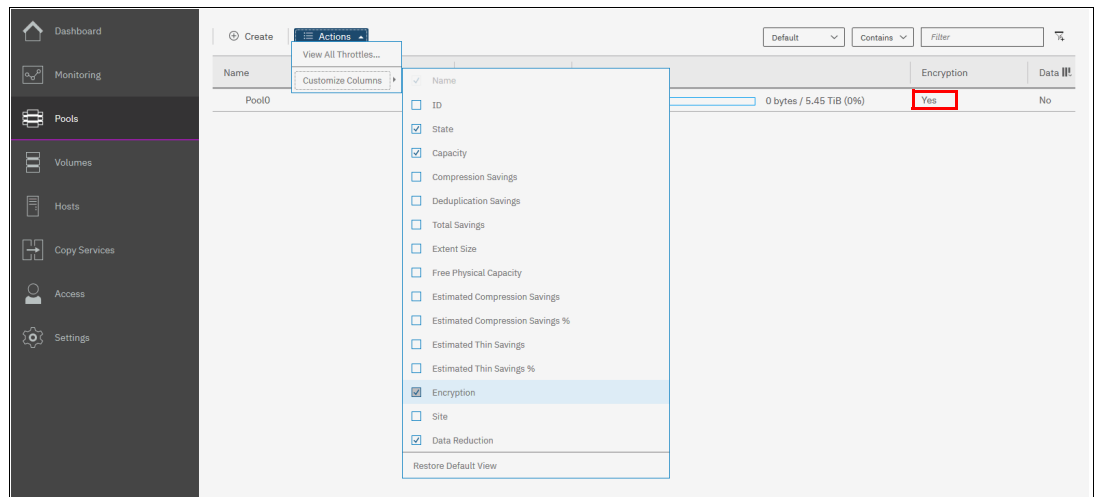


Figure 12-70 Pool encryption state

If you create an unencrypted pool but you add only encrypted arrays or self-encrypting MDisks to the pool, the pool is reported as encrypted because all extents in the pool are encrypted. The pool reverts to the unencrypted state if you add an unencrypted array or MDisk.