

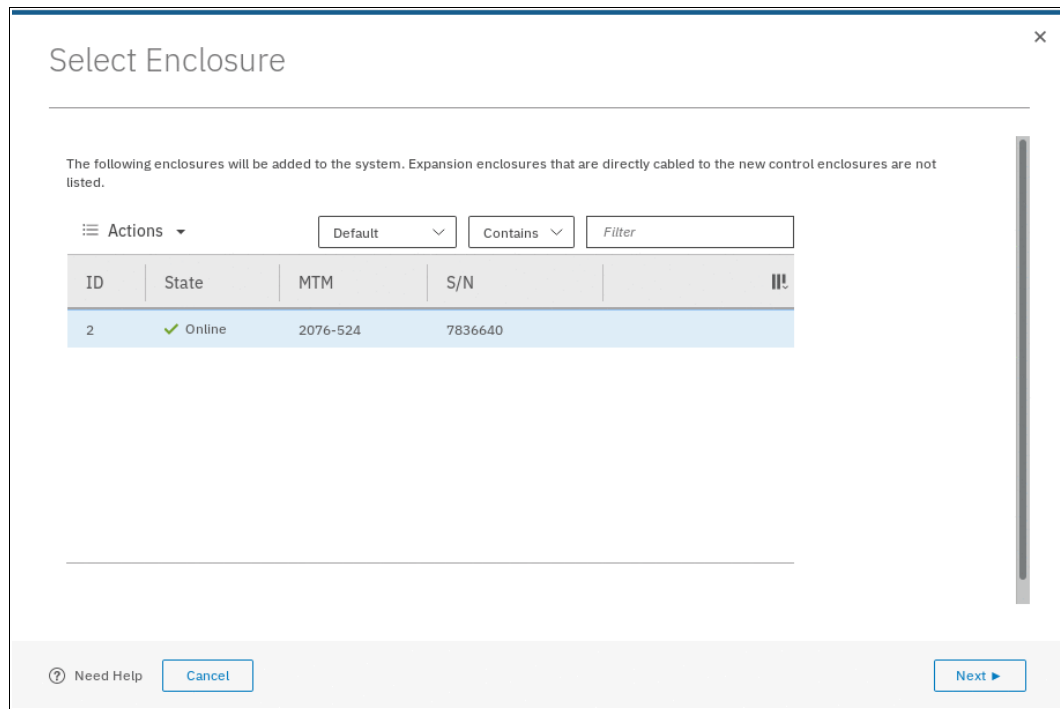


Figure 4-23 Select Enclosure window: available control enclosures

- Review the summary in the next window and click **Finish** to add the control enclosure and all its expansions to the system.
- After the control enclosure is successfully added to the system, a success message is displayed. Click **Close** to return to the **System Overview** view, as shown in Figure 4-24. The view displays two control enclosures configured on the system.

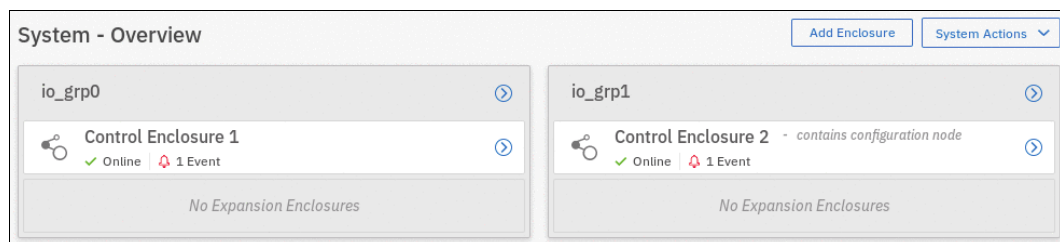


Figure 4-24 System Overview view with two control enclosures visible

4.4 Configuring user authentication

There are two methods of user authentication to control access to the GUI and to the CLI:

- **Local authentication** is performed within the Storwize V7000 system. Local GUI authentication is done with user name and password. Local CLI authentication is done either with an SSH public key or a user name and password.
- **Remote authentication** allows users to authenticate to the system using credentials stored on an external authentication service. This feature allows you to use user credentials and user groups defined on the remote service to simplify user management and access, enforce password policies more efficiently, and separate user management from storage management.