

The content of the welcome message is helpful when you need to notify users about some important information about the system, such as security warnings or a location description. To define and enable the welcome message by using the GUI, edit the text area with the message content and click **Save** (see Figure 5-80).

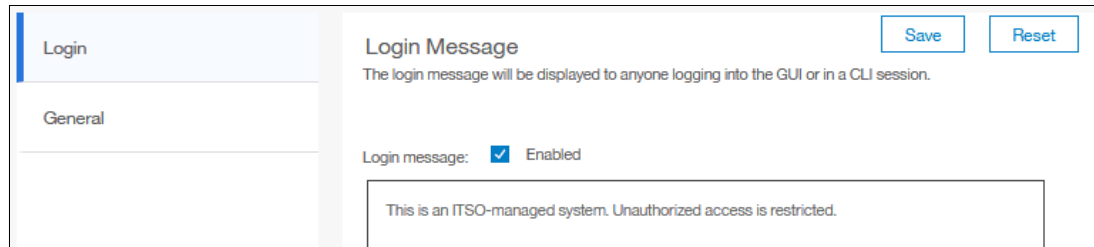


Figure 5-80 Enabling login message

The resulting log-in screen is shown in Figure 5-81.

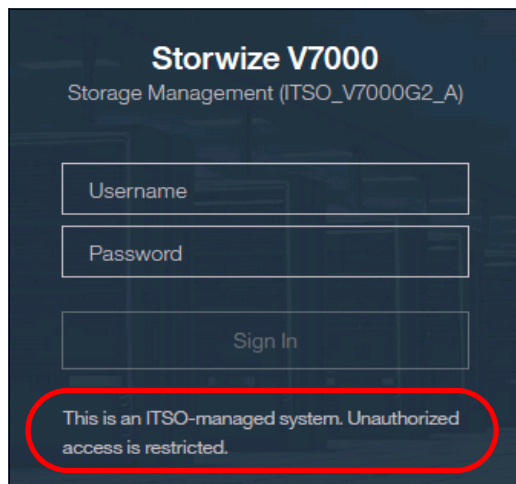


Figure 5-81 Welcome message in GUI

The banner message also appears in the CLI login prompt window, as shown in Figure 5-82.

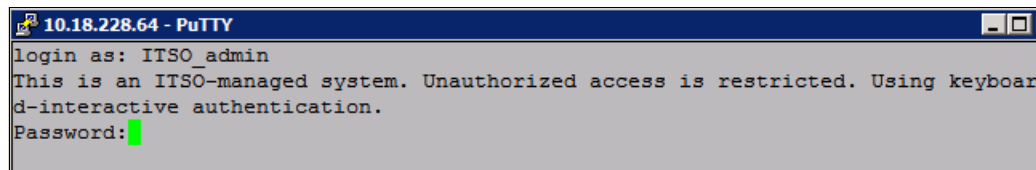


Figure 5-82 Banner message in CLI