### ARM Instruction Set Architecture (I)

Lecture 5


Yeongpil Cho

Hanynag University


# **Topics**

- Structure of ARM Assembly Code
- Assembler Directives

# History

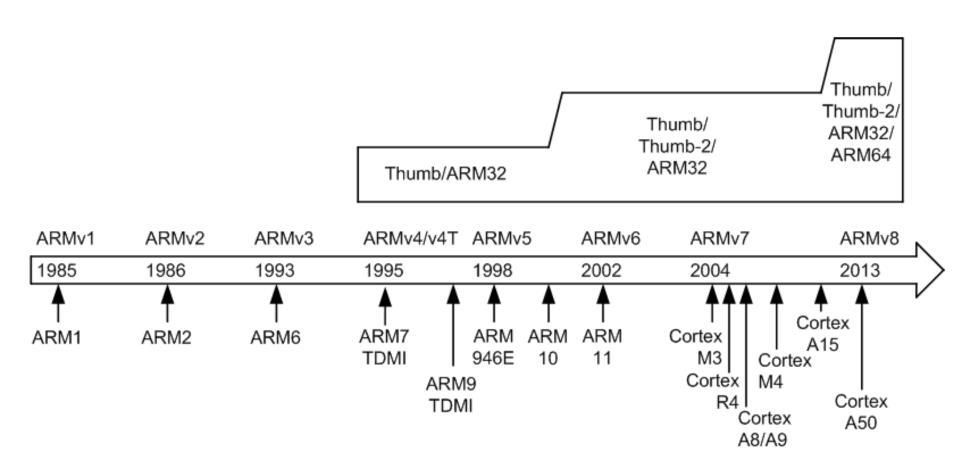

# From C to Assembly

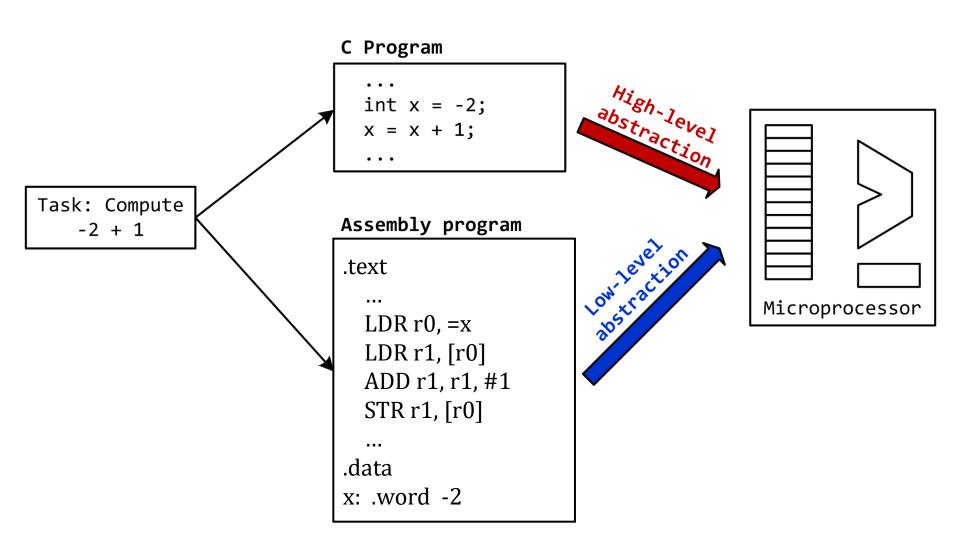

### Two Pass Assembly

- Most assemblers read the source file twice.
- First Pass: Build a symbol table
  - Calculate and record values (to be used in the second pass) for each symbol.
    - Symbols: global variables, functions, labels
    - Values: addresses or data
  - Some symbols may not have a known value.
    - They are unresolved.
    - The linker will have to fix them.
- Second Pass: Generate the object file
  - Output the code in an object file.
  - Use the symbol table to provide values when needed.
  - Add information to the object file to tell the linker about any symbols that are unresolved.

### Example Code

```
.data
         .asciz "Hello World\n" @ Define a null-terminated string
         .text
         .globl main
         /* This is the beginning of the main() function.
            It will print "Hello World" and then return.
         */
9 main: stmfd
                                 @ push return address onto stack
                  sp!, {lr}
         ldr
                                 @ load pointer to format string
                  r0, =msq
10
         bl
                                 @ printf("Hello World\n");
                 printf
11
                                 @ move return code into r0
                 r0, #0
         mov
12
         ldmfd
                  sp!,{lr}
                                 @ pop return address from stack
13
                 pc, lr
                                 @ return from main
14
         mov
```

# **Assembly Listing**

```
ARM GAS
           hello.S
                                       page 1
  Input
   Line Address
                     Code
                                  .data
            0000 48656C6C msg:
                                  .asciz "Hello World\n" @ Define null-terminated string
                 6F20576F
                 726C640A
                 0.0
10
                                  .text
11
                                  .globl main
12
            0000 00402DE9 main:
                                 stmfd sp!, {lr} @ push return address onto stack
13
            0004 0C009FE5
                                                    @ load pointer to format string
                                  ldr
                                        r0, =msg
14
            0008 FEFFFFEB
                                  bl
                                         printf
                                                    @ printf("Hello World\n");
15
            000c 0000A0E3
                                         r0, #0
                                                    @ move return code into r0
                                  mov
16
     10
            0010 0040BDE8
                                  ldmfd sp!, {lr}
                                                    @ pop return address from stack
17
            0014 0EF0A0E1
                                                    @ return from main
      11
                                  mov
                                         pc, lr
18
```

Symbols	Values
main	0 (in .text)
msg	0 (in .data)
printf	unresolved

### Syntax of Assembly

#### Basic syntax

```
label:
instruction[;]
directive[;]
macro_invocation[;]
```

- Label statements end after the ":"
- The other statements end at the first newline or ";"
- Directives start with a period "."

#### Comments

```
// single-line comment
@ single-line comment in AArch32 state only
/* multi-line
   comment */
```

# Syntax of Assembly

```
// Instruction on it's own line:
 add r0, r1, r2
  // Label and directive:
lab: .word 42
 // Multiple labels on one line:
lab1: lab2:
  /* Multiple instructions, directives or macro-invocations
    must be separated by ';' */
  add r0, r1, r2; bx lr
  // Multi-line comments can be used anywhere whitespace can:
  add /*dst*/r0, /*lhs*/r1, /*rhs*/r2
```

- Expression can be used as instruction operands or directive argument.
- Expressions consist of one or more constants or symbol references, combined using operators.
- Assembler evaluates all expressions.

#### Constants

- Decimal Integer
- Hexadecimal integer, prefixed with 0x
- Octal integer, prefixed with 0
- Binary integer, prefixed with 0b
- Negative numbers can be represented using the unary operator, -

#### Symbol References

- Symbols do not need to be defined in the same assembly language source file, to be referenced in expressions.
- The period symbol (.) is a special symbol that can be used to reference the current location in the output file.

- Operators
  - Unary Operators: +, -, ~
  - Binary Operators: +, -, \*, /, %
  - Binary Logical Operators: &&, ||
  - Binary Bitwise Operators: &. |, ^, >>, <<
  - Binary Comparison Operators: ==, !=, <, >, <=, >=

```
// Using an absolute expression in an instruction operand:
 orr r0, r0, #1<<23
 // Using an expression in the memory operand of an LDR instruction to
 // reference an offset from a symbol.
func:
 ldr r0, #data+4 // Will load 2 into r0
 bx 1r
data:
  .word 1
 .word 2
 // Creating initialized data that contains the distance between two
 // labels:
size:
  .word end - start
start:
  .word 123
 .word 42
  .word 4523534
end:
```

# **Assembly Directives**

- Section
- String definition
- Data definition
- Alignment
- Space-filling
- Macro
- Org
- Conditional Assembly
- Symbol Binding
- Instruction Set Selection

#### **Section Directives**

- The section directives instruct the assembler to change the ELF section that code and data are emitted into.
- **.section** name [, "flags" [, %type [, entry\_size] [, group\_name [, linkage]] [, link\_order\_symbol] [, unique, unique\_id] ]]
- text
- .data
- rodata
- .bss
  - **.section** directive switches the current target section to the one described by its arguments.
  - The rest of the directives (.text, .data, .rodata, .bss) switch to one of the built-in sections.

#### **Section Directives**

- Examples
  - Splitting code and data into the built-in .text and .data sections

```
.text
get_value:
   movw r0, #:lower16:value
   movt r0, #:upper16:value
   ldr r0, [r0]
   bx lr

   .data
value:
   .word 42
```

### String definition directives

- Allocates one or more bytes of memory in the current section, and defines the initial contents of the memory from a string literal.
- .ascii "string"
  - ascii does not append a null byte to the end of the string.
- .asciz "string"
- .string "string"
  - asciz and .string append a null byte to the end of the string.

# String definition directives

```
.text
hello:
   adr r0, str_hello
   b printf
str_hello:
   .asciz "Hello, world!\n"
```

#### Data definition directives

• These directives allocate memory in the current section, and define the initial contents of that memory.

- .byte expr[, expr]...
- .hword expr[, expr]...
- word expr[, expr]...
- .quad expr[, expr]...
- .octa expr[, expr]...
  - If multiple arguments are specified, multiple memory locations of the specified size are allocated and initialized to the provided values in order.

Directive	Size in bytes
.byte	1
.hword	2
.word	4
.quad	8
.octa	16

#### Data definition directives


```
// 8-bit memory location, initialized to 42:
.byte 42
// 32-bit memory location, initialized to 15532:
.word 15532
// 32-bit memory location, initallized to the address of an externally defined symbol:
.word extern symbol
// 16-bit memory location, initialized to the difference between the 'start' and
// 'end' labels. They must both be defined in this assembly file, and must be
// in the same section as each other, but not necessarily the same section as
// this directive:
.hword end - start
// 32-bit memory location, containing the offset between the current location in the file
   and an externally defined sym
.word extern symbol - .
```

### Alignment Directives

- The alignment directives align the current location in the file to a specified boundary.
- .balign num\_bytes [, fill\_value]
- .p2align exponent [, fill\_value]
- align exponent [, fill\_value]
  - num\_bytes
    - This parameter specifies the number of bytes that must be aligned to.
    - The number must be a power of 2.
  - exponent
    - This parameter specifies the alignment boundary as an exponent.
    - The actual alignment boundary is 2<sup>exponent</sup>
  - fill\_value
    - The value to fill any inserted padding bytes with. This value is optional.

### Alignment Directives

```
get_val:
  ldr r0, value
  adds r0, #1
  bx lr
  // The above code is 6 bytes in size.
  // Therefore the data defined by the .word directive below must be manually aligned
  // to a 4-byte boundary to be able to use the LDR instruction.
  .p2align 2
value:
  .word 42
```

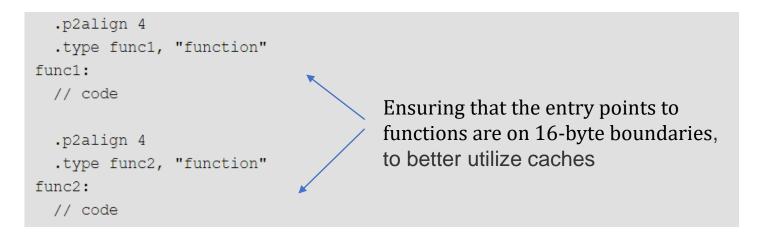

### Space-filling Directives

- .space count [, value]
  - The **.space** directive emits count bytes of data, each of which has value value.
- .fill count [, size [, value]]
  - The **.fill** directive emits count data values, each with length size bytes and value value.

#### **Macro Directives**

#### Syntax

```
.macro macro_name [, parameter_name]...
    // ...
    [.exitm]
.endm
```

- macro\_name
  - The name of the macro.
- parameter\_name
  - Inside the body of a macro, the parameters can be referred to by their name, prefixed with \. When the macro is instantiated, parameter references will be expanded to the value of the argument.

Parameter qualifier	Meaning
<name>:req</name>	This marks the parameter as required, it is an error to instantiate the macro with a blank value for this parameter.
<name>:varag</name>	This parameter consumes all remaining arguments in the instantiation. If used, this must be the last parameter.
<name>=<value></value></name>	Sets the default value for the parameter. If the argument in the instantiation is not provided or left blank, then the default value will be used.

#### **Macro Directives**

- Operation
  - The **.macro** directive defines a new macro with name *macro\_name*. Once a macro is defined, it can be instantiated by using it like an instruction mnemonic:

```
macro_name argument[, argument]...
```

#### Examples

```
.macro pascal_string, str
.byte 2f - 1f

1:

ascii "\str"

2:
.endm

.data
hello:
pascal_string "Hello"
goodbye:
pascal_string "Goodbye"
```

pascal-style strings are prefixed by a length byte, and have no null terminator

### Org Directives

- The **.org** directive advances the location counter in the current section to new-location.
  - the location counter moves only forward, not backward.
- .org new\_location [, fill\_value]
  - new\_location
    - An expression which is evaluates to a location in the current section..
  - fill\_value
    - This is an optional 1-byte value. Default value is zero

### Org Directives

```
// Macro to create one AArch64 exception vector table entry. Each entry
 // must be 128 bytes in length. If the code is shorter than that, padding
 // will be inserted. If the code is longer than that, the .org directive
  // will report an error, as this would require the location counter to move
  // backwards.
  .macro exc tab entry, num
1:
 mov x0, #\num
  b unhandled exception
  .org 1b + 0x80
  .endm
                             b: backward
                             f: forward
  // Each of these macro instantiations emits 128 bytes of code and padding.
  .section vectors, "ax"
  exc tab entry 0
  exc tab entry 1
  // More table entries...
```

### **Conditional Assembly Directives**

- These directives allow you to conditionally assemble sequences of instructions and directives.
- Syntax

```
.if[modifier] expression
    // ...
[.elseif expression
    // ...]
[.else
    // ...]
.endif
```

- You should note that all directives are evaluated by assembler!
  - Condition will not be checked at run-time!
- Modifiers decide how to check conditions

.if condition modifier	Meaning
.if expr	Assembles the following code if expr evaluates to
	non zero.
.ifne expr	Assembles the following code if expr evaluates to
	non zero.
.ifeq expr	Assembles the following code if expr evaluates to
	zero.

### Conditional Assembly Directives

```
// A macro to load an immediate value into a register. This expands to one or
 // two instructions, depending on the value of the immediate operand.
  .macro get imm, reg, imm
    .if \imm >= 0x10000
     movw \req, #\imm & 0xffff
     movt \req, #\imm >> 16
    .else
     movw \reg, #\imm
    .endif
  .endm
 // The first of these macro invocations expands to one movw instruction,
 // the second expands to a movw and a movt instruction.
get constants:
 get imm r0, 42
 get imm r1, 0x12345678
 bx lr
```

# Symbol Binding Directives

- These directives modify the ELF binding of one or more symbols.
- .global symbol[, symbol]...
  - These symbols are visible to all object files being linked, so a definition in one object file can satisfy a reference in another.
- .local symbol[, symbol]...
  - These symbols are not visible outside the object file they are defined or referenced in, so multiple object files can use the same symbol names without interfering with each other.
- .weak symbol[, symbol]...
  - These symbols behave similarly to global symbols, with these differences:
    - If a reference to a symbol with weak binding is not satisfied (no definition of the symbol is found), this is not an error.
    - If multiple definitions of a weak symbol are present, this is not an error.
       If a definition of the symbol with strong binding is present, that definition satisfies all references to the symbol, otherwise one of the weak references is chosen.

# Symbol Binding Directives

#### Operation

- The symbol binding directive can be at any point in the assembly file, before or after any references or definitions of the symbol.
- If the binding of a symbol is not specified using one of these directives, the default binding is:
  - If a symbol is not defined in the assembly file, it has global visibility by default.
  - If a symbol is defined in the assembly file, it has local visibility by default.

# Symbol Binding Directives

```
// This function has global binding, so can be referenced from other object
  // files. The symbol 'value' defaults to local binding, so other object
  // files can use the symbol name 'value' without interfering with this
  // definition and reference.
  .global get val
get val:
  ldr r0, value
  bx lr
value:
  .word 0x12345678
  // The symbol 'printf' is not defined in this file, so defaults to global
  // binding, so the linker searches other object files and libraries to
  // find a definition of it.
  bl printf
  // The debug trace symbol is a weak reference. If a definition of it is
  // found by the linker, this call is relocated to point to it. If a
  // definition is not found (e.g. in a release build, which does not include
  // the debug code), the linker points the bl instruction at the next
  // instruction, so it has no effect.
  .weak debug trace
  bl debug trace
```

#### Instruction Set Selection Directives

#### .arm

■ The .arm directive instructs the assembler to interpret subsequent instructions as A32 instructions.

#### • .thumb

 The .thumb directive instructs the assembler to interpret subsequent instructions as T32 instructions, using the UAL syntax.

#### .thumb\_func

 This directive specifies that the following symbol is the name of a Thumb encoded function.

#### .syntax [unified | divided]

- This directive sets the Instruction Set Syntax.
- divided (default for compatibility with legacy)
  - ARM and Thumb instructions are used separately
- unified
  - Enables UAL (Unified Assembly Language) syntax
  - Necessary for Thumb2 instructions