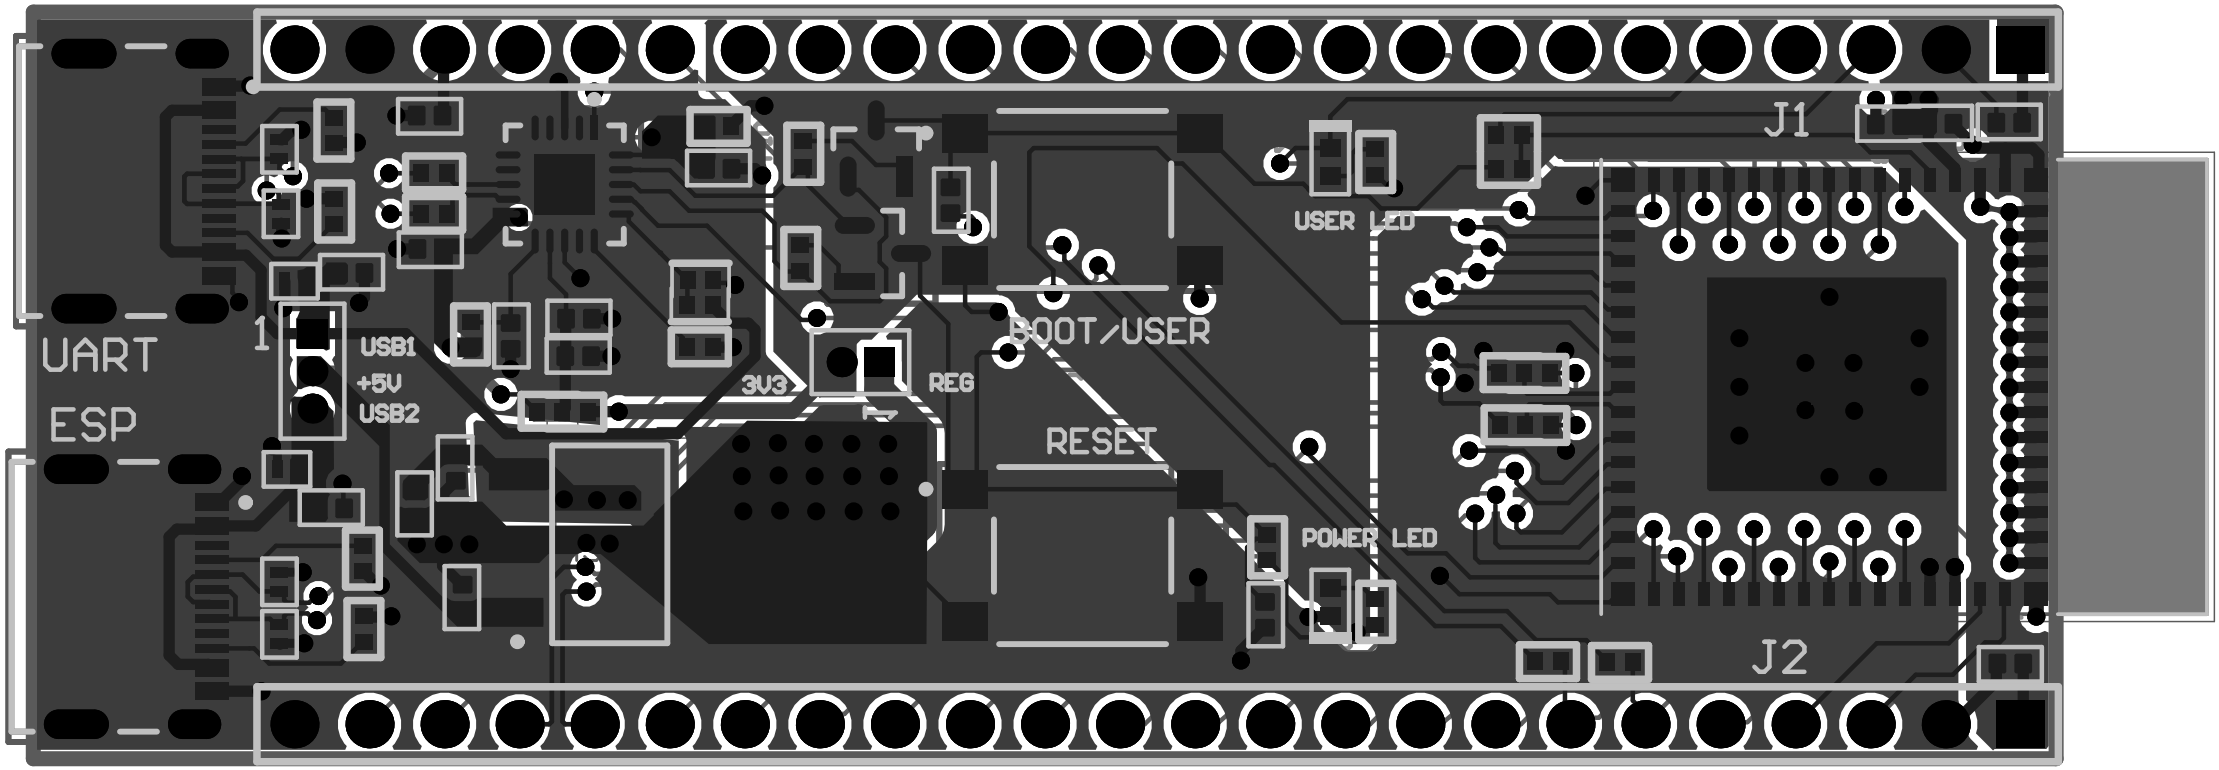
UART
ESP
USB1
+5V
USB2
3V3
REG
BOOT/USER
RESET
USER LED
POWER LED
J1
J2