

HARNESS LAYOUTS


A/C & A/BAG HARNESS	HL-17
DOOR HARNESS	HL-12
FRONT HARNESS	HL-4
INSTRUMENT HARNESS.....	HL-10
MAIN HARNESS	HL-2
REAR HARNESS	HL-14
T/M HARNESS	HL-11



MAIN HARNESS

E4B4D0FD

MAIN HARNESS (1)

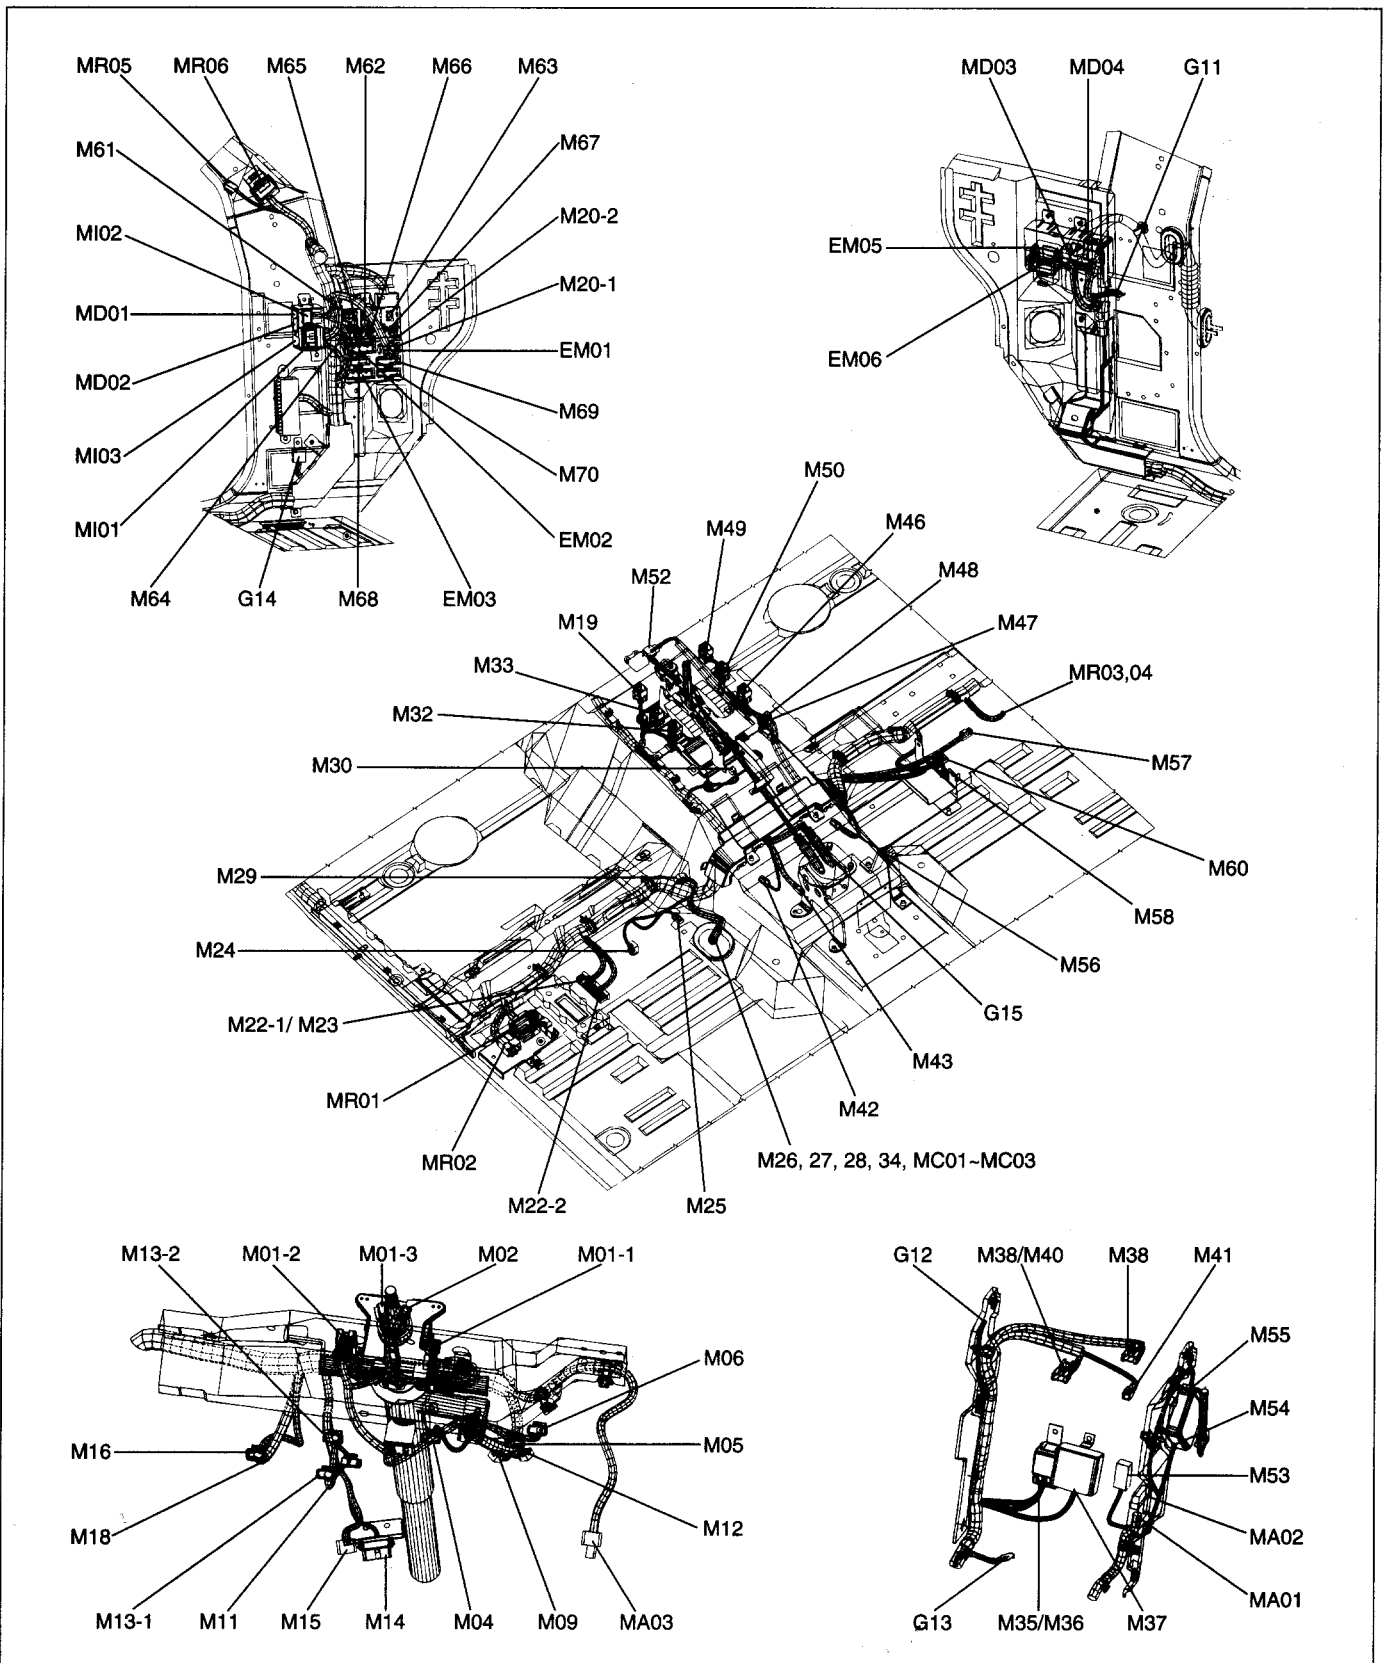

MAIN HARNESS (2)

M01-1	Multifunction switch	M61	Defogger relay
M01-2	Multifunction switch	M62	Flasher unit
M01-3	Multifunction switch	M63	Power window relay
M02	Driver air bag	M64	Power door lock relay
M04	Humidity sensor	M65	Power door unlock relay
M05	Ignition switch	M66	Rear fog lamp relay
M06	Ignition key ill & Door warning switch	M68	Joint connector
M07	Accelerator position sensor (2.9TCI)	M69	Joint connector
M08	Immobilizer control module (2.9TCI)	M70	Joint connector
M09	Joint connector	M76	Cruise clutch pedal position switch (Gasoline)
M10	Condenser	MA01	Connection with A/C harness
M11	Stop lamp switch	MA02	Connection with A/C harness
M12	Joint connector	MA03	Connection with AIR BAG harness
M13-1	ETACM	MC01	Connection with T/M harness (M/T)
M13-2	ETACM	MC02	Connection with T/M harness (A/T)
M14	Data link connector	MC03	Connection with T/M harness (A/T)
M15	Multipurpose check connector	MD01	Connection with LEFT FRONT DOOR harness
M16	Clutch pedal position switch	MD02	Connection with LEFT FRONT DOOR harness
M18	DRL control module	MD03	Connection with RIGHT FRONT harness
M20-1	TCM	MD04	Connection with RIGHT FRONT harness
M20-2	TCM	EM01	Connection with FRONT harness
M22-1	TOD control module	EM02	Connection with FRONT harness
M22-2	TOD control module	EM03	Connection with FRONT harness
M23	EST control module	EM05	Connection with FRONT harness
M24	Left seat warmer	EM06	Connection with FRONT harness
M25	Seat belt switch	MI01	Connection with INSTRUMENT harness
M26	T/F shift motor (TOD)	MI02	Connection with INSTRUMENT harness
M27	T/F speed sensor (TOD)	MI03	Connection with INSTRUMENT harness
M28	7 way shift motor (EST)	MM01	Connection with POWER SEAT harness
M29	Joint connector	MR01	Connection with LEFT REAR harness
M30	O/D switch	MR02	Connection with LEFT REAR harness
M31	Joint connector	MR03	Connection with RIGHT REAR harness
M33	Rear wiper & washer switch	MR05	Connection with ROOF harness
M34	3 way speed sensor (EST)	MR06	Connection with ROOF harness
M35	Chime bell	G11	Ground
M40	Audio	G12	Ground
M42	Neutral relay	G13	Ground
M43	Parking brake switch	G14	Ground
M46	Front power outlet	G15	Ground
M47	TOD switch	Z03	Diode (Diesel)
M48	EST switch		
M49	Left seat warmer switch		
M50	Right seat warmer switch		
M52	G-sensor (ABS)		
M53	Cigarette lighter		
M54	Keyless receiver		
M55	Immobilizer control module (Except 2.9TCI)		
M56	Hazard relay		
M57	Right seat warmer		


POWER SEAT HARNESS

M71	Power seat switch
M72	Slide adjust motor
M73	Reclining adjust motor
M74	Front height adjust motor
M75	Rear height adjust motor
MM01	Connection with MAIN harness

FRONT HARNESS

EB3E1EC9



FRONT HARNESS (1)

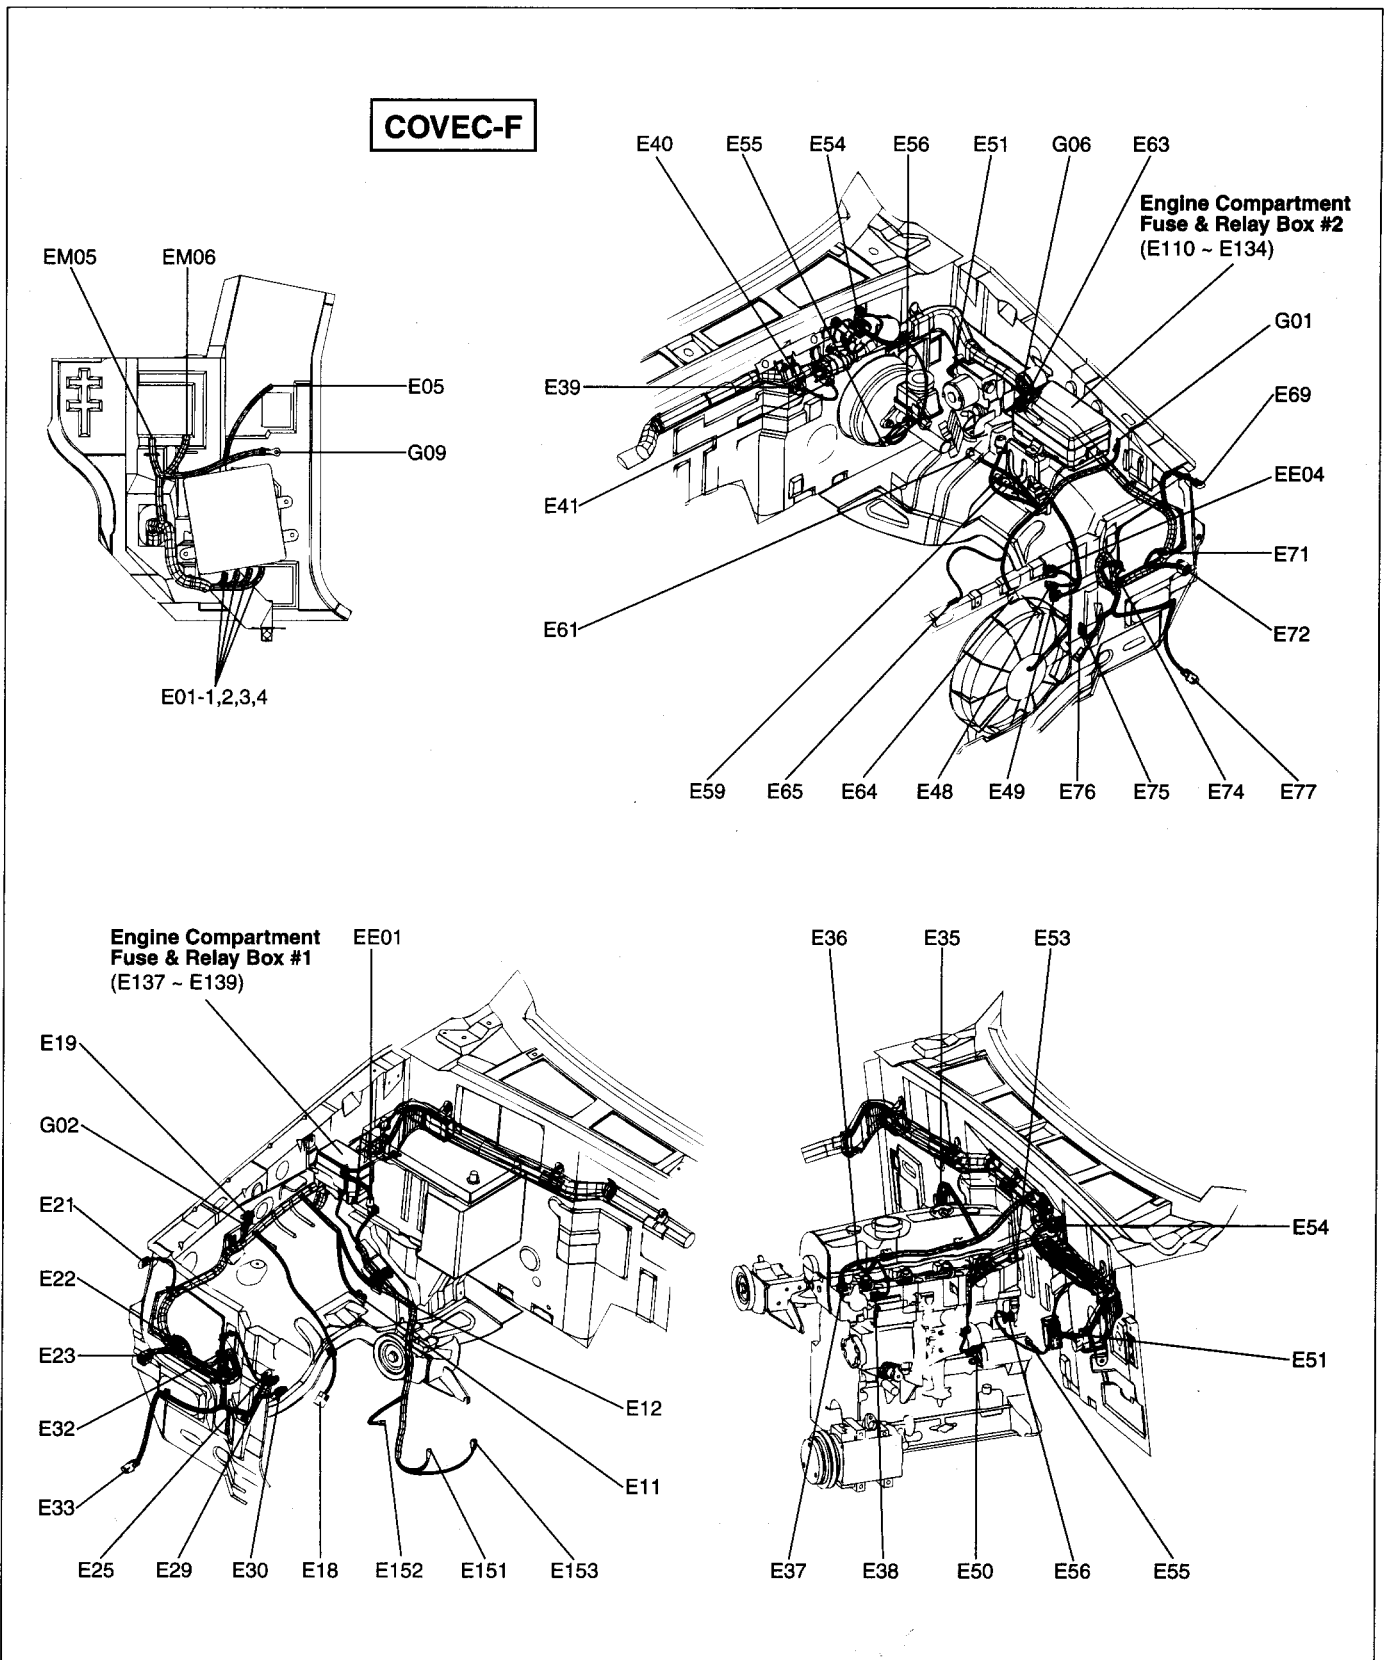



E01-1	ECM	E76	Ambient sensor (Auto A/C)
E01-2	ECM	E77	Left front fog lamp
E01-3	ECM	E110	Condenser fan relay #1
E01-4	ECM	E111	Condenser fan relay #2
E05	Fuel heater control module	E113	Engine control relay
E06	DTC	E115	Burglar alarm relay
E07	Front washer motor	E116	TCl fan relay
E08	Rear washer motor	E117	Tail lamp relay
E10	Right side repeater lamp	E118	Head lamp relay (LOW)
E11	CADS solenoid #1 (EST)	E119	Head lamp relay (HIGH)
E12	CADS solenoid #2 (EST)	E120	Pre-excitation resistor
E18	Right front wheel sensor (ABS)	E121	A/C compressor relay
E19	Hood switch	E123	Power outlet relay
E21	Right front turn signal lamp	E124	Start relay
E22	Right head lamp leveling actuator	E125	EBD relay
E23	Right head lamp	E126	ABS relay
E25	Receiver drier	E127	Front wiper relay
E29	Condenser fan motor	E130	Joint connector
E30	Radiator fan motor	E131	Joint connector
E32	Righr horn (LOW)	E132	Joint connector
E33	Right front fog lamp	E133	Joint connector
E35	BPS & ATS	E134	Joint connector
E36	Glow plug	E135	Joint connector
E37	Engine coolant temperature sensor	E137	Horn relay
E38	Engine coolant temperature switch	E138	Front fog lamp relay
E39	EGR solenoid #1	E139	Glow relay
E40	EGR solenoid #2	EE01	Connection with GENERATOR harness
E48	Timing position sensor	EE04	Connection with INJECTION PUMP harness
E49	NPS & FCV	EM01	Connection with MAIN harness
E50	Start motor solenoid	EM02	Connection with MAIN harness
E51	ABS control module	EM03	Connection with MAIN harness
E53	TCl fan motor	EM05	Connection with MAIN harness
E54	Front wiper motor	EM06	Connection with MAIN harness
E55	Vacuum switch	G01	Ground
E56	Brake fluid level switch	G02	Ground
E57	Left side repeater lamp	G04	Ground
E59	Water level switch	G06	Ground
E60	Heater & sensor		
E61	Accelerator position sensor		GENERATOR HARNESS
E63	Siren		
E64	Left front wheel sensor (ABS)	E150	Main fuse & relay box
E65	A/C compressor	E151	Generator (B+)
E69	Left front turn signal lamp	E152	Generator (L,S)
E71	Left head lamp leveling actuator	E153	Oil pressure switch
E72	Left head lamp	EE01	Connection with FRONT harness
E74	Left horn (Hi)		

FRONT HARNESS (3)

2.9 TCI

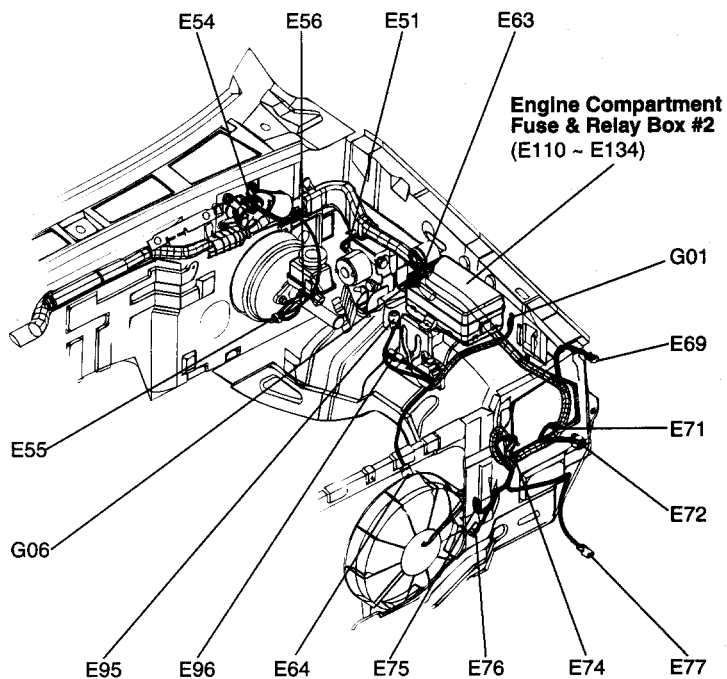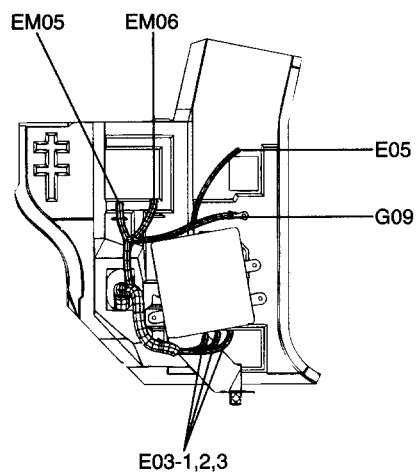

Engine Compartment
Fuse & Relay Box #1
(E137 ~ E139)




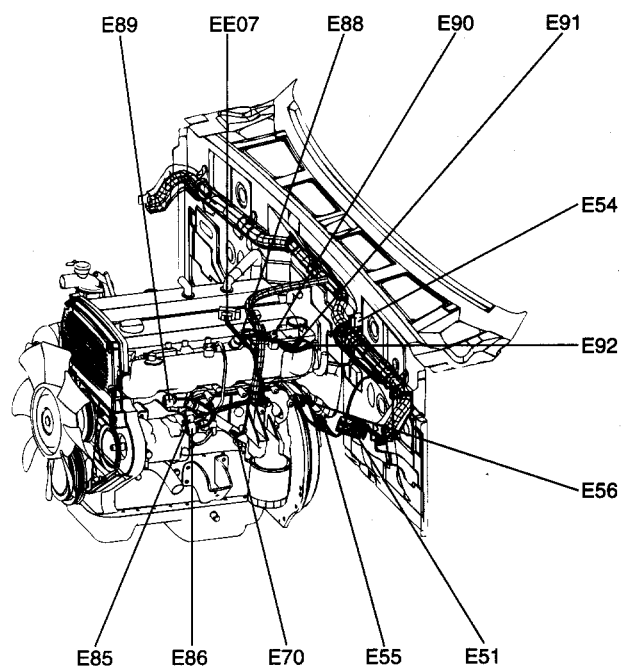
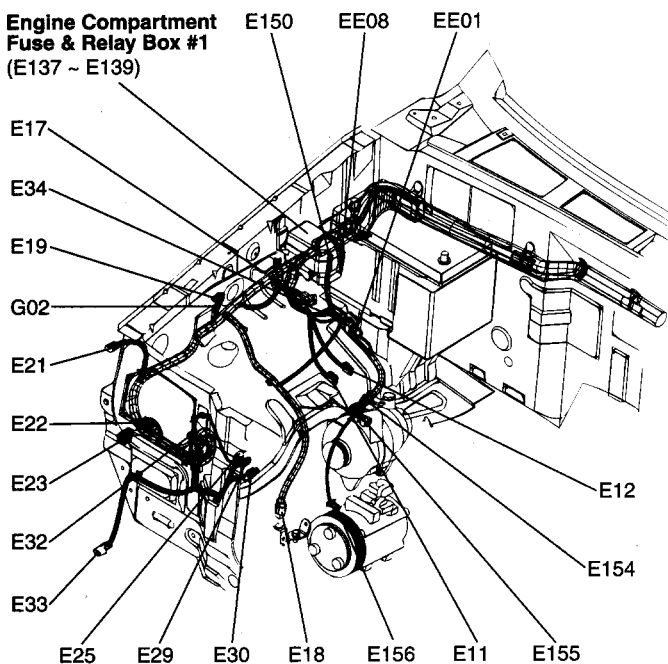


FRONT HARNESS (2.9TCI) (4)

E03-1	ECM	E117	Tail lamp relay
E03-2	ECM	E118	Head lamp relay (LOW)
E03-3	ECM	E119	Head lamp relay (Hi)
E07	Front washer motor	E120	Pre-excitation resistor
E08	Rear washer motor	E121	A/C compressor relay
E10	Right side repeater lamp	E123	Power outlet relay
E11	CADS solenoid #1 (EST)	E124	Start relay
E12	CADS solenoid #2 (EST)	E125	EBD relay
E17	Mass air flow sensor	E126	ABS relay
E18	Right front wheel sensor (ABS)	E127	Front wiper relay
E19	Hood switch	E130	Joint connector
E21	Right front turn signal lamp	E131	Joint connector
E22	Right head lamp leveling actuator	E132	Joint connector
E23	Right head lamp	E133	Joint connector
E25	Reciver dryer	E134	Joint connector
E29	Condenser fan motor	E137	Horn relay
E30	Radiator fan motor	E138	Front fog lamp relay
E32	Righr horn (LOW)	E140	Air heater relay #1
E33	Right front fog lamp	EE02	Connection with GENERATOR harness
E34	EGR solenoid	EE07	Connection with INJECTOR harness
E43	Engine coolant temperature sensor & sender	EE08	Connection with BATTERY CABLE harness
E51	ABS control module	EM01	Connection with MAIN harness
E52	Air heater relay #2	EM02	Connection with MAIN harness
E54	Front wiper motor	EM03	Connection with MAIN harness
E55	Vacuum switch	EM05	Connection with MAIN harness
E56	Brake fluid level switch	EM06	Connection with MAIN harness
E57	Left side repeater lamp	G01	Ground
E63	Siren	G02	Ground
E64	Left front wheel sensor (ABS)	G06	Ground
E69	Left front turn signal lamp	G09	Ground
E70	Oil pressure switch		
E71	Left head lamp leveling actuator		
E72	Left head lamp		
E74	Left horn (High)		
E76	Ambient sensor (Auto A/C)	E50	Start motor solenoid
E77	Left front fog lamp	EE08	Connection with FRONT harness
E85	Fuel temperature sensor		
E86	Inlet metering valve		
E88	Rail pressure sensor		
E89	Knock sensor		
E90	Camshaft position sensor	E150	Main fuse & relay box
E91	Air heater #1	E154	Generator (B+)
E92	Air heater #2	E155	Generator (L,S)
E95	Fuel heater & sensor	E156	A/C compressor
E96	Water level switch	EE02	Connection with FRONT harness
E110	Condenser fan relay #1		
E111	Condenser fan relay #2		
E113	Engine control relay		
E114	CRI relay		
E115	Burglar alarm relay		
			BATTERY CABLE HARNESS
			GENERATOR HARNESS
			INJECTOR HARNESS
		E157-1	Injector #1
		E157-2	Injector #2
		E157-3	Injector #3
		E157-4	Injector #4
		EE07	Connection with FRONT harness

FRONT HARNESS (5)

GASOLINE

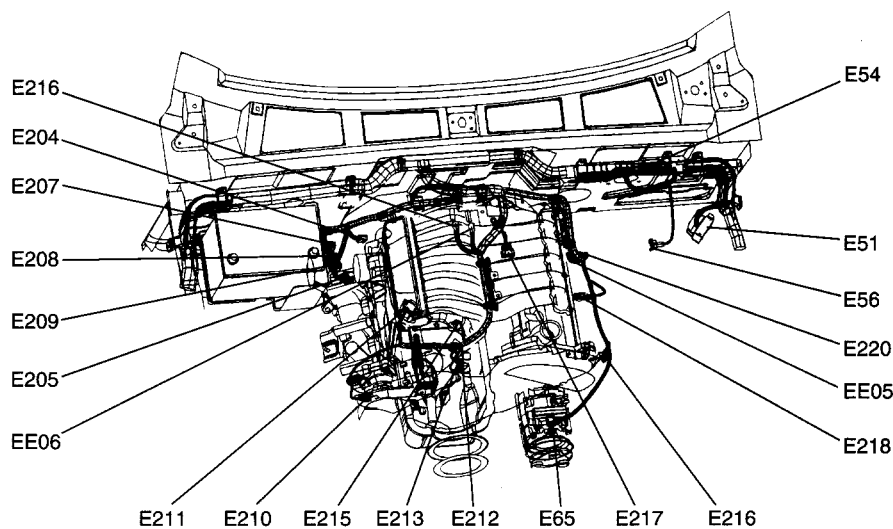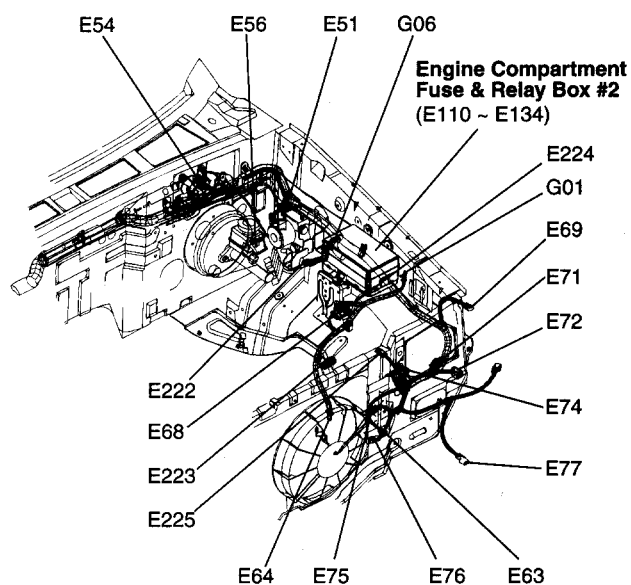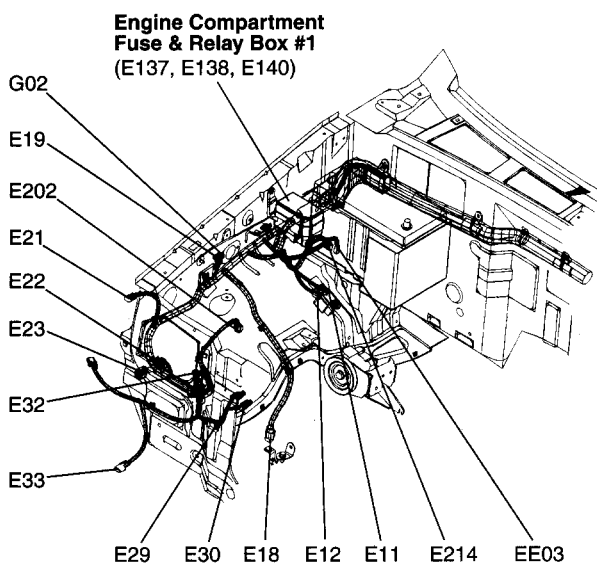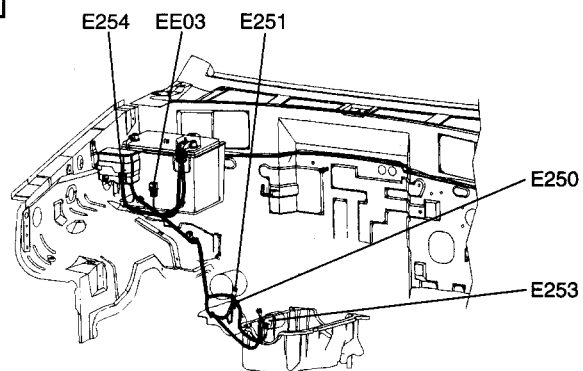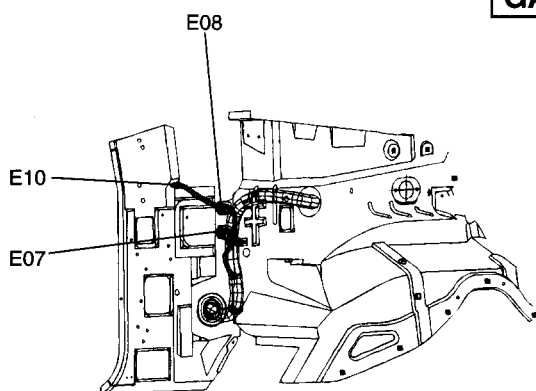

FRONT HARNESS (GASOLINE) (6)

E07 Front washer motor
 E08 Rear washer motor
 E10 Right side repeater lamp
 E11 CADS solenoid #1 (EST)
 E12 CADS solenoid #2 (EST)
 E18 Right front wheel sensor (ABS)
 E19 Hood switch
 E21 Right front turn signal lamp
 E22 Right head lamp leveling actuator
 E23 Right head lamp
 E29 Condenser fan motor
 E30 Radiator fan motor
 E32 Right horn
 E33 Right front fog lamp
 E51 ABS control module
 E54 Front wiper motor
 E56 Brake fluid level switch
 E57 Left side repeater lamp
 E63 Siren
 E64 Left front wheel sensor (ABS)
 E65 A/C compressor
 E69 Left front turn signal lamp
 E71 Left head lamp leveling actuator
 E72 Left head lamp
 E74 Left horn (Hi)
 E76 Ambient sensor (Auto A/C)
 E77 Left front fog lamp
 E110 Condenser fan relay #1
 E111 Condenser fan relay #2
 E112 Radiator fan relay
 E115 Burglar alarm relay
 E117 Tail lamp relay
 E118 Head lamp relay (LOW)
 E119 Head lamp relay (Hi)
 E120 Pre-excitation resistor
 E121 A/C compressor relay
 E123 Power outlet relay
 E124 Start relay
 E125 EBD relay
 E126 ABS relay
 E127 Front wiper relay
 E130 Joint connector
 E131 Joint connector
 E132 Joint connector
 E133 Joint connector
 E134 Joint connector
 E137 Horn relay
 E138 Front fog lamp relay
 E200-1 ECM
 E200-2 ECM
 E200-3 ECM
 E201 Main control relay
 E202 Triple switch
 E203 Fuel pump relay
 E204 Throttle position sensor

E205 Idle speed control motor
 E207 Left rear Oxygen sensor (B2/S2)
 E208 Right rear Oxygen sensor (B1/S2)
 E209 Right front Oxygen sensor (B1/S1)
 E210 Power steering switch
 E211 Manifold absolute pressure sensor
 E212 Crankshaft position sensor
 E213 Camshaft position sensor
 E214 Air flow sensor
 E215 Engine coolant temperature sensor & sender
 E216 Knock sensor
 E217 Ignition failure sensor
 E218 Purge solenoid valve
 E219 Oil pressure switch
 E220 Left front Oxygen sensor (B2/S1)
 E222 Cruise control module
 E223 VI solenoid
 E225 Variable resistor
 E227 Joint connector
 E228 Joint connector
 E229 Joint connector
 EE03 Connection with BATTERY CABLE harness
 EE05 Connection with IGNITION COIL harness
 EE06 Connection with INJECTOR harness
 EM01 Connection with MAIN harness
 EM02 Connection with MAIN harness
 EM03 Connection with MAIN harness
 EM05 Connection with MAIN harness
 EM06 Connection with MAIN harness
 G01,G02 Ground
 G06,G07 Ground
 G08 Ground

BATTERY CABLE HARNESS

E250 Generator sensor
 E251 Generator (B+)
 E253 Start motor solenoid
 E254 Main box generator
 EE03 Connection with FRONT harness

IGNITION COIL HARNESS


E160-1 Ignition coil #1
 E160-2 Ignition coil #2
 E160-3 Ignition coil #3
 EE05 Connection with FRONT harness

INJECTOR HARNESS

E165-1,2 Injector #1,#2
 E165-3,4 Injector #3,#4
 E165-5,6 Injector #5,#6
 EE06 Connection with FRONT harness

INSTRUMENT HARNESS

E274D45C

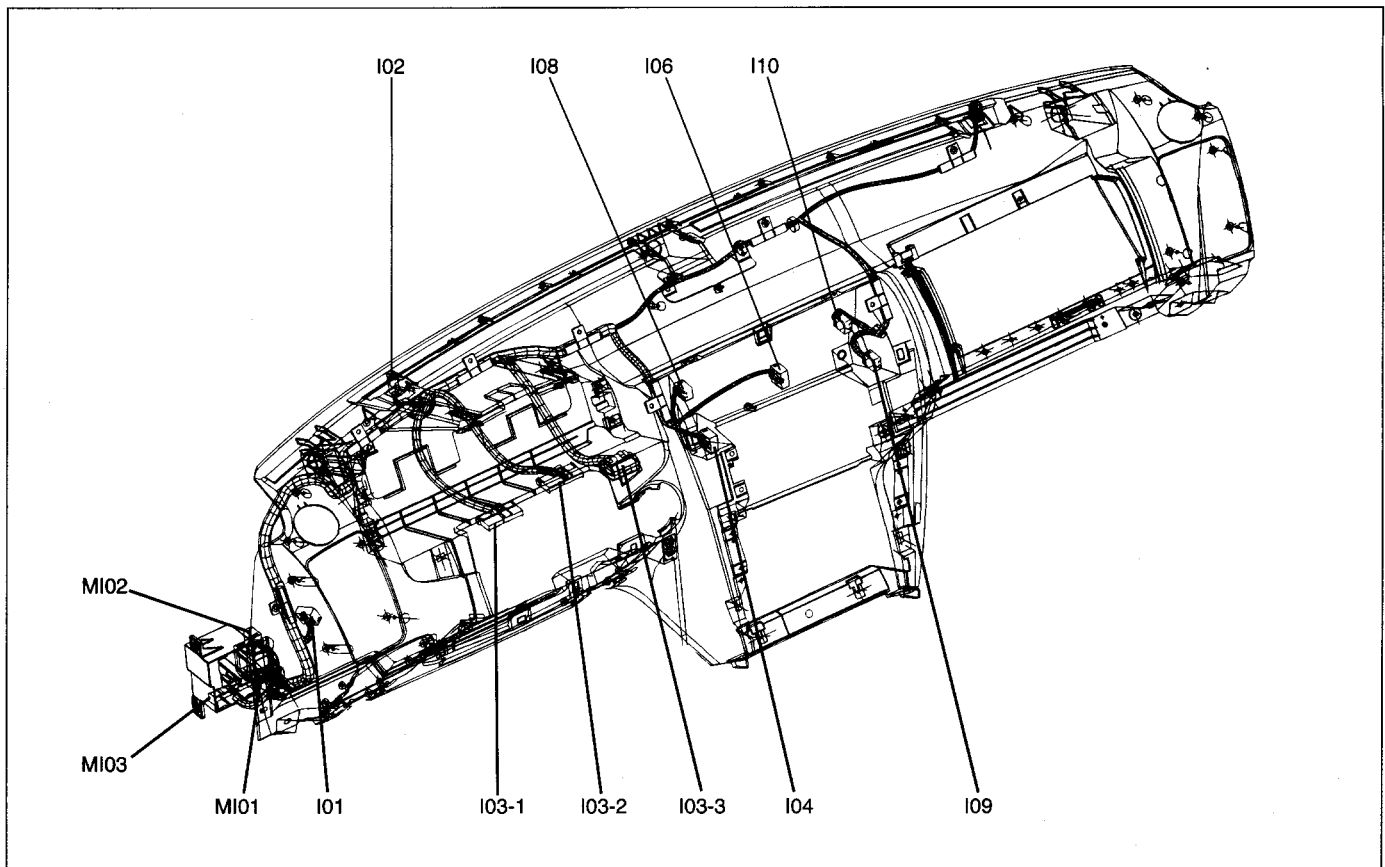INSTRUMENT HARNESS (1)

E5ME003A



I01	Joint connector	I08	Rear fog lamp switch
I02	Photo sensor	I09	Head lamp leveling switch
I03-1	Instrument cluster	I10	Cruise switch
I03-2	Instrument cluster	MI01	Connection with MAIN harness
I03-3	Instrument cluster	MI02	Connection with MAIN harness
I04	Rheostat	MI03	Connection with MAIN harness
I06	Hazard switch		

T/M HARNESS


EBDCAC72

T/M HARNESS (1)


A/T & 2.9TCI/Gasoline

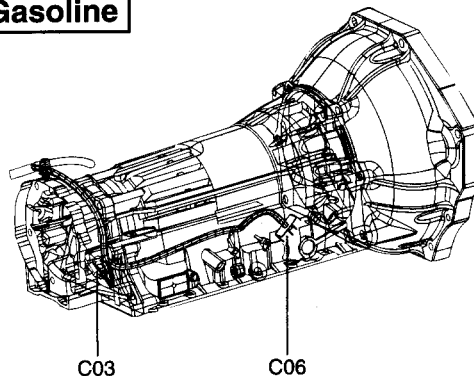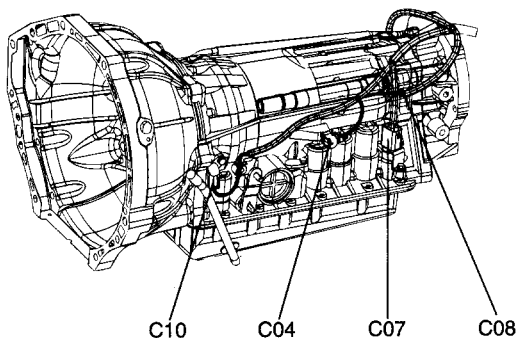

A/T & COVEC-F

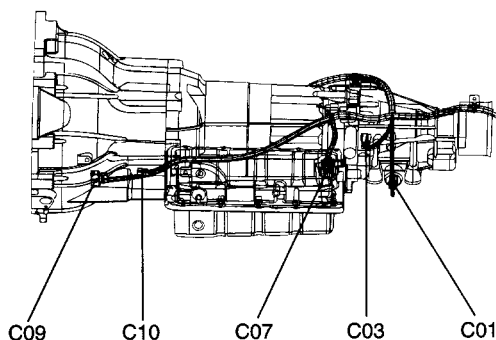

M/T

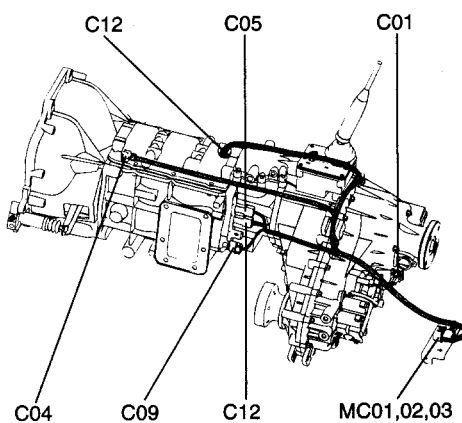


E5ME004A

C01	Vehicle speed sensor	C08	A/T Oil temperature sensor (A/T)
C02	Transaxle range switch (A/T & COVEC-F)	C09	TDC sensor (COVEC-F)
C03	Output speed sensor (PG-B & A/T)	C10	Input speed sensor (PG-A & A/T)
C04	Crankshaft position sensor (2.9TCI)	C11	Back-up lamp switch (Gasoline & M/T)
C05	Neutral switch (COVEC-F & M/T)	C12	Back-up lamp switch (COVEC-F/2.9TCI & M/T)
C06	Transaxle range switch (A/T & 2.9TCI/Gasoline)	MC01	Connection with MAIN harness (M/T)
C07	A/T solenoid valve (A/T)	MC02	Connection with MAIN harness (A/T)
		MC03	Connection with MAIN harness (A/T)

DOOR HARNESS

ECE75850

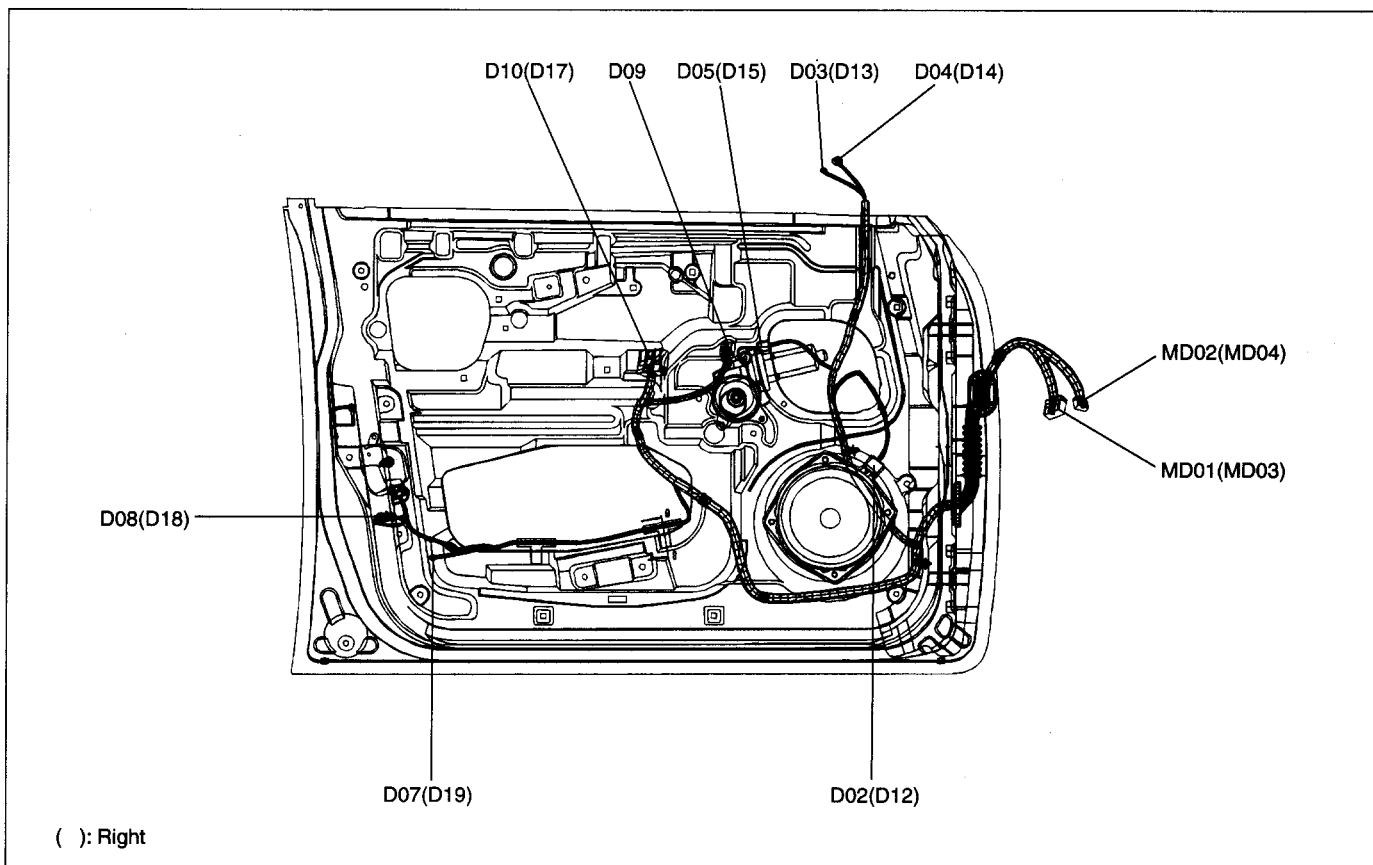FRONT DOOR HARNESS (1)

E5ME005A


LEFT FRONT DOOR HARNESS

D02	Left front door speaker
D03	Left front tweeter speaker
D04	Left outside mirror motor
D05	Left front power window motor
D07	Left front door lamp
D08	Left front door lock actuator
D09	Power outside mirror switch
D10	Power window main switch
MD01	Connection with MAIN harness
MD02	Connection with MAIN harness

RIGHT FRONT DOOR HARNESS

D12	Right front door speaker
D13	Right front tweeter speaker
D14	Right outside mirror motor
D15	Right front power window motor
D17	Right front power window switch
D18	Right front door lock actuator
D19	Right front door lamp
MD03	Connection with MAIN harness
MD04	Connection with MAIN harness

REAR DOOR HARNESS (2)

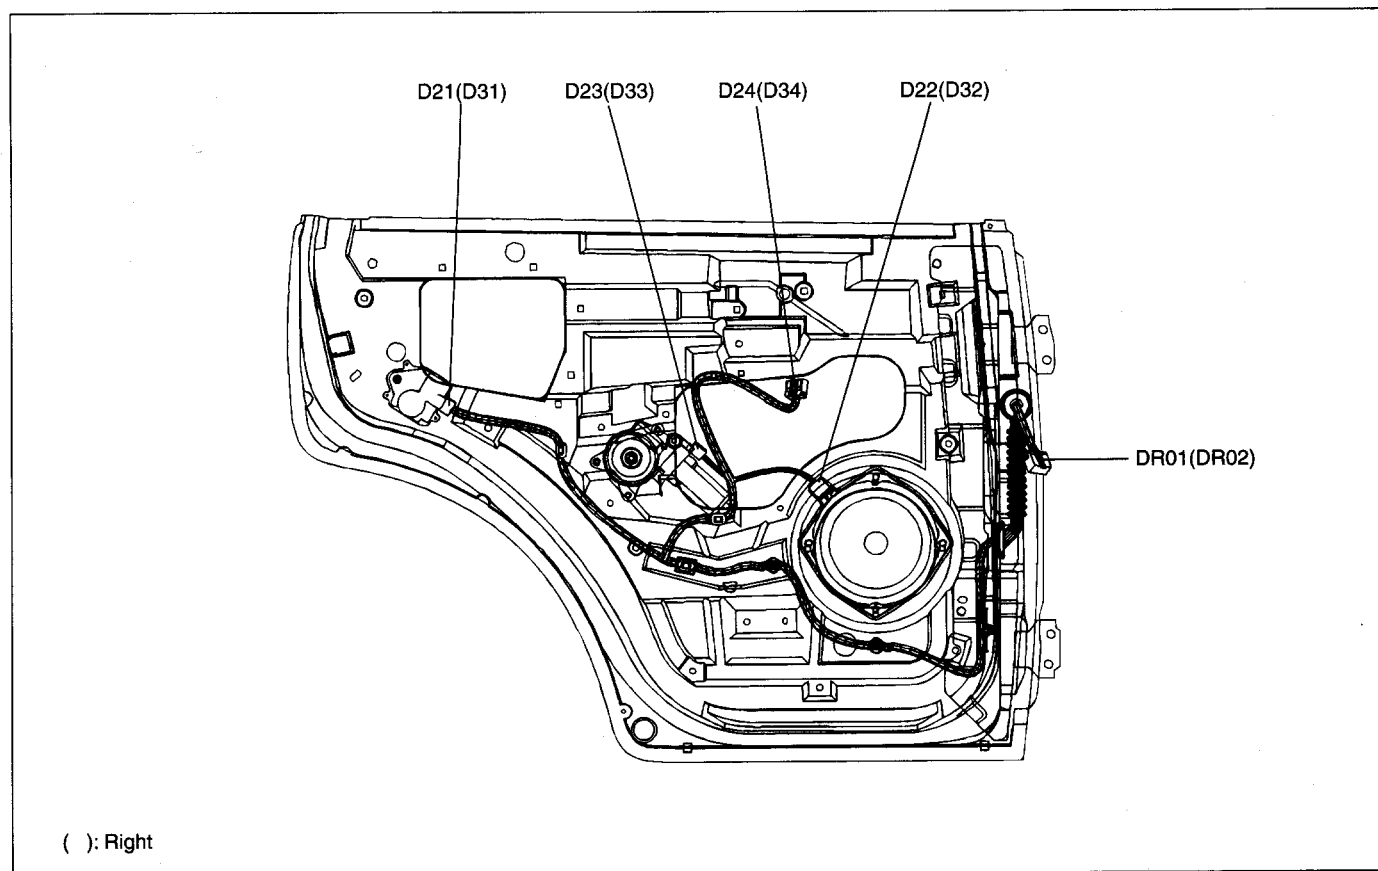

E5ME005B

LEFT REAR DOOR HARNESS


D21	Left rear door lock actuator
D22	Left rear door speaker
D23	Left rear power window motor
D24	Left rear power window switch
DR01	Connection with LEFT REAR harness

RIGHT REAR DOOR HARNESS

D31	Right rear door lock actuator
D32	Right rear door speaker
D33	Right rear power window motor
D34	Right rear power window switch
DR02	Connection with LEFT REAR harness

REAR HARNESS

ED041D9A

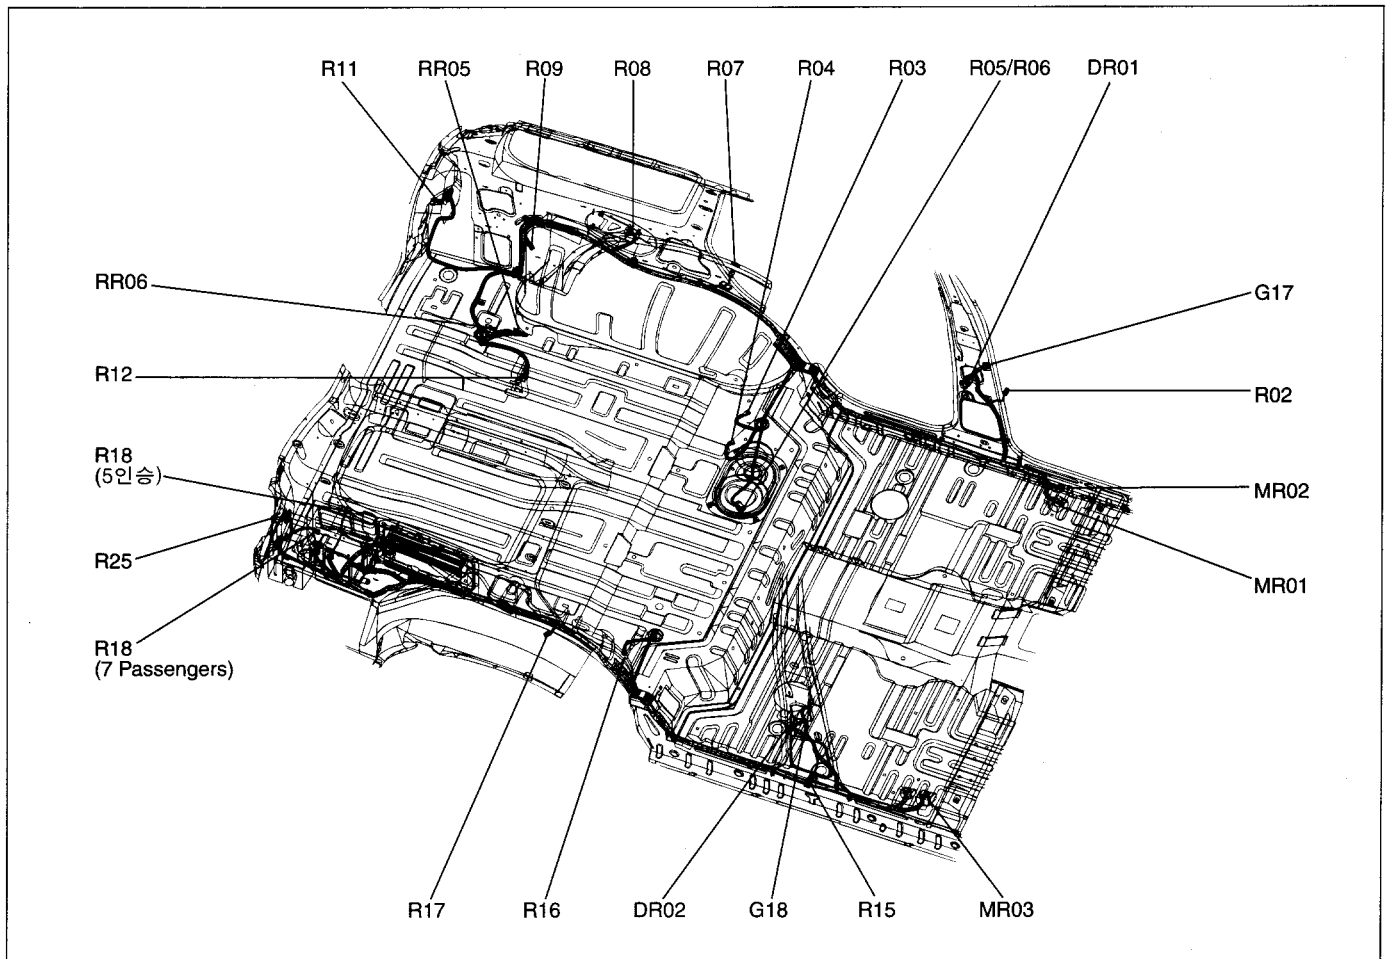REAR HARNESS (1)

E5ME006A


REAR HARNESS (LEFT)

R02	Left front door switch
R03	Left rear wheel sensor
R05	Fuel tank (Gasoline)
R06	Fuel tank (Diesel)
R07	Left rear door switch
R09	Glass antenna module
R11	Left rear combination lamp
DR01	Connection with REAR DOOR harness
MR01	Connection with MAIN harness
MR02	Connection with MAIN harness
G17	Ground

REAR HARNESS (RIGHT)

R15	Right front door switch
R16	Right rear wheel sensor
R17	Right rear door switch
R18	Rear power outlet
R25	Right rear combination lamp
DR02	Connection with REAR DOOR harness
MR03	Connection with MAIN harness
G18	Ground

TAIL GATE HARNESS (2)

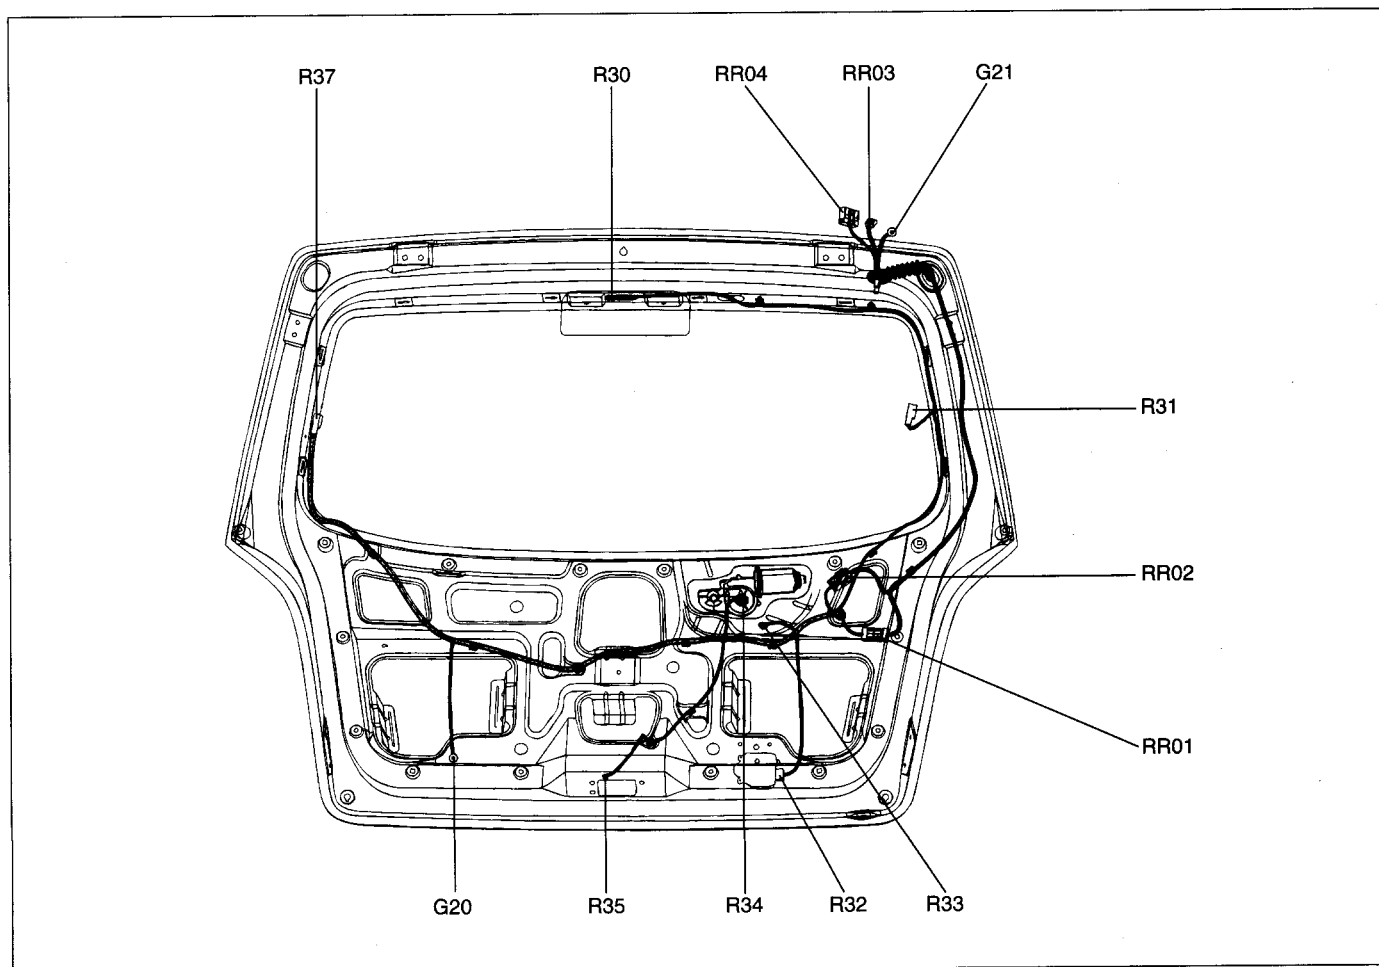


E5ME006B

TAIL GATE HARNESS

R30	High-mounted stop lamp
R31	Rear window defogger (+)
R32	Tail gate lock actuator
R33	License lamp
R34	Rear wiper motor
R35	Tail gate switch
R37	Rear window defogger (-)
RR01	Connection with TAIL GATE EXT. harness
RR02	Connection with TAIL GATE EXT. harness
G20	Ground

TAIL GATE EXT. HARNESS

RR01	Connection with TAIL GATE harness
RR02	Connection with TAIL GATE harness
RR03	Connection with ROOF harness
RR04	Connection with ROOF harness
G21	Ground

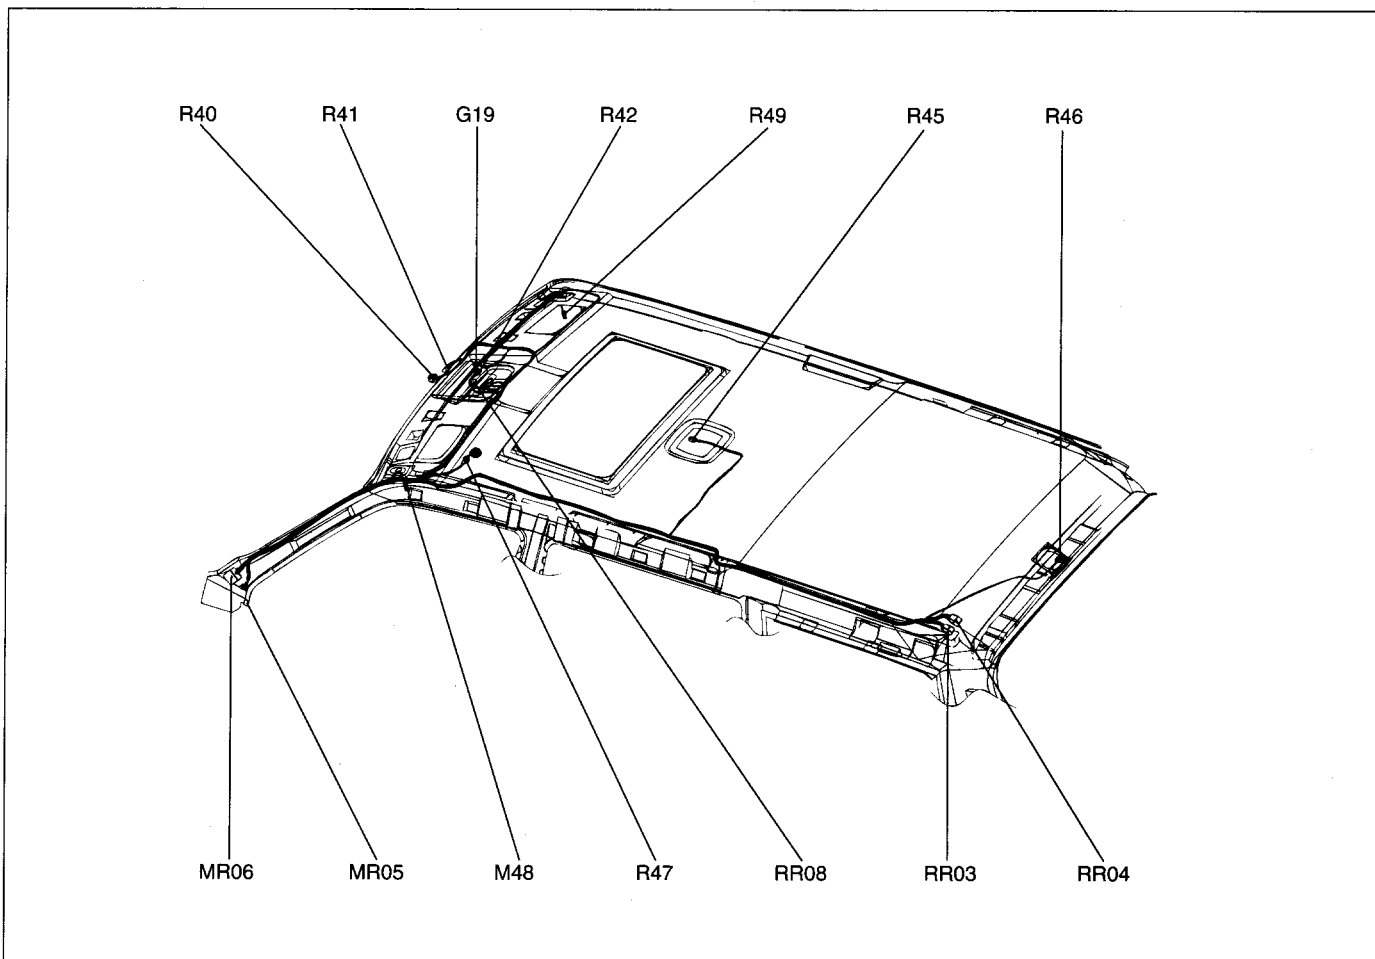ROOF HARNESS (3)

E5ME006C

ROOF HARNESS

R40	Inside mirror
R42	Overhead console lamp
R45	Room lamp
R46	Cargo lamp
MR05	Connection with MAIN harness
MR06	Connection with MAIN harness
RR03	Connection with TAIL GATE EXT. harness
RR04	Connection with TAIL GATE EXT. harness
RR08	Connection with SUNROOF harness
G19	Ground


SUNROOF HARNESS

R55	Overhead console
R56	Sunroof motor
R57-1	Sunroof controller
R57-2	Sunroof controller
RR08	Connection with ROOF harness

A/C & A/BAG HARNESS

EBE93B0B


A/C HARNESS (1)

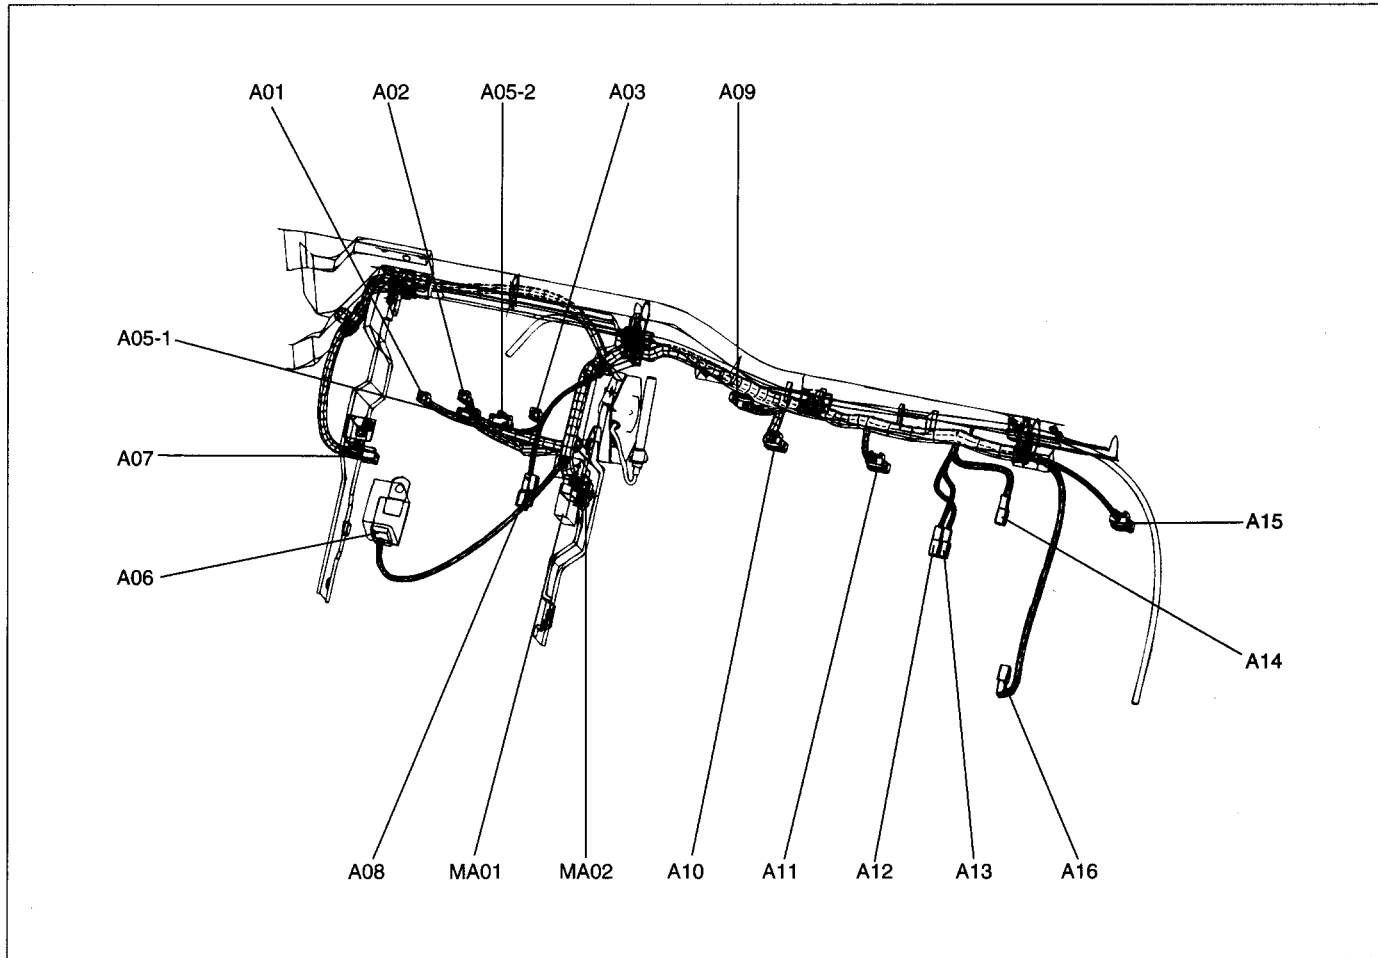

E5ME007A

A01	Blower switch (Manual A/C)	A11	Evaporator sensor (Auto A/C)
A02	A/C switch (Manual A/C)	A12	Power transistor (Auto A/C)
A03	Temperature switch (Manual A/C)	A13	Blower transistor (Manual A/C)
A05-1	A/C control module (Auto A/C)	A14	High blower relay (Auto A/C)
A05-2	A/C control module (Auto A/C)	A15	Intake actuator
A06	Blower relay	A16	Blower motor
A07	Mode actuator	MA01	Connection with MAIN harness
A08	Temperature actuator	MA02	Connection with MAIN harness
A09	Joint connector	Z04	Diode (Auto A/C)
A10	Thermostatic switch (Manual A/C)		

A/BAG HARNESS (2)

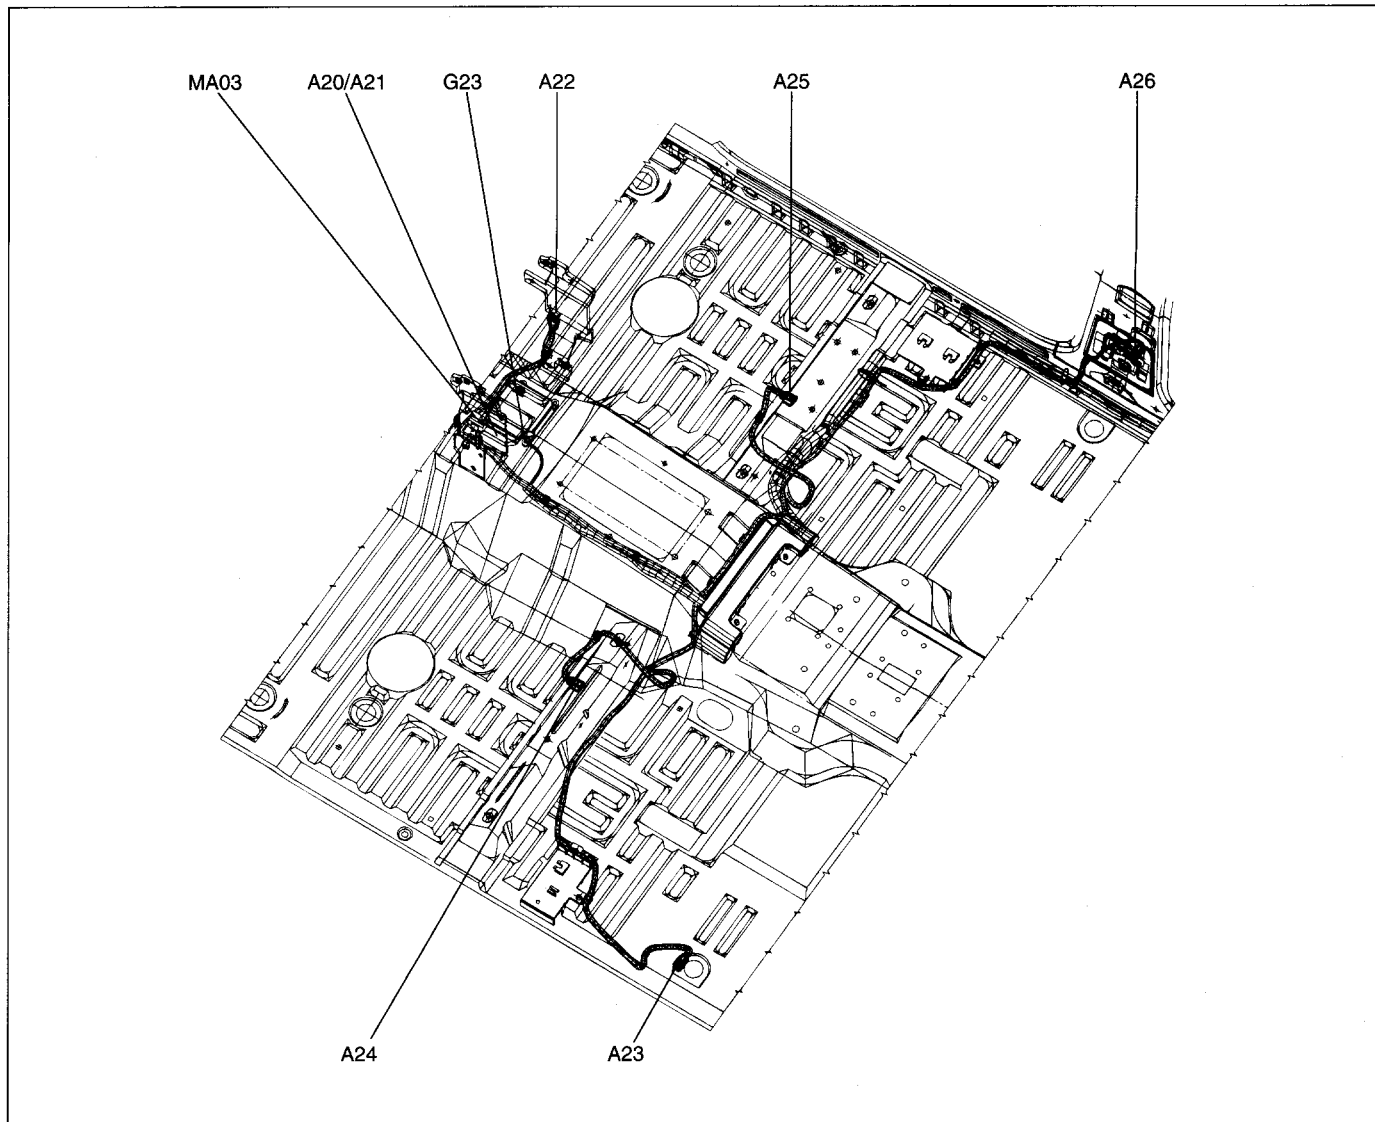

E5ME007B

A20	SRS control module (Dual A/Bag)	A25	Right seat buckle sensor
A21	SRS control module (Single A/Bag)	A26	Passenger seat belt pretensioner
A22	Passenger air bag	MA03	Connection with MAIN harness
A23	Driver seat belt pretensioner	G23	Ground
A24	Left seat buckle sensor		