
JUST ONE MORE MOMENT

ENCLOSURE / ASSEMBLY

REV 03 / 28 OCT 2026

01 / EXPLODED ENCLOSURE

13 printed parts, one of each. Red E1-E7 parts are purchased. Printed parts use white, grey and black.

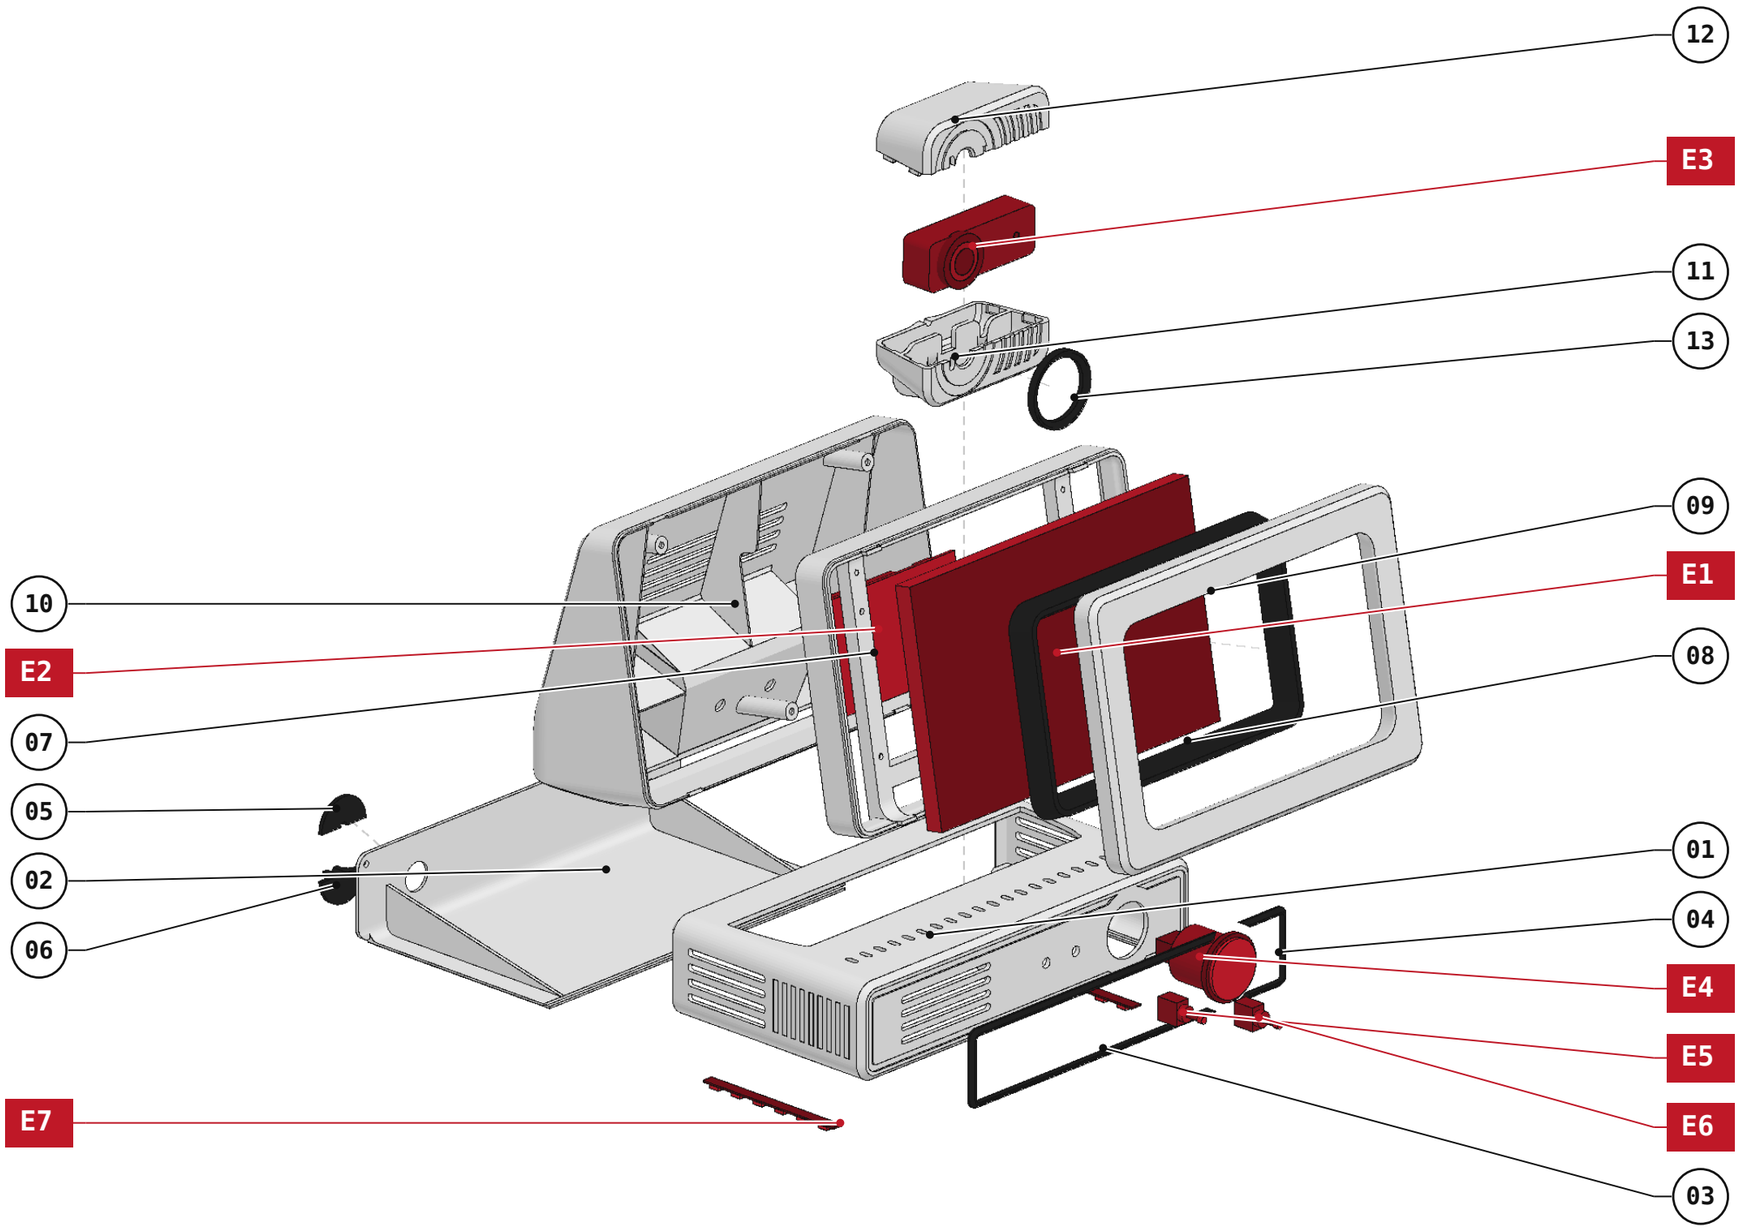

Before closing 10: prepare the camera and base controls (pages 03-04) and connect every Pi lead (page 02). Close base cover 02 last.

PRINT EACH PART ONCE

BASE

- 01 Base housing
- 02 Bottom and rear cover
- 03 Front trim, left
- 04 Front trim, right
- 05 Cable guide, upper
- 06 Cable guide, lower

DISPLAY

- 07 Display main bracket
- 08 Display inner bezel
- 09 Display outer frame
- 10 Display rear cover

CAMERA

- 11 Camera lower shell
- 12 Camera upper shell
- 13 Camera front ring

PURCHASED / DO NOT PRINT

- E1 Touch Display 2
- E2 Raspberry Pi 5 + cooler
- E3 Logitech C270 camera
- E4 Arcade button + LED
- E5 SW01 / AI mode
- E6 SW02 / EN-DE
- E7 12 NeoPixels / WS2812B

05 and 06 fit from OUTSIDE rear plate 02. All red shapes are purchased parts. Dashed lines link the positions. Not to scale.


JUST ONE MORE MOMENT

ENCLOSURE / ASSEMBLY


REV 03 / 28 OCT 2026

02 / DISPLAY AND RASPBERRY PI

Build the front screen unit first. Glue 10 to 01 before wiring. Finish every Pi connection before closing 10.

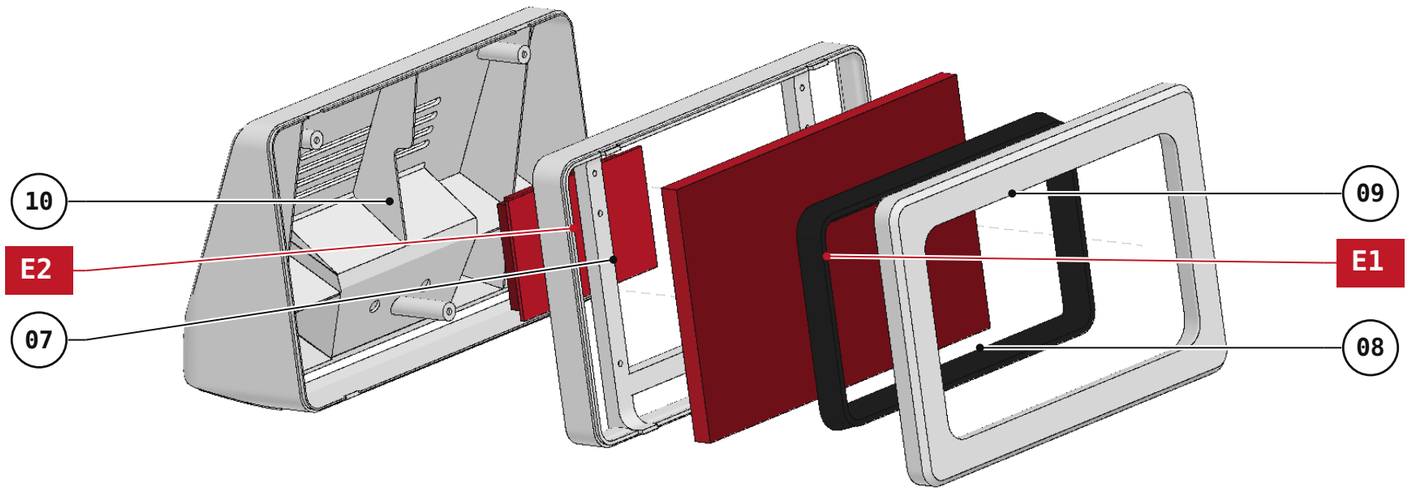

GLUE 10 TO 01 / BEFORE WIRING

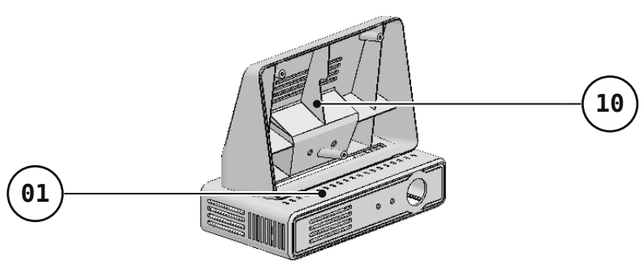

DISPLAY FIXINGS

Supplied display screws: Pi to E1, then the four outer points on 07.

Final closure: 3 x 2.9 x 9.5 mm sheet-metal / wood screws, or similar.

1 / MOUNT THE PI ON THE DISPLAY

Screw Pi E2 to display E1 using the supplied display screws and its threaded mounting points. Connect the display power and data cables to the Pi now. Follow the official Touch Display 2 instructions.

2 / BUILD THE FRONT SCREEN UNIT

Use the display screws to attach the display/Pi unit to bracket 07 at the four outer threaded mounting points. Slide 08 and 09 into each other, then click this pair onto 07. The front screen unit is complete.

3 / GLUE THE REAR COVER TO THE BASE

Before wiring the device, glue rear cover 10 to base housing 01. I use UHU Kraftkleber (strong adhesive). Let the bond set as directed on the adhesive packaging.

4 / CONNECT AND ROUTE THE CABLES

Prepare the camera and base controls as shown on pages 03-04. Connect all leads to the Pi using hardware/WIRING.md. Route the jumper leads, camera USB cable and Pi power cable through the lower opening in 10 into the base.

5 / CLOSE THE DISPLAY HOUSING


Fit the front screen unit onto 10. Use its three screw guides and three 2.9 x 9.5 mm sheet-metal or wood screws, or similar screws that fit. Complete all Pi connections before this step; no further access is needed.

Official Touch Display 2 setup guide

JUST ONE MORE MOMENT

03 / BASE, FRONT CONTROLS AND CABLES

Complete steps 1-3 while the Pi is accessible. After closing 10 (page 02), finish the cable routing and close 02.

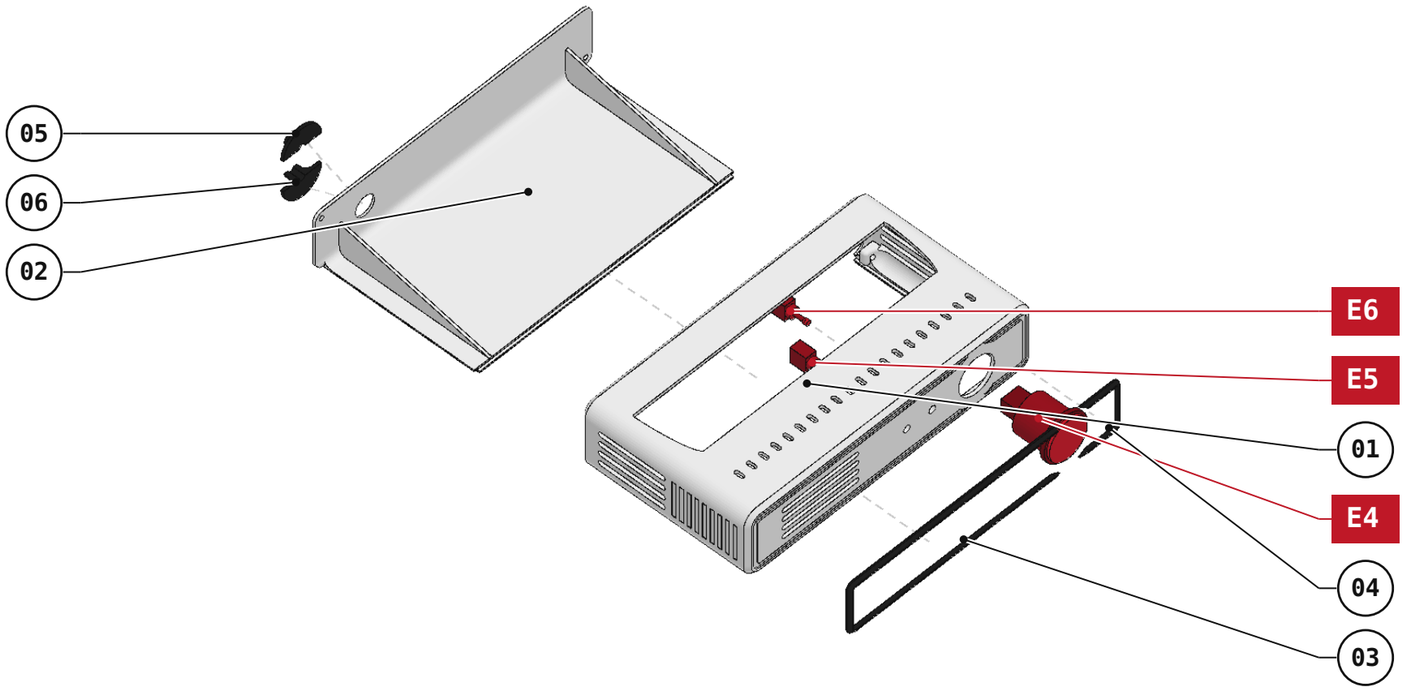

1 / PREPARE THE CONTROL LEADS

Prepare and solder the jumper leads in advance using hardware/WIRING.md. Insulate the solder joints as shown in the wiring guide.

2 / GLUE TRIMS AND FIT THE CONTROLS

Glue trims 03 and 04 into their guides. Insert the large arcade button E4 from the front. Insert switches E5 and E6 from inside the housing, then secure them with their mounting nuts.

3 / PLACE AND WIRE THE LEDS

Use the self-adhesive backing to place the 12 NeoPixels E7 under the inside ceiling of 01. Spread them so their light shines through the side vents. Wire E4-E7 to the Pi using the wiring guide before closing the display housing.

4 / STORE AND ROUTE THE CABLES


With the wiring complete, loosely coil the spare camera USB cable inside the base. Lead the Pi power cable out through rear plate 02. Fit cable-guide halves 05 and 06 from the outside of 02 around the cable and secure it.

5 / CLOSE THE BASE

Fit bottom/rear cover 02 to housing 01 and fasten it with two suitable screws or bolts and two matching nuts. Choose pairs that fit the printed fixing holes.


Final base closure: 2 screws/bolts + 2 nuts.

E7 / UNDER THE BASE CEILING

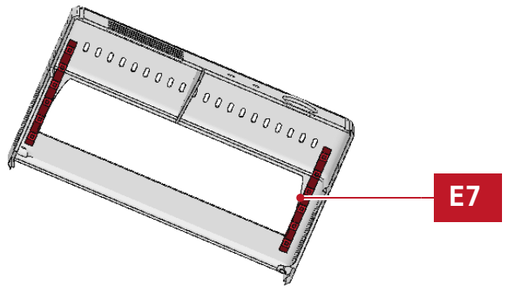

Cutaway: cover 02 and lower lip hidden.

05 + 06 / OUTSIDE PLATE 02

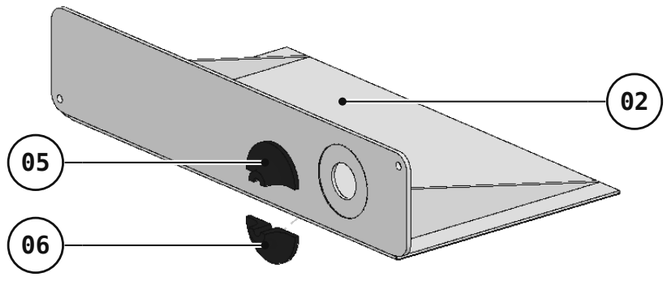

Upper: 05 / Lower: 06. Clamp the power lead.


JUST ONE MORE MOMENT

ENCLOSURE / ASSEMBLY

REV 03 / 28 OCT 2026

04 / LOGITECH C270 AND CAMERA SHELLS

The shallow camera reaches only to the middle divider in 11. Part 12 is the upper shell; ring 13 finishes the front.

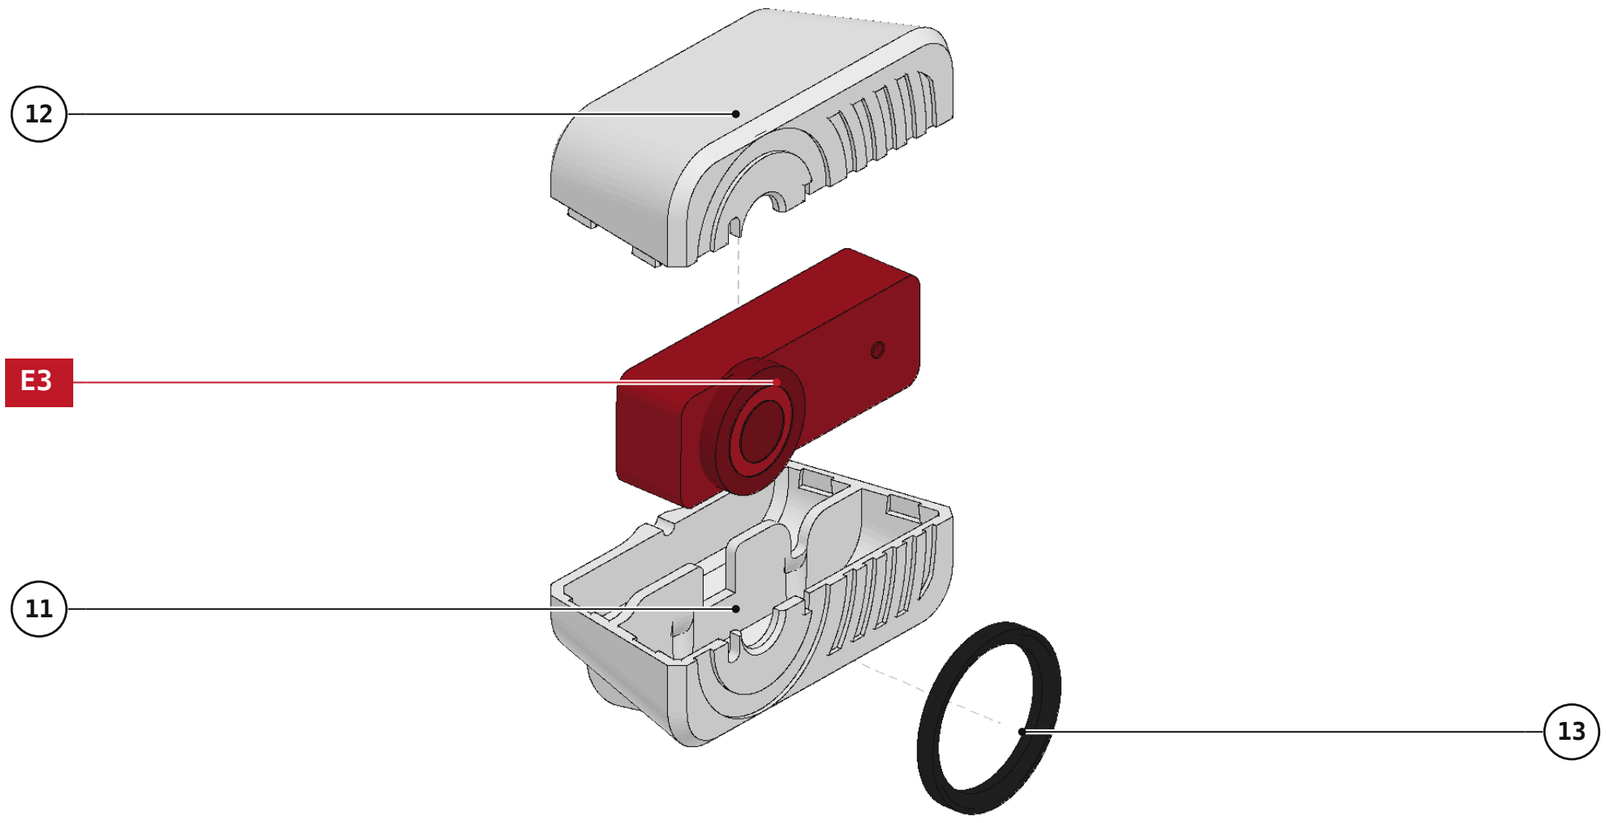

1 / FIT AND SECURE THE CAMERA

Place camera E3 in lower shell 11, with the lens at the front opening. The shallow body reaches only to the middle divider in 11. Secure it with glue or tape, and lead its USB cable out through the rear.

2 / CLICK THE TWO SHELLS TOGETHER

Push 11 and 12 together. Slight pressure from the left and right sides of upper shell 12 makes it easier to fit.

3 / GLUE THE FRONT RING

Glue front ring 13 into place to join and finish the camera housing.

PARTS IN THIS VIEW

- (11) Lower camera shell
- (12) Upper camera shell
- (13) Front ring
- E3 Logitech C270

SHALLOW CAMERA / REAR CABLE EXIT

Secure E3 in the front half of 11. Run its USB cable out at the back, then into the device. Coil the spare length in the base (page 03).