Preliminary GEK-45165

GE Drive Systems

INSTRUCTIONS

SERIAL LINK INTERFACE

7V11CSL Option Kit

IMPORTANT INFORMATION

CAUTION: To ensure proper operation of the QIII DC Controller, these instructions must be followed for proper installation and set-up of this Option Kit.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to General Electric Company.

SAFETY PRECAUTIONS

WARNING - SHOCK AND BURN HAZARD:
Always disconnect power to the drive before removing or inserting a printed circuit card. Failure to do so may cause serious injury to personnel and damage to the drive or the driven machinery.

CAUTION: Treat all cards with static sensitive handling techniques. Use "grounding" strap when changing cards and store cards in the anti-static bags they are shipped in.

NOTE: *Read all WARNINGS, CAUTIONS and NOTES in the QIII DC Controller Instruction Book (GEK-45167) prior to installing this Option Kit.*

NOTE: *Read and heed all WARNING, CAUTION, and NOTE labels posted on the equipment prior to installing this Option Kit.*

KIT DESCRIPTION AND CONTENTS

DESCRIPTION:

This Option Kit provides an interface for serial link communications (RS232C) to the drive. The printed circuit card contains a receptacle for 7PLC to communicate directly to the Control card. An internally connected "D" receptacle (STRPL) is furnished for connection to an external device. Communication rate is 4800 baud.

NOTE: *Serial Link Interface card is **not** intended to be mounted permanently to the Control card.*

CONTENTS:

The kit contains the following components (in addition to these instructions):

Component	Part Number	Qty.
Serial Link Card	531X120STRA_G1	1
7PLC Connector Cable (5 ft.)	36A358208AAG35	1

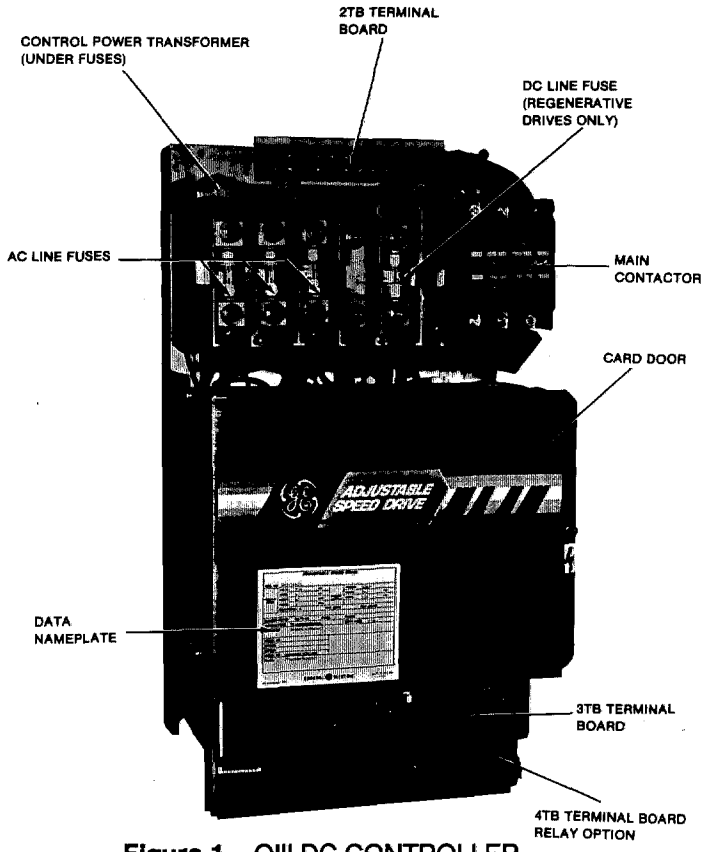


Figure 1. QIII DC CONTROLLER

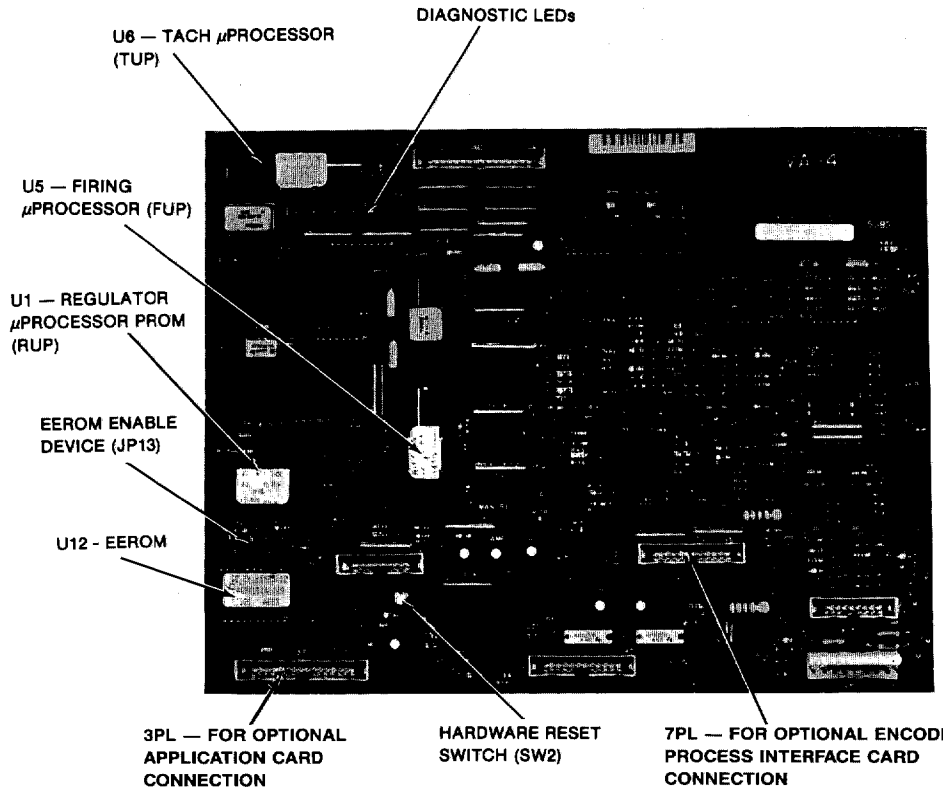


Figure 2. CONTROL CARD

KIT INSTALLATION PROCEDURE

WARNING - SHOCK AND BURN HAZARD:
Always disconnect power to the drive before removing or inserting a printed circuit card. Failure to do so may cause serious injury to personnel and damage to the drive or the driven machinery.

NOTE: *Serial Link Interface card is* ***not*** *intended to be mounted permanently to the Control card.*

1. Verify that power to the controller that the option kit is to be installed is OFF.

2. Loosen thumbscrew (located on right side) and open the controller card door (see Figure 1).

CAUTION: Treat all cards with static sensitive handling techniques. Use "grounding" strap when changing cards and store cards in the anti-static bags they are shipped in.

3. Install 7PLC ribbon cable as follows:
   a. Orient ribbon cable to its receptacle on Serial Link Interface card so that cable extends toward bottom of card with colored tracer wire on the left and press connector into seated position (see Figure 3).
   b. Make sure cable is not twisted (tracer wire still on the left) and insert other end of connector into its receptacle on the Control card and press into fully seated position (see Figure 2).

4. Install external device communications cable to Serial Link Interface card by inserting "D" connector into its receptacle on the Serial Link Interface card and pressing into fully seated position (see Figure 3). (See Table 2 for pinout description of "D" connector.)

5. Set Jumpers JP1 and JP2 on the newly installed Serial Link Interface card per jumper descriptions in Table 1 (see Figure 3 for jumper location).

6. Connect external communications cable to the external device (see Table 2 for pinout description).

7. Communicate to the drive with the external device as desired.

NOTE: *When serial Link interface card is not being used (for extended period), disconnect 7PLC ribbon cable from Control card and close controller card door.*

TABLE 1: JUMPER DESCRIPTION - 531X120STRA_G1 CARDS

Location	Number	Description
Serial Link Interface Card	JP1 JP2	JP1 and JP2 select which pins of STRPL are transmit and receive. **NOTE:** *Communication rate is 4800 Baud.*

Jumper	Position	Description/Connection
JP1 JP2	**1-2:** **3-4:**	Receive on Pin 2, Transmit on Pin 3.
JP1 JP2	**1-3:** **2-4:**	Receive on Pin 3, Transmit on Pin 2.

TABLE 2: PINOUT DESCRIPTION - "D" CONNECTOR, EXTERNAL COMMUNICATIONS CABLE

NOTE: *Only pins 1, 2, 3, and 7 of the 25 pin "D" connector are used.*

Pin Number	Description
1	Shield
2	RXA/TXA - Receive or Transmit as selected by Jumpers JP1 and JP2 on Serial Link Interface Card (531X120STRA_G1).
3	TXA/RXA - Receive or Transmit as selected by Jumpers JP1 and JP2 on Serial Link Interface Card (531X120STRA_G1).
7	D Common

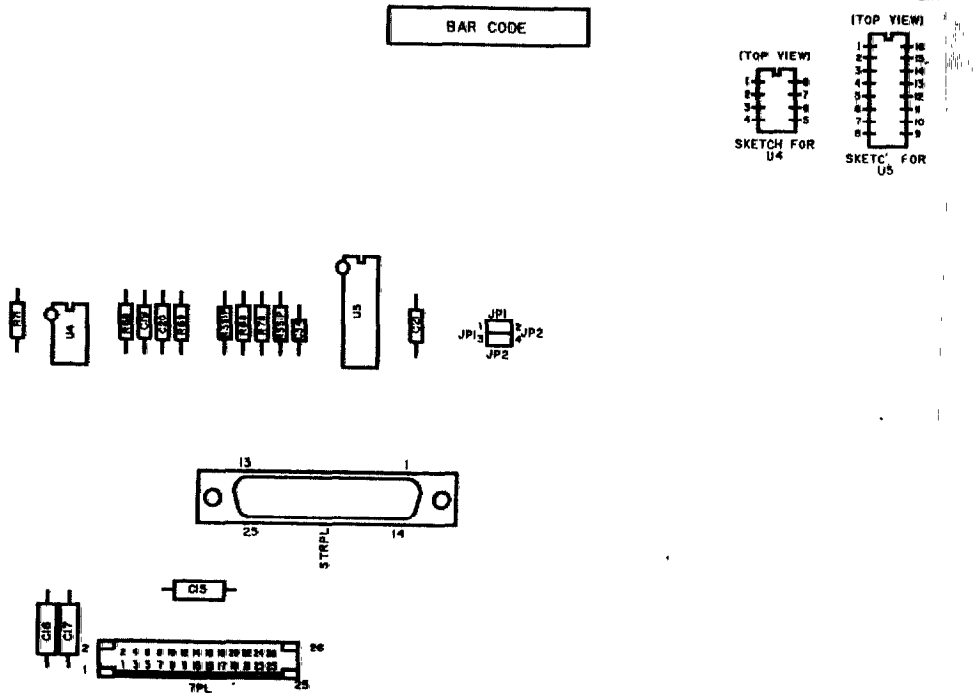


Figure 3. SERIAL LINK INTERFACE CARD LAYOUT DIAGRAM

THIS PAGE IS INTENTIONALLY BLANK



GE Drive Systems

GEK-45165 (9/90)

General Electric Company
GE Drive Systems
1100 Lawrence Parkway
Erie, PA 16531