IC3645CPM1 PUMP TIME-DELAY CONTROL

Before any adjustments, servicing, parts replacement or any other act is performed requiring physical contact with the electrical working components or wiring of this equipment, DISCONNECT THE BATTERY AND DISCHARGE CAPACITOR 1C.

FUNCTION

The function of the steer pump time delay is to provide a time delay so that the steer pump will continue to operate for a period of time after opening the direction switch. See Fig. 2 for connection and ratings.

The function of the pump time delay is to prevent the closure of the pump contactor on a momentary closure of the pump switch, and to assure that the pump contactor remains closed long enough for the pump motor to accelerate and thus reduce the load current that the contactor must interrupt. See Fig. 3 for connections and ratings.

See Fig. 1 for the mounting of the time delay and coil driver modules. Dimensions are in inches and (millimeters).


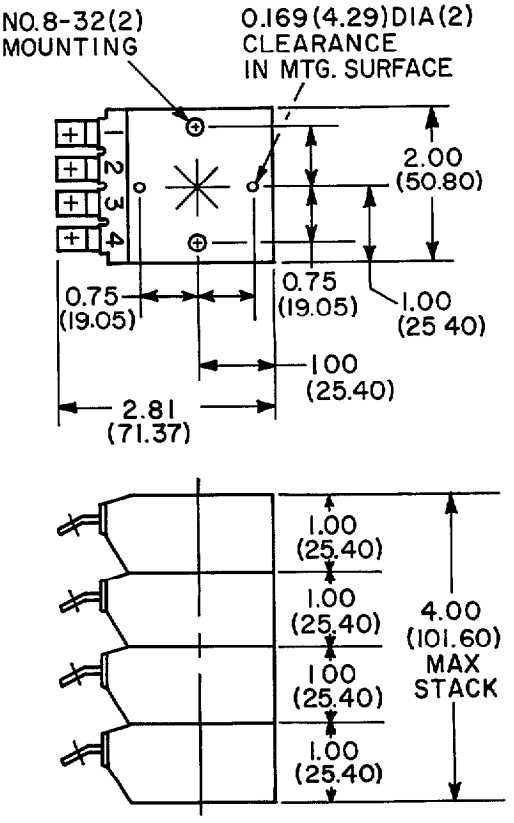


Fig. 1. Outline IC3645CPM1 time delay and driver modules

The information contained herein is intended to assist truck users and dealers in the servicing of SCR control furnished by the General Electric Company. It does not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection with installation, operation or maintenance.


Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purpose, the matter should be referred to the truck manufacturer through his normal service channels, not directly to General Electric Company.

GENERAL ELECTRIC

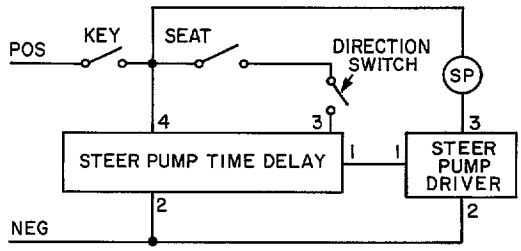

Volts	Steer Pump Time Delay IC3645CPM1	Steer Pump Driver IC3645CPM1	Time Delay after Opening Switch (Seconds)	Maximum Coil (Amperes)
24-48	TDA3	RDA2	0.9-3.0	2.9
72-84	TDA4	RDB2	0.9-3.0	1.5

Fig. 2. Steer pump ratings and connections

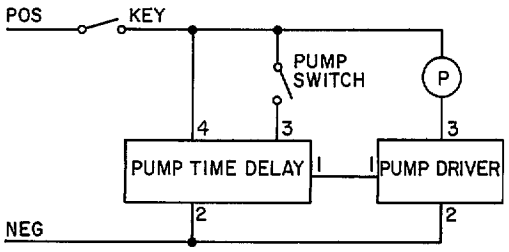

Volts	Pump Time Delay IC3645CPM1	Pump Driver IC3645CPM1	Pick-up Time (ms)	Drop-out Time (ms)	Maximum Coil (Amperes)
24-48	TDC3	RDA2	70-130	300-600*	2.9
72-84	TDC4	RDB2	70-130	300-600*	1.5
24-48	TDD3	RDA2	70-130	300-600†	2.9
72-84	TDD4	RDB2	70-130	300-600†	1.5

Fig. 3. Pump ratings and connections

*Time interval starts on energizing the pump coil. If the pump switch opens after this interval, the coil is de-energized immediately. The contactor thus is prevented from opening while carrying transient inrush current.

†Time interval starts on opening the pump switch. The contactor thus is prevented from opening while carrying inrush current and also is prevented from opening if a second pump switch closure occurs within the time interval.

GENERAL ELECTRIC COMPANY, U.S.A.
INDUSTRIAL CONTROL DEPARTMENT

GENERAL ELECTRIC

2-78

PRINTED IN U.S.A.