PROCESS CONTROL FOLLOWER/JOG REFERENCE
193X535AA GO1

ELEM. & CARD DIAGRAM 36B590232AA

REFER TO THE DRIVE SYSTEM INSTRUCTIONS AND ELEMENTARY DIAGRAMS FOR DESCRIPTIONS, ADJUSTMENTS AND ON-CARD JUMPER CONNECTIONS.

These instructions do not purport to cover all details or variations in equipment nor to provide for every possible contingency to be met in connection wrth installation, operation or maintenance. Should further information be desired or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to the General Electric Company.

GENERAL ELECTRIC

GENERAL ELECTRIC

36B590232AA

CONT ON SHEET — SH NO

UNLESS OTHERWISE SPECIFIED USE THE FOLLOWING —


APPLIED	PRACTICES	SURFACES	TOLERANCES ON MACHINED DIMENSIONS: FRACTIONS	DECIMALS	ANGLES
		✓	±	±	±


REV NO 0 1

CONT ON SHEET — SH NO

TITLE PRINTED CIRCUIT DIAGRAM
PROCESS CONTROL FOLLOWER/JOG REF CARD

FIRST MADE FOR DC-3064
193X535AAG01

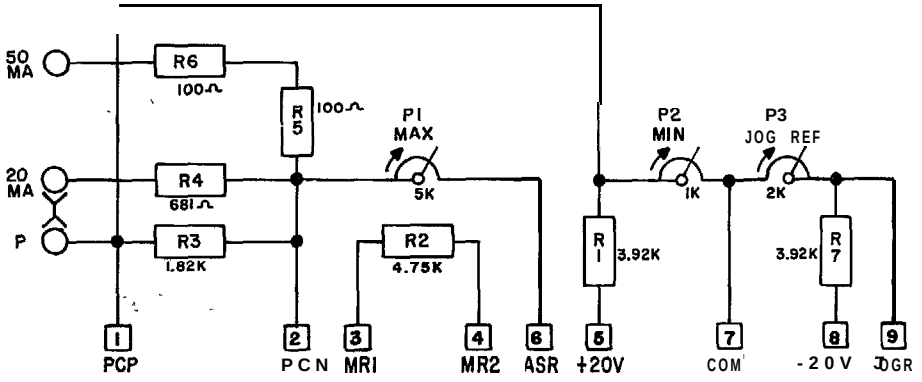

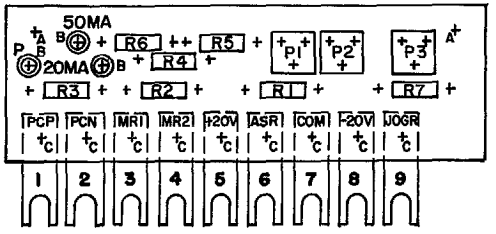

HOLE TABULATION

ALL HOLES .040 DIA. EXCEPT THE HOLES TABULATED BELOW

LOC.	DIA.	QUAN.
A	.157	2
B	.070	3
C	.128	9

NOTE

CARD SIZE, $4.000^{+.003}_{-.003}$ X $1.300^{+.003}_{-.003}$

SCALE	ETCHED CIRCUIT BOARD DWG	SPACE UNIT REQUIREMENT FRONT	BACK
FULL	36B605240AA004	—	—

REVISIONS

No revisions are to be made to this drawing without the specific approval of the Development Engineering Section of the Speed Variator Department

1	M B Parfa SEPT. 3, 1976	SV870 #208	

PRINTS TO

5B(2)22	5(S)
5QC(BK)5	5D(BK)
5(TS)50	5L(BW)5
AW(BW)	5AE(BW)
DS(REP)	5QC(B)

MADE BY M B Parfa MARCH 19, 1976
ISSUED Paul Mark June 8, 1976

APPROVALS

SPEED VARIATOR — DIV OR DEPT
ERIE, PA — LOCATION

36B590232AA
CONT ON SHEET — SH NO

PROPRIETARY INFORMATION OF THE GENERAL ELECTRIC COMPANY

FF-806-F (5-74)
PRINTED IN U S A

PROCESS CONTROL FOLLOWER

Printed Circuit Card PCF (Process Control Follower) provides circuitry to convert the current signal of a process controller to a voltage signal. This voltage signal provides a speed reference for the adjustable speed drive. Card PCF is mounted in the space to the right of relay RUN and above 2TB. In some cases, circuitry like that of PCF may be packaged on a component board in the modification rack, MDR. If so, these instructions will still generally apply.

The process controller is connected between terminals, PCP and PCN. The positive controller output is connected to PCP.

Jumpers on PCF are used to select resistors that convert various controller current ranges to the reference voltage output at PCF (ASR).

Jumper connections are:

Controller Current	O-5ma	I-5ma	4-20ma	1 O-50ma
PCF Jumpers	none	none	P to 20	P to 50

MCC: Remove jumper between SRH and COM for a 5 to 9V maximum input reference.

If an alternate reference mode is provided, set MCC's REF SCALE, MAX SPEED and MIN SPEED (If provided) potentiometers for the alternate reference as described in the System Instruction Book. (The alternate reference must be in the range of 5 to 9V maximum).

With minimum process controller output, set PCF's MIN potentiometer for zero (or minimum) reference (or speed).

With maximum controller output, set the MAX (PCF) potentiometer for maximum speed (approximately -10 volts at test post MCC-TR).

If no alternate reference is provided, set MAX (PCF) and REF SCALE (MCC) at mid range, and set MAX SPEED (MCC) full CCW. Set REF SCALE such that MCC-TR is –10 volts with the controller at maximum output. Set MAX SPEED for correct speed. Adjust MIN for zero (or minimum) speed with minimum controller output. Adjust MAX for correct speed at maximum controller output.

Card PCF also contains a JQG potentiometer which may be used for setting speed when the jog option is provided